

Leader

LeaderPhabrix

LPX500

USER MANUAL

Software Release 1.0



Preface

About this Manual

This User Manual is a guide to the functions provided by your LPX500 unit.

For further information on Leader Electronics of Europe products, please refer to the Leader Electronics of Europe web page:

<https://leaderphabrix.com/products/>

Notice

The information in this document has been produced by Leader Electronics of Europe Ltd with care and is believed to be accurate. Leader Electronics of Europe Ltd does not assume responsibility for loss or damage resulting from errors, omissions or inaccuracies herein. This document is subject to change, and revisions may be made and issued to include such changes.

No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, recorded or otherwise without the prior written consent of Leader Electronics of Europe Ltd.

Copyright © Leader Electronics of Europe Ltd, 2024. All rights reserved. Software products licensed are owned by Leader Electronics of Europe Ltd and are protected by international treaty provisions and national copyright laws.

Leader Electronics of Europe Limited

Omega House
Enterprise Way,
Thatcham, Berkshire
RG19 4AE

United Kingdom

Phone: + 44 (0)1635 873030

Support: <https://leaderphabrix.com/contact-support/>

Web: <https://www.leaderphabrix.com>

Trademarks

Dolby and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. The following are trademarks of Dolby Laboratories Licensing Corporation:

- Dolby®
- Dolby Atmos®
- Dolby Digital®
- Dolby Digital Plus™
- Dolby E™
- Dolby ED2™

DisplayPort™, the DisplayPort™ logo and DisplayPortHDR™ logo are trademarks owned by the Video Electronics Standards Association (VESA®) in the United States and other countries.

RealVNC® and VNC® are registered trademarks of RealVNC Ltd.

PHABRIX® and LeaderPhabrix® are registered trademarks of Leader Electronics of Europe Limited.

RTE™ (Real-Time Eye) is a trademark of Leader Electronics of Europe Limited.

Revision

This manual is a revision-controlled document. Any changes to any page content will be reflected in the overall revision status of the whole manual.

Release	Date	Software Version	Updates Include:
1a	December 2024	1.0	First release of LPX500 User Manual
1b	January 2025	1.0	Minor changes from first review.
1c	February 2025	1.0	Full review implementation.
1 d	February 2025	1.0	Update to China RoHS compliance statement.

General Safety Information

General Safety

Read this Section Before Using the LPX500

This unit should be used only by persons with sufficient knowledge of electronics who thoroughly understand the contents of this manual.

This unit is not designed or manufactured for households or ordinary consumers.

If unqualified personnel are to use the unit, be sure that the unit is handled under the supervision of qualified personnel (those who have electrical knowledge). This is to prevent the possibility of personal injury or damage to the unit.

Warning

Warnings Concerning the Power Source:

Do not use a power source with a voltage other than the rated power source voltage for the unit. Doing so could lead to fire. Confirm the voltage of the power source before you connect the power cord to it. Only use a power source whose frequency is 50/60 Hz.

Use a power cord that is appropriate for the voltage of the power source. Also, use a power cord that meets the safety standards of the country that you are using it in. Using a power cord that does not meet the standards could lead to fire. If the power cord is damaged, stop using it, and contact your local LeaderPhabrix agent. Using a damaged power cord could lead to electrical shock or fire.

When removing the power cord from the power outlet, do not pull on the cord. Pull from the plug.

Warnings Concerning Grounding:

The unit has a ground terminal to protect the user and the unit from electric shock. Ensure that the product is properly grounded for safe operation.

Warnings Concerning the Panel:

Sections of the panel are made of glass. If the glass breaks, the broken glass may lead to injury. Do not apply a strong shock to the panel, cut it with sharp metal, or damage it in any similar manner.



Avoiding Personal Injury

Warning: The LPX500 is designed for use by qualified personnel only.

No internal user-serviceable parts are provided. Units should be returned to your local LeaderPhabrix agent for servicing.

The operator must NOT remove the case from the unit as this will invalidate the warranty.

Do not spill any liquid onto the unit or its power adapter.

Warning: Do not look directly into the fiber optic connections of cable as this may cause permanent damage to the eyes.

Power Supply

Make sure that the unit is connected to the correct power supply voltage. Only the supplied AC cable should be used with the unit. Do not use a damaged AC cable with the unit as it may cause a shock or fire hazard. Replacement AC cables are available from your local LeaderPhabrix agent.

This unit might have both an AC and a DC power supply cord connected. Make sure to disconnect **all** power supply cords before servicing to avoid electric shock.

Mains AC powered devices are shipped with a three wire electrical cord with a grounding-type plug designed to fit only a grounding-type power outlet. Do not circumvent this safety feature. Equipment grounding must comply with local and national electrical standards.

Internal Battery

The unit includes a 3 V Lithium battery (type CR1225) to maintain the system clock and ensure memory persistence in the event of mains power loss. Return the unit to LeaderPhabrix in the event that the battery needs replacing.

Installation Environment

Operating Temperature Range



Warning: The unit should only be operated between 0 and 40° Celsius (32 and 104° Fahrenheit), non-condensing. If the unit is operated at a higher temperature, there is a possibility of a fire hazard. If the temperature is changed rapidly from a cold environment to a hot environment, moisture can be created internally which can cause malfunction or damage the unit. Allow the unit to sit for 30 minutes without power applied to reduce any possibility of condensation. If the internal component temperature rises above 85° Celsius (185° Fahrenheit) the unit will switch OFF automatically.

Operating Humidity Range



Warning: Use the LPX500 in an environment with a relative humidity of 85 % or less where there is no threat of condensation forming.
Do not operate this unit with wet hands. Doing so could lead to electric shock or fire.

Input / Output Terminals



Do not connect the input or output BNC connectors to external power as this can damage the internal circuitry and cause the unit to work incorrectly.

The BNC connectors fitted on this unit are 75 ohm type which are not compatible with 50 ohm plugs.

Warning: The use of 50 ohm plugs will permanently damage the connectors on the unit. The use of 50 ohm plugs is considered to be misuse of the equipment and will therefore invalidate the unit's warranty.

When Not In Use

Disconnect the unit from the power supply and AC power source when not in use.

Maintenance



Wipe the case gently with a soft, lint-free cloth, lightly dampened with a neutral cleaning agent. A screen cleaning cloth may be used to clean the LCD. Do not apply force to the LCD when cleaning or it may be damaged.

Warning: Remove the power supply from the unit and switch OFF before cleaning. Do not allow any water or other liquid to enter the unit while cleaning.

Disposal of Equipment



This product is subject to the European WEEE (Waste Electrical and Electronic Equipment) directive and should be disposed of according to the regulations of each country.

Restriction of Hazardous Substances (RoHS) Compliance

LeaderPhabrix products are designed and manufactured to be RoHS compliant, adhering to the RoHS directive for components and materials. Based on information provided by our suppliers, LeaderPhabrix certifies that all products that it manufactures comply with the provisions of the European Parliament and Council Directive on the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment (2011/65/EC) and associated regulations collectively known as the RoHS Regulations.

所含有毒有害物质信息

部件号码 :LPX500I / LPX500IS / LPX500ISE



此标志适用于在中国销售的电子信息产品,依据2006年2月28日公布的《电子信息产品污染控制管理办法》以及SJ/T11364-2006《电子信息产品污染控制标识要求》,表示该产品在使用完结后可再利用。数字表示的是环境保护使用期限,只要遵守与本产品有关的安全和使用上的注意事项,从制造日算起在数字所表示的年限内,产品不会产生环境污染和对人体、财产的影响。产品适当使用后报废的方法请遵从电子信息产品的回收、再利用相关法令。详细请咨询各级政府主管部门。

产品中有毒有害物质或元素的名称及含量

部件名称 Parts Name	有毒有害物质或元素 Hazardous Substances in each Part					
	铅 (Pb)	汞 (Hg)	镉 (Cr(VI))	六价铬 Cr	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
实装基板	×	○	○	○	○	○
主体部	×	○	○	○	○	○
液晶显示模组	×	○	○	○	○	○
开关电源	×	○	○	○	○	○
风扇	×	○	○	○	○	○
线材材料一套	×	○	○	○	○	○
附件	×	○	○	○	○	○
包装材	○	○	○	○	○	○
电池	○	○	○	○	○	○
备注) ○:表示该有毒有害物质在该部件所有均质材料中的含量均在SJ/T11363-2006 规定的限量要求以下。 ×:表示该有毒有害物质或元素至少在该部件的某一均质材料中的含量超出SJ/T11363-2006标准规定的限量要求。						

KC Certification for South Korea

This product is designed and manufactured to be KC compliant.



The details below can be used to search the KC registration on the Korean National Radio Research Agency website as follows:

1. Open the registration search page of the Korean National Radio Research Agency website:
 - https://www.rra.go.kr/ko/license/A_c_search.do#
2. Enter the following registration information.
 - KC Registration Number: **R-R-lk3-037**
 - Date of Certification / Registration: **20241211 ~ 20241211**
 - Model Number: **LPX500**
3. Click: **Search**

Table of Contents

Preface	ii
About this Manual	ii
Notice	ii
Trademarks	iii
Revision	iv
General Safety Information	v
General Safety	v
Warning	v
Avoiding Personal Injury	v
Power Supply	vi
Internal Battery	vi
Installation Environment	vi
Operating Temperature Range	vi
Operating Humidity Range	vi
Input / Output Terminals	vi
When Not In Use	vii
Maintenance	vii
Disposal of Equipment	vii
Restriction of Hazardous Substances (RoHS) Compliance	viii
KC Certification for South Korea	ix
1	1-1
Getting Started	1-1
Getting Started Quick Reference	1-2
What's in the Box?	1-2
Packaging Material	1-2
LPX500 Mounting Hardware Options	1-2
Desktop Mounting	1-3
Rack Mounting	1-3
Rear Panel Connectors	1-5
Connecting Cables to the Unit	1-7
Connecting the Optional Extended Monitor to the Unit	1-9
Powering-up the Unit	1-10
SDI Connections to the Unit	1-11
Powering-down the Unit	1-12
2	2-1
Working with the User Interface	2-1
Overview of the LPX500 Components	2-2
Introduction	2-2
Dual and Quad Analyzer Configurations	2-2
Extended Monitor Configuration	2-2
Toolsets and Instruments	2-3
Standard LPX500 Toolsets	2-4
Standard Toolset	2-4
Advanced Toolsets	2-5
SDI and Reference Toolset	2-5
Video and Audio Generation Toolset	2-5
Media-related Toolsets	2-5

Advanced HDR Visualization and Analysis Toolset	2-5
UHD Formats Toolset	2-5
Using the LPX500 Front Panel	2-6
Overview of the Front Panel	2-6
Using the LPX500 Controls	2-9
Overview	2-9
Using the Touchscreen Controls	2-11
Working with the Spotlight	2-17
Using the Rotary Control	2-18
Mouse Control	2-20
Launching an Instrument or Instruments	2-22
Overview	2-22
Launching an Instrument from the Favorites Toolbar	2-23
Unlocked Layouts	2-23
Locked Layouts	2-23
About the Instrument Launcher Pages	2-24
Launching an Instrument from the Instruments Tab of the Setup Menus	2-25
Launching Multiple Instances of an Instrument	2-26
About Presets	2-30
About Layouts	2-30
Loading Presets	2-32
Launching a Preset from the Presets Dialog	2-33
System Time and Date Display	2-35
Using the Volume Control Dialog	2-35
Using the Instrument Favorites Toolbar	2-37
Overview of the Instrument Windows	2-39
Changing the Border Color of Instrument Windows	2-42
Working with the Instruments	2-43
Selecting Option Menu Parameters and Entering Values	2-46
Resizing an Instrument Window in an Unlinked Layout	2-48
Using the Instrument Scroll Bars and Scroll Control Menu	2-50
Taking Screenshots	2-50
Working with Instrument Tabs	2-51
Using Instrument Configuration Dialogs	2-51
Using the Color Picker	2-52
Working with Layouts	2-54
Overview	2-54
Launching Instruments on the Default Multi Layout	2-55
Using Layouts on the Standard Dual Analyzer Unit	2-56
Overview	2-56
About the Default Multi Layouts with Dual Analyzers	2-56
About Single Layouts with Dual Analyzers	2-58
Using Layouts on an Optional Quad Analyzer Unit	2-60
Overview	2-60
About the Default Multi Unlinked Layouts with Quad Analyzers	2-61
About Single Unlinked Layouts with Quad Analyzers	2-63
About Multi Linked Layouts with Quad Analyzers	2-65
Switching Between Tiled Views in a Multi Linked Layout	2-67
Moving Instrument Windows in a Multi Linked Layout	2-68
About Single Linked Layouts with Quad Analyzers	2-69

Moving Instrument Windows in a Single Linked Layout	2-71
Navigating Through Layouts	2-72
Overview	2-72
Using Touch Gestures in Layouts	2-74
Using Mouse Cursor Control in Layouts	2-76
Using the Layouts Toolbar and/or Layouts Dialog	2-77
Navigating in Unlocked or Locked Layouts	2-78
Layout Identification Messages	2-79
Locking and Unlocking Layouts	2-82
Managing Layouts Using the Layouts Dialog	2-84
Overview	2-84
Standard Dual Analyzer Units	2-85
Units with Optional Quad Analyzers	2-87
Working with the Layouts Dialog	2-89
Adding a New Layout	2-90
Duplicating an Existing Layout	2-90
Switching to a Different Layout	2-90
Renaming a Layout	2-91
Deleting a Layout	2-92
Reordering a Layout in the Toolbar and Layouts Dialog	2-93
Closing Layout Windows	2-93
Managing Multiple Analyzers	2-94
Overview	2-94
Assigning Source SDI Inputs to Analyzers	2-95
Using Single Link SDI Source Inputs	2-101
Using Dual Link SDI Source Inputs	2-103
Using Quad Link SDI Source Inputs	2-104
Working with the Optional Second Display	2-106
Overview	2-106
Connecting and Disconnecting the Second Display	2-107
Taking Screenshots on the Second Display	2-107
Remote Connection to the Second Display Using noVNC	2-107
Managing Presets	2-108
Overview	2-108
Adding a Preset	2-109
Loading a Preset	2-110
Updating a Preset	2-110
Renaming a Preset	2-111
Deleting a Preset	2-111
Reordering a Preset in the Toolbar and Presets Dialog	2-112
Loading Presets Using the REST API or External Remote Control	2-112
Customizing the Instrument Favorites Toolbar	2-113
Instrument Icon Quick Reference	2-115
3	3-1
Configuring and Checking the Unit	3-1
Network and Automation	3-2
Overview	3-2
Using Virtual Network Computing (noVNC or VNC) for Remote Access	3-3
Instrument Menu Options	3-3
Using the Numeric Keypad to Enter Static IP Details	3-4

Setting the Time, Date and NTP Server	3-6
Setting-up the Display	3-8
Modifying the Display Settings	3-8
Checking the Unit	3-11
Overview	3-11
Checking the System Health	3-11
Checking the Unit Licenses	3-12
Restarting the Unit	3-13
Restoring Factory Default Settings	3-13
Upgrading the Unit	3-15
Upgrading the System Software and Firmware	3-15
Upgrading the Software from a USB Stick	3-16
Remote Upgrade Using SFTP	3-16
Upgrading the Software Options	3-17
Managing Files with the USB File Manager	3-19
Overview	3-19
Opening the File Manager	3-20
Copying Files from the Unit to USB	3-20
Uploading Files from USB to the Unit	3-23
Deleting Files from the Unit	3-23
Event Logging on the Unit	3-24
Overview	3-24
Available Event Logging Options	3-24
Remote Connection to the Unit	3-25
Overview	3-25
Available Functionality	3-27
Using Virtual Network Computing (VNC)	3-27
Enabling VNC on the Unit	3-27
Connecting to the Unit Using noVNC from a Web Browser	3-27
Using a Generic VNC Client to Connect Remotely to the Unit	3-29
Using SFTP	3-29
Connecting to the Unit Using SFTP	3-29
Using a Web Browser	3-30
Connecting to the Unit Using a Web Browser	3-30
Remote Control Loading of Presets	3-31
Control Timing	3-31
4	4-1
SDI Setup and Configuration	4-1
SDI Connections to the Unit	4-2
Overview	4-2
SDI Input and Output Schematic (SDI Input / Output)	4-3
SDI Input / Output Configurations	4-5
SDI Inputs Using BNC Connectors	4-6
SDI Outputs Using BNC Connectors	4-7
Colorimetry Range Definitions for the LPX Series	4-9
System IO	4-11
Overview	4-11
System IO for SDI Input	4-11
Instrument Menu Options	4-12

Video Timing & System Reference	4-14
Overview	4-14
Video Timing in the SDI Tab	4-14
Video Timing in the SDI Co-Timing Tab	4-15
Instrument Menu Options	4-15
5	5-1
Signal Generation Instruments	5-1
Generator (Video)	5-2
Overview	5-2
Generating SDI Output (Requires Option: LPX500-GEN)	5-3
Configuring the Video Standard	5-3
Video Configuration Parameters	5-5
Range and Bit Depth Support for Generated Video Standards	5-5
Generator Test Patterns	5-6
Including a Generator Text Identifier	5-10
User Test Patterns and Images	5-12
Generator SDI Output Assignment	5-13
Insertion of ST352 Video Payload IDs for SDI Outputs	5-14
Output Offset Adjustment	5-14
Generator (Audio)	5-16
Overview	5-16
Audio Generator Configuration Dialog	5-21
6	6-1
Analysis Instruments	6-1
Analyzer - Video Standard	6-2
Overview	6-2
Colorimetry Range and Bit Depth Support	6-3
Manual Override Configuration	6-4
Changing the Payload Identification Source	6-4
Instrument Menu Options	6-6
Stats - SDI In 1, 2, 3, 4	6-7
Overview	6-7
CRC Analysis	6-8
Overview	6-8
Instrument Menu Options	6-9
7	7-1
Content Analysis Instruments	7-1
Analyzer - Picture	7-2
Overview	7-2
Picture Aspect Ratios	7-3
Instrument Menu Options	7-5
Closed Captions	7-8
Comparing Multiple Picture Instruments	7-9
Monitoring Closed Captions in Multiple Picture Instrument Windows	7-12
Picture Cursor	7-12
Using the Picture Safe Areas	7-13
Displaying the Picture Safe Areas	7-15
Using the Picture Message Center	7-15
SCTE104 Packet Detection	7-17

Input Name Dialog	7-17
Displaying the Ancillary Time Code	7-18
Analyzer - Waveform	7-20
Overview	7-20
About the Display Modes	7-22
Setting the Vertical and Horizontal Scales	7-22
Using Full-width Screen Mode	7-24
Using the Custom Display Mode	7-25
About the Waveform Modes	7-27
Using the Zoom and Panning Controls	7-29
Using Picture and Dataview with the Waveform Instrument	7-30
Using the Vectorscope with the Waveform Instrument	7-32
Using the Waveform Measurement Cursors	7-33
Setting a % Reference	7-35
Instrument Menu Options	7-37
Analyzer - Vectorscope	7-45
Overview	7-45
Instrument Menu Options	7-45
8	8-1
Audio Signal Analysis Instruments	8-1
Analyzer - Audio Channel Status	8-2
Overview	8-2
Raw Data Display	8-3
Analyzer - Audio Meters	8-4
Overview	8-4
Instrument Menu Options	8-6
9	9-1
Data Analysis Instruments	9-1
Analyzer - Dataview	9-2
Overview	9-2
Instrument Menu Options	9-3
Analyzer - Ancillary Status	9-5
Overview	9-5
Instrument Menu Options	9-6
Analyzer - Ancillary Inspector	9-9
Overview	9-9
Instrument Menu Options	9-10
10	10-1
12G Physical Layer Analysis	10-1
Eye - SDI In 1 (Physical Layer Analysis)	10-2
Overview	10-2
Instrument Menu Options	10-3
Jitter - SDI In 1(Physical Layer Analysis)	10-5
Overview	10-5
Instrument Menu Options	10-6
11	11-1
HDR Analysis Instruments	11-1
Advanced HDR Toolset	11-2

Overview	11-2
HDR Test Patterns	11-2
Transfer Curve and Colorimetry Overrides	11-3
Analyzer - CIE Chart	11-4
Overview	11-4
Instrument Menu Options	11-5
HDR Heat-map (False Color Overlay)	11-7
HDR Options in Analyzer - Picture Instrument Menu	11-8
A	A-1
Technical Specifications	A-1
AC Power (Internal PSU)	A-2
DC Power	A-2
SDI Analyzer Inputs	A-2
SDI Analyzer Outputs	A-2
SFP28 Cages	A-3
QSFP28 Cages	A-3
External Locking Reference	A-3
DisplayPort Instrument Output	A-3
SDI Instrument Output	A-3
USB 3.x Type A Connectors	A-3
USB 3.1 Type C Connectors	A-4
USB 3.1 Type C Connector on Optional Extended Monitor	A-4
Networking	A-4
Rear Panel 15 Pin D-Type Connector	A-5
Physical Form Factor (LPX500 Main Unit)	A-6
Physical Form Factor (Optional Extended Monitor)	A-6
B	B-1
SMPTE SDTV, HDTV and UHD TV	B-1
SDI Physical Layer Tolerances	B-1
C	C-1
Supported Video Standards	C-1
HD/2K Supported Formats	C-1
4K/UHD Supported Formats	C-3

Getting Started

This chapter describes how to connect your unit to get it up and running and includes the following sections:

- [Getting Started Quick Reference](#)
 - [What's in the Box](#)
 - [Mounting the Unit](#)
- [Overview of the Rear Panel Connectors](#)
- [Connecting Essential Cables to the Unit](#)
- [Powering-up the Unit](#)
- [SDI Connections to the Unit](#)
- [Powering-down the Unit](#)

Getting Started Quick Reference

What's in the Box?

On receipt of your shipment, proceed as follows:

1. Check the external packaging for any visible signs of damage.
Should you find any damage, contact the courier immediately.
2. Carefully open the packaging and check that it contains the following standard items:
 - One LPX500 model; either:
 - Model: **LPX500I** (with 10 GbE IP Waveform Monitor/Analyzer) or
 - Model: **LPX500IS** (with SD, HD, 2K, or 10 GbE IP/SDI Waveform Monitor/Analyzer) or
 - Model: **LPX500ISE** (with SD, HD, 2K, or 10 GbE IP/SDI Waveform Monitor/Analyzer with Eye and Jitter).
 - One IEC power cord.
 - USB stick containing this User Manual in PDF format.
 - Printed Welcome and Getting Started cards (recyclable).
3. Check all optional items against your order form or invoice. The unit's box will contain the following optional items, if ordered:
 - Desk-mount kit fitted to the unit
 - SDI cable (1 m length)
 - SFP(s)

Note: Optional rack-mount kits are shipped in a separate carton.

4. If you suspect optional items are missing, contact your distributor or LeaderPhabrix support at: <https://leaderphabrix.com/contact-support/>
5. Complete the Product Registration form available at: <https://leaderphabrix.com/contact-support/product-registration>

Packaging Material

After unpacking the unit and all components, it is recommended to retain the original packaging material (carton and foam inserts) for future use in the event that you need to return the unit to LeaderPhabrix.

If the packaging is to be disposed of, the printed cardboard carton and Getting Started card can be recycled and the packing material is biodegradable after shredding.

LPX500 Mounting Hardware Options

You can install the LPX500 as a standalone unit on a desktop or rack-mount the unit or units using one of the following optional rack-mounting kits:

- To desk-mount a single unit:
 - LPX500 desktop kit (adjustable feet and carry handle) (**LPX500-K3**)

- To rack-mount a single unit:
 - 3U 19 inch rack mount kit (1 x LPX500 Chassis) (**LPX500-K1**)
- To rack-mount two units:
 - 3U 19 inch rack mount kit (1 x LPX500 Chassis and Extended Monitor or 2 x LPX500 Chassis) (**LPX500-K2**)

Desktop Mounting

To desk-mount a standalone unit, fit adjustable feet and handle in the LPX500 desktop kit. Place the unit on a clean, level dust-free surface and connect the cables as described in the section [Connecting Cables to the Unit](#). Adjust the feet so that the screen is positioned at a comfortable viewing angle. Ensure that the unit is located to allow sufficient airflow for cooling purposes.

Rack Mounting

To rack-mount one or more units in a 19 inch rack, follow the procedure in the instruction guide included with the mounting hardware. Ensure that the unit(s) have an unrestricted airflow and access to the power connectors in the rack.

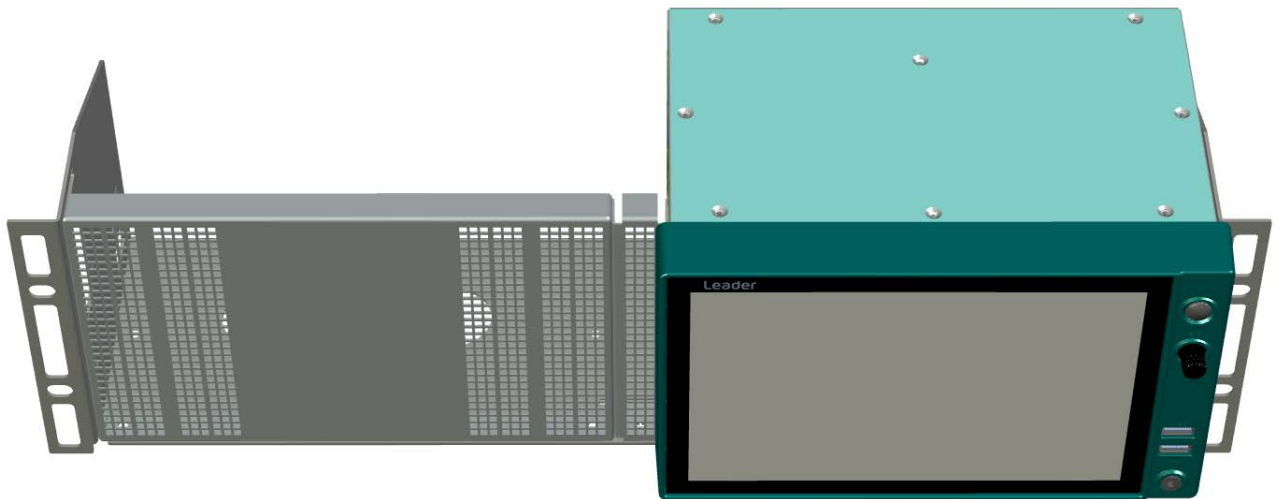


Figure 1-1: Rack Mount Tray for One Unit with Blanking Panel (Option LPX500-K1)

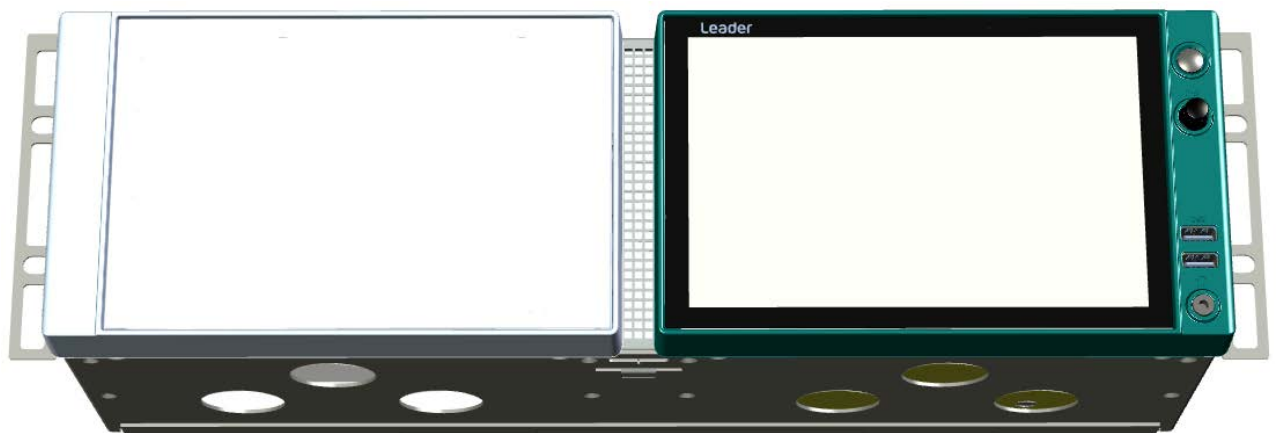


Figure 1-2: Rack Mount Tray with Optional Extended Monitor and Main Unit (Option LPX500-K2)

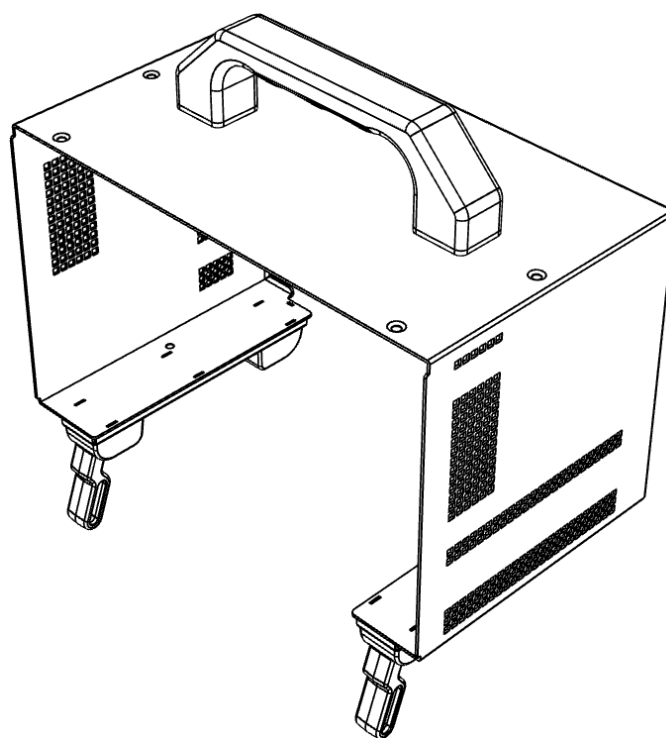


Figure 1-3: Carry Case (Option LPX500-K3)

Rear Panel Connectors

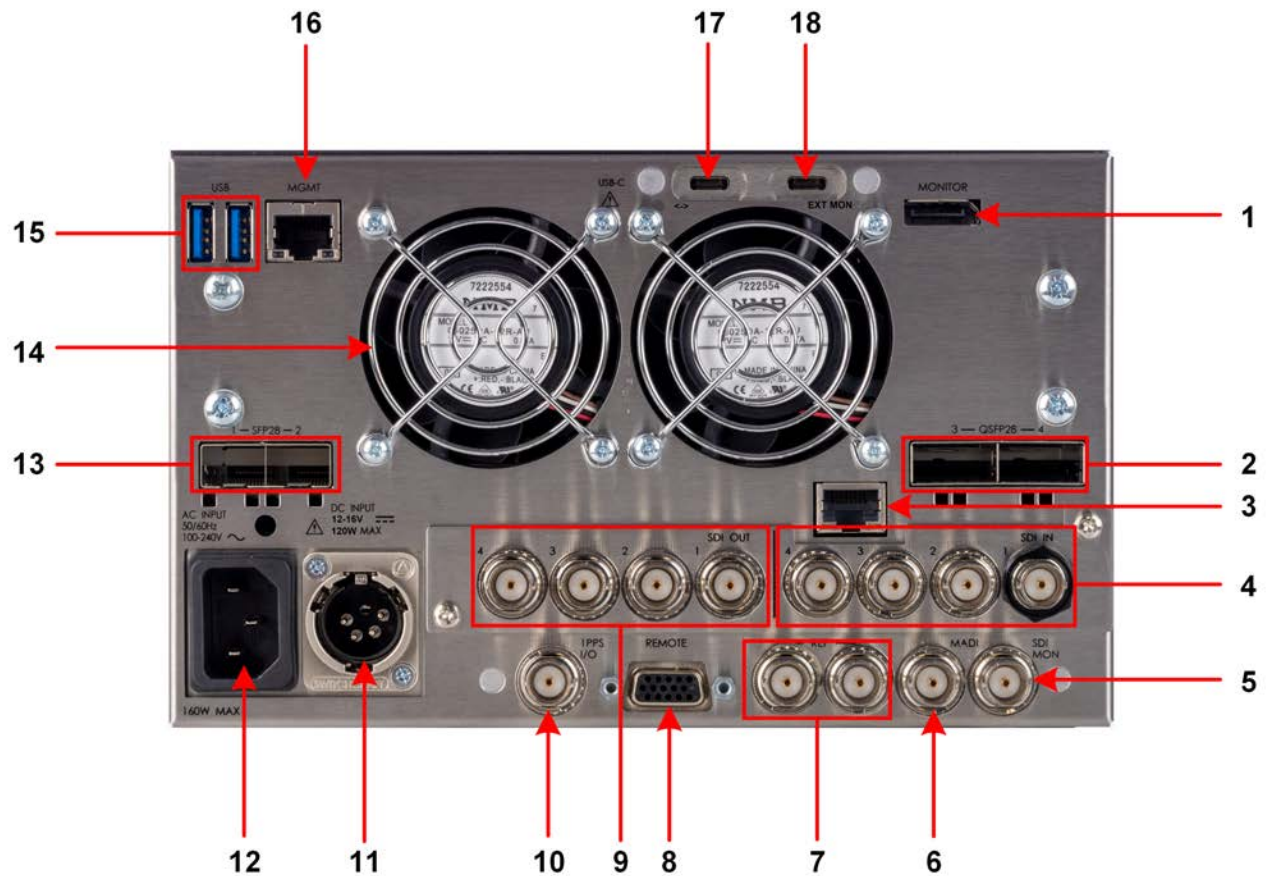


Figure 1-4: Rear Panel Connectors

The rear panel connectors are described in the following table:

Table 1-1 : Key to Rear Panel Connectors (With SDI IO)

No.	Connector	No.	Connector
1	DisplayPort External Monitor Output (To 1920x1080p 50, 59.94, 60)	10	1 PPS Input / Output
2	Two QSFP28 Cages 100G (QSFP28 3 and QSFP28 4) (Optional) (Max each: 4 x 25 Gbps) (Not Currently Used)	11	DC Power Socket XLR Male
3	Ethernet 1000 Base T Connector Factory Service (Labeled PTP; Not Currently Used)	12	IEC Male AC Mains Power Socket
4	Analyzer SDI Inputs Supported formats: SD, HD, 3G, 6G, 12G SDI 75 ohm BNC Connectors x 4 Includes SDI In 1 Eye Signal (fitted with Black Nut.) Supported formats: SD, HD, 3G, 6G, 12G.	13	Two SFP28 Cages (SFP28 1 and SFP28 2) (Standard) (25G (Optional), 10G) (Not Currently Used)
5	SDI Mon Instrument Output 75 ohm BNC Connectors Formats: 1080p 50, 59.94, 60 3G-SDI	14	Cooling Fans (x2)
6	MADI Audio output (Not Currently Used)	15	USB Type A v2.0 and v3.1 Ports
7	Reference IO 75 ohm BNC Connectors Supports reference loop-through.	16	Control Network / Management Port Ethernet 1000 Base T
8	Remote Control 15-pin D-type Connector	17	Factory Service (Not Currently Used)
9	SDI Generator, Generator Copy SDI or Input SDI Loop Outputs Supported formats: SD, HD, 3G, 6G, 12G. SDI 75 ohm BNC Connectors x 4	18	Extended Monitor, dedicated USB Type C v3.1

Connecting Cables to the Unit

After unpacking your unit, you can get it up and running either as a standalone unit on a desktop, or mounted in a rack, using the appropriate mounting kit, if ordered.

Proceed as follows to obtain an output to a video display using the connectors shown in [Figure 1-5](#) below:

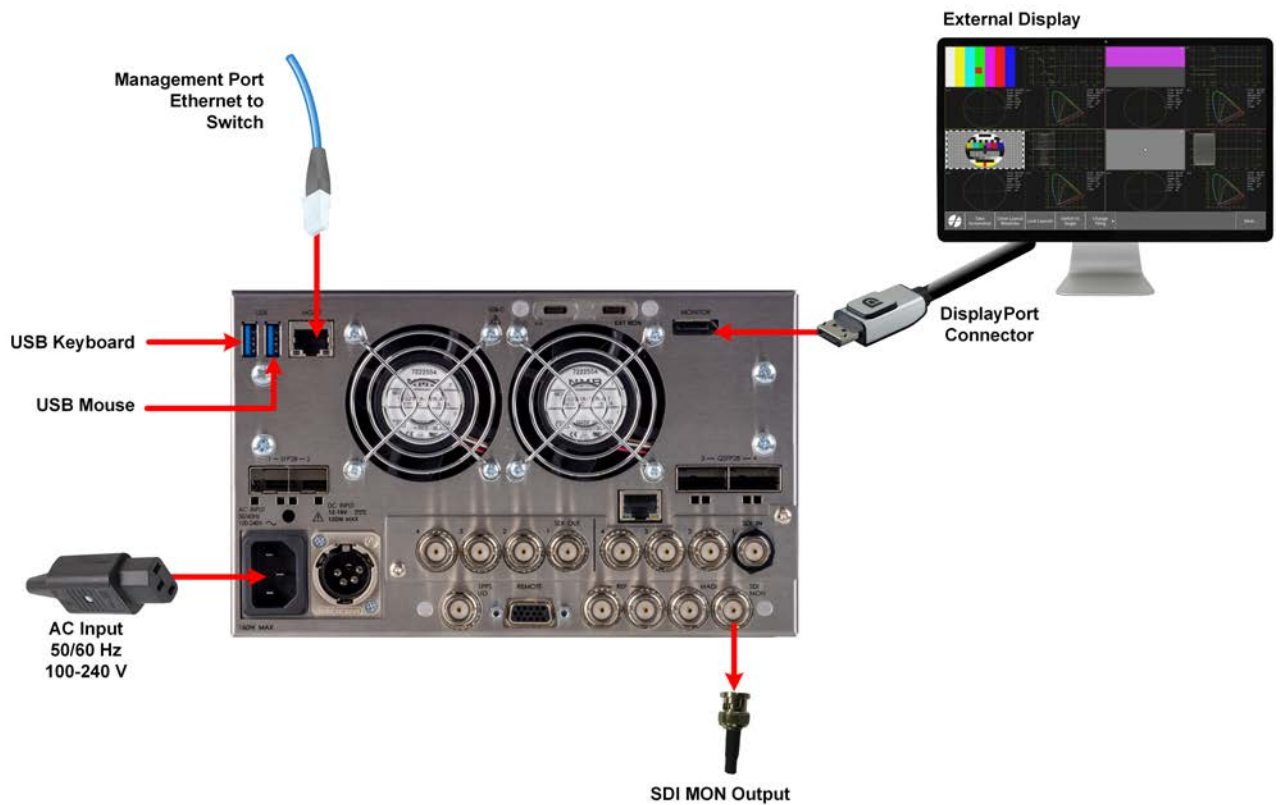


Figure 1-5: Minimum Rear Panel Connectors

Connect the cables to the rear panel as follows:

1. Connect an RJ45 cable to the management port. This enables you to access and control the unit remotely and to set the unit time using NTP.
2. Connect USB mouse/keyboard cables to the USB connectors on the rear of the unit for mouse and keyboard control.
3. You can use the touchscreen to operate the unit, however, If you require an external display, you can connect a suitable 1920 x 1080 capable monitor to either the DisplayPort instrument output or the SDI Copy instrument output. Both display outputs carry the selected audio monitoring channel/pair. The monitor output can be configured for 1080p 60, 59.94, 50, 48, or 47.95 frame rates using the **Output Rate** dropdown available in the **Display Settings** dialog in the Settings tab. Either:
 - Connect a DisplayPort cable to the female DisplayPort connector on the rear of the unit (labeled **MONITOR**) and the other end to your external video monitor to obtain the instrument display, or

Note: If using a DisplayPort to HDMI adapter, be sure to use an **active** adapter. The use of passive adapters is not supported.

- Connect an SDI BNC cable to the SDI Copy instrument output connector on the rear of the unit (labeled **SDI MON**) and the other end to your video monitor to obtain the instrument display.
4. When the optional second display is included, connect the supplied USB-C cable between the USB-C **EXT MON** port on the rear of the main unit and the USB-C **Video Input** port on the rear of the second display.
 5. Connect the three-pin, IEC C13 female power connector, on the power cord supplied with the unit, to the power socket on the unit.
 6. Connect the plug on the other end of the power cord to a mains AC power outlet.
 7. Switch on the power.
The unit will automatically start to power-up.

These are the minimum connections you need to power-up the unit, obtain an output to an external video display and to control the user interface.

Connecting the Optional Extended Monitor to the Unit

Connect the optional extended monitor to the main unit using the dedicated USB v3.1 type C high-speed cable supplied with the display, as shown below.

If you connect the optional extended monitor with the main unit powered-on, you will need to restart the unit.

Note: Using a different cable will prevent the optional extended monitor from booting correctly.

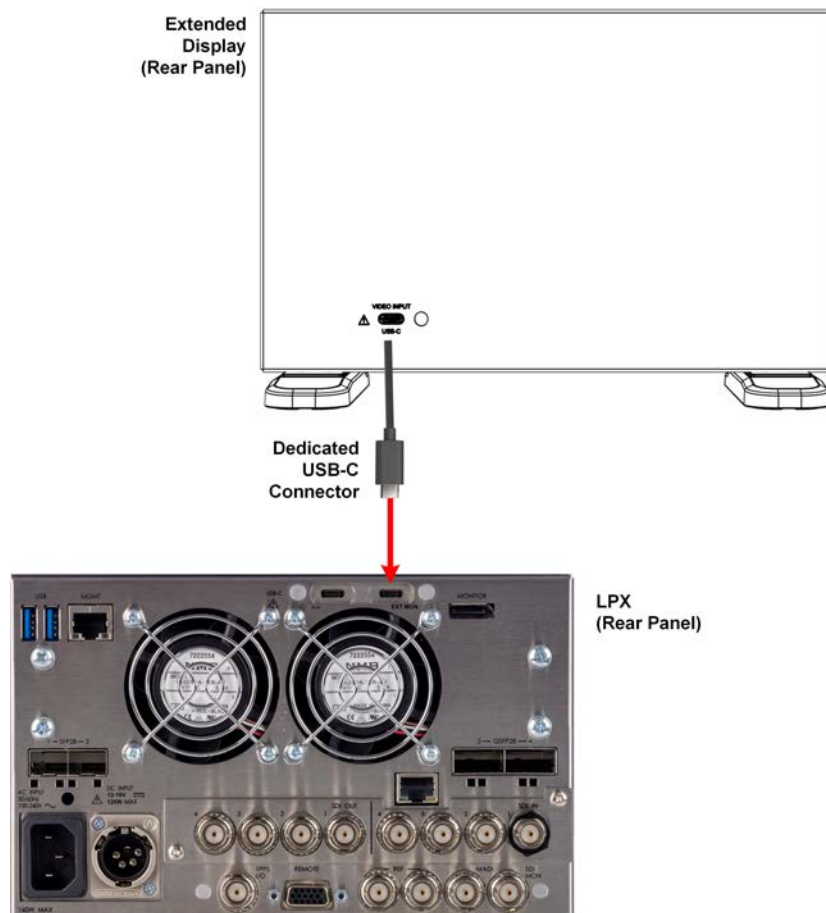


Figure 1-6: Connecting the Optional Extended Monitor to the Main Unit

Note: Do not connect the optional extended monitor to a USB-C interface on a personal computer; it cannot be used as a USB-C external monitor.

Powering-up the Unit

Once connected to a power source, press the Power button on the front panel of the unit.

Note: You may need to wait a few minutes for the unit to complete its boot cycle.

You should see the status LED behind the power button, at the top-right of the unit, light in the following sequence:

- **White (Blinking):** Initial Start-up sequence
- **White (Steady):** Unit running

When you first press the Power Button on the front panel, the unit's fans will cycle for 20 to 30 seconds at high speed as the system boots, then settle to their normal operating speed.

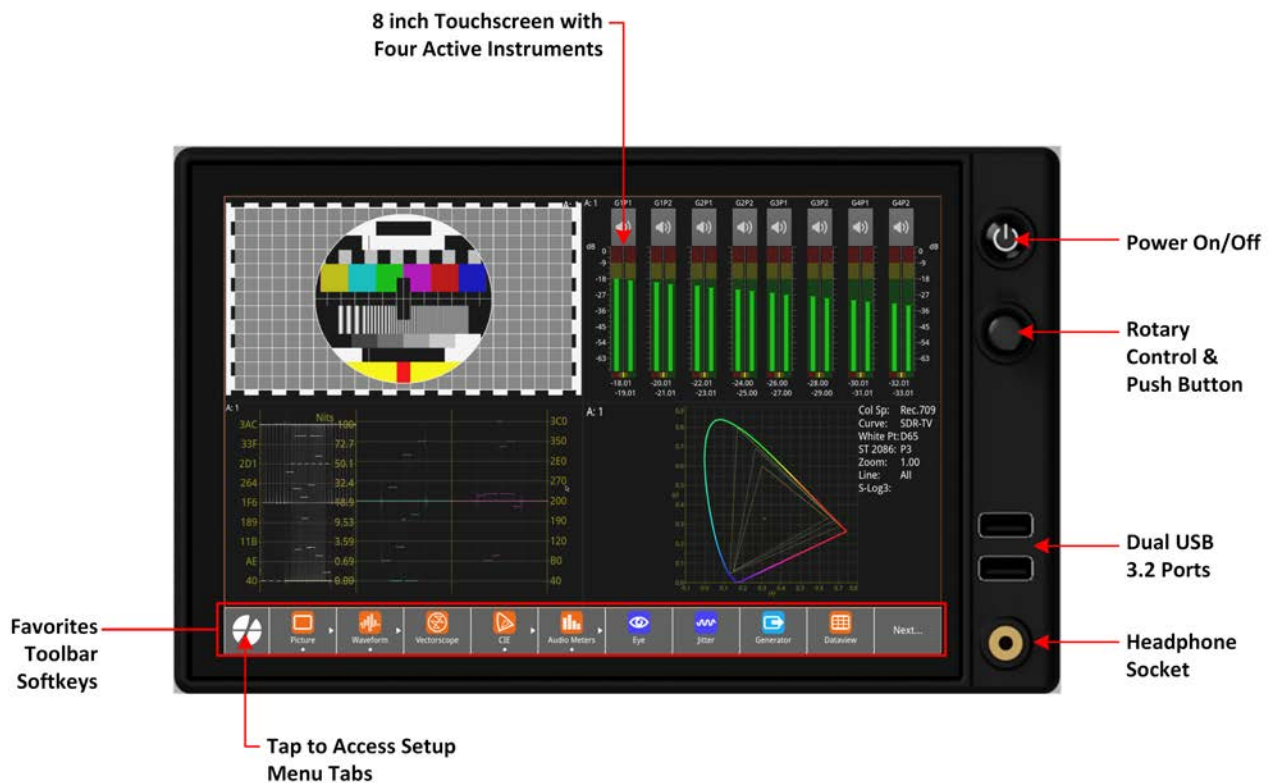


Figure 1-7: LPX500 Front Panel with Four Active Instruments

SDI Connections to the Unit

The LPX500 enables you to analyze up to two (standard) or four (optional) 4K video source inputs simultaneously.

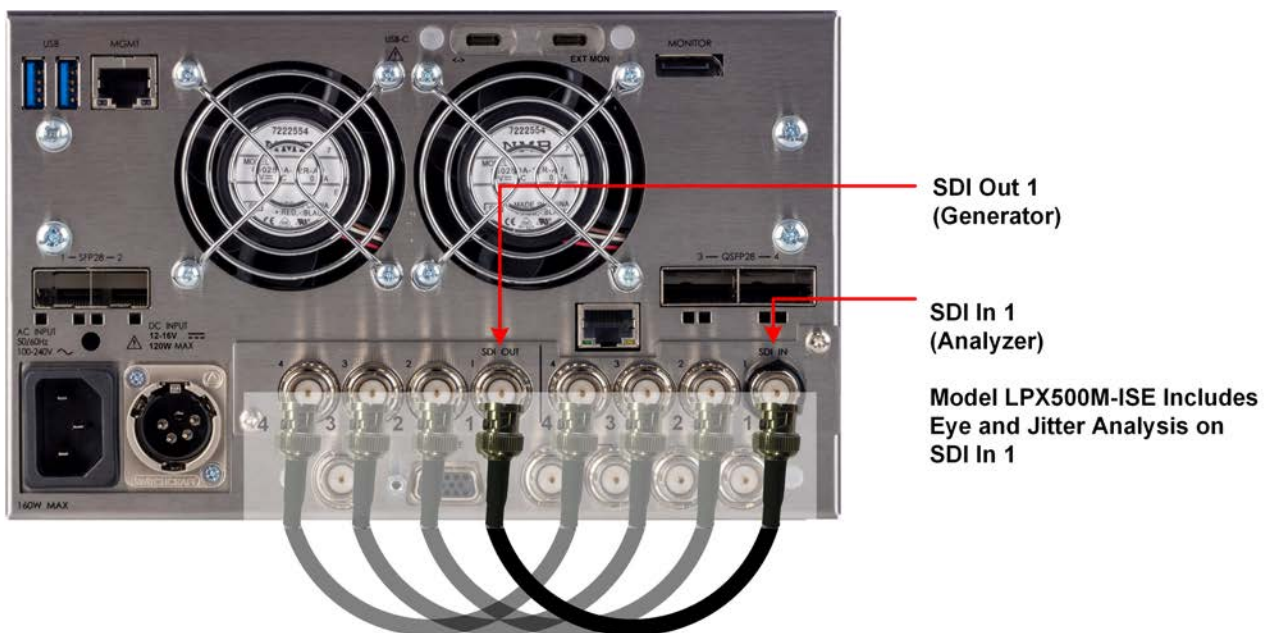
You can order the LPX500 in either of the following models:

- Model **LPX500IS** provides an interface with eight SDI BNC Connectors (four inputs and four outputs)
- Model **LPX500ISE** provides an interface with eight SDI BNC Connectors (four inputs and four outputs) and, in addition, Eye and Jitter analysis on the **SDI In 1** BNC connector, fitted with a black nut.

An SDI capable model, together with the Audio / Video Test Signal Generator software option (**LPX500-GEN**), includes both Generator and either two or four Analyzers, which enables you to copy the Generator outputs back to the corresponding Analyzer inputs as shown below.

This guide assumes that you connect the unit to itself as shown in the following figure for SDI using the BNC connectors as follows:

- For **single** link SD-SDI and HD-SDI standards, connect **SDI Out 1** to **SDI In 1**, or **SDI Out 2** to **SDI In 2**, or **SDI Out 3** to **SDI In 3** or **SDI Out 4** to **SDI In 4**.
- For **dual** link HD-SDI standards, connect either **SDI Out 1** to **SDI In 1** and **SDI Out 2** to **SDI In 2** or **SDI Out 3** to **SDI In 3** and **SDI Out 4** to **SDI In 4**.
- For **quad** link HD-SDI standards, connect **SDI Out 1** to **SDI In 1**, **SDI Out 2** to **SDI In 2**, **SDI Out 3** to **SDI In 3** and **SDI Out 4** to **SDI In 4**.



For SDI Generator Copy Over BNC
Connect Generator to Analyzer

Single Link: 1 Out to 1 In

Dual Link: 1+2 Out to 1+2 In or 3+4 Out to 3+4 In

Quad Link: 1+2+3+4 Out to 1+2+3+4 In

Figure 1-8: Connecting the Internal Generator to the Analyzer Using BNC Connectors

Powering-down the Unit

To power-down the unit, press the Power Button on the front panel and the unit will shutdown after 10 seconds. To shutdown immediately, press the power button twice or click the **SHUT DOWN NOW** button displayed in the Shutdown window. To stop a shutdown, click **Cancel**.

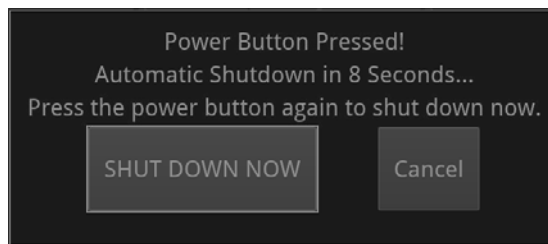


Figure 1-9: Unit Shutdown Dialog

Working with the User Interface

This chapter describes how to use the key features of the user interface and includes the following sections:

- [Overview of the LPX500 Components](#)
- [Using the LPX500 Front Panel](#)
- [Using the LPX500 Controls](#)
- [Launching an Instrument or Instruments](#)
- [Overview of the Instrument Windows](#)
- [Working with the Instruments](#)
 - [Working with Instrument Tabs](#)
- [Managing System State Presets](#)
- [Working with Layouts](#)
- [Customizing the Favorites Toolbar](#)
- [Icon Quick Reference](#)

Overview of the LPX500 Components

Introduction

The LPX500 is a highly-flexible, modular test and measurement device, which you can custom-build from a diverse palette of both standard and optional components.

This chapter introduces these components - the Toolsets, Instruments and Options available - which you can combine to create a solution that meets the specific demands of your media test and measurement environment.

Dual and Quad Analyzer Configurations

The standard LPX500 model provides two (dual) analyzers supporting the simultaneous analysis and display of two independent 4K SDI source inputs. With the optional software upgrade to four (quad) analyzers (option: **LPX500-QUAD**) the unit can support the simultaneous analysis and display of up to four independent 4K SDI source inputs.

For more information, see [Managing Multiple Analyzers](#).

Extended Monitor Configuration

The primary user interface of the standard LPX500 model is an integrated, eight inch, 1920 x 1200 LCD, multi-gesture touchscreen. You can use left or right swipes, tap, or tap and hold gestures to operate the unit from the touchscreen.

A second, optional compact screen unit (option: **LPX500-EM**) can extend the unit's local display capabilities, allowing you to control the unit from either physical screen.



Figure 2-1: LPX500 Main Unit and Second Screen in Optional Rack Mount

Dual integrated noVNC clients also enable you to choose which of the displays you access remotely over noVNC.

Note: Remote access using an external monitor connected to either the DisplayPort or SDI MON connectors currently uses an output from the main unit's display only.

Toolsets and Instruments

In essence, each **Instrument** is a standalone utility or application designed to provide a specific solution to a test and measurement task. For example, the LPX500 provides instruments to analyze the picture display or waveform; generate video or audio test signals; decode auxiliary data; provide status information, and so on. You can adapt or modify the functioning of all instruments using the configuration parameters available in the instrument options menus.

The **Toolsets** group together instruments at a higher functional level to assist with defining your ideal configuration.

It is important to note that non-standard Toolsets may require the purchase of additional hardware or software options to enable you to install the license for that Toolset.

The LPX500 provides a flexible, user-configurable feature to define and maximize the way instrument windows are displayed on the main unit and optional extended monitor. Referred to as [Layouts](#), this facility enables you to define up to 16 screen layouts on the main unit (and extended monitor if available.) Each layout can display up to 16 instrument windows simultaneously, without overlapping. These enhanced layouts provide a huge canvas of extended screen real-estate, while enabling you to navigate smoothly between different layouts using swipe gestures.

Furthermore, by saving different operational configurations for specific tasks as system [Presets](#), you can switch easily between bespoke configurations for rapid fault diagnosis, compliance monitoring and product development.

To summarize, you might use presets to switch the main functionality of the unit, for example, to change between signal types such as HD and UHD, and then use layouts saved in that preset to navigate between various different views of your instruments.

Standard LPX500 Toolsets

Standard Toolset

The standard or core Toolset provides the following Instruments and associated utilities:

- [Analyzer - Ancillary Status](#)
- [Analyzer - Audio Channel Status](#)
- [Analyzer - Audio Meters](#)
- [Analyzer - Picture](#)
- [Analyzer - Vectorscope](#)
- [Analyzer - Waveform](#)
- [Analyzer - Dataview](#)
- [Analyzer - ANC Inspector](#)
- [Event Logging](#)
- [Network and Automation](#)
- Supporting standard utilities:
 - [USB File Manager](#)
 - [VNC Remote Connection](#)

Advanced Toolsets

SDI and Reference Toolset

Note: This Toolset requires one of the factory-fitted, hardware chassis options: **LPX500IS** or **LPX500ISE**, which include the circuit boards mounted with SDI BNC connectors.

The SDI and Reference Toolset provides the following Instruments:

- [CRC Analysis SDI In 1 to 4](#)
- [Analyzer - Video Standard](#)
- [Stats - SDI In 1, 2, 3, 4](#)
- [System IO](#)
- [Video Timing & System Reference](#)
- [Eye - SDI In 1](#) (Also requires **LPX500ISE**)
- [Jitter SDI In 1](#) (Also requires **LPX500ISE**).

Video and Audio Generation Toolset

The Video and Audio Test Signal Generation Toolset provides the following Instruments:

Note: This Toolset requires the software option: **LPX500-GEN**.

- [Generator](#) (Includes separate dialogs to configure [Video](#) and [Audio](#) signal generation).

Media-related Toolsets

Advanced HDR Visualization and Analysis Toolset

The Advanced High Dynamic Range (HDR) Toolset provides the following Instruments and tools:

Note: This Toolset requires the software option: **LPX500-HDR**.

- [False Color Highlighting](#) (Additional submenu item in [Analyzer - Picture](#) instrument)
- [Analyzer - CIE Chart](#)
- Additional HDR submenu items in the Generator and Analyzer - Waveform Instruments.

UHD Formats Toolset

The UHD Formats Toolset provides the following:

Note: This Toolset requires the software option: **LPX500-UHD**. For SDI, this toolset requires one of the factory-fitted, hardware chassis options: **LPX500IS** or **LPX500ISE**.

- Support for UHD/4K formats for SDI (including some HD-SDI / 2K extended mode formats)
- Support for analysis of extended mode UHD/4k formats: YCbCr / RGB 444; 8, 10, 12 bit; 47.95P to 60P.

Using the LPX500 Front Panel

Overview of the Front Panel

The front panel of the unit features a number of controls providing various methods to access the user interface. You can choose to control the unit using either touch, function buttons, rotary control, navigation controls, or mouse cursor. You can use any combination of methods to best suit your task objectives. Some of the unit's controls have similar (or the same) outcomes so the methods you choose to perform a task depend on your personal preferences and whether accessing the unit locally or remotely.

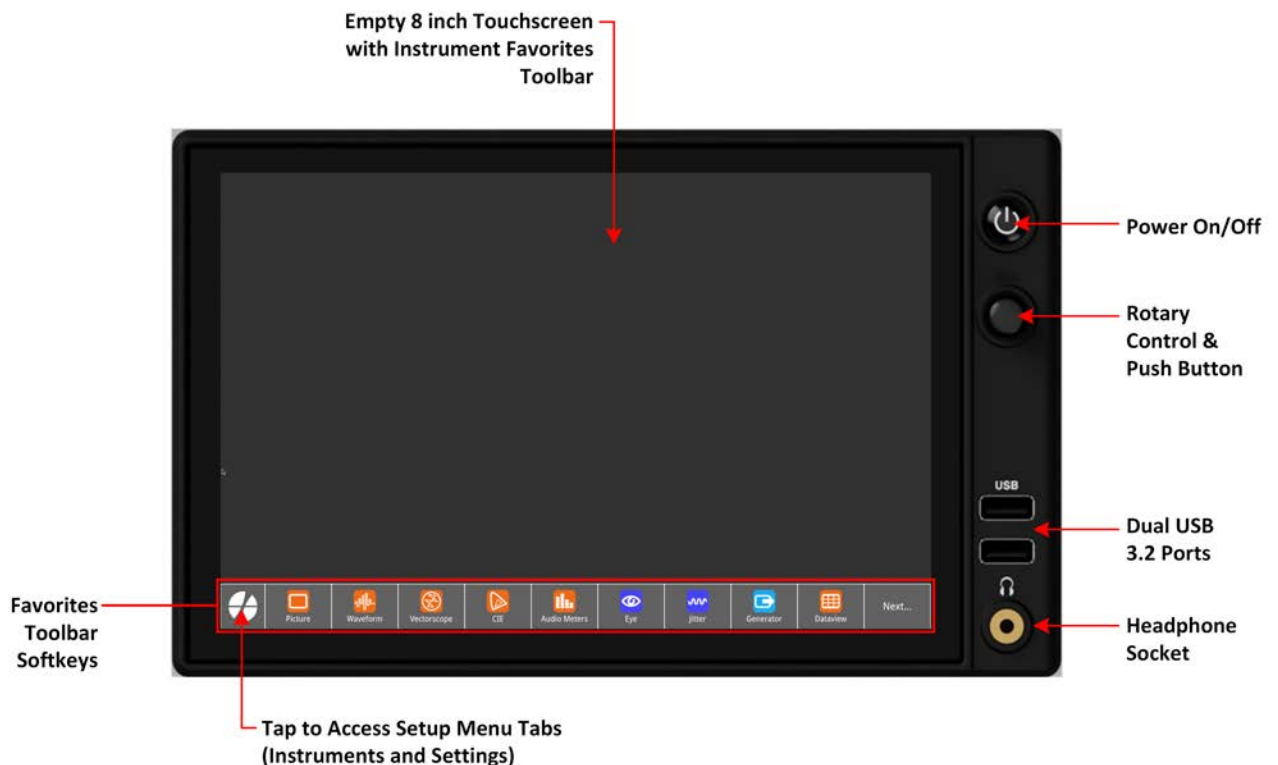


Figure 2-2: Active Layout Screen After Initial Start-up





The default **Active Layout** is the first layout displayed out-of-the-box or after applying the default settings and gives you immediate access to a default list of nine test and measurement instruments in the **Instrument Favorites Toolbar**. Tap any of the softkeys to open that instrument on the active layout. The instrument you choose will open in one quarter screen size in the top-left quadrant of the screen.


The default layout displayed first is always of type **Multi Unlinked**; this type of layout will be described later in this *User Manual*. For details, see the section [Working with Layouts](#).

Note: When accessing the unit remotely, using either the DisplayPort output or noVNC, the Favorites Toolbar is not initially displayed. Instead, to access the Toolbar menus, move your mouse cursor down to the bottom edge of the screen and the Favorites Toolbar will pop-up at the bottom of the display. If this is not the case, you will need to enable the Function Bar Popup parameter in the Display Settings, see [Setting up the Display](#).

Once disabled, you can only re-enable this function using the front panel touchscreen, or by restoring the default settings.

In addition to using the softkeys (each representing a different instrument) in the instrument favorites toolbar, several other methods are available to launch instruments, as follows:

- Tap  to open the Setup menus, open the Instruments tab and tap an instrument launch button to select that instrument.
- Tap  to open the Setup menus, open the Instruments tab, turn the rotary control  to the left or right to scroll through the instrument launch buttons and pages, then press to select an instrument.
- If working remotely or locally using a mouse, move your mouse cursor to the bottom edge of the screen then click  to open the Setup Menus. Click one of the instrument launchers available in the Instruments tab.

[Figure 2-3](#) shows the screens available when using the softkey  to switch between the current screen (referred to as the **Active Layout**) and the system Setup Menu panels. In addition, it also

shows how to use the  softkey to cycle through the favorites toolbars.

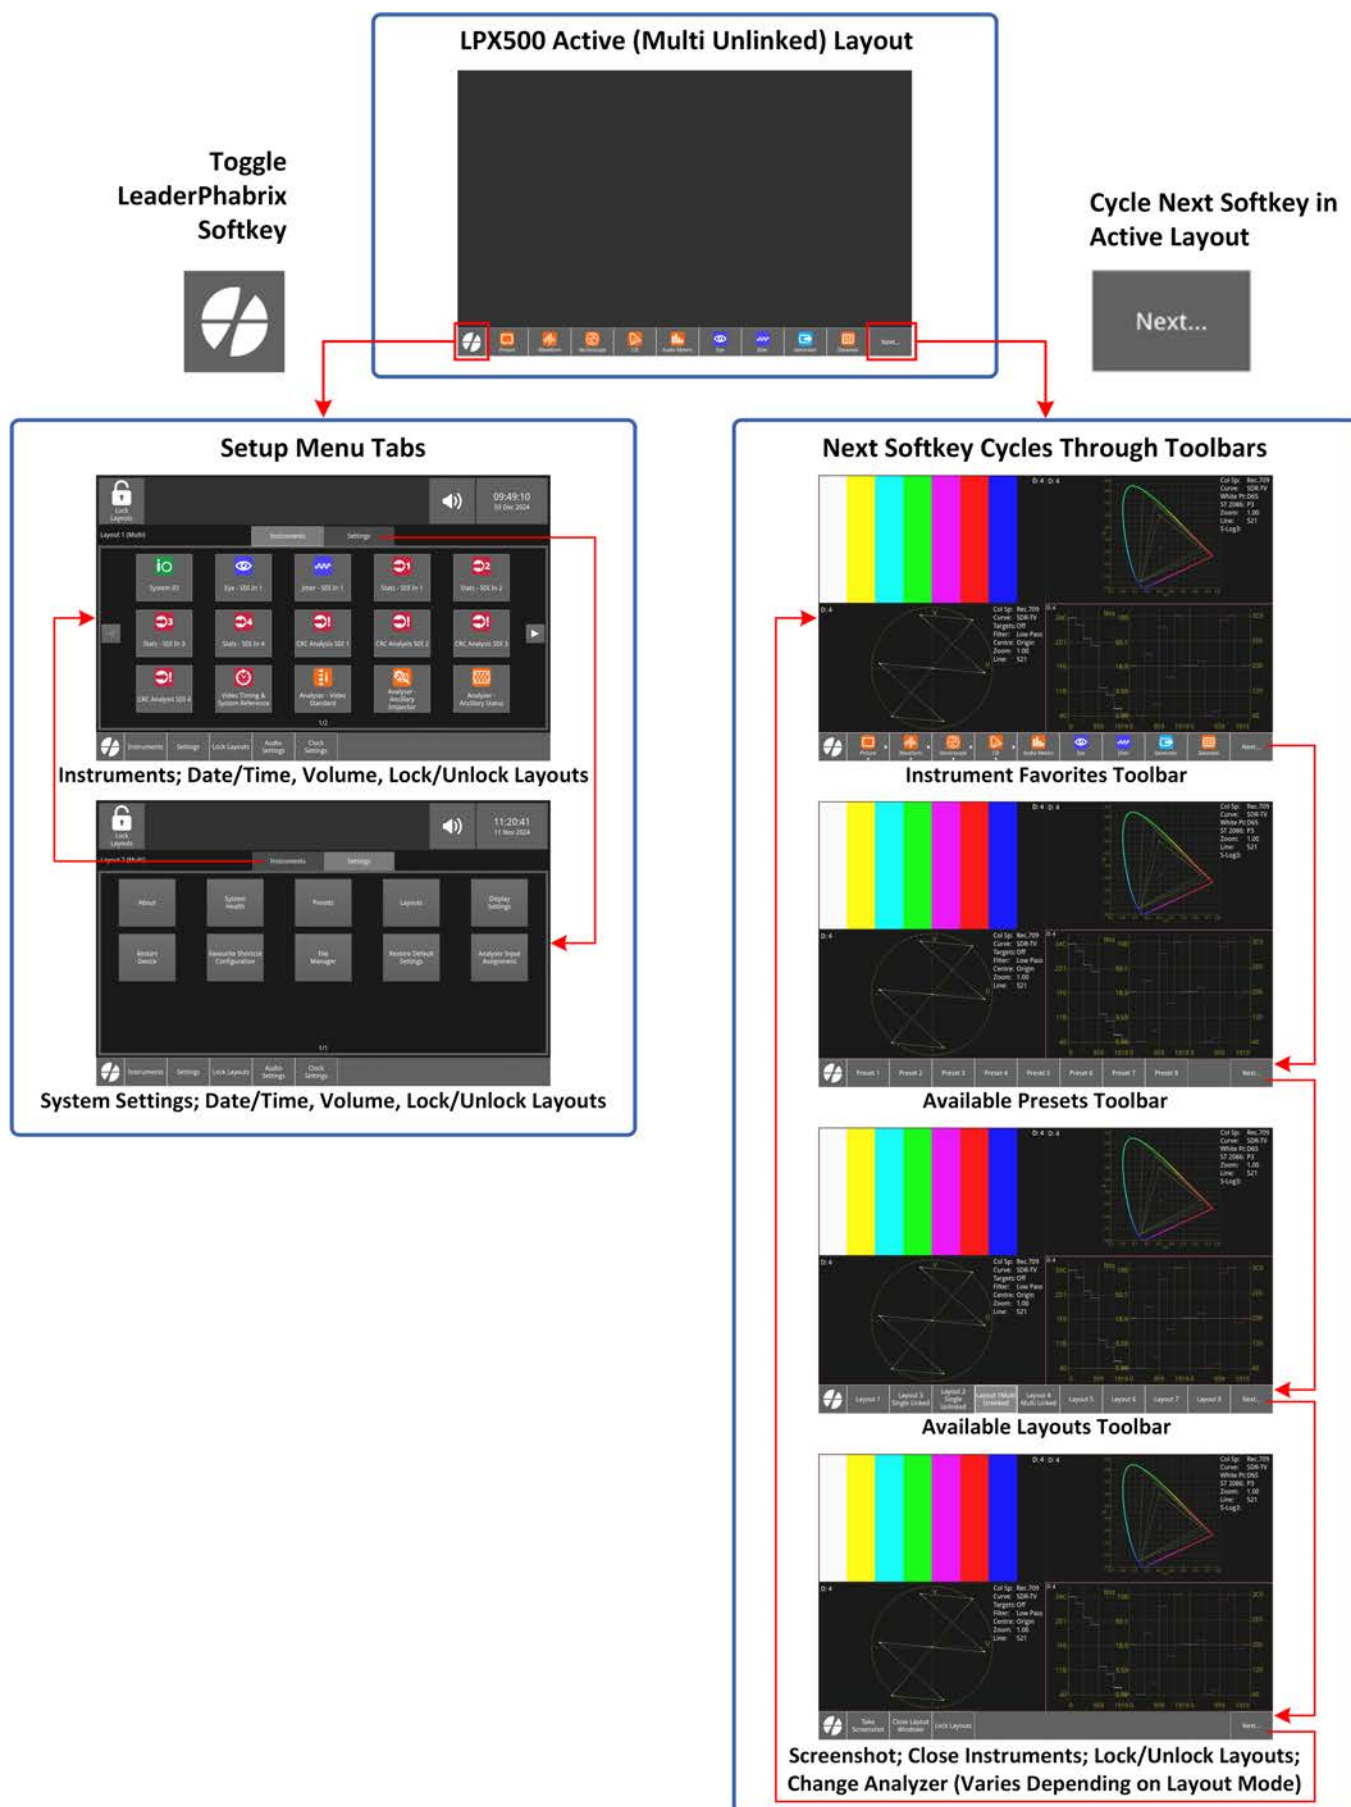


Figure 2-3: Using the LeaderPhabrix Softkey to Access Settings and Next Softkey to Cycle Through Toolbars

Using the LPX500 Controls

Overview








The LPX500 user interface offers a variety of different controls to provide flexibility and to suit different working styles and environments. It is recommended to use the most appropriate method for the task in hand, depending on whether you are working locally, using the touchscreen, or remote from the unit.

Note: Where possible in this user manual, we use the terms **tap** or **click** for alternative methods to select an item and the terms **tap and hold** or **right-click** to display the options menu for an instrument. In addition, the term **swipe** describes a single finger, horizontal movement from the left of the screen to the right, right to left, or down from the top of the screen.

The main controls are summarized in the following table and include:

- Touchscreen control using either the unit's built-in touch-sensitive display or the optional, extended touch-sensitive display.
- Mouse control, generally for working on an external display, either showing the rasterized output (DisplayPort or SDI MON output) or for remote access to the interface using noVNC.
- Rotary control, generally to move the spotlight and select spotlit objects.
- Mouse control for working locally, with a USB mouse connected directly to the unit.
When you move the mouse cursor to the bottom of the screen, the toolbar appears by default, allowing you to select the softkeys. You can disable this action in the [Display Settings](#) dialog if necessary.


Table 2-1 : Symbols for LPX500 Controls and Gestures in this User Manual


LPX500 Control	Symbol	Description	Action Term Used in this Manual
Touch		Touchscreen control using the touch-display(s). You can tap any part of the built-in display or optional second display to perform an action.	Tap or Double-tap or Tap and hold
Swipe Left		Touchscreen control using the touch-sensitive display(s). Slide a finger from right to left of the screen.	Swipe Left
Swipe Right		Touchscreen control using the touch-sensitive display(s). Slide a finger from left to right of the screen.	Swipe Right
Mouse		Mouse control for use on an external display or for remote access to the interface. The mouse scroll wheel has similar functions to the Rotary Control.	Click or Double-click or Right-click
LeaderPhabrix Softkey		On unit touchscreen display, tap to toggle between Active Layout and Setup Menus.	Tap
Softkeys		Displayed in a series of Toolbars at the bottom of the touchscreen. Tap to select the action or function displayed by the softkey label.	Tap
Navigation Controls			
Rotary Control		<p>Rotary control to move the spotlight left or right by turning the shaft and pressing to select the spotlight item.</p> <p>In addition, when working with audio instruments, you can use the rotary control to adjust the audio volume to connected headphones.</p>	Turn or Press

Using the Touchscreen Controls




The touch-sensitive screen on the front panel of the LPX500 provides a softkey toolbar along the bottom of the active layout, which gives you access to a default set of favorite instruments, various favorite toolbars, the Setup menu tabs and additional functions, see [Figure 2-3](#).

You can tap any of the instrument softkeys in the favorites toolbar to launch that instrument in the active layout. For more information about the instruments, see the section [Working with the LPX500 Instruments](#).

You can configure the instruments displayed in your favorites toolbar in the **Settings** tab of the **Setup** menus, see the section [Customizing the Favorites Toolbar](#). To open the Settings panel, tap  at the left-hand side of the toolbar, then select the Settings tab.

Note: The  softkey is displayed at the left of all toolbars unless the instrument-specific toolbar is displayed when the spotlight is on an instrument.

Use the  softkey to cycle through the favorites toolbars, for example:

- To launch a group of instruments from a previously saved preset, tap  then select a preset from the available list. The presets toolbar is displayed only when presets have been created.
- To display a different screen layout from a previously saved layout, tap  to display the layouts toolbar, then select a layout from the available softkeys.
- To take a screenshot of the current active screen, or to close all active instruments, lock / unlock layouts or change the Analyzer source input tap  again.

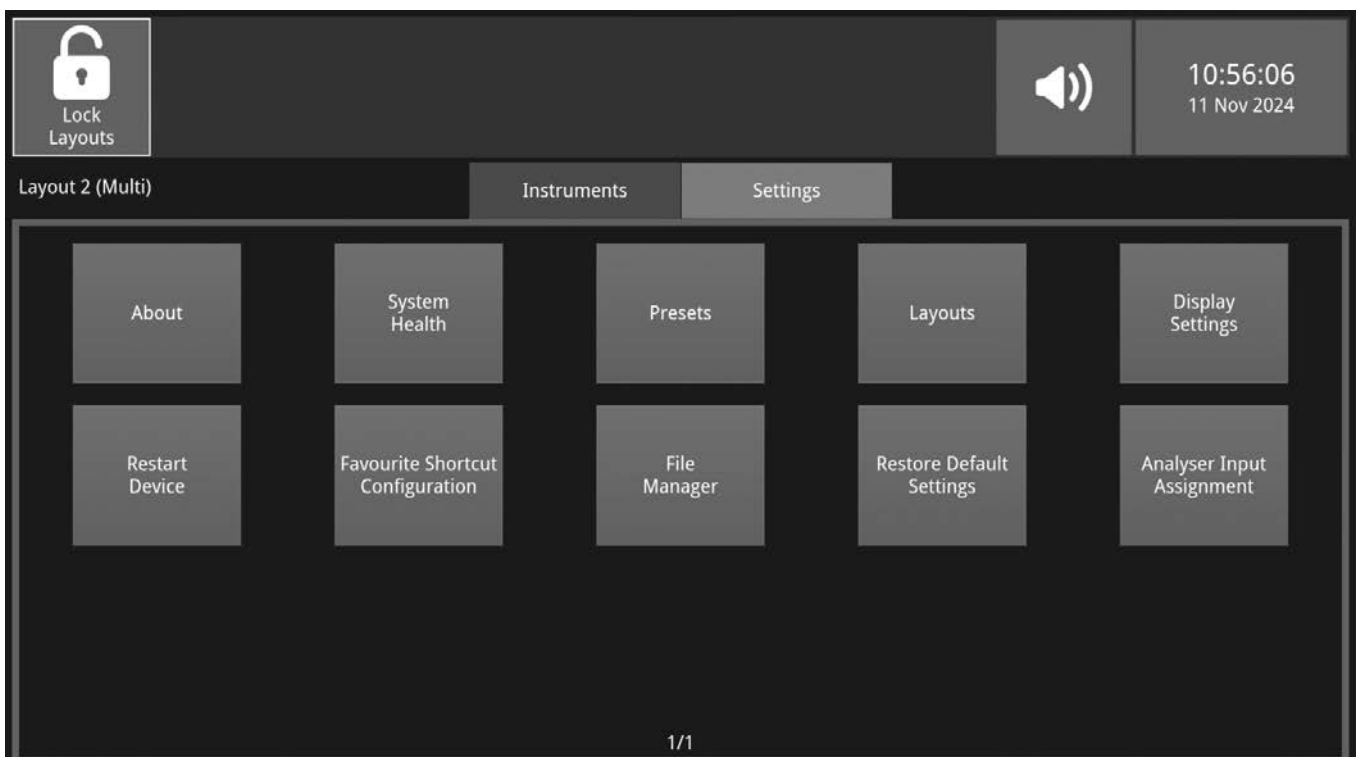


Figure 2-4: Settings Tab in the Setup Menus

Alternatively, tap  to launch the Setup Menu where you can do the following:

- Lock or unlock the current Layout.
- Adjust the volume of the audio output, or mute / unmute the audio output using the Audio dialog.
- Set the system date and time.
- Identify the active layout to which instruments will be loaded from the layout launcher.
- Open the **Instruments** tab to launch an instrument from all available, licensed instruments.
- Open the **Settings** tab to launch the following:
 - Display information about your unit in the [About](#) dialog (serial number, software version, licensed instruments, hardware versions, etc.)
 - View the [System Health](#) dialog (temperatures and fan speed).
 - Manage your presets in the [Presets](#) configuration dialog - you can add, load, update, rename, delete, or move presets.
 - Manage your screen layouts in the [Layouts](#) configuration dialog - you can add, duplicate, switch, rename, delete, or move layouts.
 - Open the [Display Settings](#) dialog to:
 - Set the display output rate
 - Adjust the user interface brightness
 - Adjust the backlight brightness of the display
 - Enable or disable the on-screen keyboard
 - Enable or disable the popup of the toolbar softkeys when using a remote display, noVNC access, or when using a mouse on the unit's touchscreen.
 - Choose whether to display system temperature measurements in units of degrees Celsius (°C) or Fahrenheit (°F)
 - Enable or disable instrument window frames for Analyzer and Generator windows
 - Set different border colors to differentiate analyzer instruments connected to each of the two or (optionally) four Analyzers
 - Set the border color for Generator instruments.
 - Restart the unit.
 - Configure the instruments displayed in the Favorites Toolbar in the [Favorite Shortcut Configuration](#) dialog.
 - Open the [File Manager](#).
 - Restore factory [Default Settings](#) to revert to the factory configuration of the unit.
 - Assign physical inputs to each of the two or (optionally) four [Analyzers](#).

Note: When using the second screen some elements of the Settings menu are disabled and only available from the LPX500 main unit, for example, File Manager.

Note: When using the second screen some elements of the Settings menu are disabled and only available from the LPX500 main unit, for example, File Manager.

The following figure shows the Instruments tab of the Setup menus containing the first page of instrument launchers.

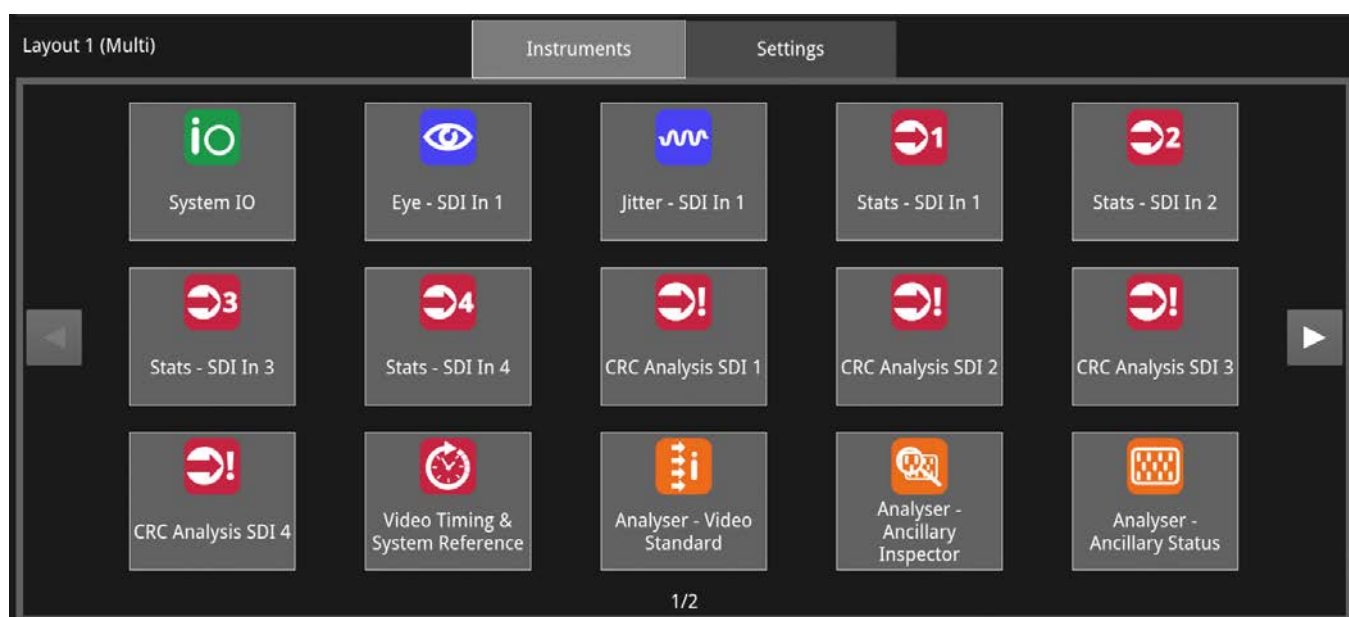


Figure 2-5: Instruments Tab (Page 1) in the Setup Menu for Unlinked Layouts

Note: The layout label, below the lock / unlock layouts icon, identifies the target active layout for instruments launched from the Instruments tab, the type of layout and whether the layout is linked.

The following figure shows how to use the touch controls from the active layout to display either the Instruments or Settings tabs of the Setup menus, to launch an instrument or system utility, or to cycle through the various toolbars. Additional touch controls for some elements you might use in the user interface of active instruments are also shown.

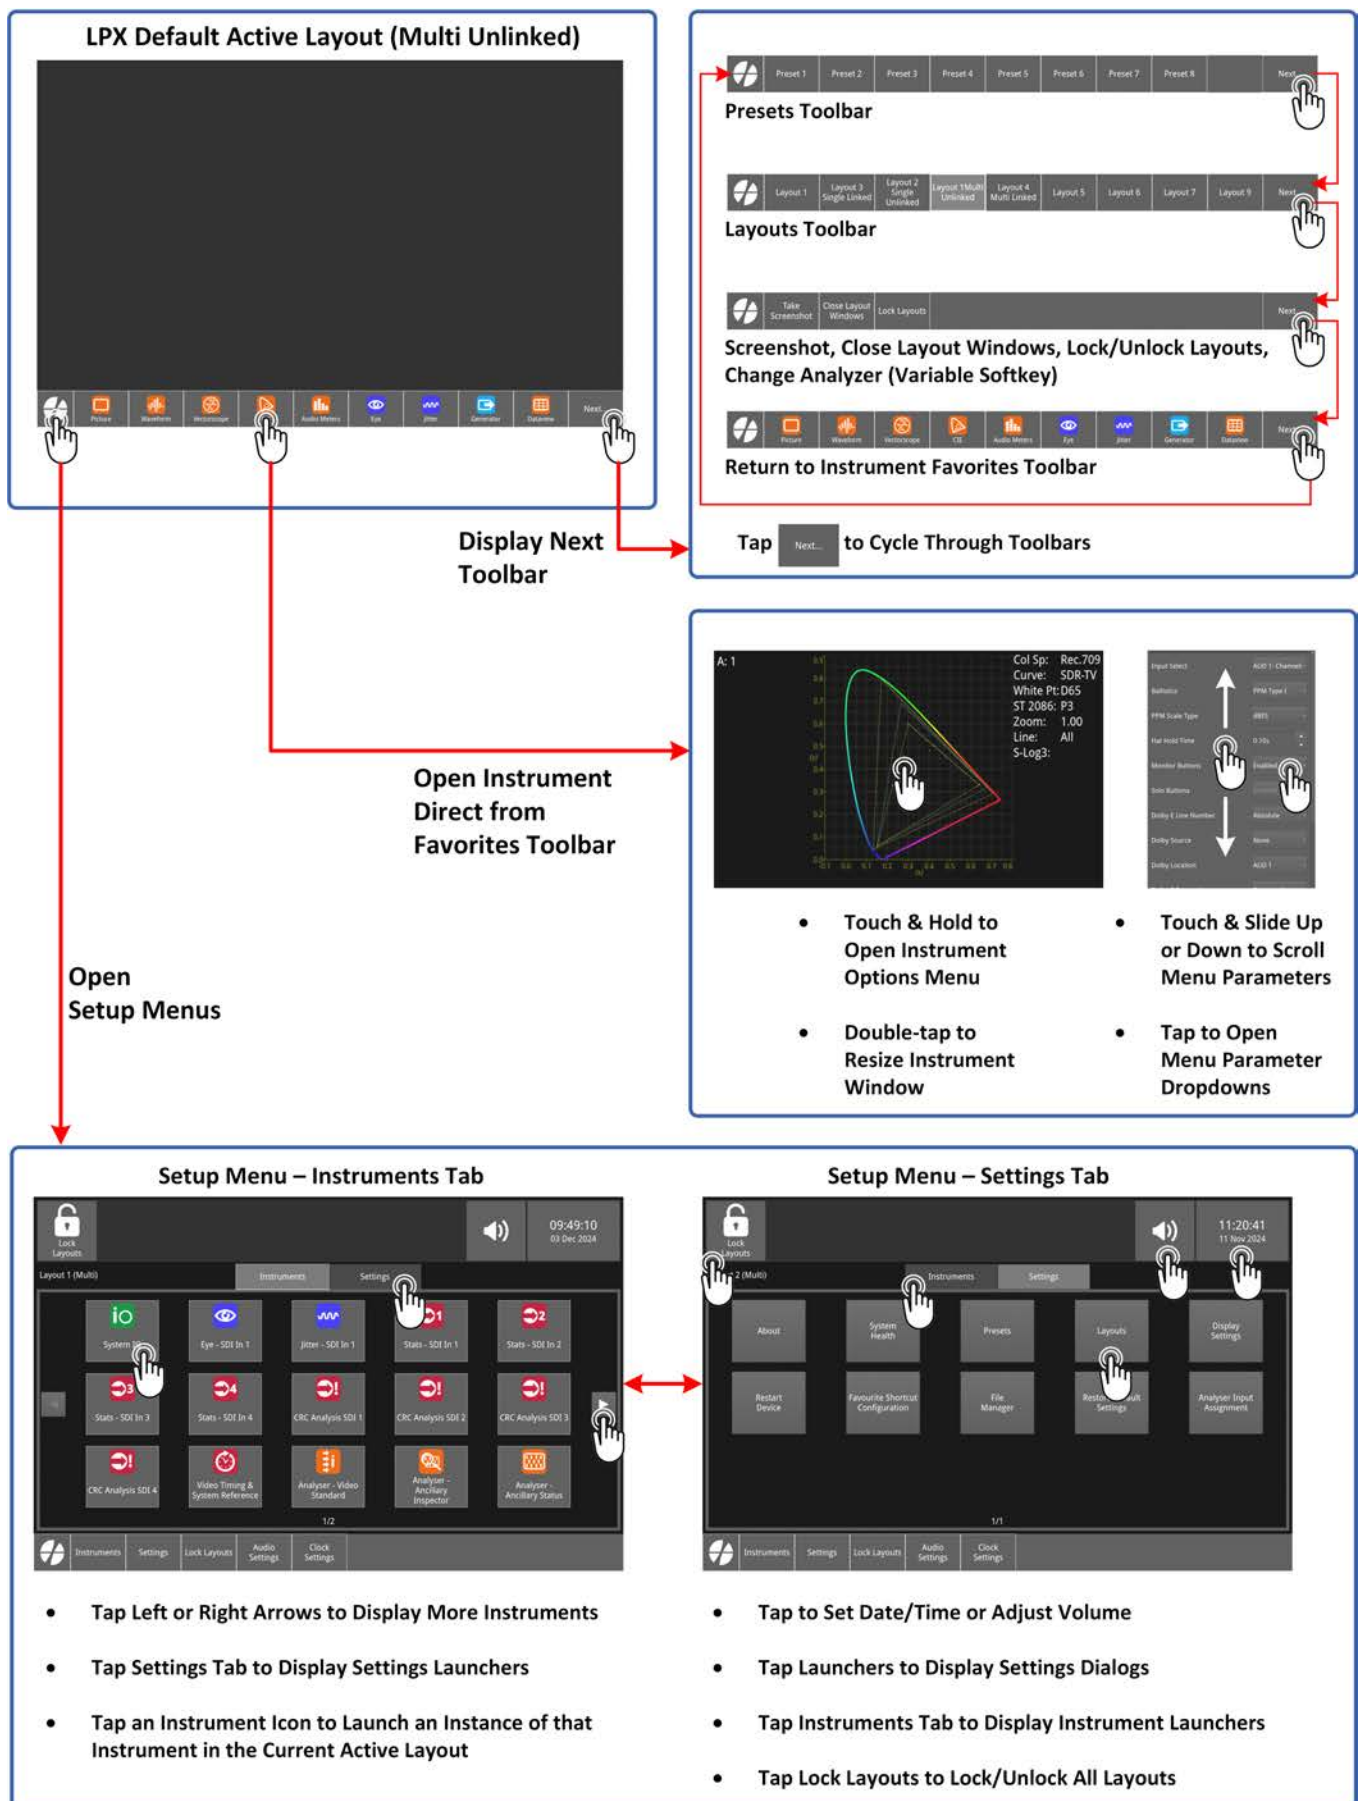


Figure 2-6: Touch Control Using the Instrument Favorites Toolbar from the Active Layout

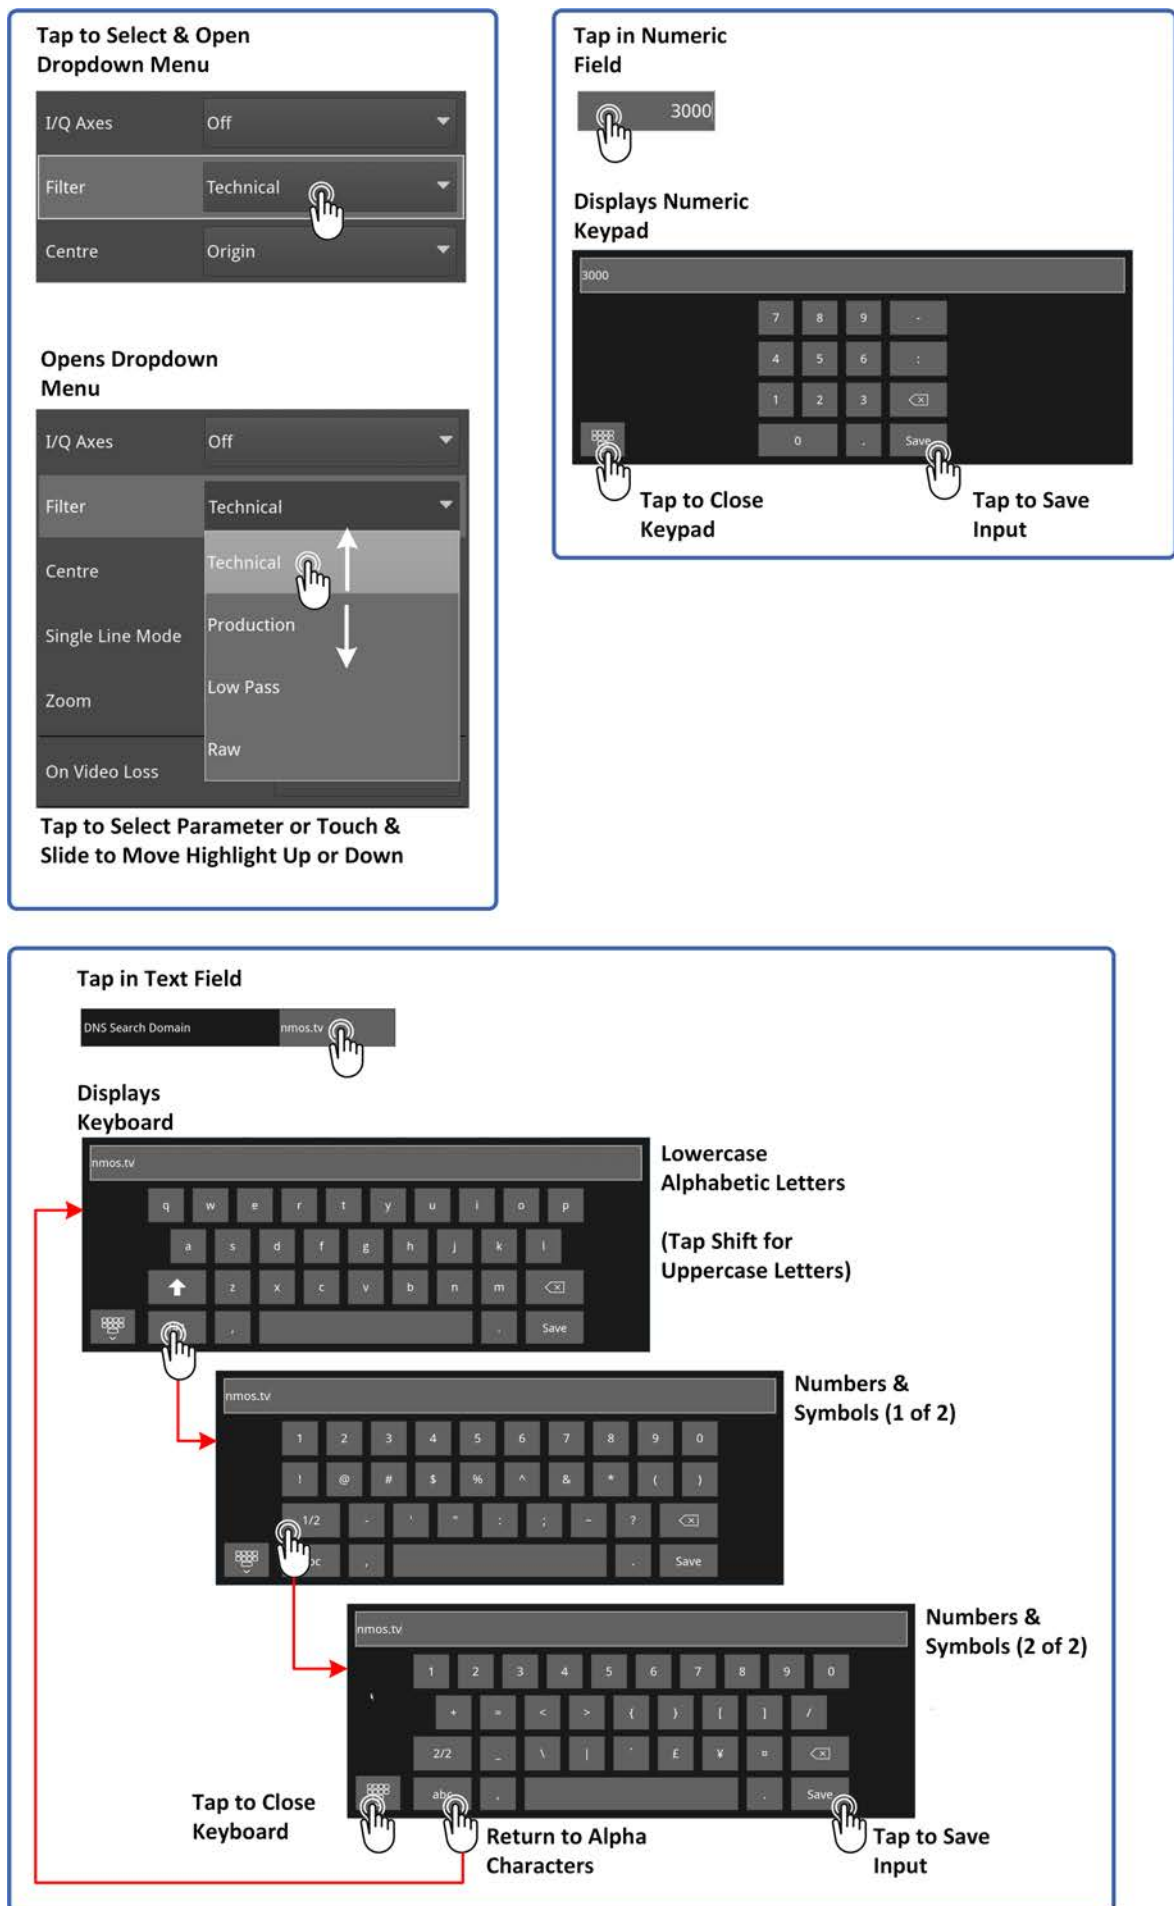




Figure 2-7: Touch Control of User Interface Tools

Table 2-2 : Comparison of Touch and Mouse Actions in the LPX500 User Interface

	Equivalent Actions			
	Single tap	Double-tap	Touch and hold (or long touch)	Touch, hold and drag
 (Right handed Mouse Setup)	Left click	Double-click	Right-click	Left-click, hold and drag

Working with the Spotlight

The LPX user interface includes a **Spotlight** feature to highlight the currently active component. This may be an entire instrument, a configurable parameter or system control in the instrument's options menu, or even a softkey in one of the toolbars. The spotlight is shown as a thicker white border around the spotlit item.

You can change the position of the spotlight by tapping the touchscreen, using the rotary control, or clicking with the mouse cursor.

When you open a new instrument into a layout, the spotlight will automatically be on that instrument. When the spotlight is on an instrument, the **instrument-specific softkeys** are displayed in the toolbar.

To remove the spotlight from an instrument, tap the **Clear Spotlight** softkey. This removes the white border from the instrument and returns the favorites toolbar to its last used state.

In the options menu of an instrument, tap inside the menu to activate the spotlight and move up or down the parameters using the rotary control. Press the rotary control to select a parameter then move the spotlight through the parameter options.

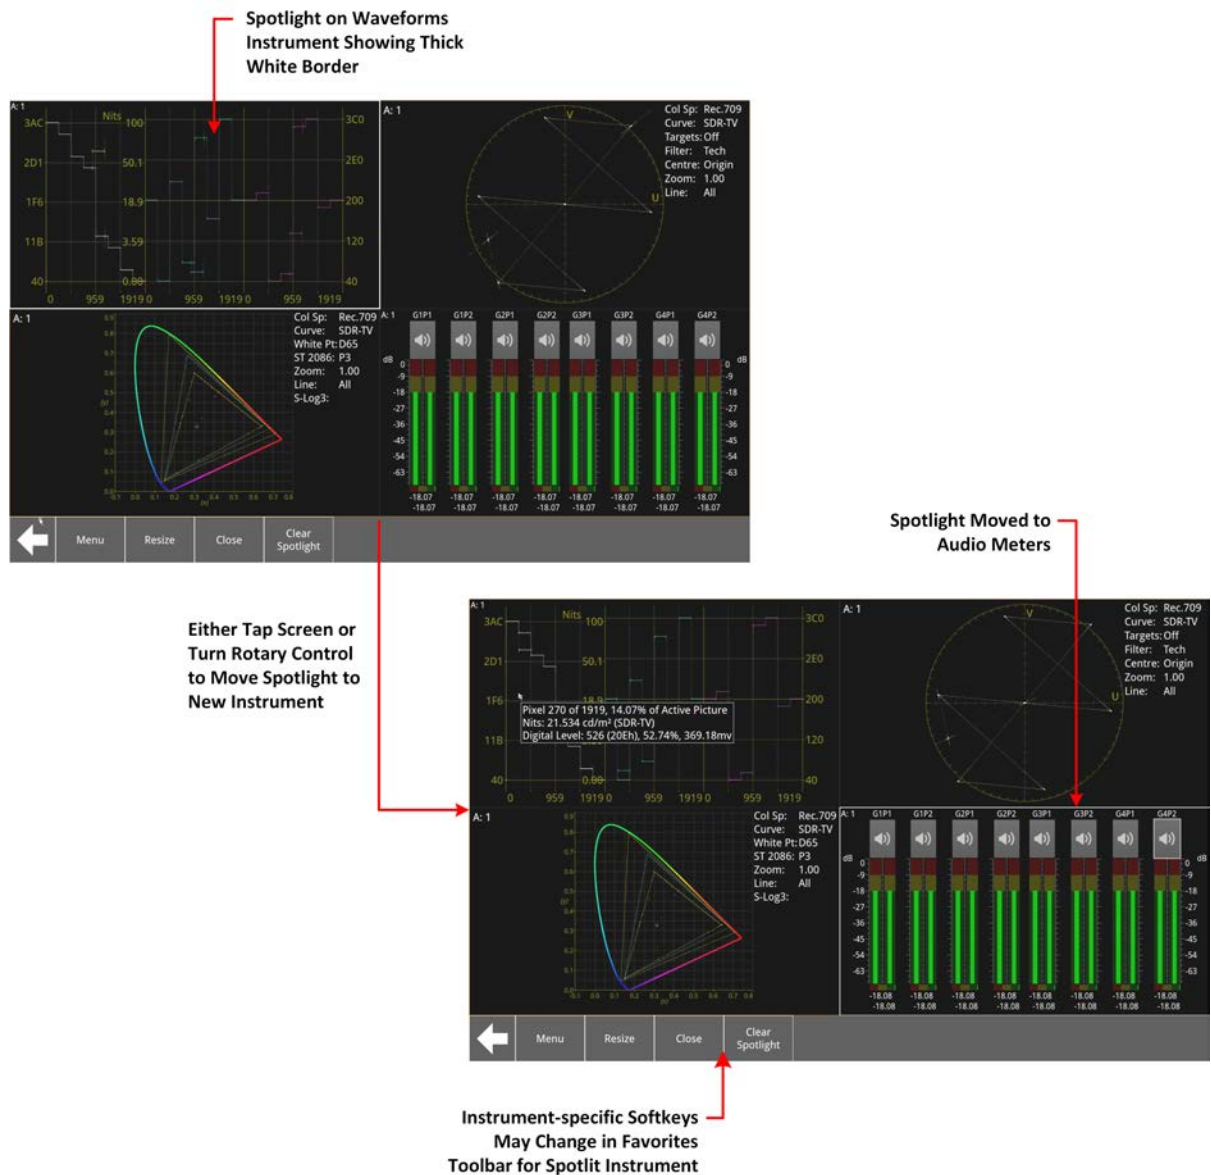


Figure 2-8: Moving the Spotlight to a Different Instrument

Using the Rotary Control

The rotary control, located below the on/off button on the front panel, provides an alternative method for moving the spotlight in the user interface, for selecting items and for adjusting the headphone volume, if connected, when working in audio modes. In most instruments, you can select the control or spotlight option by pressing the rotary control.

Depending on the current context of the user interface, the direction in which you turn the rotary control can change the direction of movement of the spotlight.

For example, turning the rotary control clockwise in the instrument panel, moves the spotlight to the right and turning counter-clockwise moves the spotlight to the left. In an open options menu, however, turning the rotary control clockwise moves the spotlight down the parameter list and turning counter-clockwise moves the spotlight up.

If you position the spotlight in a numeric field with a spinbox control, you can increase the displayed value by rotating the control clockwise, or decrease the value by rotating counter-clockwise.

Note: Some features of the rotary control may not be fully enabled in the current software release.

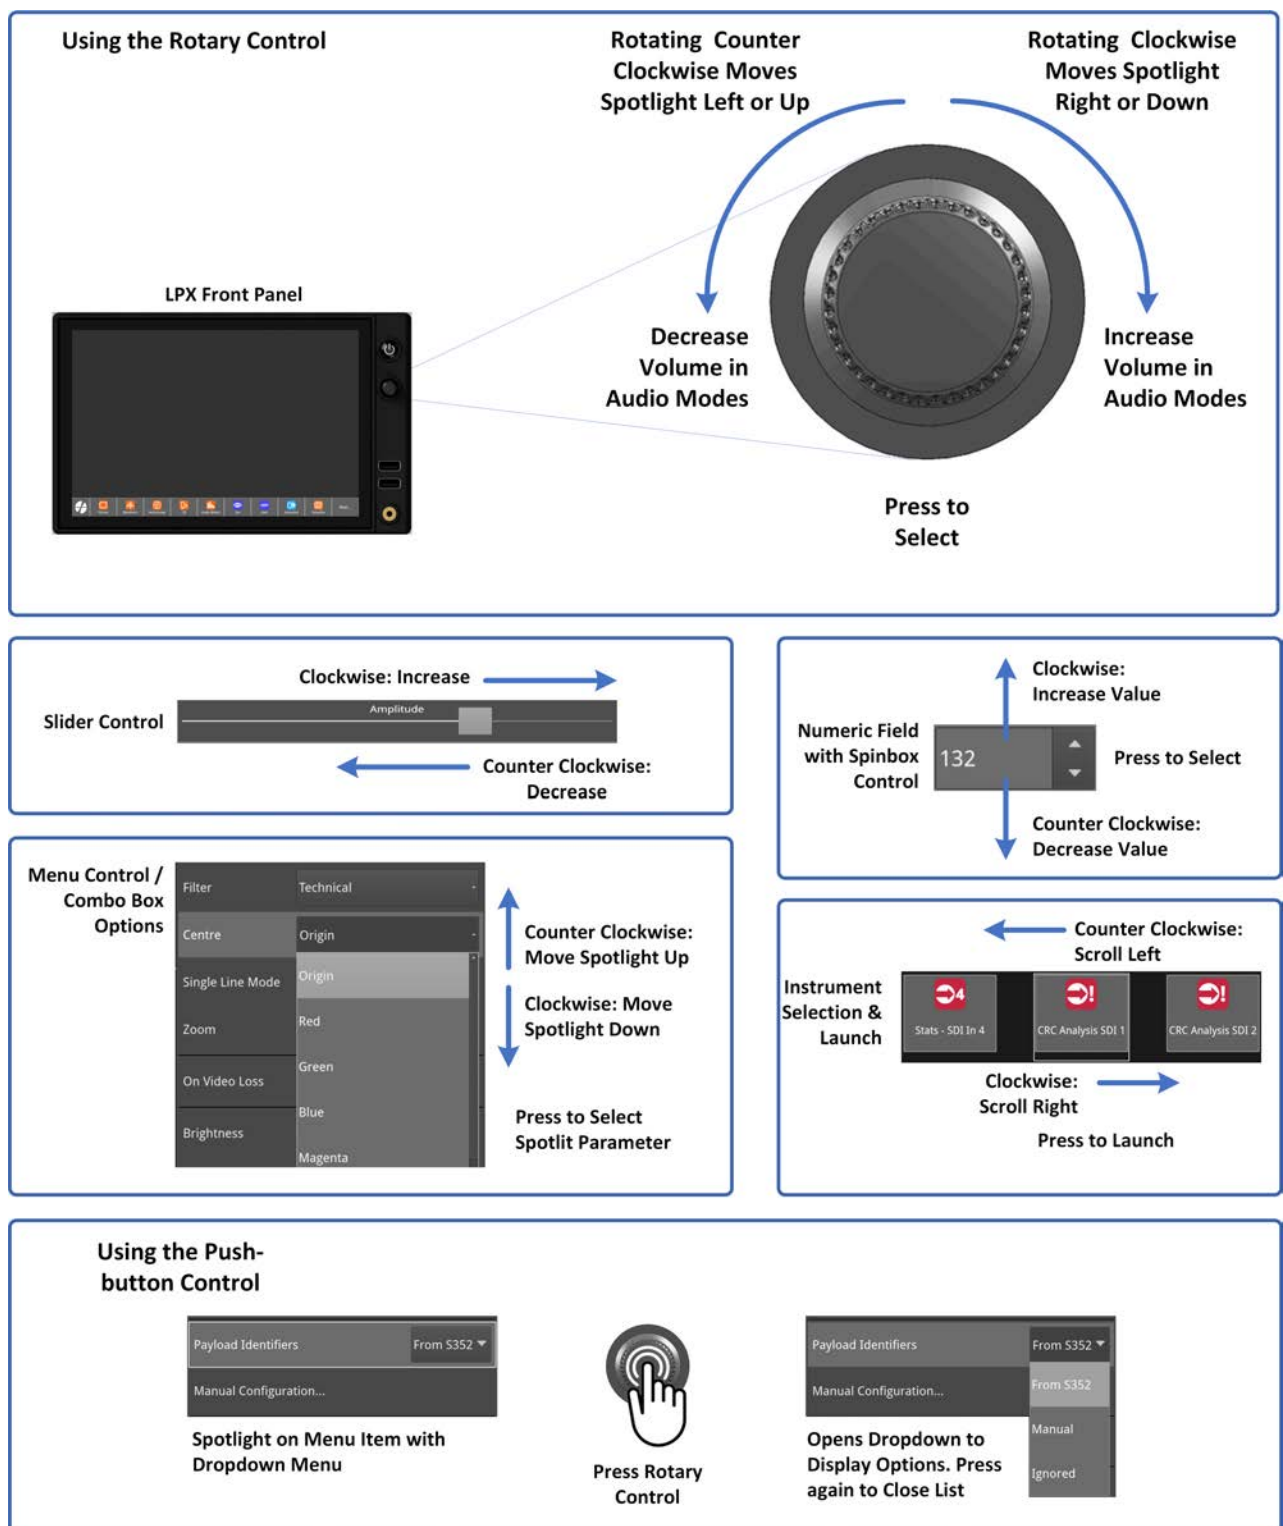



Figure 2-9: Using the Rotary Control with Instrument Software Controls

Mouse Control

Mouse control is primarily optimized for working on the rasterized DisplayPort output to an external screen or for remote access to the unit over noVNC or a VNC client application. All tasks that you can perform using touch control locally on the unit can be done using the mouse on the remote display.

You can, if necessary, connect a USB mouse directly to the unit, to work locally on the touchscreen of the unit. By default, moving the cursor to the bottom of the touchscreen raises the toolbar slightly, however, you can disable this feature in the [Display Settings](#) dialog.

Note: When controlling the unit over the DisplayPort output, a USB mouse must be connected to one of the unit's USB ports.

Click  to toggle between the Setup Menus and the Active Layout. Use the Setup Menus to select Instruments, manage Presets and Layouts, assign analyzers, and configure system settings.

As with the Rotary Control, you can scroll the mouse wheel forward to move the spotlight up / left or scroll backward to move the spotlight down / right. In addition, press down on the scroll wheel to select a spotlight item.

Once an instrument is open in the active layout, right-click the mouse cursor in the instrument window to display the context-sensitive, options menu. This displays a more compact options menu than the touch-enabled menu, see [Figure 2-33](#). You can now configure the parameters for that instrument as usual.

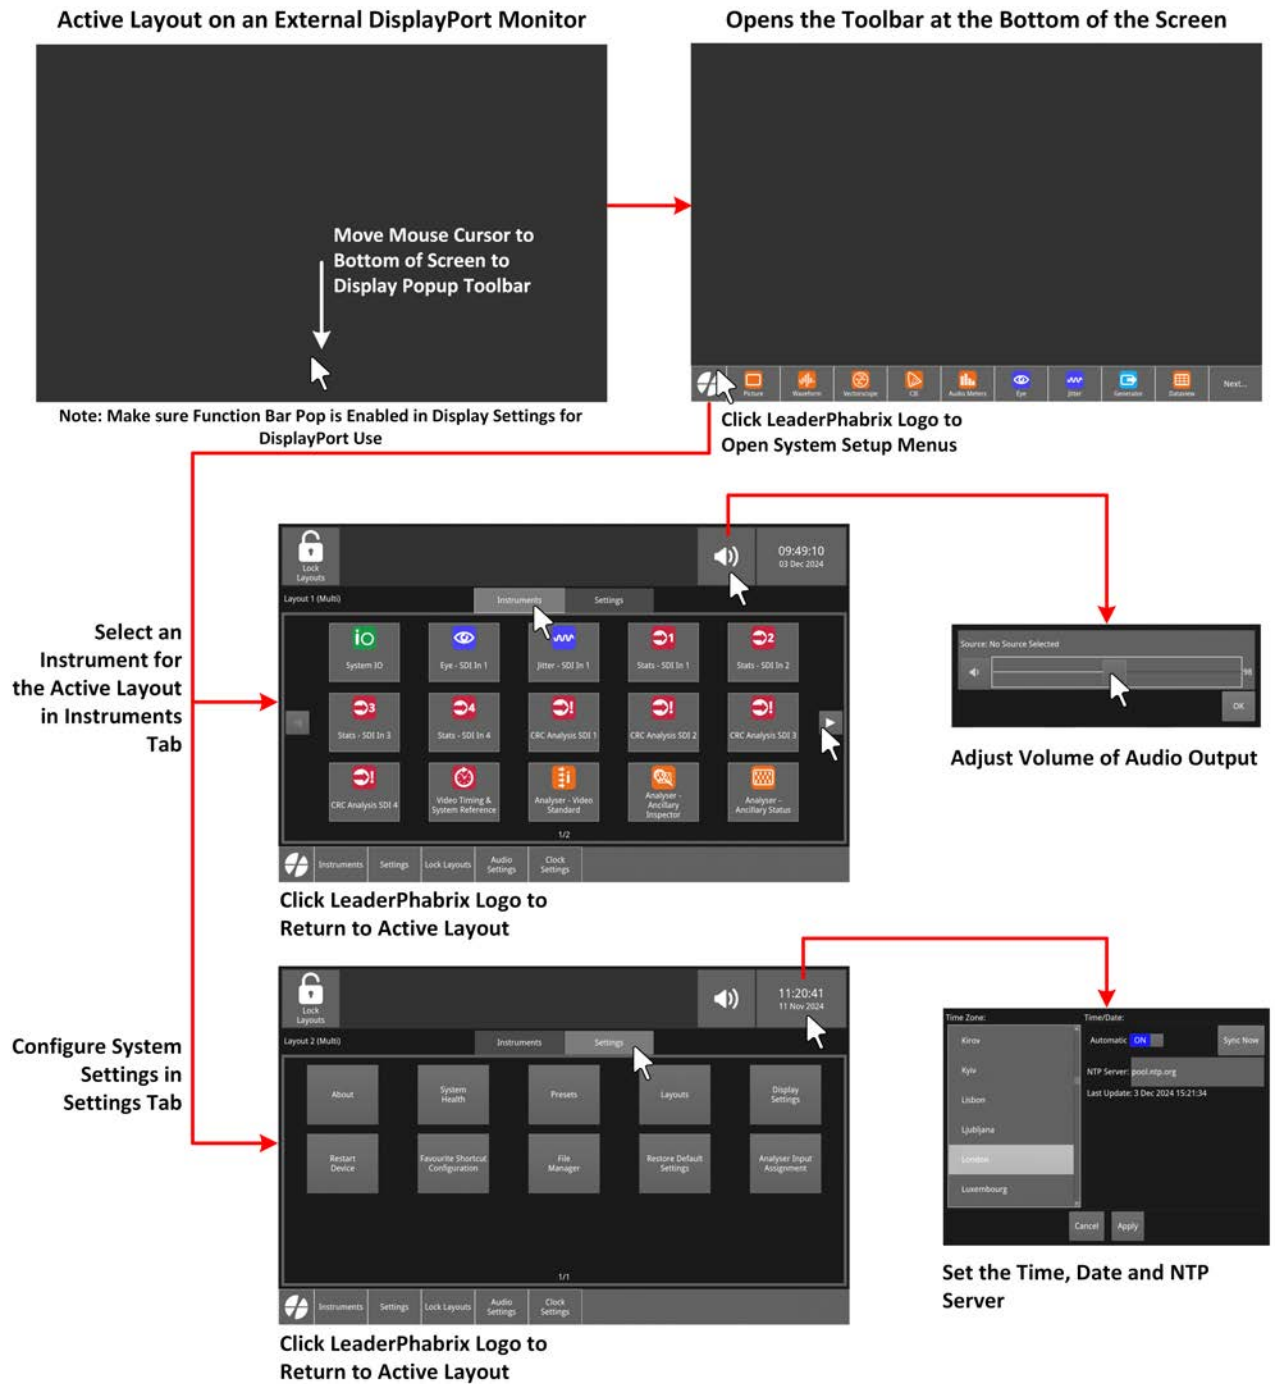


Figure 2-10: Using the Mouse on an External Display or Over a noVNC Connection

Launching an Instrument or Instruments

Overview



You can launch instruments in a number of ways from the active layout screen, for example, you can either use the favorites toolbar, choose instruments from the **Instruments** tab in the Setup menus, or open an existing preset of saved layouts and instruments.

The method you choose also depends on whether you are working locally, using the touchscreen, or remotely on either an external display or using noVNC with a mouse and external keyboard.

Each available Instrument has a designated, color-coded icon displayed in the launch buttons of the Instruments tab and in the instrument favorites toolbar. For more information, see the section [Instrument Icon Quick Reference](#).

Certain utilities, used mainly for administrative tasks, are available from the **Settings** tab of the Setup menus, rather than as icons in the Instruments panel, for example, the File Manager.

You can page through the list of available instruments using one of the following access methods:

Required Action	Available Methods
Page left or right through the available Instruments in the Instruments tab and select one.	Local Access:  Remote Access: 

Launching an Instrument from the Favorites Toolbar




Unlocked Layouts

A default **Favorites Toolbar** is preconfigured with up to nine frequently used Instruments (depending on the available licensed options.) Each one of the favorite softkeys in the toolbar represents a different Instrument.

If necessary, you can change the composition of instruments displayed in the favorites toolbar in the **Settings** tab of the Setup menus, see the section [Customizing the Favorites Toolbar](#).



Figure 2-11: Favorites Toolbar (Unlocked Layout)

Required Action	Available Methods
To launch an instrument from the favorites toolbar.	Local Access:   Remote Access: 

If you launch an instrument to a layout that is not in your favorites list, that instrument is added to the favorites toolbar so that you can quickly identify it in the layout if it becomes hidden.

When you change between layouts, the shortcut softkeys in the favorites toolbar will change to reflect the instruments open in the active layout in addition to the favorites softkeys.

Locked Layouts

When a layout is locked, the favorites toolbar changes to display softkeys only for those instruments that are currently used in the active layout.



Figure 2-12: Favorites Toolbar (Locked Layout)

[Figure 2-12](#) shows the favorites toolbar for a locked layout displaying four active instruments.

When you change between layouts, the shortcut softkeys in the favorites toolbar will change to reflect the instruments open in the active layout.

About the Instrument Launcher Pages

All standard and optional licensed instruments are displayed in the pages that you can access from the **Instruments** tab of the Setup menus. You can navigate between the pages using the left or right arrow buttons in the left and right margins of the pane or swipe left or right to display next or previous pages. When an arrow button is grayed-out, you cannot move further in that direction.

You will see the following standard instrument pages displayed in the instrument panel of the Instruments tab, without any optional software installed:

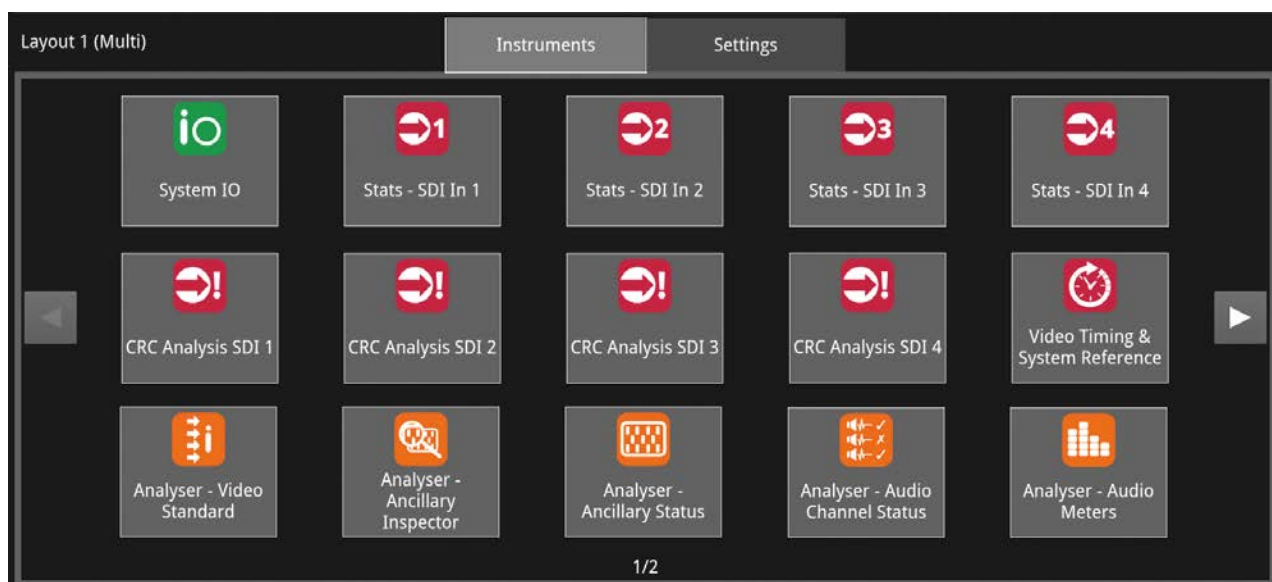


Figure 2-13: Standard Instruments Tab - Page 1 of 2

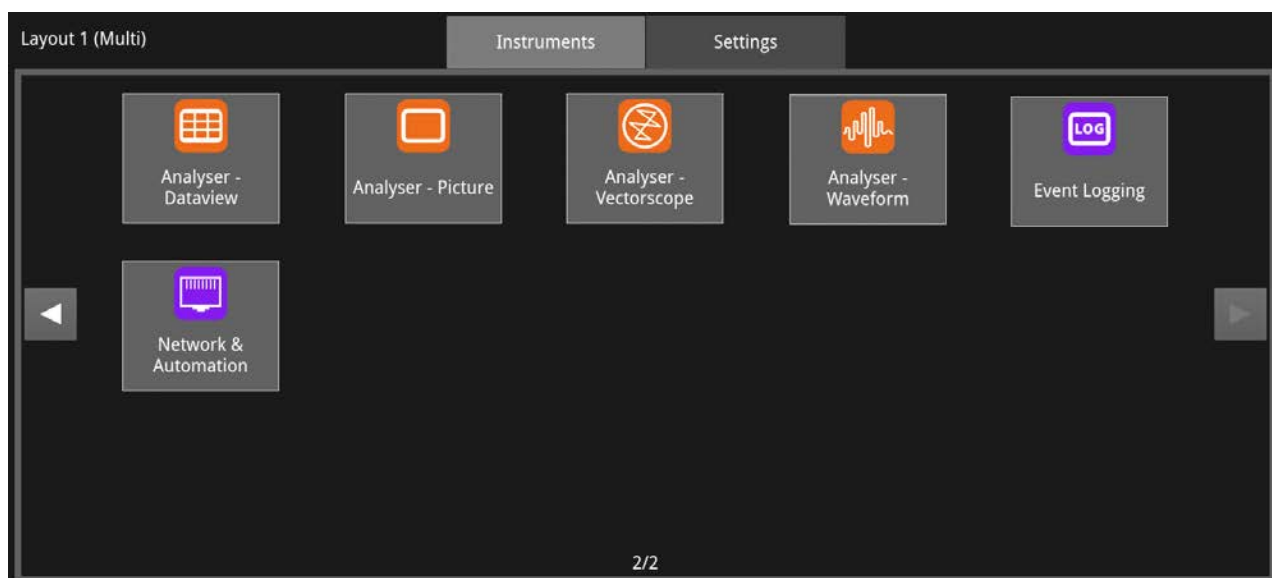



Figure 2-14: Standard Instruments Tab - Page 2 of 2

Launching an Instrument from the Instruments Tab of the Setup Menu

The **Instruments** tab of the Setup menu is another point from which to launch a new instrument into the active layout. All instruments available under your current license are available for selection.

The instruments are arranged across several separate pages, which you can display by tapping the previous page (left) ◀ or next page (right) ▶ arrow icons in the left and right margins.

When an instrument is already available in the active layout, you will see a small white spot displayed below the icon for that instrument.

Tap or click  to access the Setup menus and open the **Instruments** tab.


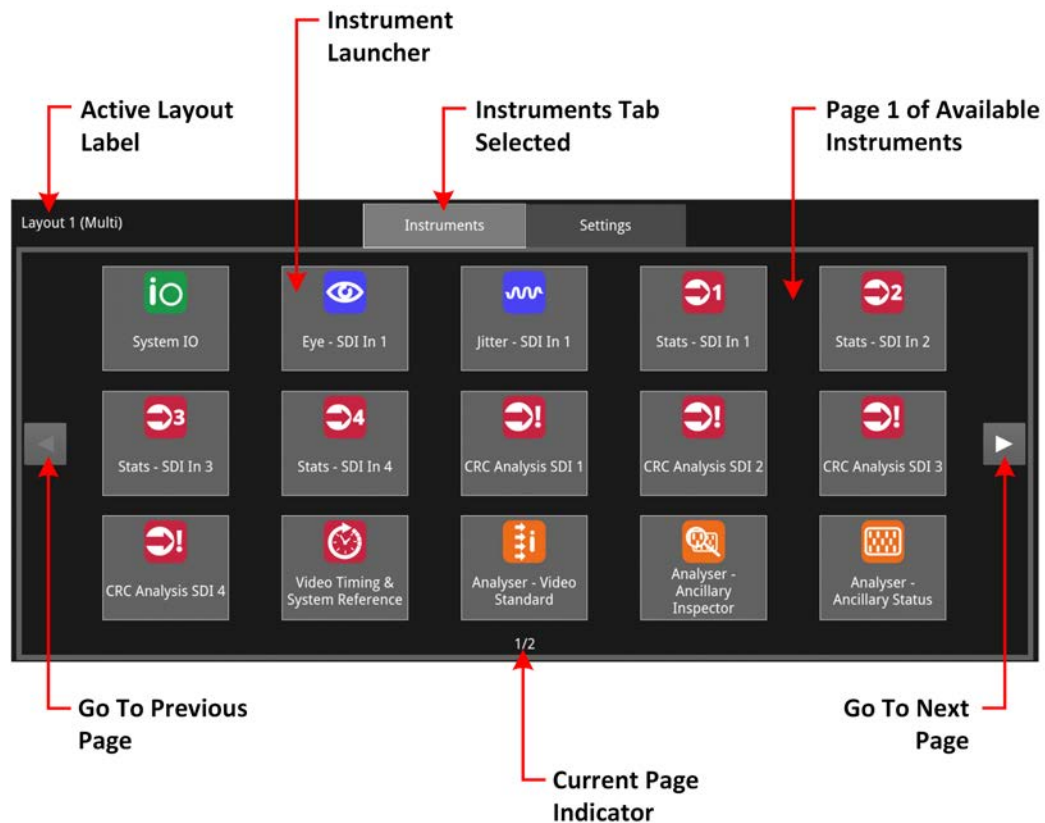


Figure 2-15: Page 1 of the Instruments Tab in the Setup Menu (Including Eye and Jitter Options)

You can check whether an instrument is active in any layouts by checking the **Instruments** tab in the Setup Menu. When a single instrument is open in the active layout, a white spot is displayed below the launcher icon for that instrument. If multiple instances of an instrument are open the number of activity spots represents the number of open instruments.

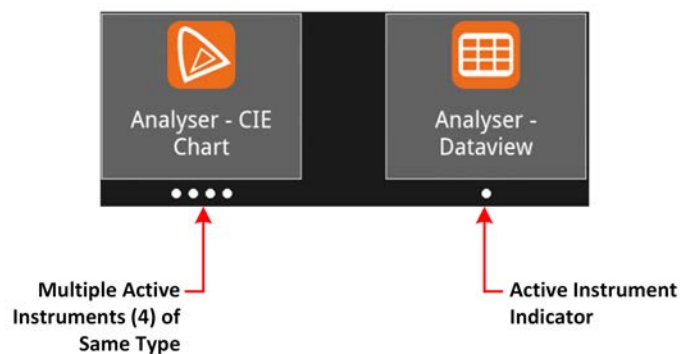Instruments Tab in Setup Menus:



Instrument Softkeys in Favorites Toolbar:

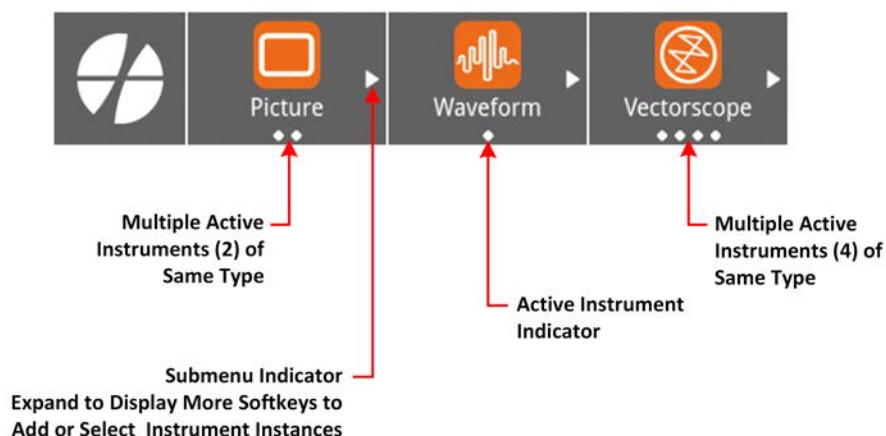





Figure 2-16: Active Instrument Indicators in the Instruments Tab and Favorites Toolbar

Required Action	Available Methods
To launch an instrument from the instruments tab.	<p>Local Access:</p>   <p>Remote Access:</p> 

When you launch an instrument instance from the Instruments tab, the instrument window opens on the active layout, with the spotlight on the instrument you have just added. If you return to the instruments tab, you will see a white spot displayed below the instrument's icon to show that it is active, see [Figure 2-16](#).

Launching Multiple Instances of an Instrument

An active instrument instance has one white spot displayed below its icon in the toolbar or Instruments tab. When you launch multiple instances of an instrument the number of spots below the icon reflects the number of instances of that instrument type. Multiple analyzers (either dual or quad) enable you to launch multiple instances of some instruments.

When it is possible to launch more than one instrument instance, you will see the submenu indicator (shown above) displayed in the toolbar softkey. Tap the softkey to display a submenu enabling you to launch additional instruments or to spotlight any of the active instruments.

For example, depending on the number of available analyzers and the selected layout mode, you could launch the following:

- Standard Dual Analyzers:
 - Single Layouts: One instance of each instrument in each layout. All analysis instruments use the same input source.
 - Multi Layouts: Up to two analysis instruments for each analyzer. Each analysis instrument can select its own input source.
- Optional Quad Analyzers:
 - Single Linked Layouts: One instance of each instrument in each layout. All analysis instruments use the same input source.
 - Single Unlinked Layouts: One instance of analysis instrument in each layout. All analysis instruments use the same input source.
 - Multi Unlinked Layouts: Up to four analysis instruments for each analyzer. Each analysis instrument can select its own input source.
 - Multi Linked Layouts: Four instances of analysis instruments in each layout. Each analyzer group is allocated a different input source.

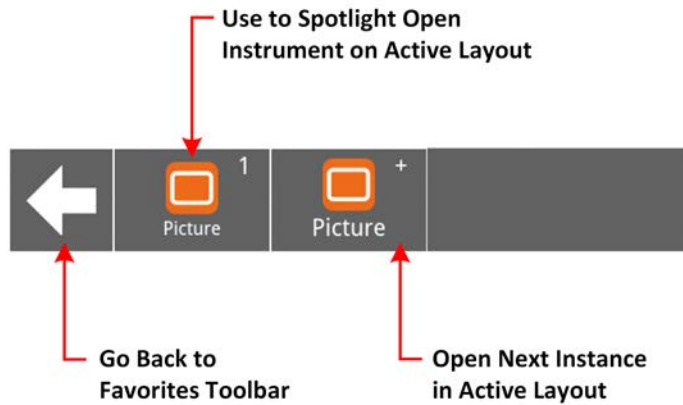
Note: Eye and Jitter instruments always use the source input from **SDI In 1**, so you can only launch one instance of these instruments per layout. With a second screen installed, and an Eye or Jitter window open in the active layout on the main unit, you can launch an Eye or Jitter instrument on the second display but you will see the message: **Analyzer A Eye in Use**. To display data in the Eye or Jitter window on the second display, close the instrument on the main unit.

The first instance of an instrument opens straight into the active layout and the toolbar softkey shows a single spot. In addition, if you can launch another instance, you will also see the submenu indicator. When you tap or click on the instrument's softkey in the toolbar to launch additional instances you will notice that the unit opens a further, nested set of softkeys.

To launch another instance of the instrument, tap or click the instrument in the instrument toolbar, then tap or click the softkey in the nested menu displaying the plus symbol (+), see [Figure 2-16](#). When the maximum number of instruments is open in a layout, the plus symbol (+) is no longer displayed.

Note: You can also launch multiple instruments from the Instruments tab, without using the nested softkeys in the toolbar.

Dual Analyzers:



Quad Analyzers

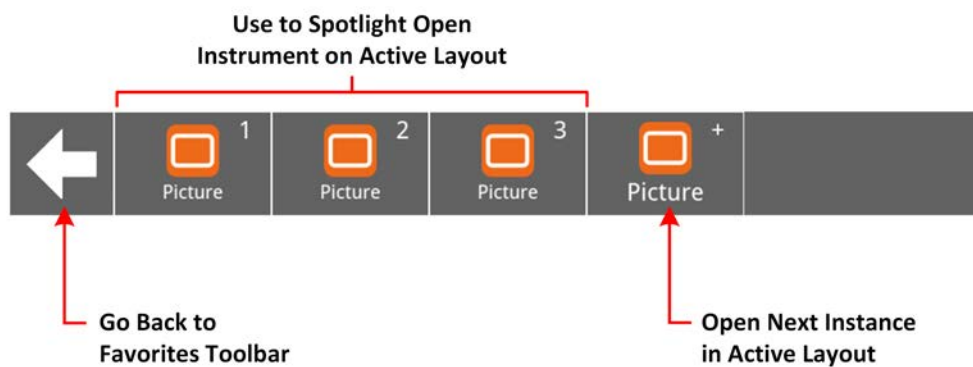


Figure 2-17: Favorites Toolbar - Nested Menu to Open Multiple Instances of an Instrument

You can tap the numbered softkeys in the nested menu to spotlight each instance of the instrument on the active layout. For an overview of the steps involved to open four instances of a Picture window, see the following figure.

Favorites Toolbar with one Instance of Picture Window Open

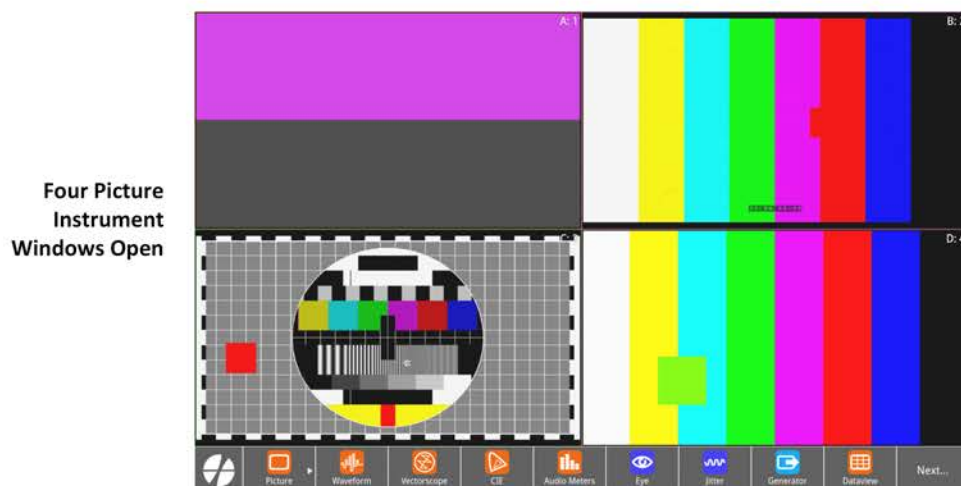
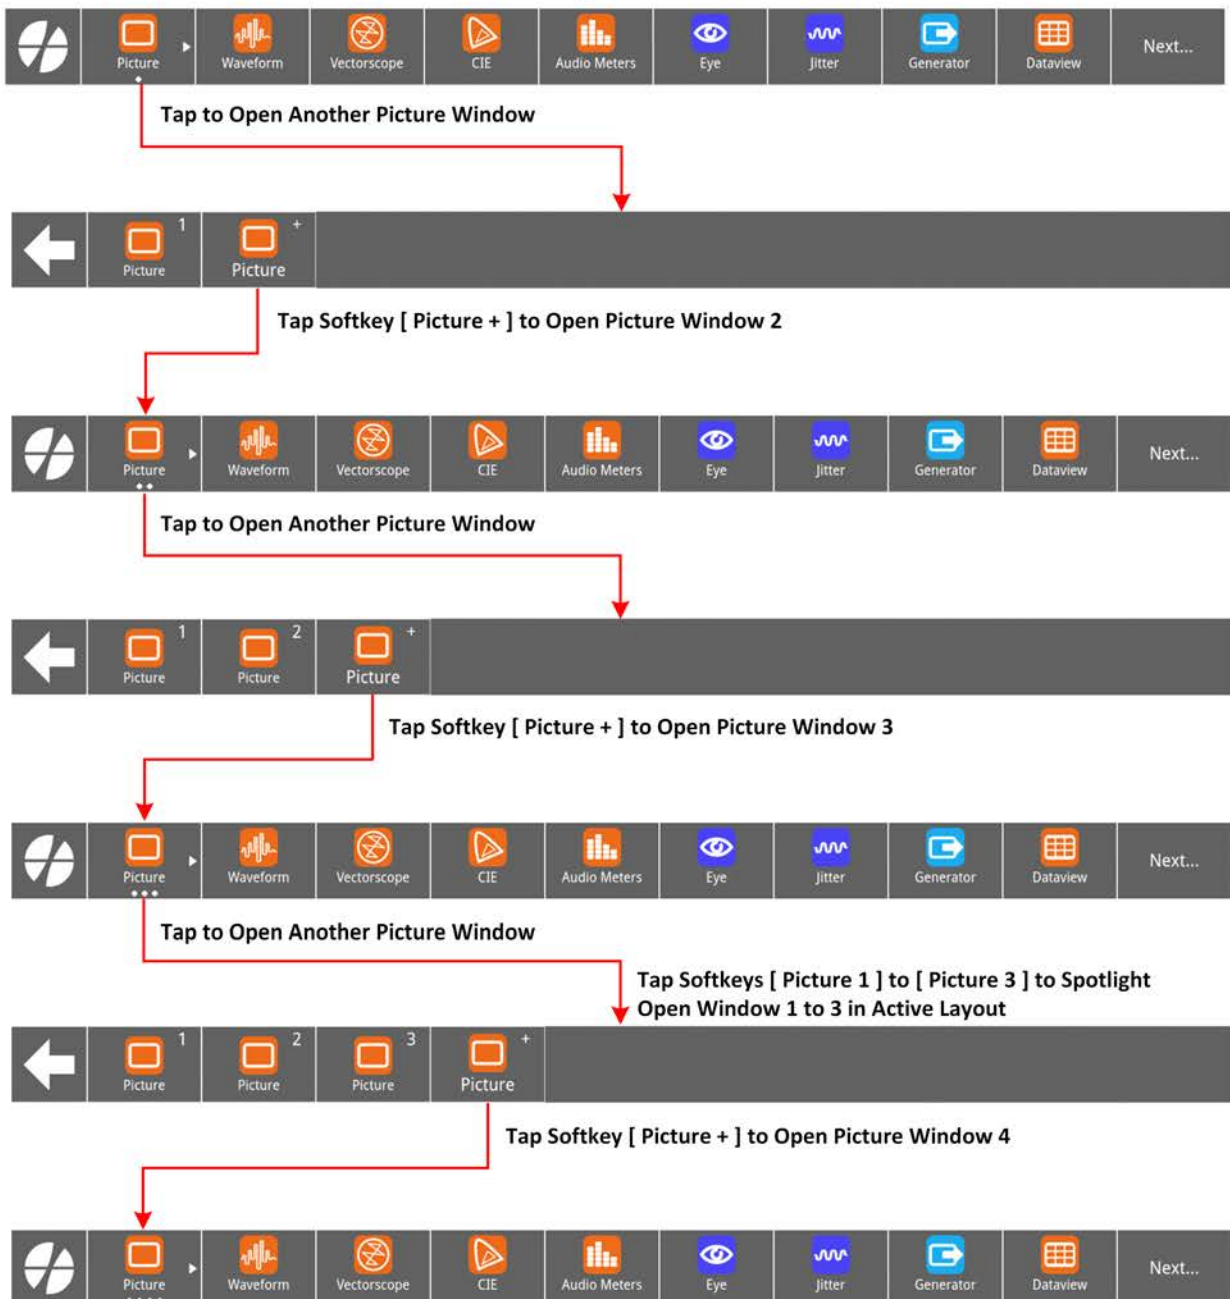




Figure 2-18: Process to Open Multiple Instances of an Instrument from the Toolbar

If you need to locate an active instrument on the active layout, especially if you have overlapping windows, open the favorites toolbar, then tap or click the softkey corresponding to that instrument.

Note: If you have opened multiple instances of an instrument, you can identify any instance of that instrument from the Favorites toolbar nested menu, see [Figure 2-16](#).

Once you have opened an instrument on the active layout, you can use the instrument as displayed or change any configurable parameters in the instrument's options menu.

On finishing with an instrument, tap or click the instrument window, then tap or click the  softkey. You can also open the instrument's options menu and either select **Close "Instrument**


Name", or tap the close instrument icon  in the menu toolbar.

If you need to close all instrument windows simultaneously, from the instrument favorites toolbar, tap

or click  until the  softkey is displayed, then tap this softkey.

About Presets

The unit displays any system configuration presets you save as softkeys in the presets toolbar, which you can access from the active layout. A **preset** contains a previously saved configuration of layouts, instruments and their settings.

To display the presets toolbar from the instruments toolbar of the active layout, tap or click  then choose the desired preset from the available list.

You can manage presets using the **Presets** dialog available from the Settings tab of the Setup menus. For more information on managing your presets, see the section [Managing System State Presets](#).

About Layouts

The **layouts** feature gives you access to multiple screens of instrument windows enabling you to extend the screen real estate available on your unit, and access to the analyzers, providing the best possible viewing experience on the unit's display(s) or external monitor.

When adding a new layout, you can choose between **Single** or **Multi** display modes. In addition, for either display mode, with optional quad analyzers, you can enable the **Linked Layout** function which allows quick switching between Single and Multi display modes. The two display modes can be considered as follows:



- **Single Display Mode:** All analysis instruments use the same input source.
- **Multi Display Mode:** Each analysis instrument can select its own input source.

Multi linked layouts are restricted to a subset of analysis instruments and provide predefined screen formats, for more information see [Working with Layouts](#).

The layouts feature enables you to configure up to 16 separate screen layouts of instrument windows, in various configurations, to the left or right of the active layout, with up to 16 non-overlapping windows visible on a single layout. An optional second display (option: **LPX500-EM**), allows you to configure further layouts, independent of the main unit, doubling the possible number of screen layouts to 32.

On starting the system, you are initially presented with one screen layout - the **active layout** - to which you can add a further 15 layouts using the **Layouts** dialog in the Settings tab of the Setup menus.

You can open instrument windows on each available layout and navigate between layouts using any of the following methods:

- Use left-to-right or right-to-left swipe gestures to navigate to next layouts to the left or right, respectively.
- Tap the softkeys in the Layouts toolbar
- Use the Layouts dialog in the Settings tab to switch to a different layout.
- When working remotely, either over noVNC or on a remote display, use the mouse cursor to click the previous  or next  layout buttons in the center left or right of your screen.

Use left-to-right or right-to-left swipe gestures to navigate quickly between available layouts.

Note: Always start the swipe gesture in the active screen border at the left or right side of the screen.

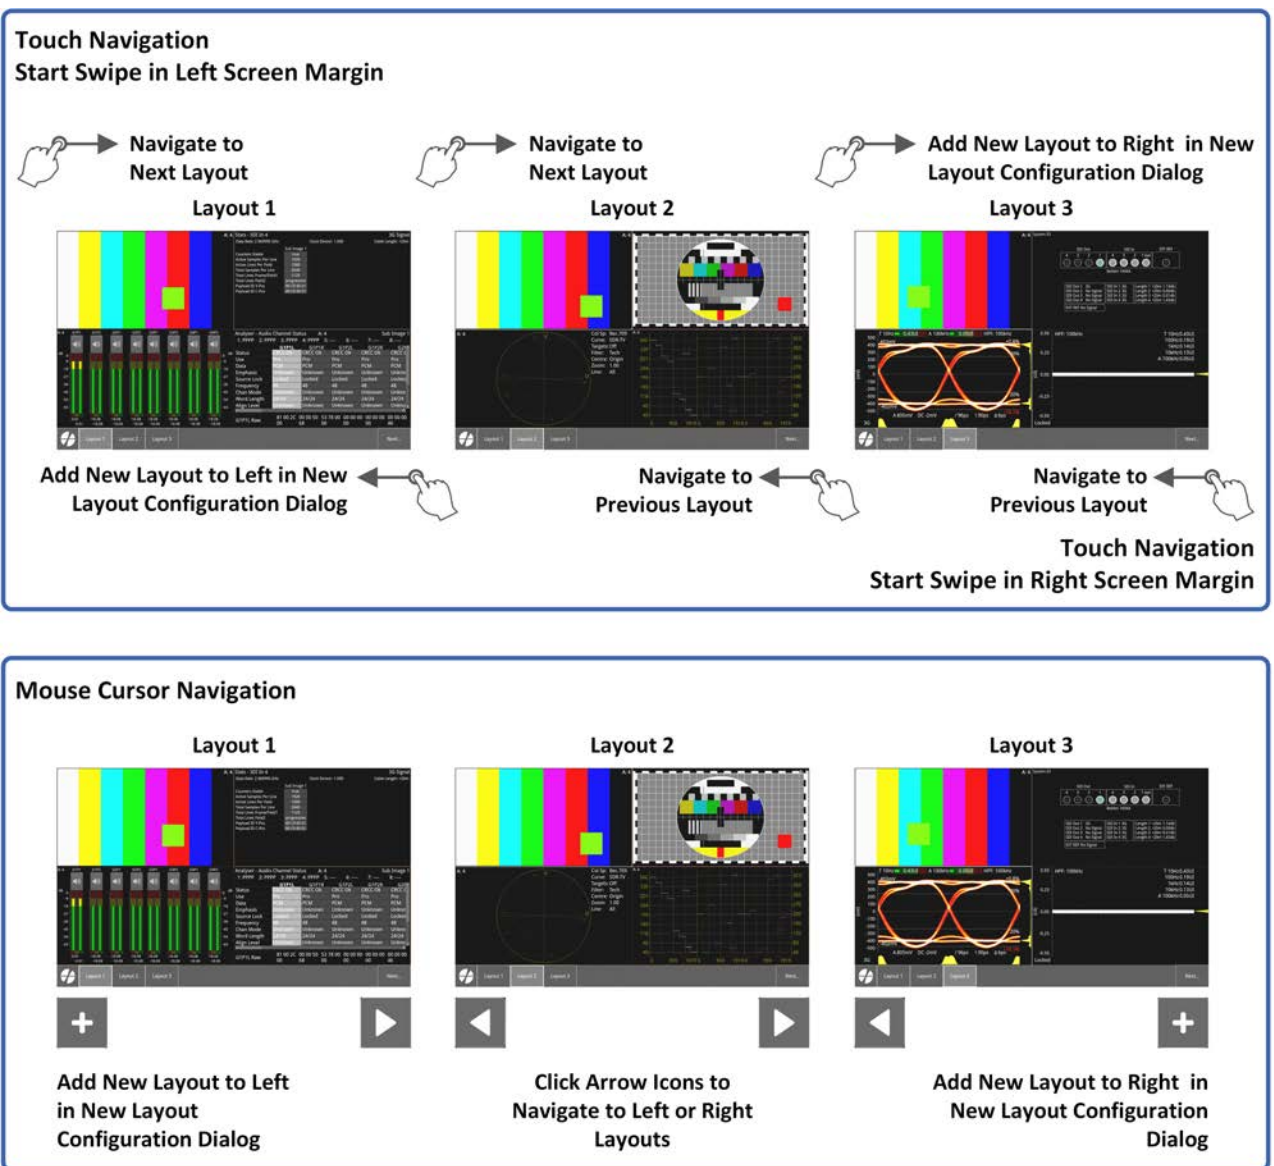


Figure 2-19: Navigating Between Basic Layouts Using Swipe Gestures or the Mouse Cursor

Note: The arrow and plus icons shown above, are displayed for both touch and mouse navigation through your layouts.

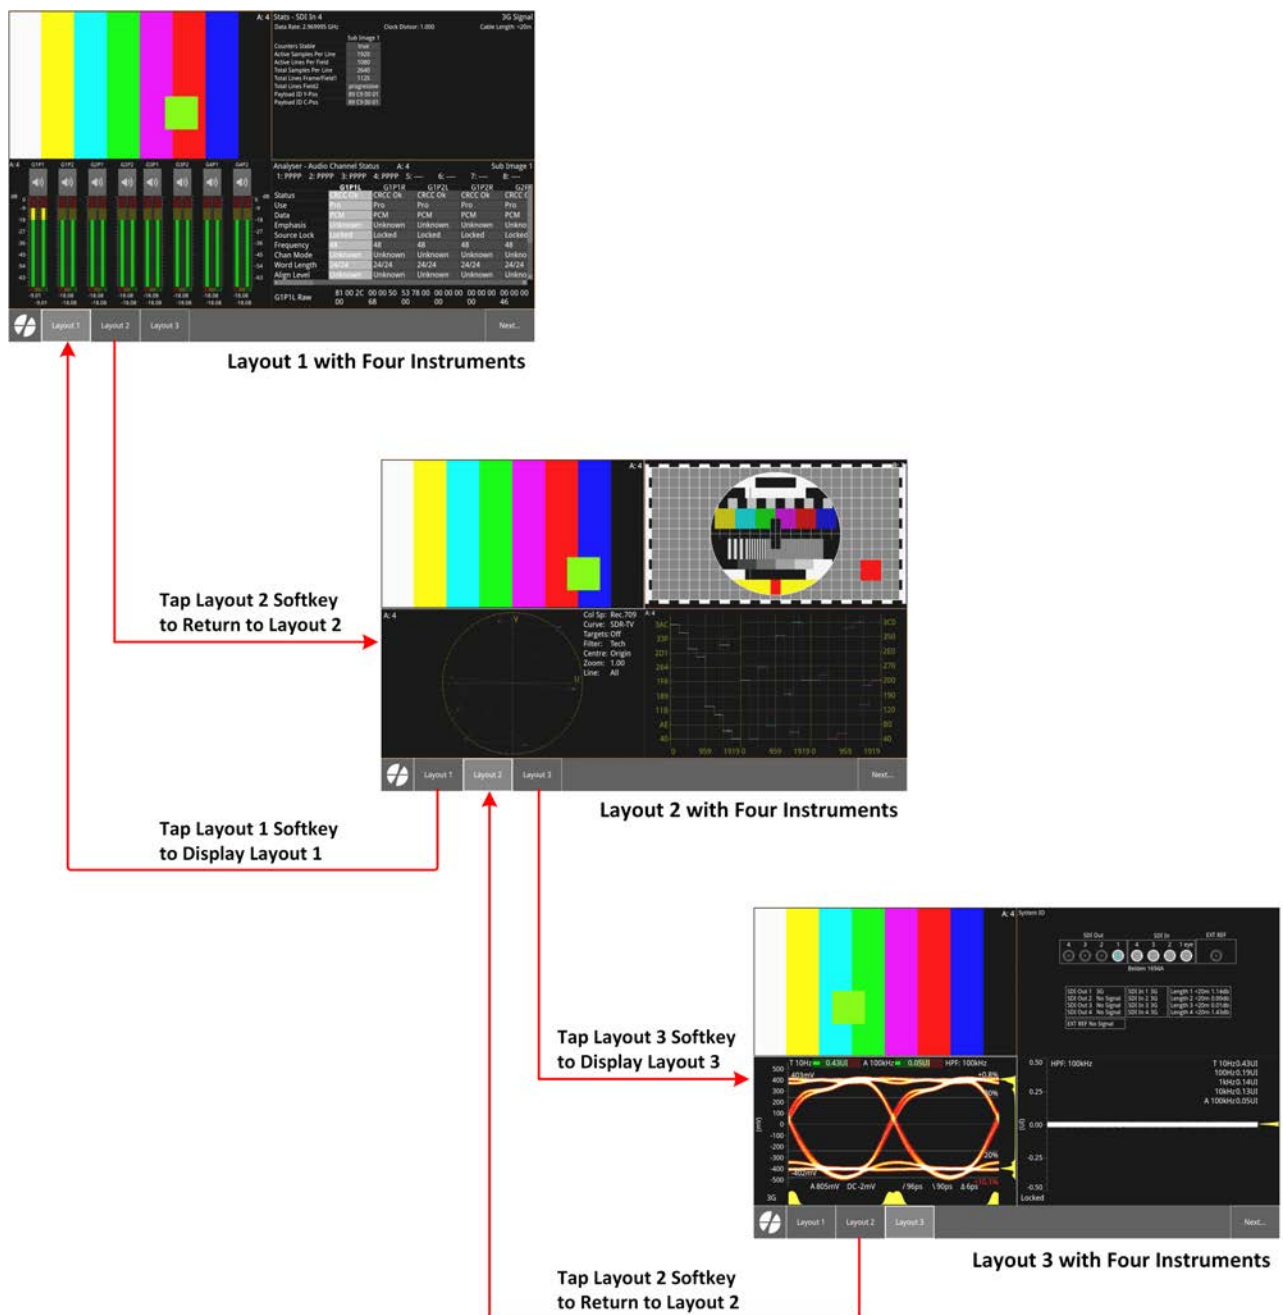




Figure 2-20: Navigating Between Basic Layouts Using Softkeys in the Layouts Toolbar

The unit displays the name of any layout you define in a softkey of the layouts toolbar. You can access any layout by tapping the corresponding softkey in the Layouts toolbar.


To display a different layout from the active layout, tap or click  until the layouts toolbar is available then choose the softkey for the desired layout from the list.

If you have saved more than nine layouts, you may need to tap  to display additional layouts in the toolbar. You can manage your layouts in the **Layouts** dialog available from the Settings tab. For more information on managing layouts, see the section [Working with Layouts](#).

Note: When you save a preset of your current configuration, all defined layouts are saved to that preset.

Loading Presets

A **Preset** is a customized configuration consisting of layouts, instruments and their settings that you have previously saved. You can use a preset to launch multiple layouts with instruments already configured appropriately for the task you want to perform.

All saved presets are listed in the presets toolbar. From the active layout tap  to display the presets toolbar.


To launch a suite of layouts and instruments saved to a preset, tap the corresponding preset softkey.



Figure 2-21: Using the Presets Toolbar

If you have saved more than nine presets, the  softkey is displayed, enabling you to view or select additional presets.

Launching a Preset from the Presets Dialog

In addition to the presets toolbar, you can also launch any presets from the **Presets** dialog available from the Settings tab. Click  to display the Setup menus, open the **Settings** tab and select **Presets** to open the presets dialog. Select the preset you want to use, then click **Load Preset**.

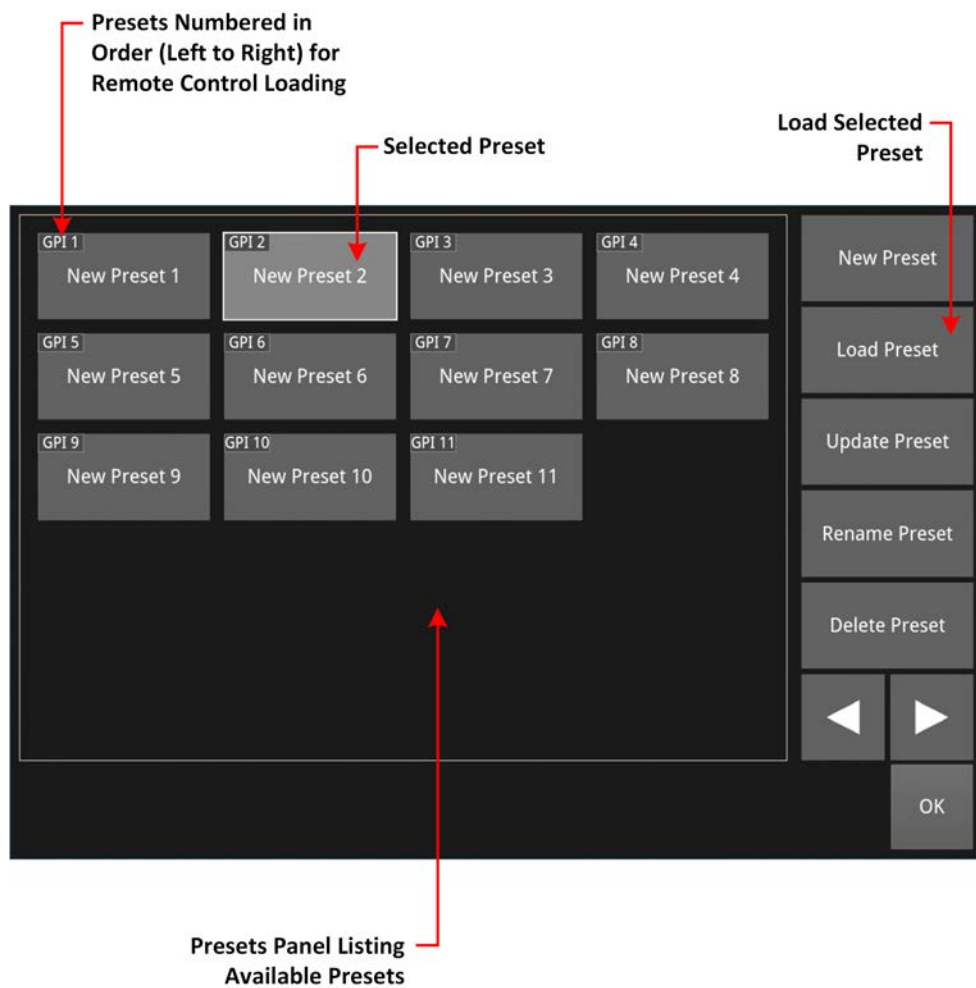


Figure 2-22: Loading a Preset from the Presets Dialog Panel

You can use the presets dialog to manage your saved presets, for example you can add, load, update, rename, delete or re-order presets. For further information on managing your presets, see the section [Managing System State Presets](#).

System Time and Date Display

The system date and time are displayed in the top-right corner of the Setup menus.

To modify the system time and/or date, in the Setup menus tap or click the time and date display, see [Figure 2-23](#).

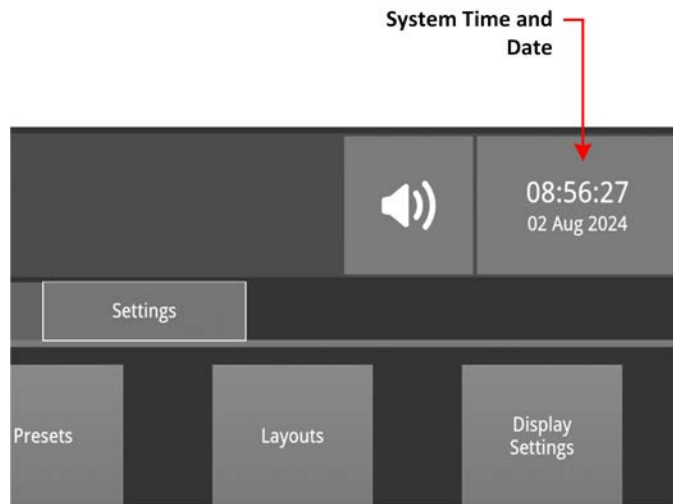


Figure 2-23: Accessing the Time and Date Dialog from the Setup Menus

This opens the Time and Date dialog. For more information on setting the system time and/or date, see the section [Setting the Time, Date and NTP Server](#).

Using the Volume Control Dialog

Open the Volume Control dialog using the button at the top-right of the Setup menus, see [Figure 2-24](#). You can use this dialog to control the volume of the audio monitoring output.

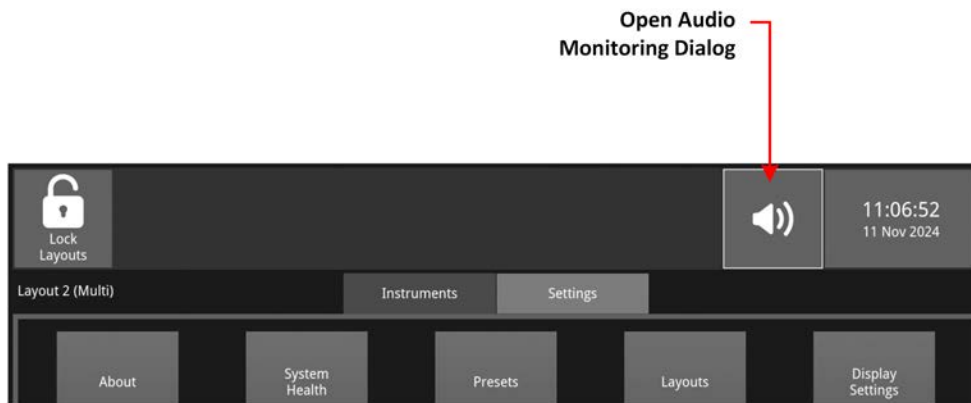



Figure 2-24: Accessing the Audio Monitoring Dialog in the Setup Menus

The [Analyzer - Audio Meters](#) instrument provides the audio monitoring source, which can be output to any of the following:

- Connected headphones
- Monitor connected to the DisplayPort
- Monitor connected to SDI MON.

Headphones are enabled when connected to the headphones socket on the front panel of the unit. You can mute or adjust the output volume to connected headphones, the DisplayPort or SDI MON connector using the mute control or slider control respectively.

Tap or click  to display the Setup menus then tap or click the speaker icon to open the Volume Control dialog.

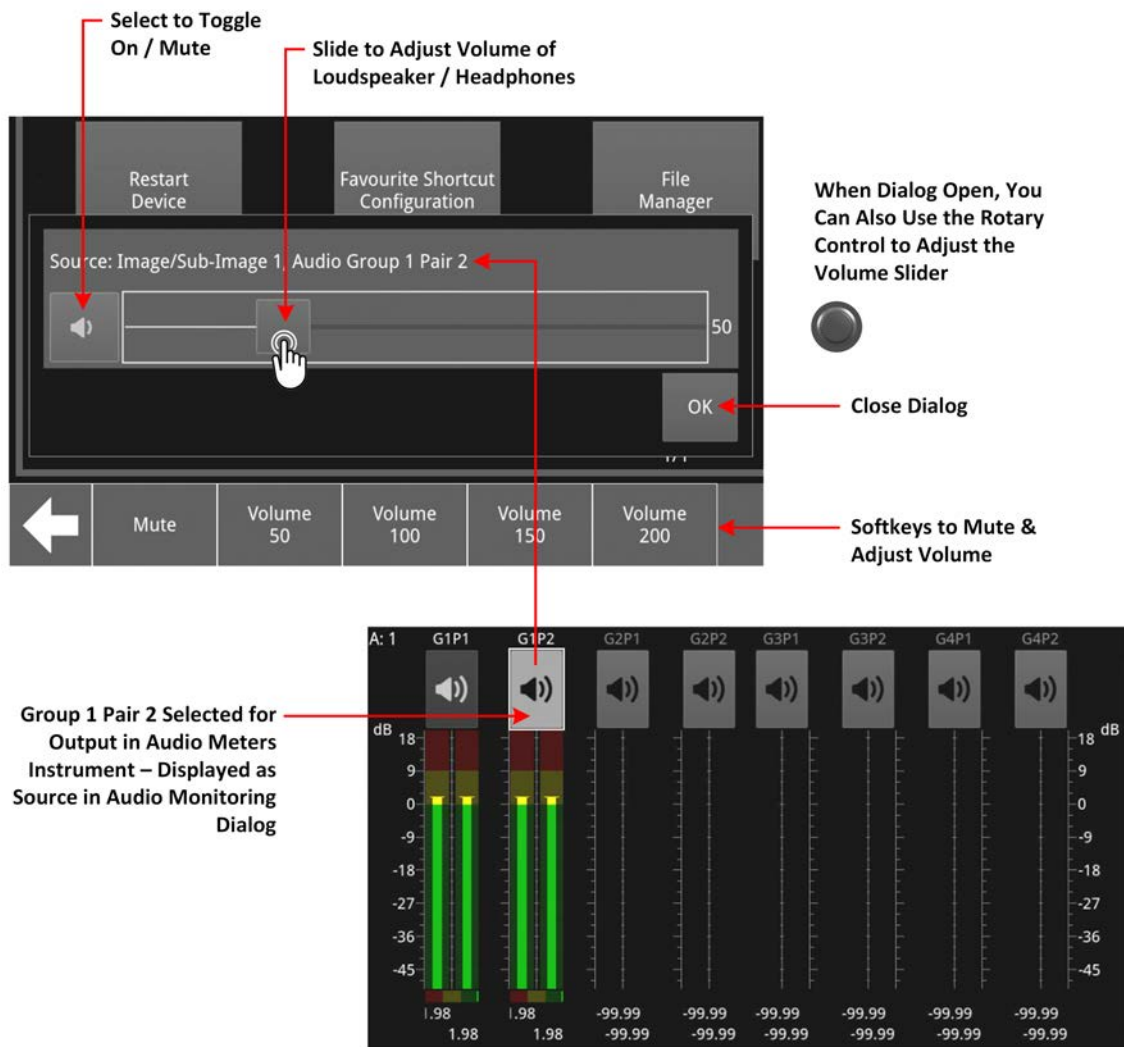





Figure 2-25: Using the Audio Monitoring Dialog

To adjust the volume of the audio monitoring output, drag the slider left to decrease or right to increase the volume, or turn the rotary control left or right. In addition, the softkeys enable you to adjust the volume in precise steps.

The audio monitoring dialog controls the audio monitoring output of the unit, whether monitoring using headphones, the DisplayPort, or SDI instrument monitor output (SDI MON). Tap or click the audio icon to mute or unmute the audio monitoring output. The audio monitoring icon changes to display the current status of the audio output as shown in the following table:

Table 2-3 : Audio Output Monitoring Icon States

Audio Icon State	Description
	Audio source muted (inactive).
	Standard state, audio source active (unmuted). Volume range: 1 to 99

Audio Icon State	Description
	High volume, audio source active (unmuted). Volume range: 100 to 200

Use the **Analyzer - Audio Meters** instrument to select the audio monitoring source, for more information, see the section [Analyzer - Audio Meters](#).

Note: The audio output from the DisplayPort, SDI Mon and Headphone jack is stereo, by default. If mono audio is selected (using the solo control in the audio meters) then you will hear the audio on left and right of the audio monitoring device.

Using the Instrument Favorites Toolbar


The nine softkeys in the **Instrument Favorites** toolbar provide quick access to a default set of instruments. Each softkey in the favorites toolbar represents an instrument, which you can start with a single tap or click of a softkey. When working remotely, use the mouse cursor to click the softkey representing the instrument you want to start.


You can customize the instruments available using the Favorite Shortcut Configuration dialog in the Settings tab of the Setup Menu, for more information see the section [Customizing the Favorites Toolbar](#).



Figure 2-26: Instrument Favorites Toolbar (with Eye and Jitter)

Once you add more than nine instruments to the favorites toolbar, the ninth instrument softkey is

replaced by a  softkey, showing that there are more instrument softkeys available for selection. When you open an instrument from the Instruments tab of the setup menus, that instrument is also added to the favorites toolbar as a softkey.

The  softkey at the right-hand end of the instrument favorites toolbar enables you to cycle through additional toolbars, which provide softkeys to select presets, layouts and other functions.

Note: The behavior of the softkeys changes depending on the type of layout and whether your layout is locked or unlocked as shown in the following figures.

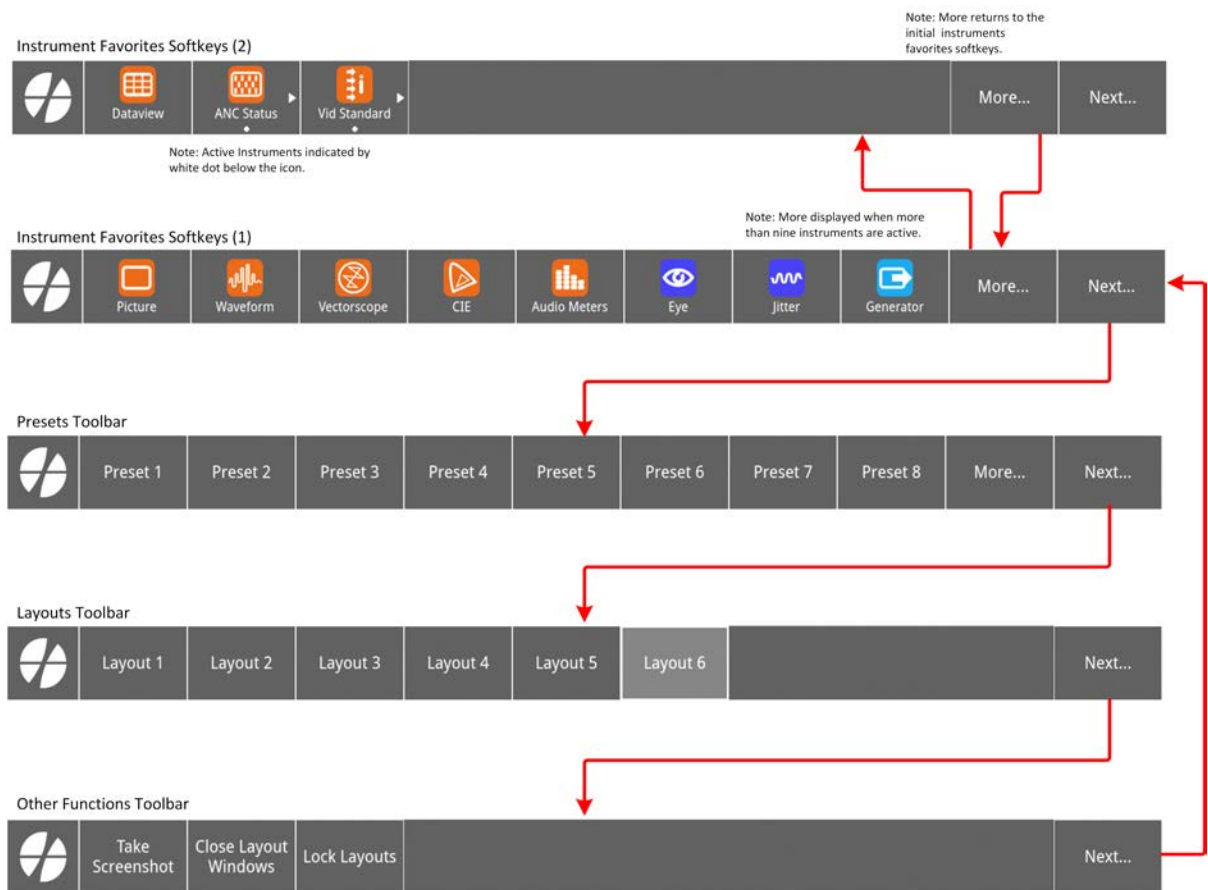


Figure 2-27: Navigating the Toolbars for Multi Unlinked Layouts (Unlocked)

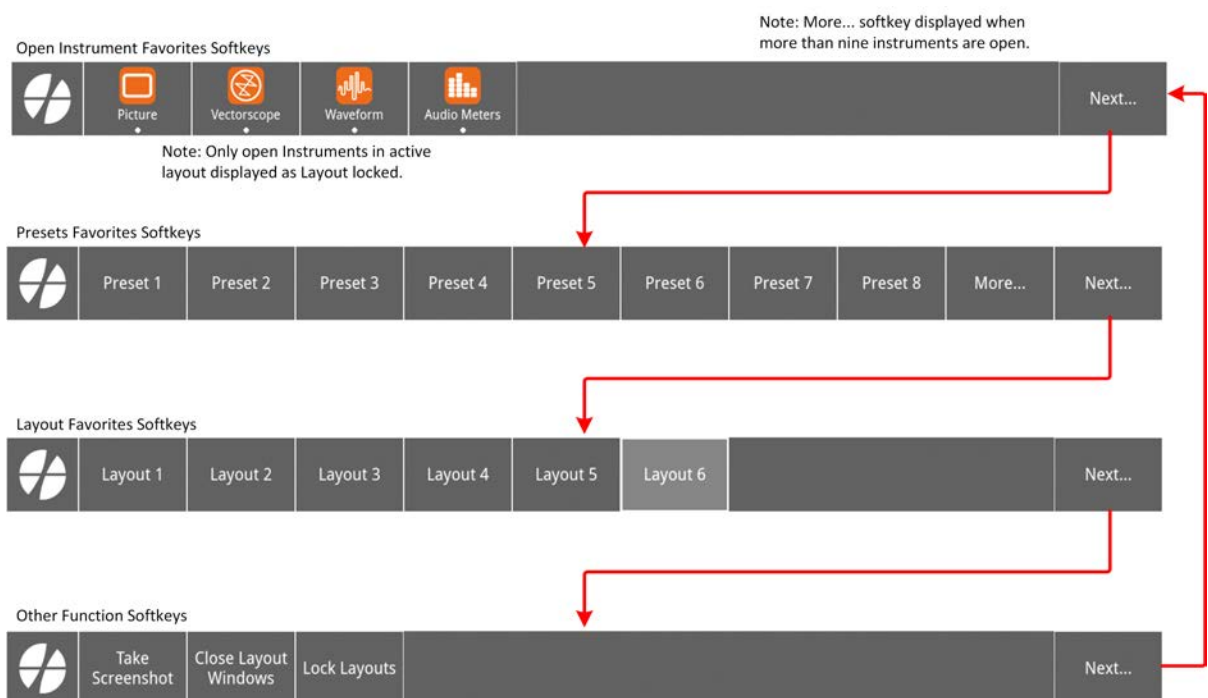






Figure 2-28: Navigating the Toolbars for Multi Unlinked Layouts (Locked)

Overview of the Instrument Windows

Each Instrument window border and its corresponding icon is assigned a color and the icon and Instrument border are displayed in the assigned color to indicate that it is part of one of the following *groups* of Instruments:

- **System:** Instruments or utilities required to operate the unit or to display system information, for example, Network & Automation, and Event Logging. Border color: gray (this is fixed and cannot be changed).
- **Analyzers:** Instruments used to analyze characteristics of the video signal and its associated components. Default border colors for the two (or optionally four) analyzers:

Table 2-4 : Default Analyzer Border Colors

Default Analyzer Border Color	Description
	Analyzer instruments assigned to Analyzer A display instrument borders in Orange
	Analyzer instruments assigned to Analyzer B display instrument borders in Purple
	Analyzer instruments assigned to Analyzer C display instrument borders in Green (With optional LPX500-QUAD license.)
	Analyzer instruments assigned to Analyzer D display instrument borders in Deep Pink (With optional LPX500-QUAD license.)

- **Generators:** Instruments used to generate a video or audio signal. Default border color: **cyan**.

The color-coding provides easy identification of analysis Instruments and the actual Analyzer they are using. You can enable or disable the Instrument borders, or modify the assigned color in the **Display Settings** dialog available in the **Settings** tab. For more information on setting-up the display, see the section [Setting-up the Display](#).

In addition, when the spotlight is on an instrument, it will be the only window displaying a thick, white border.

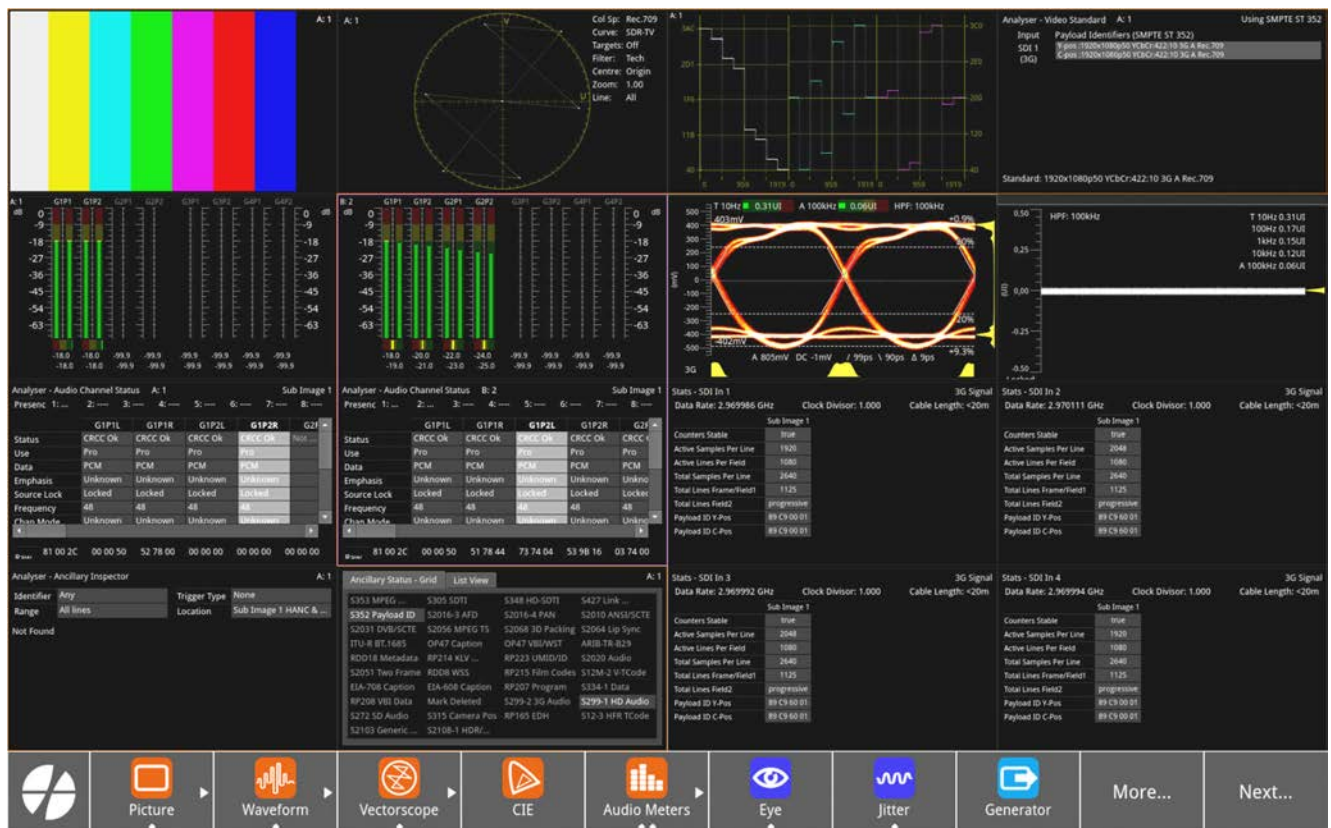


Figure 2-29: Multi Layout with 16 Active Instruments



Figure 2-30: Single Linked Layout with Four Instruments All Using the Same Analyzer (A: 1)



Figure 2-31: Multi Linked Layout with Four Instruments Using All Four Analyzers (Optional)

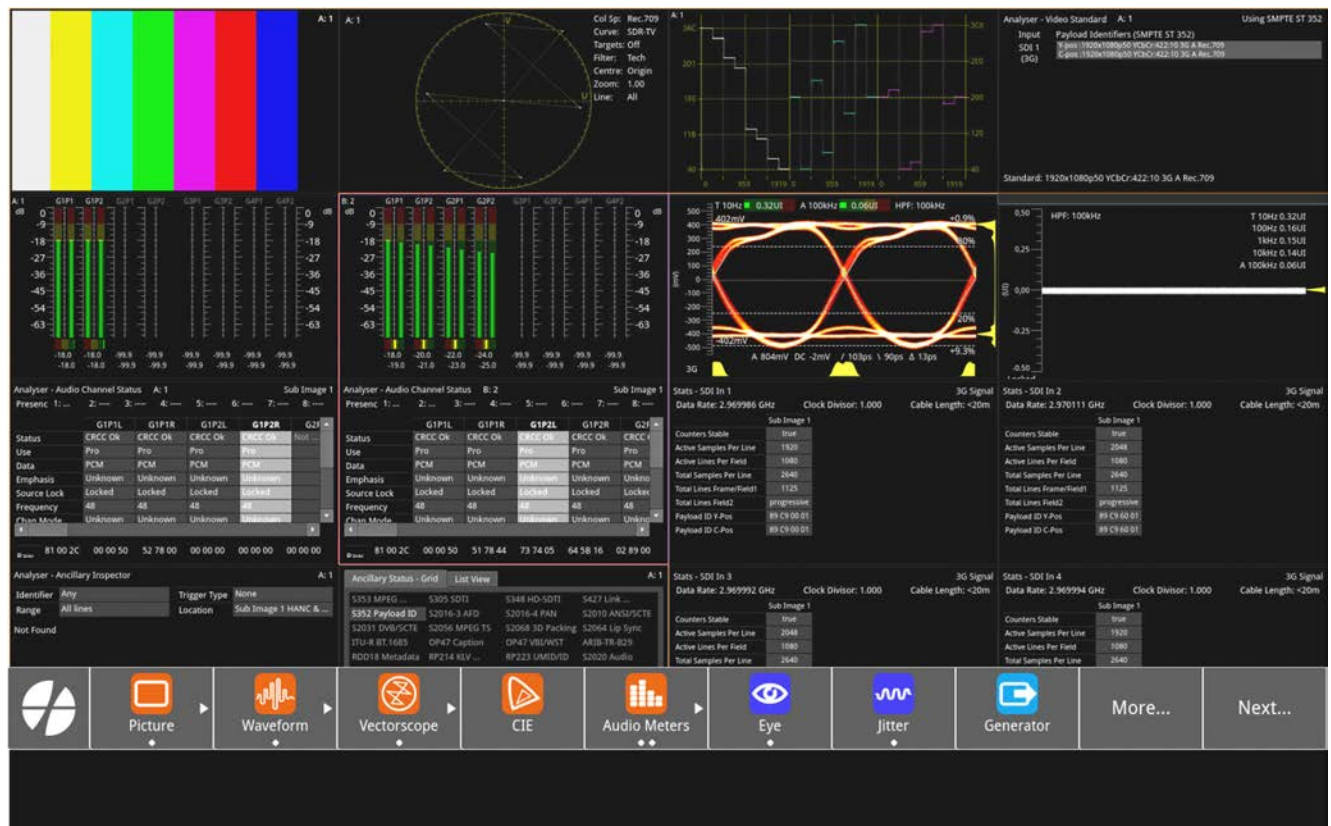


Figure 2-32: Multi Layout with 16 Instruments on Remote Display with Toolbar Popup Enabled in Display Settings

Changing the Border Color of Instrument Windows

If desired, you can change the border color of analyzer instruments as described in the Section: [Setting-up the Display](#).

Note: The borders and icons of system instruments are always colored light gray.


Instrument borders automatically merge by group color. For example, in a default Multi unlinked layout, if you position one analysis instrument next to another, then the border will expand to outline all instruments in contact with each other in the common analysis group, to help group recognition.

In addition, signal connectors displayed in instrument windows (for example, in the **System IO** instrument) are displayed in the color defined for the Generator to indicate outputs.

Working with the Instruments

Each [instrument](#) includes a popup submenu, which gives you access to the configuration parameters of that instrument. In this *User Manual* this is referred to as the instrument's **Options Menu**.

The unit displays two different menu formats, depending on how you select the menu; you can either:

- Tap and hold anywhere inside the instrument's border to open the touch-enabled menu.
- Right-click the mouse cursor anywhere inside the instrument's border to open the mouse-enabled, compact menu.
- Tap the instrument to spotlight it, then tap  in the Instrument toolbar to open the touch-enabled menu.

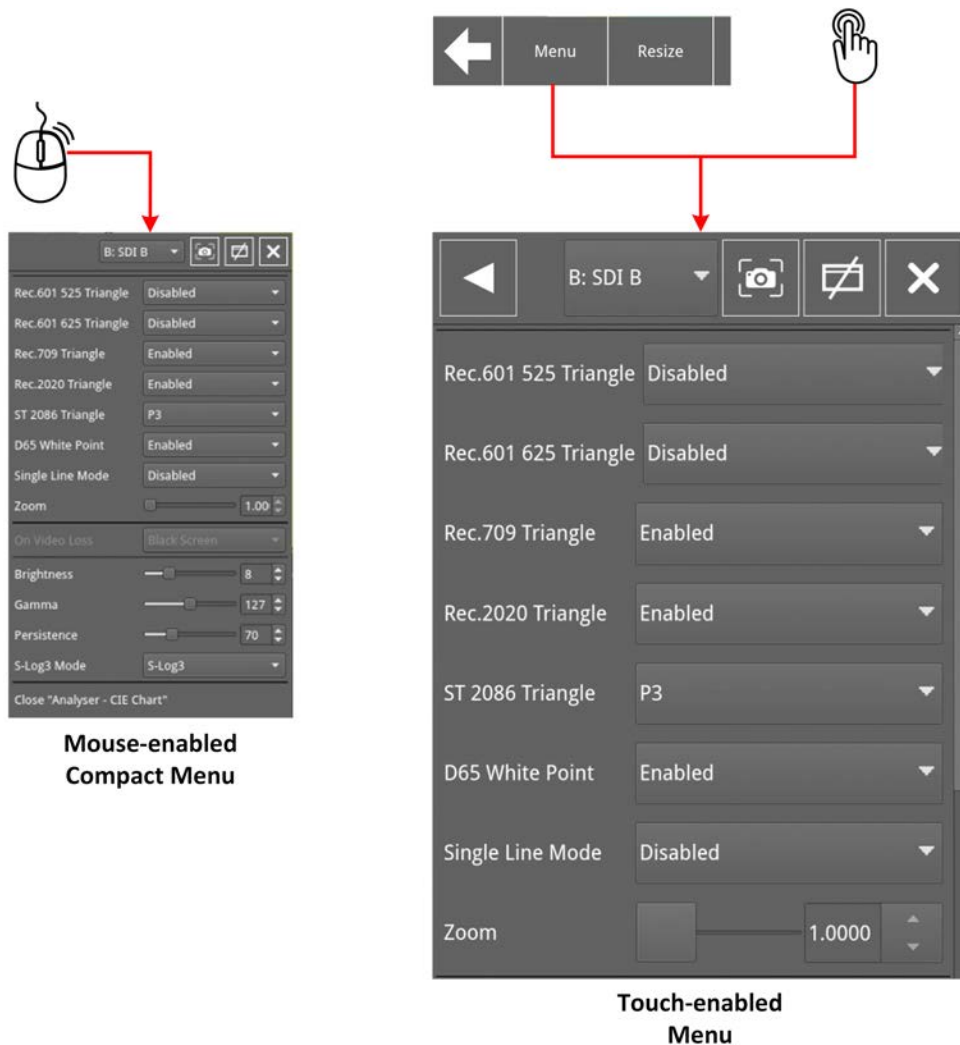



Figure 2-33: Side-by-side Comparison of Mouse- and Touch-enabled Menus

The touch menu opens on the opposite side of the screen from the instrument, by default, but you

can tap or click the arrow icon at the top of the menu, or use the  softkey in the toolbar, to flip the menu to the other side of the screen if required.

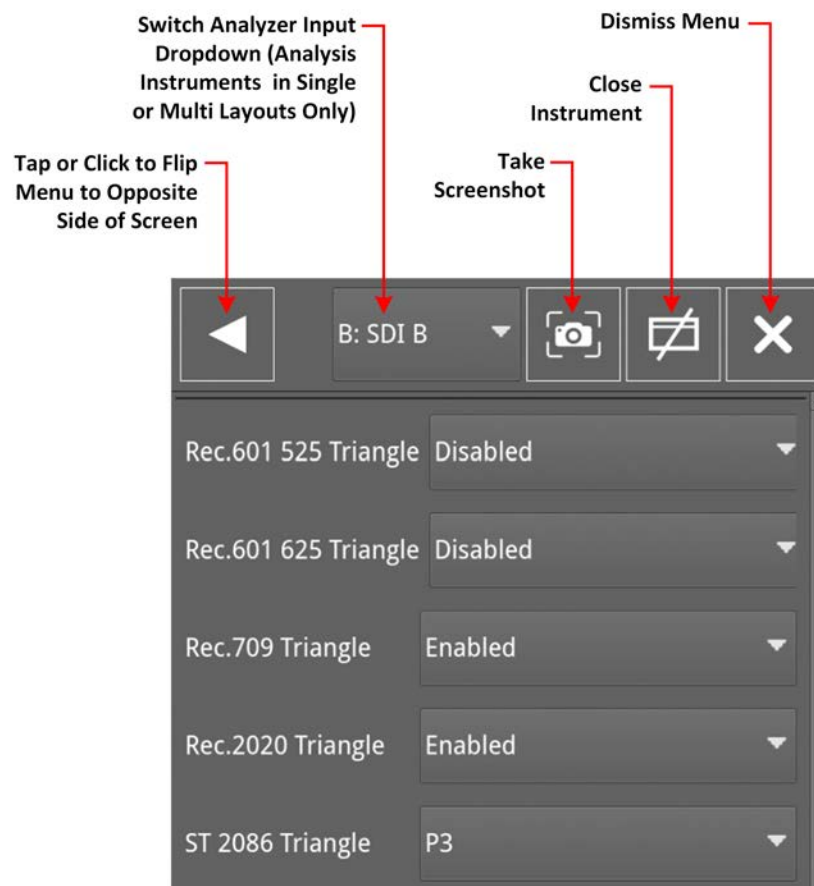









Figure 2-34: Instrument Options Menu Showing Control Icons in Menu Toolbar

Required Action	Available Methods
Open the context-sensitive Options Menu for an active Instrument	<p>Local Access:</p>  <p>Remote Access:</p> 

In addition to listing the Instrument-specific parameters, all options menus include a toolbar at the top of the menu containing controls for the following operational commands:

-  **Take Screenshot:** Saves an image of the current active display to the unit's SSD storage. You can access screenshots using the File Manager or by connecting to the unit using a web browser.
-  **Dismiss Menu:** Closes the options menu, saving any changes.
-  **Close "Instrument":** Closes the instrumentinstance, removing it from the active layout. Any instances of the instrument in the same or other layouts remain open.
-  **Switch Analyzer Input:** Opens a dropdown list of available Analyzers you can use to switch the input source to the analyzer instrument for Single or Multi unlinked layouts. For more information, see [Working with Layouts](#).
-  **Flip Menu:** Flip the menu to the opposite side of the screen.

The following figure shows an example of the options menu for an **Analyzer - Audio Meters** Instrument:

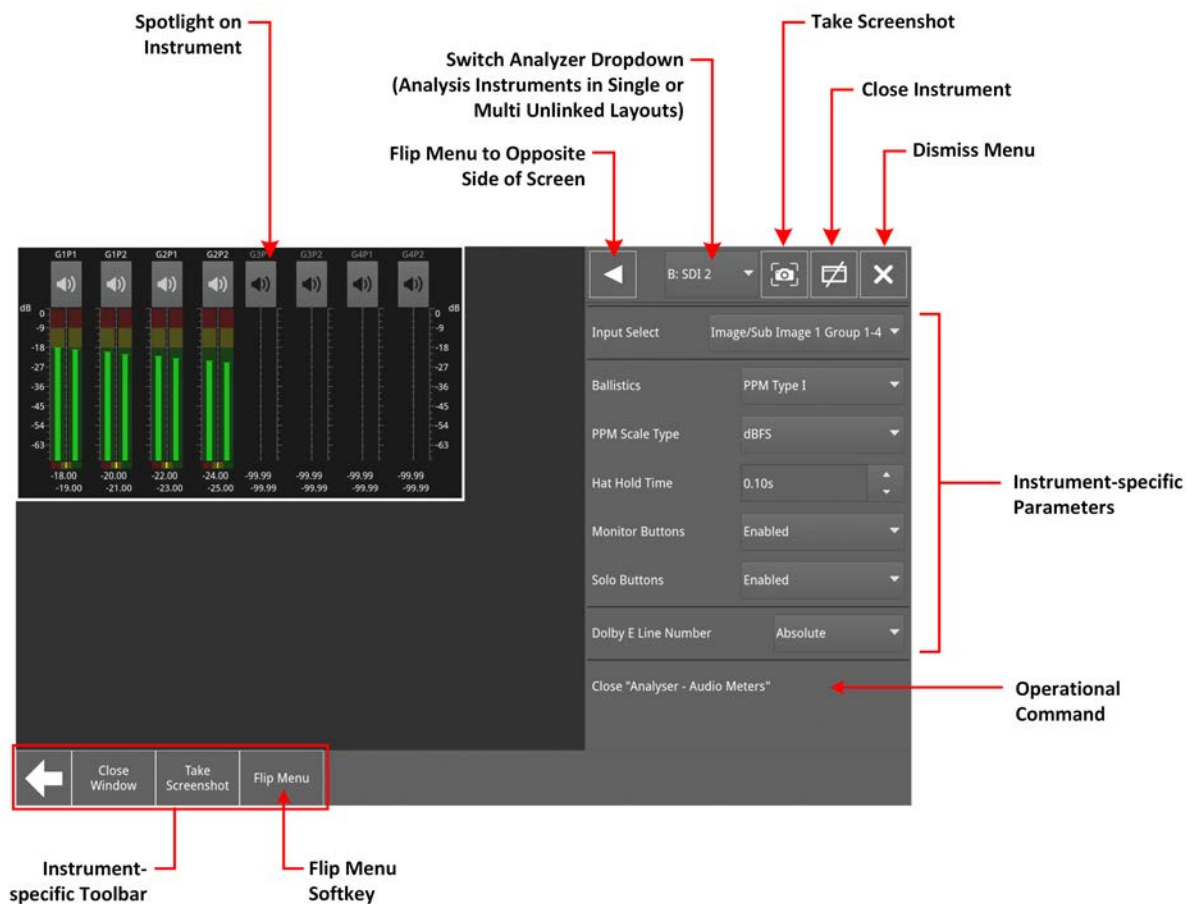


Figure 2-35: Instrument Popup Options Menu Displayed

When an Options Menu includes one or more system controls, tap or click the control (for example, **Reset errors and running time** in the CRC Analysis instrument) to initiate that action; there are no parameters to set for a system control.

Note: When the spotlight is on an instrument, the softkeys change to display an **Instrument-specific Toolbar**. This includes the default softkeys **Menu**, **Resize**, **Close** and **Clear Spotlight**, together with any optional softkeys required for the operation of the instrument. With the menu open, the softkeys change to display **Close Window**, **Take Screenshot** and **Flip Menu**.

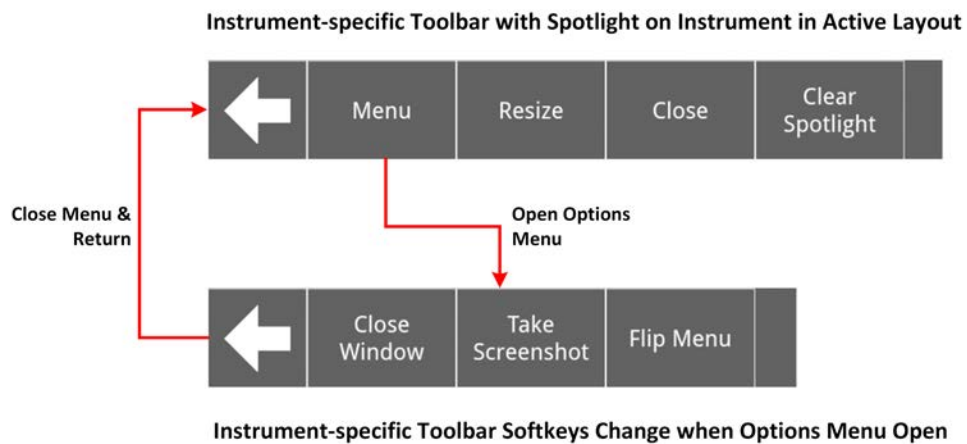


Figure 2-36: Softkeys in the Instrument-specific Toolbar

Some dialog windows (About, False Color Ranges (optional), SDI Driver Calibration, etc.) do not have Options menus. To dismiss these windows, simply tap or click anywhere outside the window.

Selecting Option Menu Parameters and Entering Values

You can select most parameter settings in the instrument Options menus by selecting the desired setting from a dropdown listbox. For example, you might enable or disable the function of a parameter by selecting **Enable** or **Disable** from a dropdown list.

Other parameters require you to enter a numeric value, for example, the Gamma setting in the **Analyzer - Vectorscope** Instrument, or the magnification factor in the **Analyzer - Waveform** instrument.

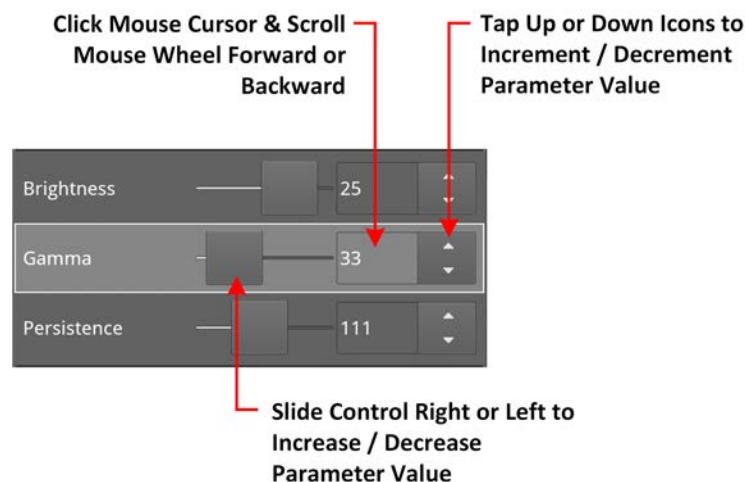


Figure 2-37: Adjusting Numeric Values in the Analyzer - Vectorscope Instrument

You can adjust a numeric value using one of the following methods:

- Tap and hold or click the slider button and drag left or right to decrease or increase the value, respectively.
- Select the parameter using the rotary control, then turn the control clockwise or counter-clockwise to increase or decrease the value, respectively.
- Click the cursor in the numeric field and scroll the mouse wheel backward or forward to decrease or increase the value, respectively.

Another method to enter numeric data is available when you choose to define a static IP address manually for the unit using the **Network & Automation** Instrument. If you select the IP addressing mode **Static** from the dropdown list in the IP Parameters dialog, the unit displays a numeric keypad, as shown in [Figure 2-38](#).

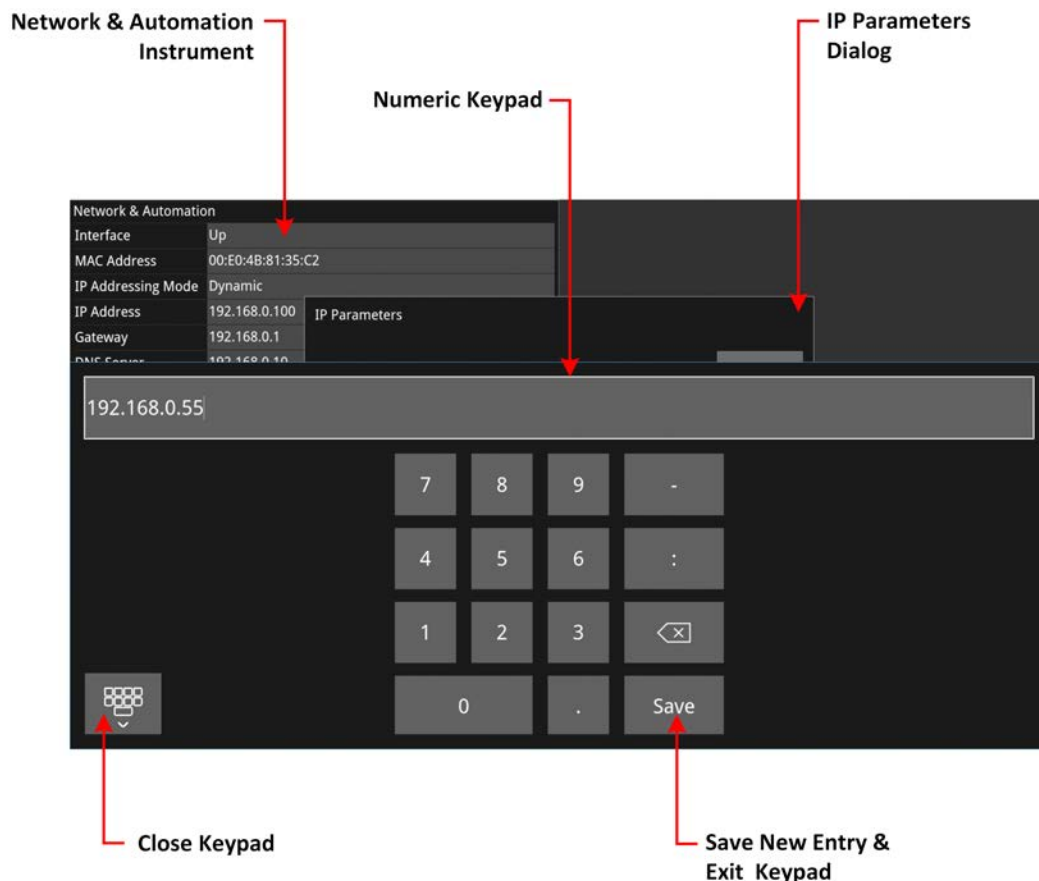


Figure 2-38: Manual Entry of a Static IP Address in the Network & Automation Instrument

To enter an IP address, simply click or tap the numbers on the keypad, then click **Save** to save the address and close the keypad.

Resizing an Instrument Window in an Unlinked Layout

The resize behavior of an instrument changes depending on whether the active layout is locked/unlocked or linked/unlinked.

Note: It is not possible to resize an instrument window in a linked layout.

When **unlocked**, you can double-tap or double-click in any instrument window, or tap the softkey in the instrument-specific toolbar, to cycle through a set of standard instrument window sizes.

The size of a window can be either:

- Full screen - only one instrument displayed on the active layout
- 1/4 screen size - up to four instruments displayed at this size on the active layout
- 1/16 screen size - up to 16 instruments displayed at this size on the active layout.

[Figure 2-39](#) shows the different sizes of an instrument in an unlocked layout:

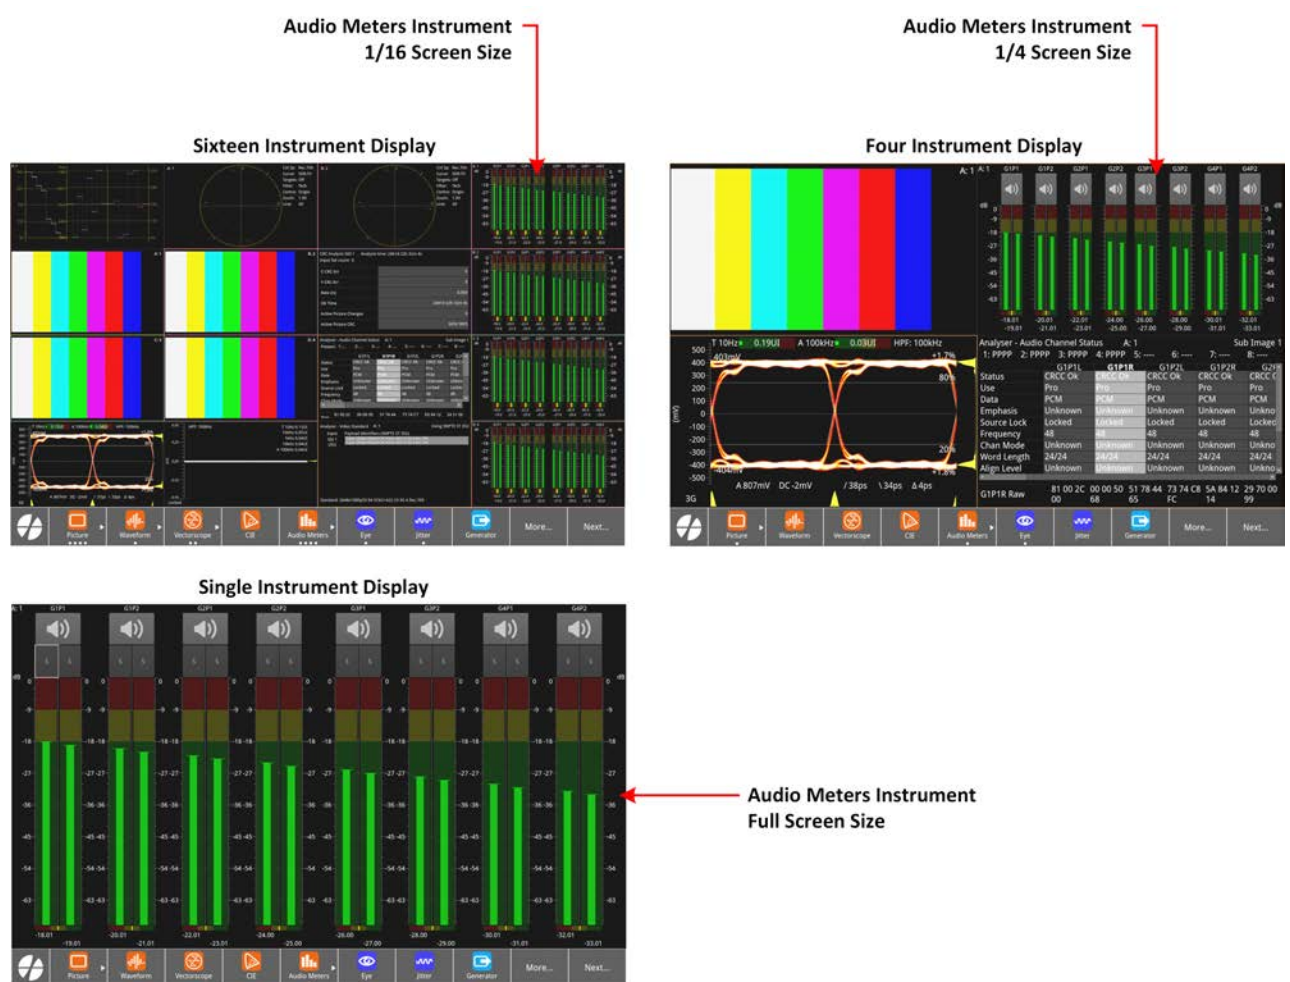


Figure 2-39: Instrument Window Sizing (Unlocked Multi Layout)

When you **lock** a layout, you can zoom an instrument window to full-screen size from its existing size (whether 1/4 or 1/16 screen size) by double-tapping, then revert to its original size with a further double-tap. When at full-size you can page through other instrument windows (also at full-screen size) using the rotary control.

You can also swipe between full-size instrument windows in the active layout. If working remotely on a locked layout with full-size windows, click the left and right arrow keys to display the next or

previous layouts:  or 

You can add a new layout to left or right extents of the series when the layout is unlocked.

You can also add empty new layouts as placeholders in the Layouts dialog, then add instruments to each as required.

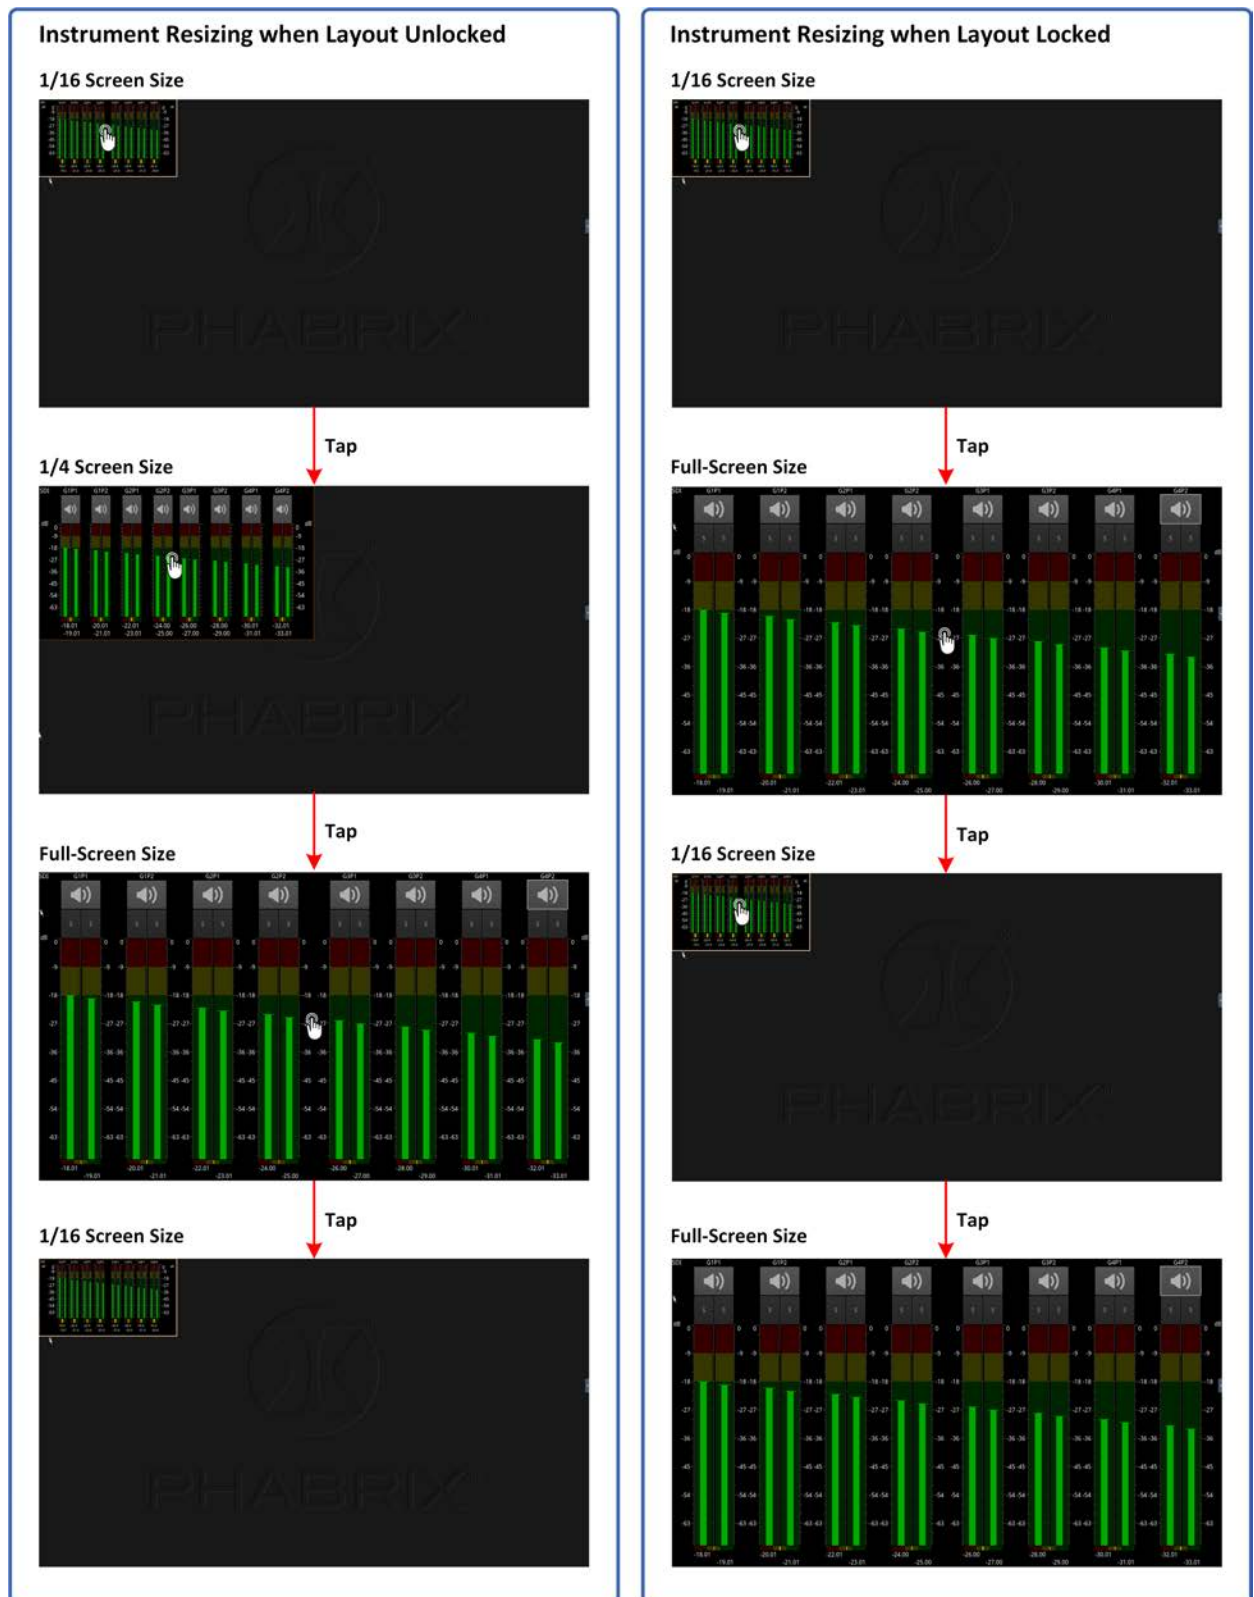


Figure 2-40: Resizing Standard Instruments

Using the Instrument Scroll Bars and Scroll Control Menu

For those Instruments displaying a large amount of data (for example, the Generator - System Patterns tab) vertical and horizontal scroll bars are provided to help navigate the display. A scroll control menu, accessed by a tap and hold or right-clicking the scroll bar, provides further scrolling or paging options.

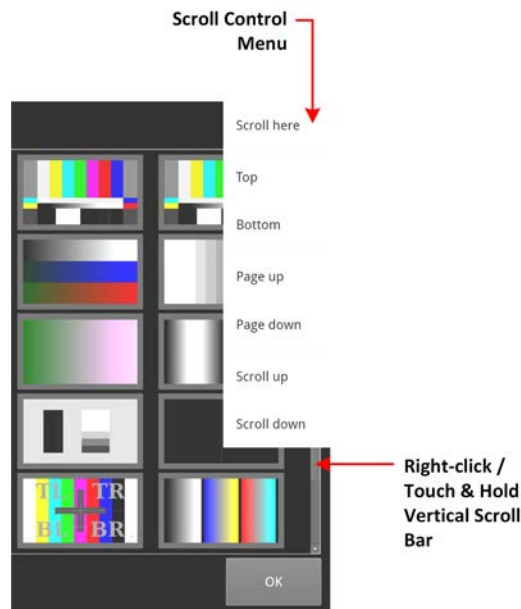



Figure 2-41: Instrument Scroll Bar Control Menu

Taking Screenshots

Use one of the following methods to capture an image of the entire display(s):

- Tap **Next...** three times in the Favorites Toolbar of the active layout, then tap **Take Screenshot**.
- Tap and hold or right-click inside the window of an active instrument to display the Options Menu, then select  from the menu toolbar.
- Connect a USB keyboard to the unit and press **[Shift] + [PrtScn]** to capture the display.

If working remotely using noVNC or the DisplayPort output, you can use either of the first two methods above to take a screenshot.

The image is saved to the SSD as a portable network graphic (**.PNG**) format file. You can retrieve your saved screenshots from the SSD using the USB File Manager or a remote connection method (web browser or SFTP), as required.

For more information on retrieving the file from the unit, see the sections [Managing Files with the USB File Manager](#) or [Remote Connection to the Unit](#).

Note: If your system includes an optional second screen, when you take a screenshot the unit saves two files to the **screenshots** folder and appends **S1** to the screenshot filename from the main unit and **S2** to the screenshot filename from the second screen to differentiate the file. For more information, see [Taking Screenshots on the Second Display](#).

Working with Instrument Tabs

Some instruments feature tabs along the top of the window which provide easy access to different functional areas within a single Instrument. The instrument option menus are reserved for auxiliary settings relating to each available tab.

The following figure shows the **Ancillary Status** instrument, which includes tabs to switch between different ANC status views.

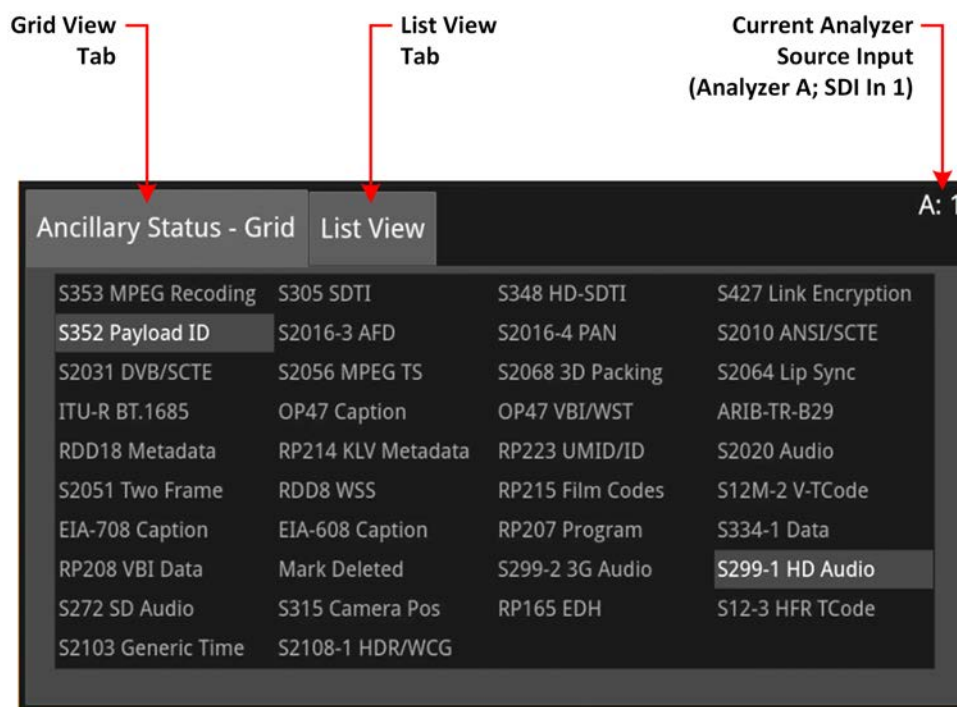


Figure 2-42: Example of Tabs in the Analyzer - Ancillary Status Instrument

Using Instrument Configuration Dialogs

The following instruments provide access to additional configuration dialogs from the options menu, which enable you to select associated parameters quickly and efficiently:

- Network & Automation
- Generator (Video and Audio Configuration; Test Pattern selection)
- Analyzer - Video Standard

The **Manual Configuration** dialog for the **Analyzer - Video Standard** instrument is shown in [Figure 2-43](#).

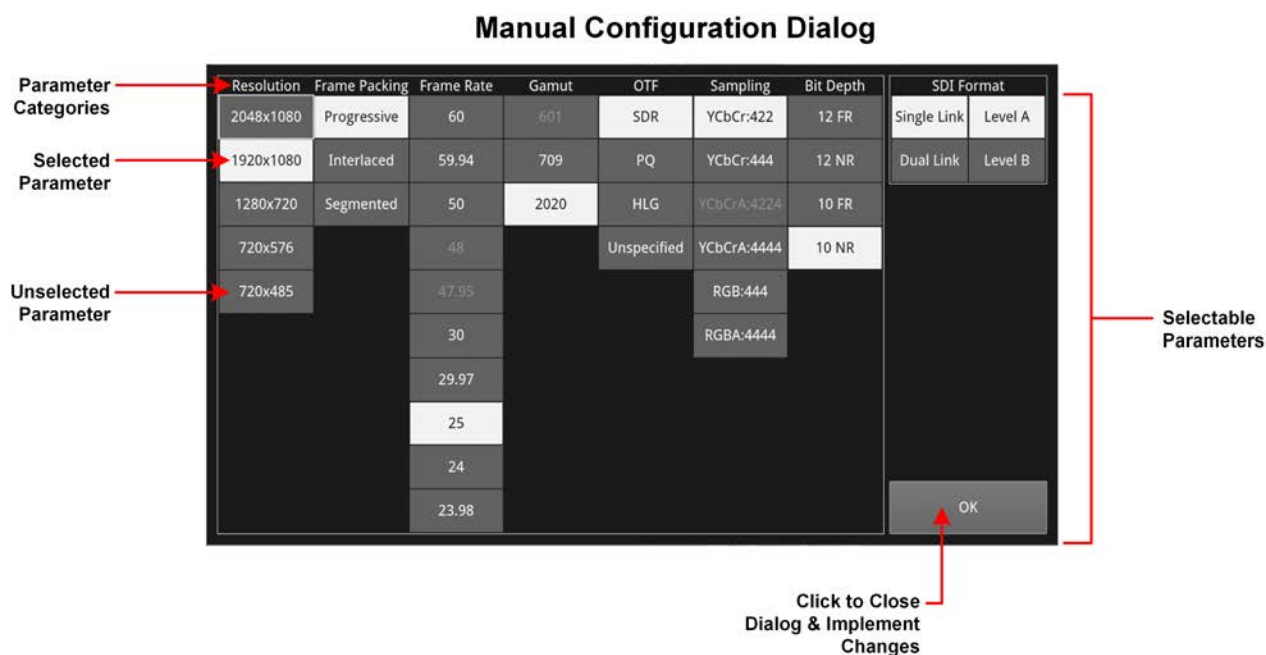


Figure 2-43: Manual Configuration Dialog for SDI Video Parameters

When you open a configuration dialog from an instrument's options menu, select the required parameters from the available controls, then click **OK** to close the dialog. Any invalid parameters are grayed-out and unavailable for selection..

Using the Color Picker

Some instruments enable you to select a color from a Color Picker as a configurable display attribute. For example, you can specify the color of the different Analyzer instrument borders in the Display Settings, or choose colors in a custom false color overlay in the Picture instrument, among others.

Select a color as follows:

1. Select the dropdown color selector to open the color picker tool (also referred to as the Hue, Saturation, Value (HSV) tool) shown below.

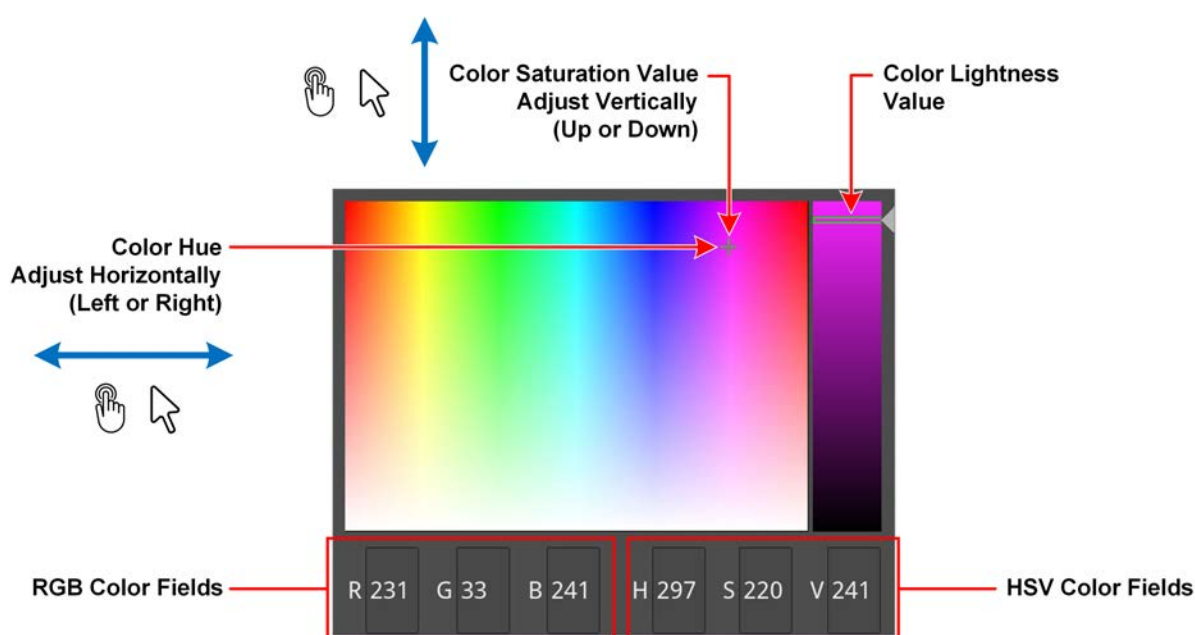


Figure 2-44: Selecting Colors in the Color Picker

2. Enter the RGB or HSV values, if known, into the appropriate color fields along the bottom of the window. Alternatively, pick a color manually as follows:
 - a. Click at a point in the left-hand color panel of the color picker to select the hue (horizontal) and saturation (vertical) settings of the new color choice.
 - b. Click at a point in the right-hand vertical bar to select the color lightness value.
3. Tap or click anywhere outside the dialog to close the color picker.

Working with Layouts

Note: When you save a system preset, the preset includes all configured layouts, including layouts configured on the optional second display, if available.

Overview

The Layouts feature gives you access to multiple screens in which to display instrument windows. By careful planning of your layouts, you can extend the screen area available on your unit, to give the best possible viewing and touch experience. The addition of an optional second display (option **LPX500-EM**) can double the screen area available to you, by providing the same number of independent layouts as available on the main unit.

You can create new layouts in either of two possible analyzer management modes (**Single** or **Multi**) for the standard, dual analyzer unit. A further operational state (**Linked**) is available with the optional quad analyzers, which links Single and Multi modes, allowing you to switch between them.

The terms **Single** and **Multi** are used to describe how the analysis instruments use the analyzers and the input assigned to them as follows:

- **Multi analyzer layout mode** where each active analysis instrument can use any analyzer and its assigned inputs. If you switch analyzer for an analysis instrument, other analysis instruments are unaffected. There are no limitations on the choice, positioning, or sizing of instruments.

The first screen you see on starting up the unit is the default layout of type **Multi**, into which you can launch multiple instruments and choose which analysis instruments use which analyzers. You can now launch instruments into the active layout or add another layout, of the same or different type, to the left or right of the current layout as described in the next section.

- **Single analyzer layout mode** where all open analysis instruments use the input source from the same - **single** - analyzer, at the same time. So for example, all analysis instruments might use the input from **Analyzer A**. You can switch to the input from a different analyzer, for example, **Analyzer B**, but then all open analysis instruments will use the source input from **Analyzer B**. There are no limitations on the choice, positioning, or sizing of instruments when unlinked.
- For units with optional quad analyzers, you can choose a **Linked mode**, to link single and multi layouts, allowing you to switch quickly between both modes. In addition, linked layouts have a dedicated format specifically for analysis instruments, with restrictions on the placement and sizing of the instrument windows. You can launch only the following analysis instruments in a linked layout:
 - Analyzer – Video Standard
 - Analyzer – Ancillary Inspector
 - Analyzer – Ancillary Status
 - Analyzer – Audio Channel Status
 - Analyzer – Audio Meters
 - Analyzer – CIE Chart (requires option: **LPX500-HDR**)
 - Analyzer – Picture
 - Analyzer – Vectorscope
 - Analyzer – Waveform.

When swiping left or right on the screen of the main unit (or optional second display), when you reach the extreme of your current layouts, the **New Layout Configuration** dialog is displayed, enabling you to configure a new layout. For a unit with optional quad analyzers, you will notice that the New Layout Configuration dialog includes an additional switch enabling you to link multi and single layout modes.

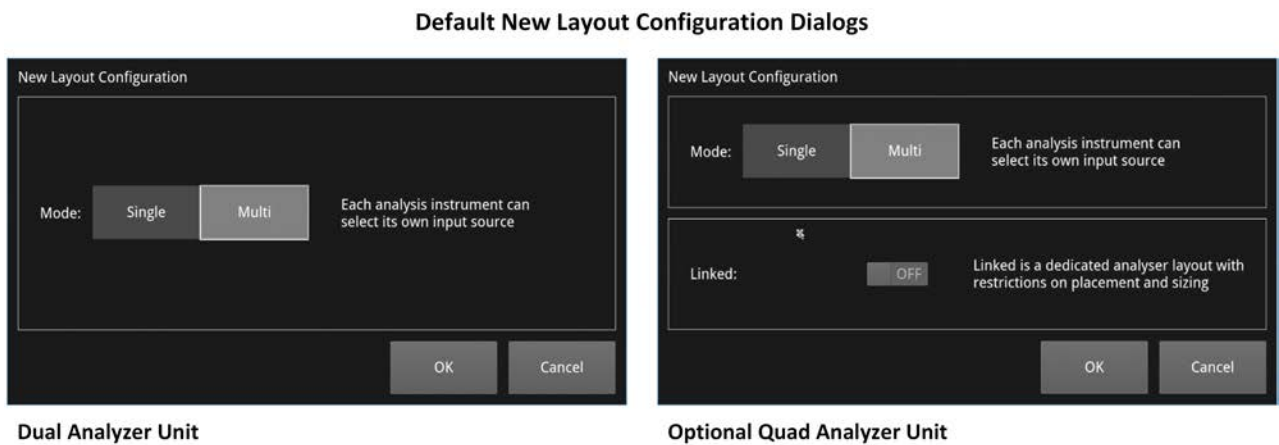


Figure 2-45: Default New Layout Configuration Dialogs for Dual and Optional Quad Analyzer Units

You can also use the **Layouts** dialog, available from the Settings tab, to manage your layouts, see [Managing Layouts in the Layouts Dialog](#).

Launching Instruments on the Default Multi Layout

When you launch analysis instruments in a layout you can choose how and from which analyzer the instruments access their source input. Other instrument types are not dependent on the analyzer inputs.

Note: The circuitry for the Eye and Jitter instruments measures the source input only on BNC **SDI In 1**, fitted with a black nut. You can open one Eye or Jitter instrument per layout.

Analysis Instruments open in a specific order in a multi or single layout, starting with Analyzer **A** then **B** for dual analyzer units, followed by Analyzers **C** then **D** for optional quad analyzer units.

In an empty layout, instrument windows are also positioned in order, starting at the top left, then top right, followed by bottom-left then bottom-right. If you close an instrument, leaving a space, the next instrument launched will fill that space.

In an unlinked single or multi layout, instrument windows open, by default, at quarter screen size. You

can resize them by double-tapping or using the softkey  in the toolbar.

Using Layouts on the Standard Dual Analyzer Unit

Overview

With the standard dual analyzer unit, you can have up to four single link, 12K SDI inputs connected to the physical BNC SDI input connectors on the rear panel of the unit.

Of these source inputs, you can assign these inputs to the two analyzers as follows:

- Any of the four single links to either analyzer A or B
- Either of two dual links to either analyzer A or B
- A single quad link to either analyzer A or B.

With a dual analyzer unit, your analysis instruments can use source inputs from either of the two analyzers. You can configure your layouts for optimal analysis of these inputs as described in the following sections.

With the standard dual analyzer unit, you can define the following two types of layout:

- **Multi Layout** where each analysis instrument can select its own analyzer and assigned input
- **Single Layout** where all analysis instruments use the same analyzer and assigned input.

These layout types are described in the following sections.

About the Default Multi Layouts with Dual Analyzers

The first layout you will encounter when starting the unit, and the default when adding new layouts, is of type **Multi**.

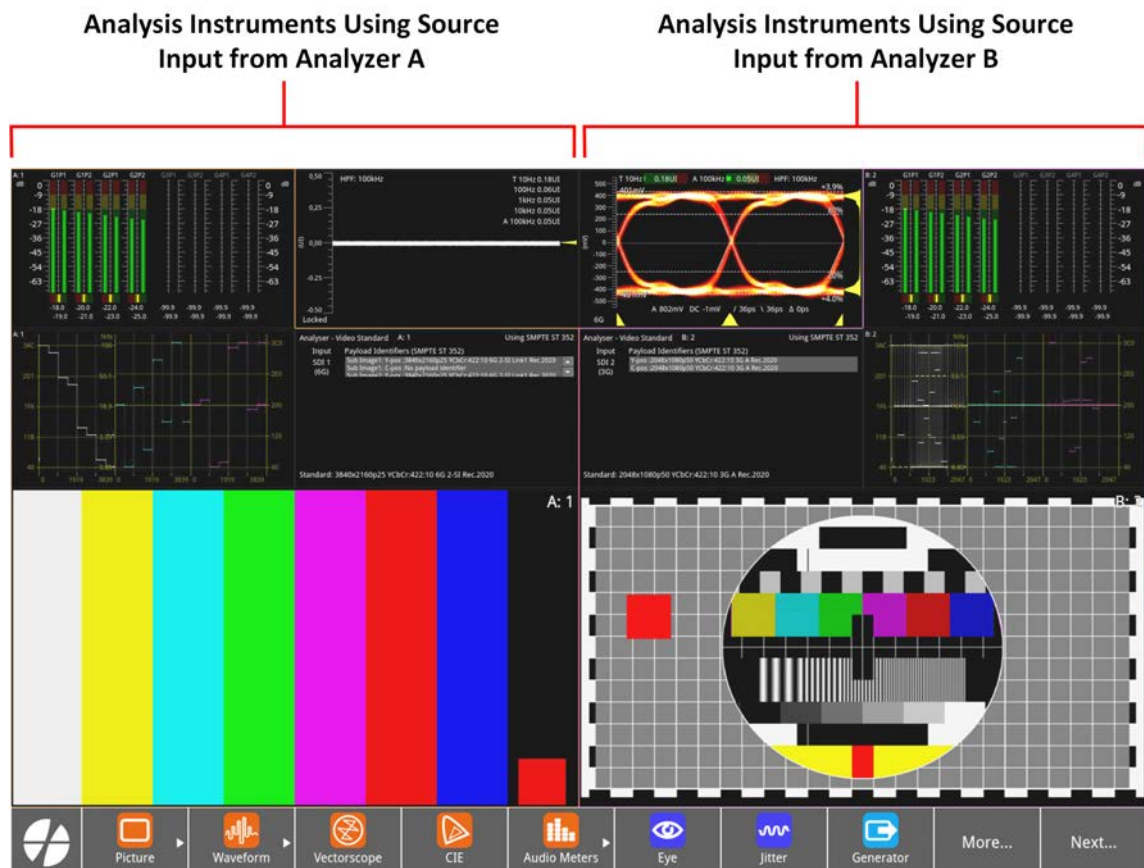


Figure 2-46: Default Multi Layout with Instruments Using Input from Analyzer A or B

With a multi layout, the following conditions apply:



- Launch any type of instrument.
- Each analysis instrument can select its own analyzer and assigned input.
- Position windows at arbitrary locations.
- Lock and unlock the layout.
- Instrument windows can be 1/16, 1/4, or full-screen size. In an unlocked layout you can cycle through each window size using a double-tap or the toolbar softkey .
- For analysis instruments, you can switch to a source input from a different analyzer either by spotlighting the instrument then using the toolbar softkey  or using the Analyzer Select dropdown in the instrument's option menu.



Figure 2-47: Switching Analyzer Using the Options Menu Dropdown for Dual Analyzers

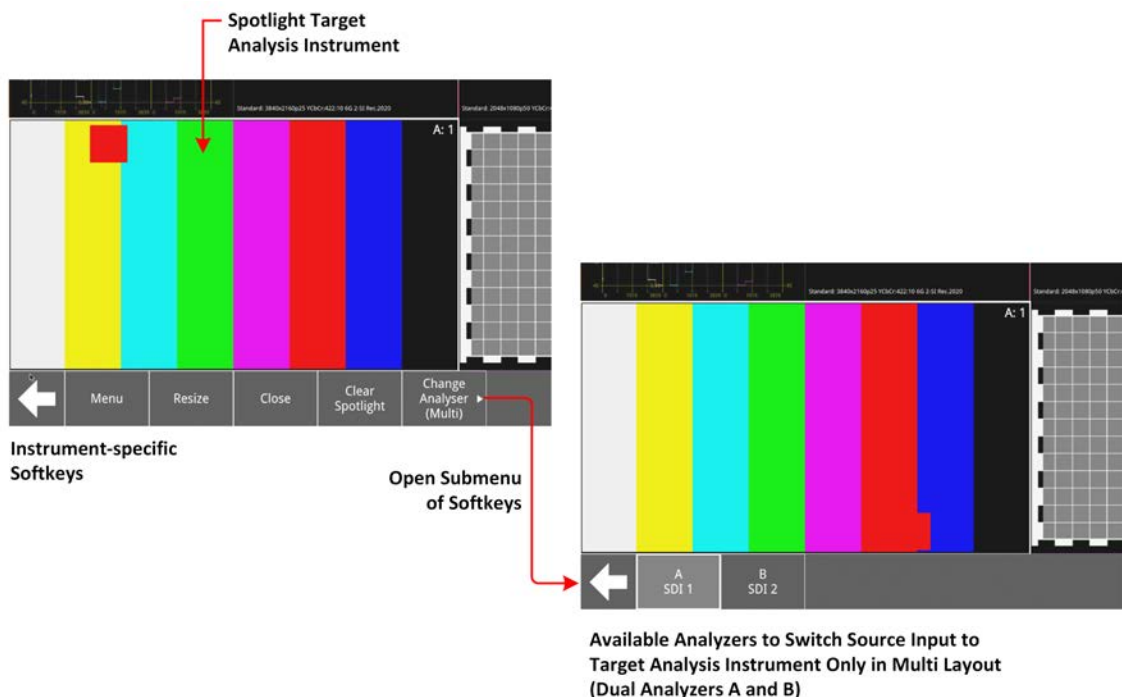


Figure 2-48: Multi Layout with Instruments Using Input from Analyzer A or B

Once you spotlight an analysis instrument in a multi layout, you can switch to the source input from the other analyzer. For example, in the example above, you can switch from Analyzer A SDI 1 to Analyzer B SDI 2.

This allows you to switch between different inputs, as required, without changing the screen.

Note: If you switch to a different analyzer and that signal is already being used by an analysis instrument of the same type on the same screen or optional second screen, then you will see the message:

Analyzer *n* instrument in use.

About Single Layouts with Dual Analyzers

When you add a new layout, as described later in this document, you can choose a **single** layout type, instead of the default multi type.

In a single layout, all analysis instruments use the same analyzer, either analyzer A or B, and its assigned inputs.

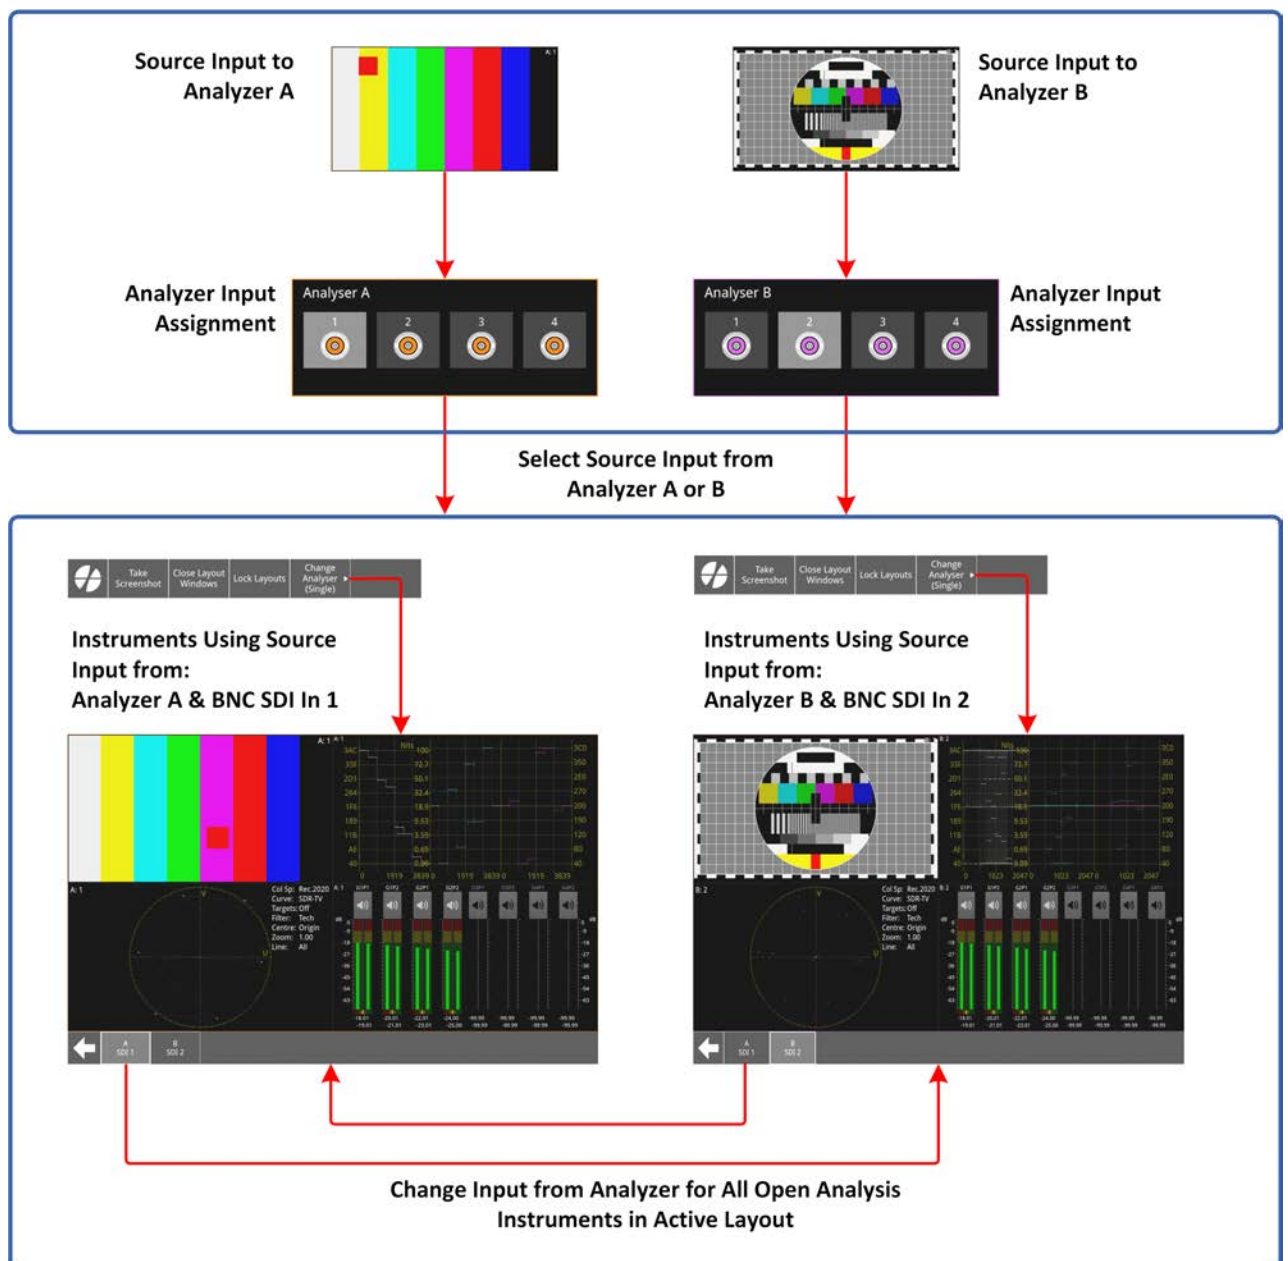


Figure 2-49: Single Layout with All Instruments Using Analyzer A Input

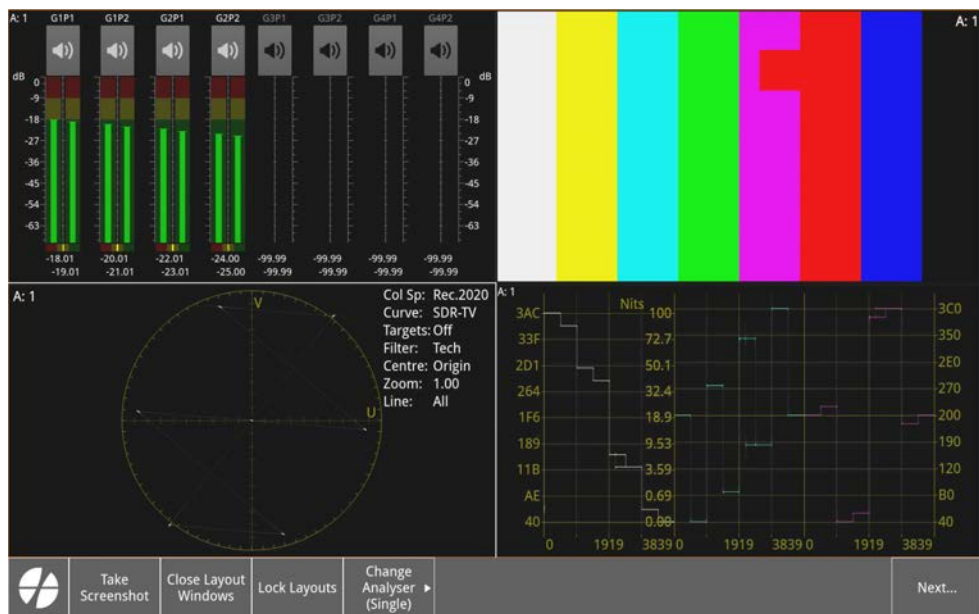


Figure 2-50: Single Layout with All Analysis Instruments Using Analyzer A

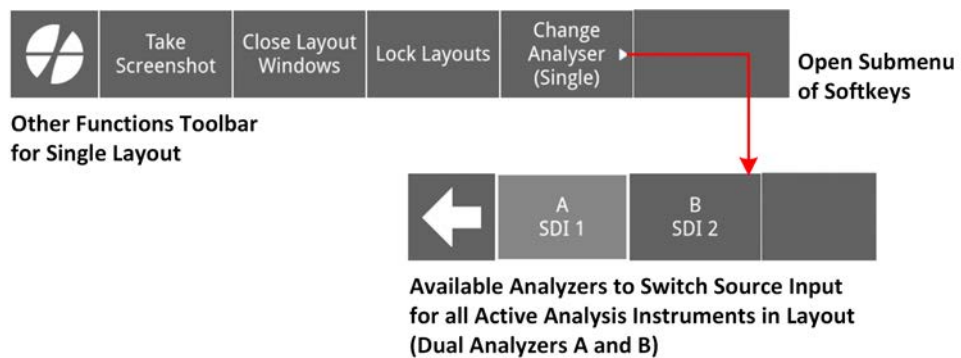


Figure 2-51: Using Toolbar Softkeys to Switch Between Analyzer A or B for All Analysis Instruments

Using Layouts on an Optional Quad Analyzer Unit

Overview

In addition to the single and multi layouts available with a dual analyzer unit, with the optional quad analyzers you can enable **Linked Layout** mode to **link** layouts so that you can switch quickly between single and multi modes. In addition, with a quad analyzer unit, your analysis instruments can use any of the four analyzers and their assigned inputs.

Note: Linked layout mode is available only for units with four analyzers (software option: **LPX500-QUAD**).

With an optional quad analyzer unit, you can have the same up to four single link, 12K SDI inputs connected to the physical BNC SDI input connectors on the rear panel of the unit, as with the dual analyzer unit. The main difference, however, is that you can use the four analyzers to analyze four source inputs, simultaneously.

Of these source inputs, you can assign these inputs to the four analyzers as follows:

- Any of the four single links to analyzers A, B, C, or D
- A maximum of two dual link (DL) for analysis by any analyzers A, B, C, or D
- A quad link (QL) to either analyzer A, B, C, or D.

With a quad analyzer unit, your analysis instruments can use any of the four analyzers and the source inputs assigned to them. You can configure your layouts for optimal analysis of these inputs as described in the following sections.

With an optional quad analyzer unit, you can define the following different types of layout:

- **Multi Unlinked Layout** where each analysis instrument can select its own input analyzer.
- **Multi Linked Layout:** for analysis instruments only, and where each analysis instrument can select its own input analyzer. The tiling of the instrument windows on the screen can take one of three specific formats: **Tiled**, **Align-H**, or **Align-V**. You can open up to four analysis instruments, at 1/16 screen size. When you launch an instrument four copies of the instrument open, with each connected to a different analyzer. This results in four groups of four instruments using source input from all four analyzers. To obtain a more detailed view of one source input, you can switch to single layout at any point using the toolbar softkeys.
- **Single Unlinked Layout** where all analysis instruments use the same input source.
- **Single Linked Layout** for analysis instruments only, and where each analysis instrument uses the same input source. You can open up to four analysis instruments, at 1/4 screen size. To obtain an enhanced overview of all source inputs, you can switch to multi layout at any point using the toolbar softkeys.

These layout types are described in the following sections.

About the Default Multi Unlinked Layouts with Quad Analyzers

The first layout you will encounter when starting the unit, and the default when adding new layouts, is of type **Multi, Unlinked**. In this layout, each instrument can select its own input source from any of the four analyzers. There are no restrictions on the instruments you can launch, or their size and positioning on the screen.

Note: If you choose to add a linked layout the linked switch in the new Layout Configuration dialog will be set to ON, by default, for the next layout you add.

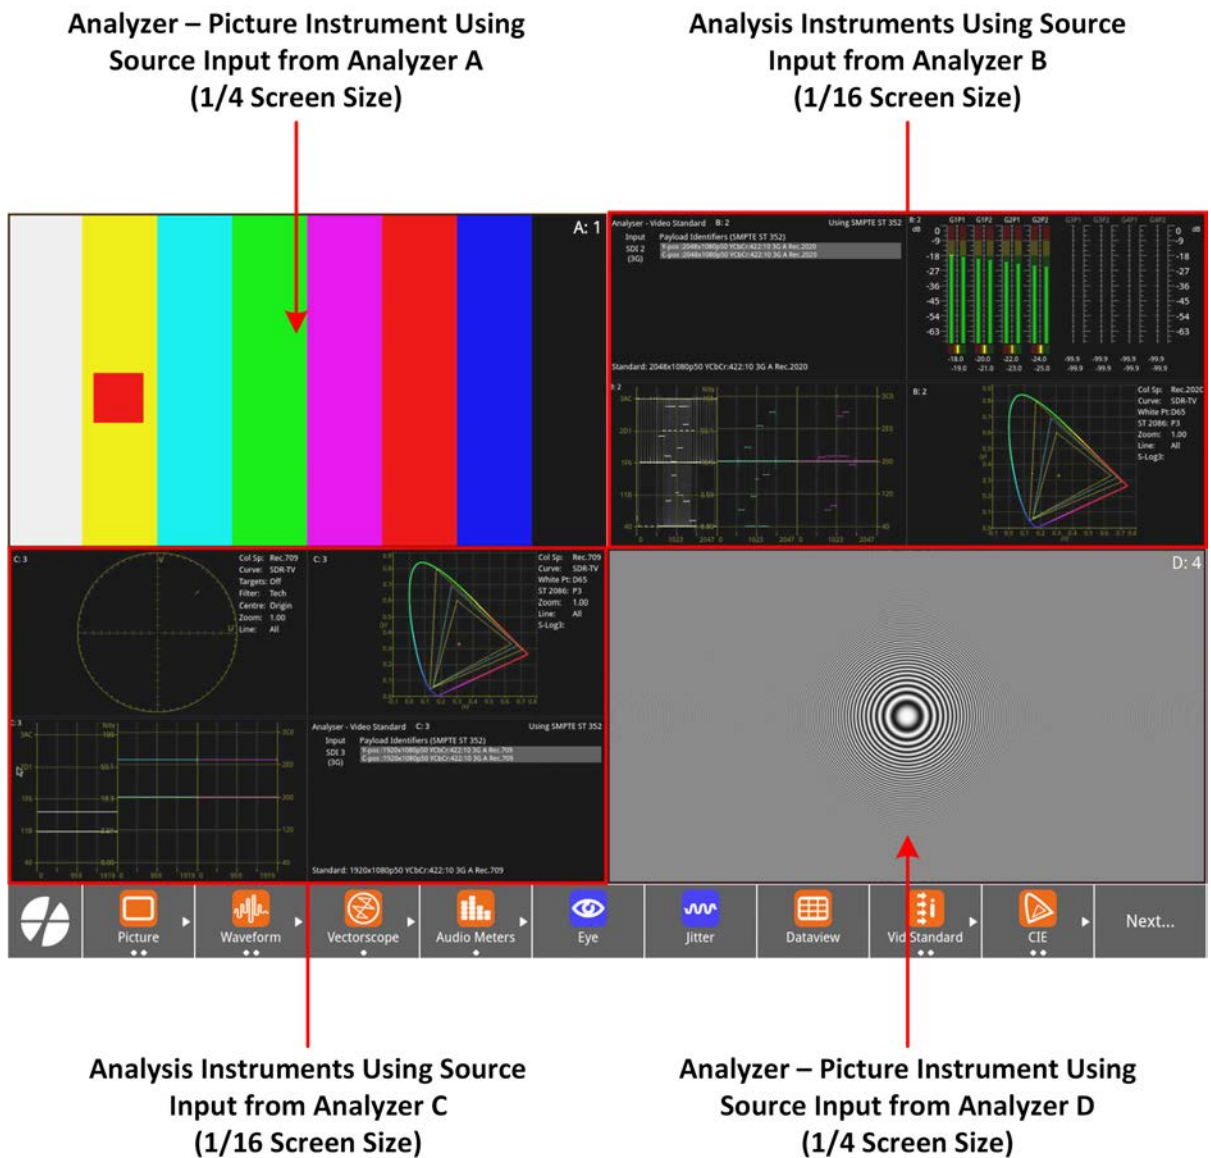




Figure 2-52: Default Multi Unlinked Layout with Instruments Using Analyzers A, B, C and D

With a multi unlinked layout, the following conditions apply:

- Launch any type of instrument.
- Each analysis instrument can select its own input analyzer.
- Position windows at arbitrary locations.
- Lock and unlock the layout.

- Instrument windows can be 1/16, 1/4, or full-screen size. In an unlocked layout you can cycle through each window size using a double-tap or the toolbar softkey .
- For analysis instruments, you can switch to a source input from a different analyzer either by spotlighting the instrument then using the toolbar softkey  or using the Analyzer Select dropdown in the instrument's option menu.

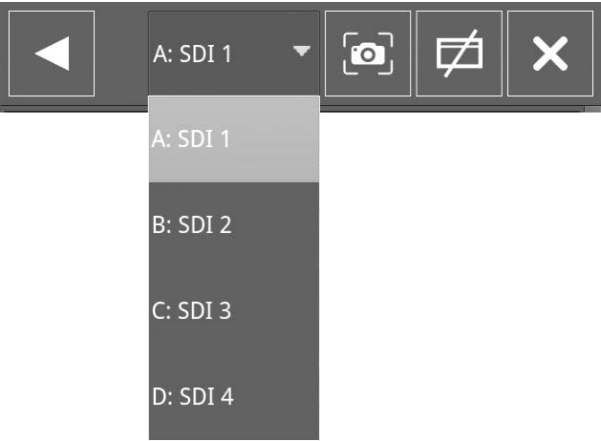


Figure 2-53: Switching Analyzer Using the Options Menu Dropdown for Quad Analyzers

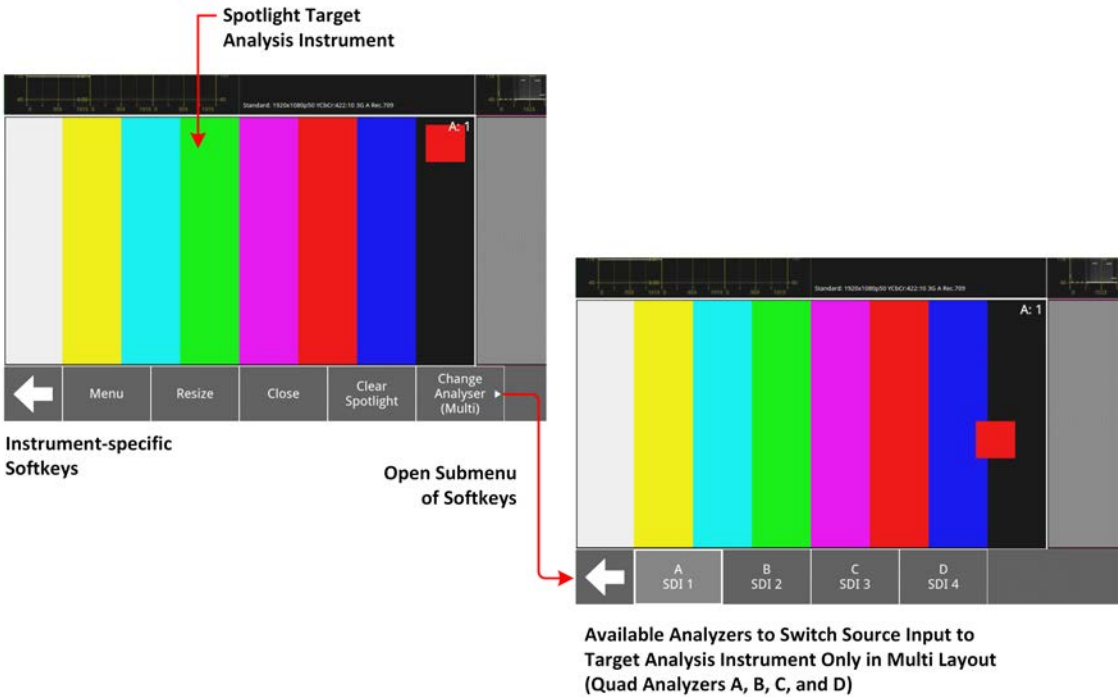


Figure 2-54: Multi Layout with Instruments Using Input from Analyzer A, B, C, or D

About Single Unlinked Layouts with Quad Analyzers

When you add a new layout, as described later in this guide, you can choose a **single** layout type, instead of the default multi type. In a single layout type, all analysis instruments use the same input source from any of the four analyzers.

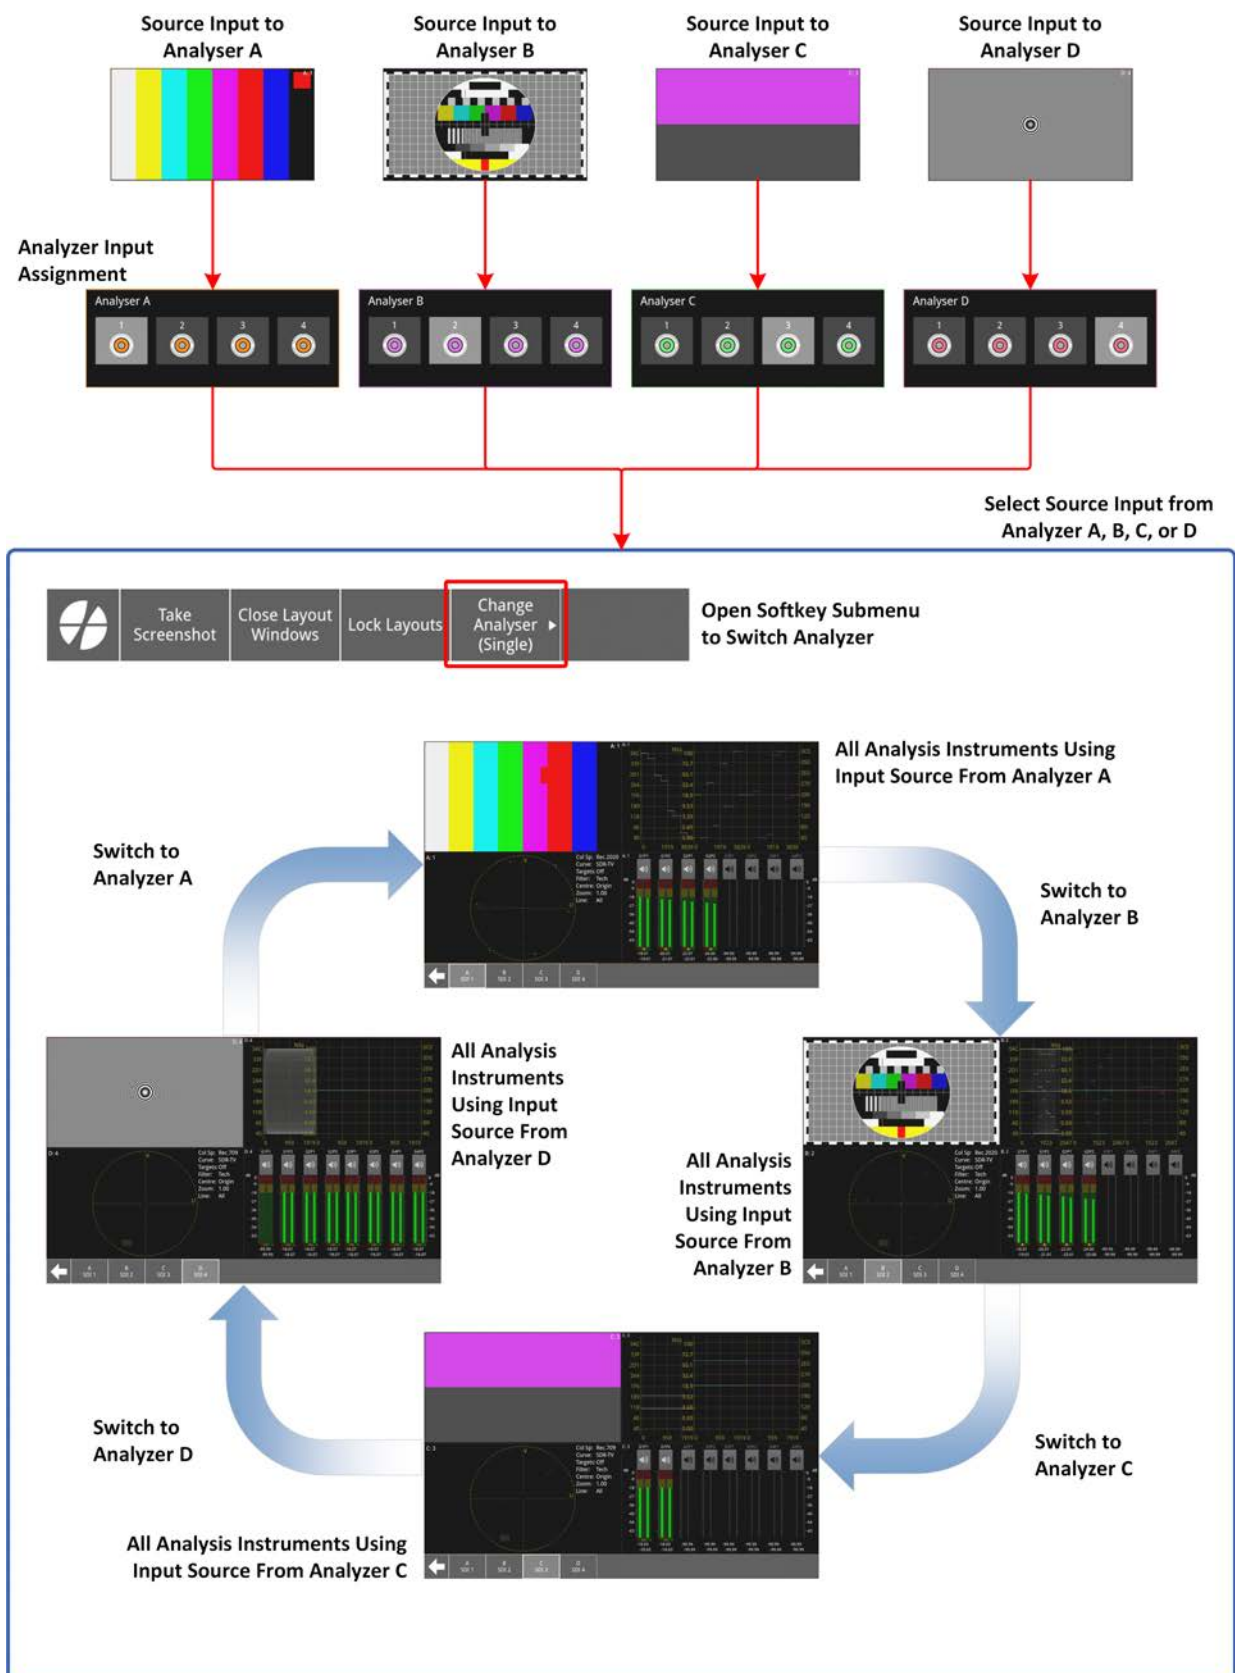


Figure 2-55: Switching Analyzer Input for Single Layout with Optional Quad Analyzers

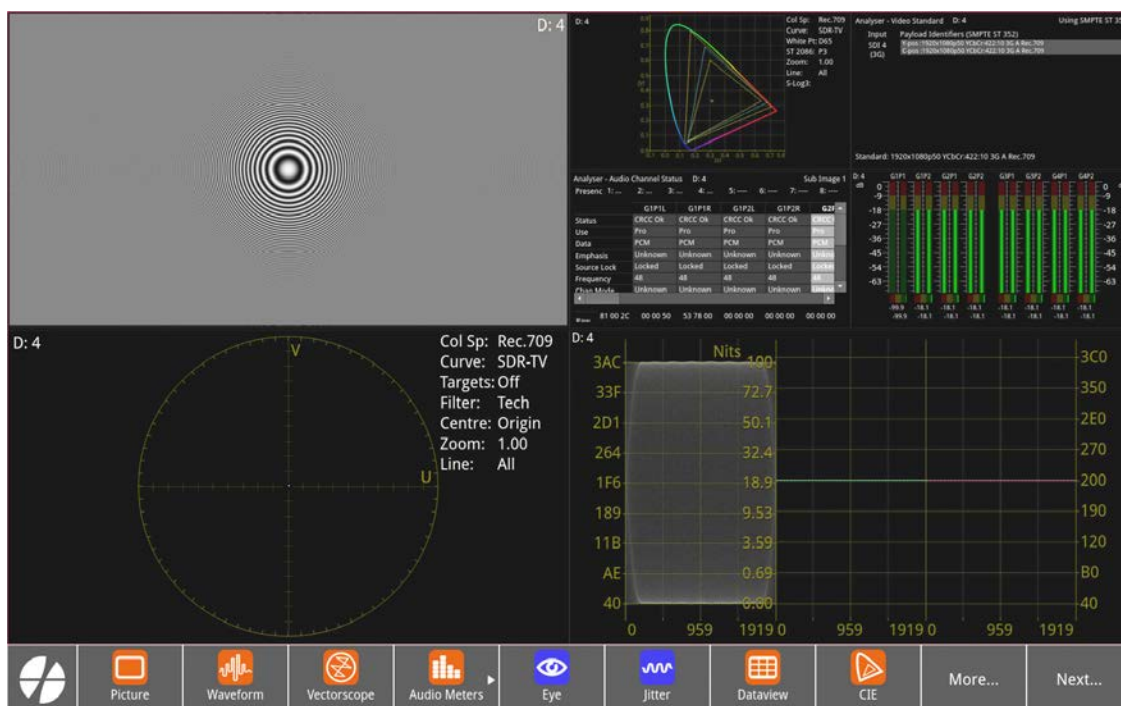


Figure 2-56: Single Unlinked Layout with All Instruments Using Input from Analyzer D

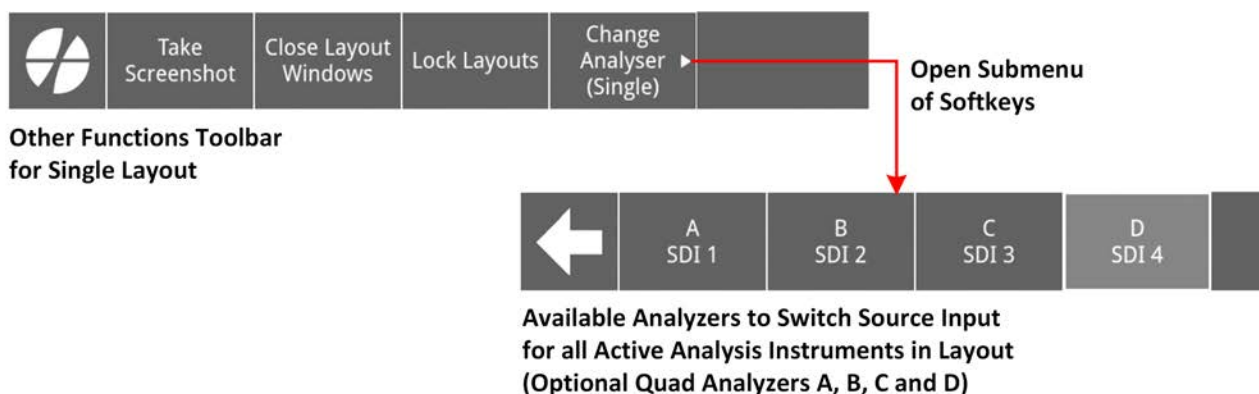



Figure 2-57: Switching All Open Analysis Instruments to Use Input from Analyzer A, B, C or D

About Multi Linked Layouts with Quad Analyzers

A multi linked layout is a specialized overview layout, providing three fixed window tiling formats, enabling you to display four groups of four analysis instruments, with each group accessing the source inputs from one of the four analyzers simultaneously.

You can create a multi linked layout by selecting the mode **Multi** and setting the Linked switch **ON** in the New Layout Configuration dialog.

With a multi linked layout, the following constraints apply:

- You can launch the following analysis instruments:
 - Analyzer - Video Standard
 - Analyzer - Ancillary Inspector
 - Analyzer - Ancillary Status
 - Analyzer - Audio Channel Status
 - Analyzer - Audio Meters
 - Analyzer - CIE Chart (requires software option: **LPX500-HDR**)
 - Analyzer - Picture
 - Analyzer - Vectorscope
 - Analyzer - Waveform
- You can launch only up to four different analysis instruments in each multi linked layout.
- Launching an instrument opens four instances of that instrument, each using input source from a different analyzer.
- Default window tiling format is **Tile** in which instrument windows are arranged in four quadrants.
- Change the tiling format using the toolbar softkey, then choosing **Tile**, **Align-H**, or **Align-V**.
- Lock and unlock the layout.
- Instrument windows are fixed to 1/16 screen size. It is not possible to resize windows in a multi linked layout. If you need a magnified view of an instrument window in a group, switch to Single Linked mode as described in the section [About Single Linked Layouts with Quad Analyzers](#).

Note: Some instruments, for example, Audio Meters, have features that are only available when at full screen size. If you need to resize an instrument to full screen, open an instance in a new multi or single unlinked layout.

- Change the position of windows in a multi linked group using touch or mouse control to drag a window and drop in a new location. Other windows move automatically to fill the gap at the original site of the moved window. In addition, the equivalent instrument window in the other three groups moves to reflect the change in the first group. This ensures that all instruments of the same type are in the same relative positions.
- Switch to a single linked layout for a more detailed observation of an instrument by spotlighting the instrument then using the toolbar softkey:



Instrument windows open in a defined order, depending on the selected display tiling option: Tile, Align-H, or Align-V, as follows:

- **Tile:** Launches a 1/16 size window in the top-left corner of each of the quadrants. The next is added to the top-right, then bottom-left and finally bottom-right. It is not possible to resize the windows in a linked layout; they will always be 1/16 size.
- **Align-V:** Starts at left-most column, then moves right, column by column.
- **Align-H:** Starts at the top row, then moves down, row by row.

A feature of the linked display mode (either Single or Multi) is that you can move a window within its quadrant (Tile), row (Align-H), or column (Align-V) and all other windows will move to make space and fill the gap left in the original position of the moved window.

Note: If the layout lock is enabled then the instrument positions cannot be changed.

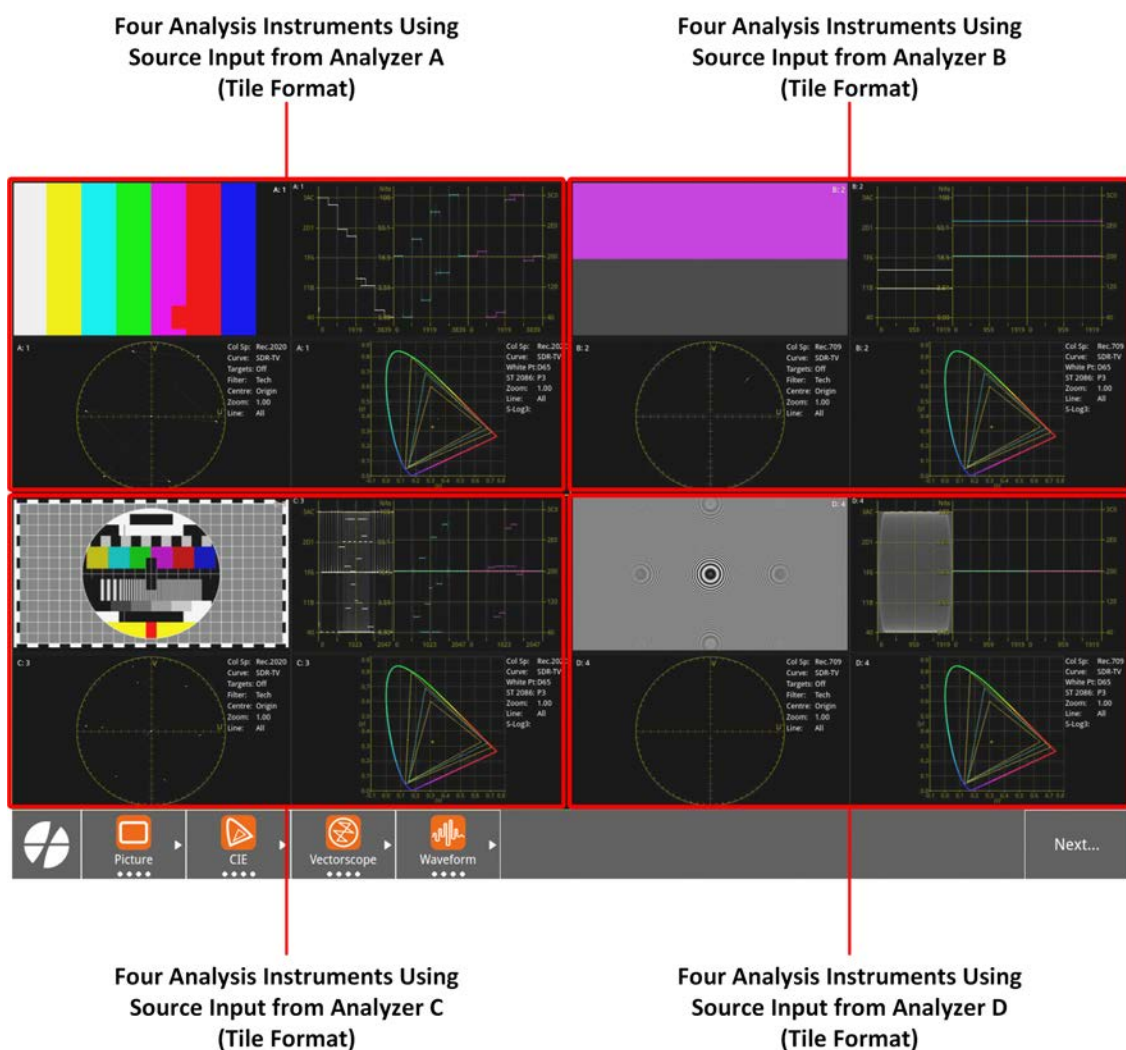



Figure 2-58: Multi Linked Layout with Default Tile Format

When you have opened four analysis instruments in a multi linked layout, no additional instruments can be launched. The instruments tab is grayed-out at this point. If you close an instrument, the Instruments become available for selection again in the Instruments tab.

Note: If the layout lock is enabled then no further instruments can be added.

Switching Between Tiled Views in a Multi Linked Layout

Use the toolbar softkey  to change the tiling of the active multi linked layout between the three possible formats: tile, align-H, and align-V as shown in the following figure.


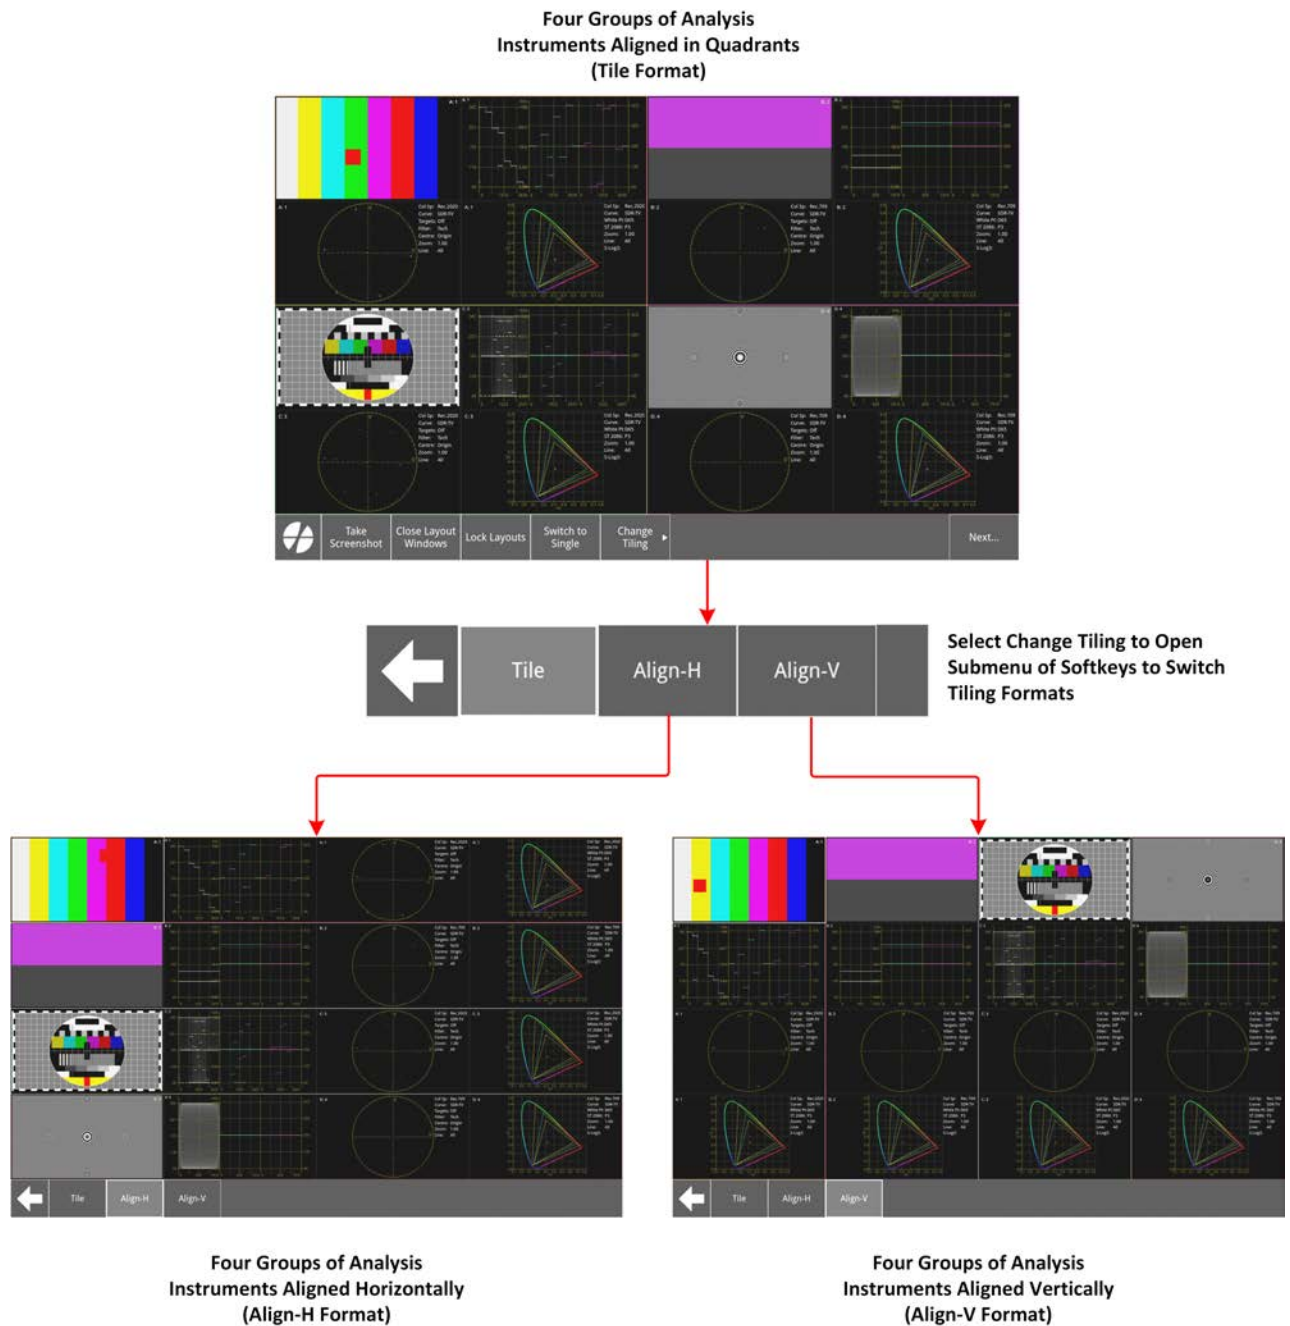


Figure 2-59: Multi Linked Layout - Switching Tiling Formats


Moving Instrument Windows in a Multi Linked Layout

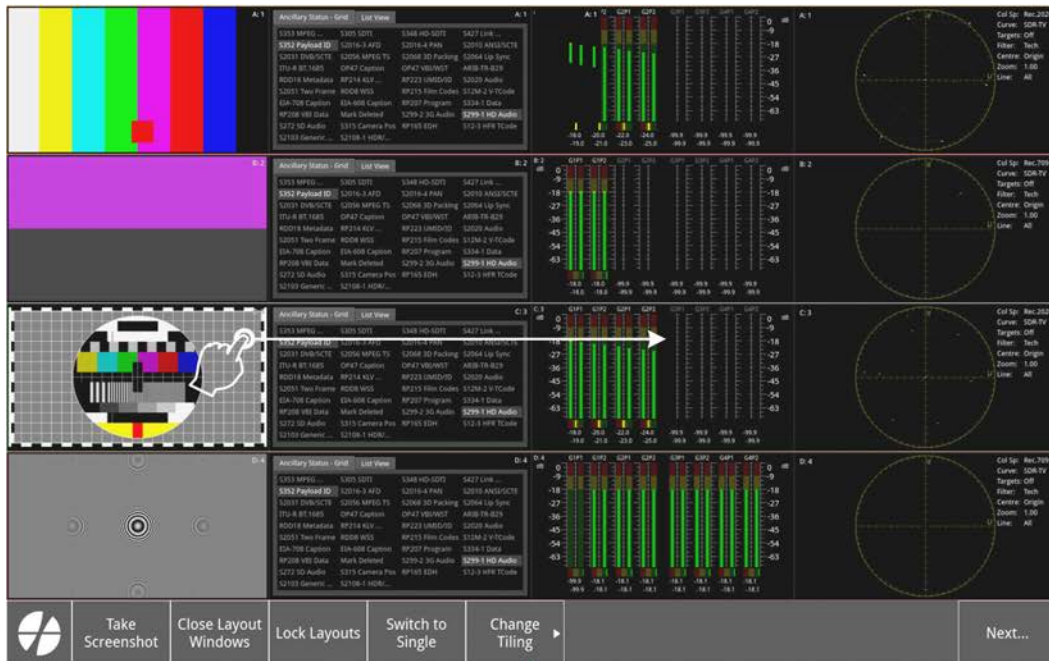You can move any of the open windows in a multi linked layout when unlocked by touching the target window and dragging to a new position within the same window group. When you release the target window, the neighboring windows move to fill the original gap and prevent overlapping.



Touch and Drag Target Window to New Position in the Same Analyzer Group

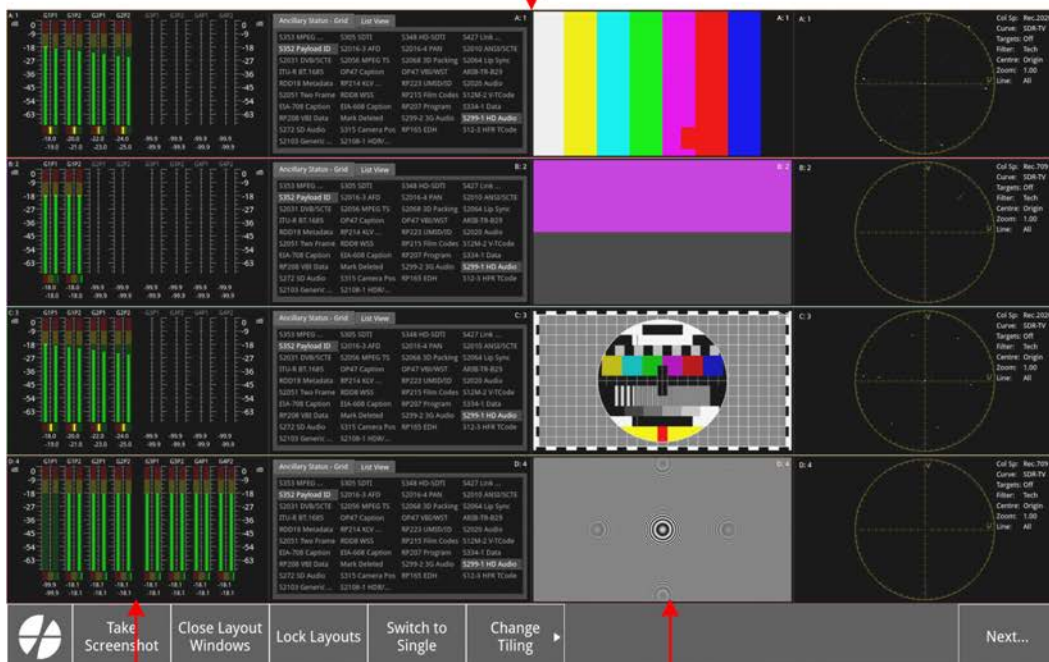Drop Window in the Desired Position



All Replaced Windows Move Back to Fill the Gap

All Windows of the Same Type Move to the New Position Within the Analyzer Group



Figure 2-60: Multi Linked Layout - Switching Tiling Formats

About Single Linked Layouts with Quad Analyzers

A single linked layout is similar to a single unlinked layout but its main function is to allow switching from a multi linked layout to display one of the groups of four instruments at 1/4 screen size for more detailed observation.

You can create a single linked layout by selecting the mode **Single** and setting the Linked switch **ON** in the New Layout Configuration dialog.

With a single linked layout, the following constraints apply:

- You can launch only the following analysis instruments:
 - Analyzer - Video Standard
 - Analyzer - Ancillary Inspector
 - Analyzer - Ancillary Status
 - Analyzer - Audio Channel Status
 - Analyzer - Audio Meters
 - Analyzer - CIE Chart (Requires software option: **LPX500-HDR**)
 - Analyzer - Picture
 - Analyzer - Vectorscope
 - Analyzer - Waveform
- You can launch only up to four different analysis instruments in a single linked layout.
- The first group of four instruments launched use source input from Analyzer A. If unconnected, the open instruments display the message: **No input detected**. To use a different source input, use the softkey  to select an input source from a different analyzer.
- Up to four instrument windows are always displayed in tile format at 1/4 screen size.
- Lock and unlock the layout to prevent or allow changes.
- No resizing of instrument windows (1/4 size).
- Change the position of unlocked windows in a single linked group using touch or mouse control to drag a window and drop in a new location. Other windows move automatically to fill the gap at the original site of the moved window.
- Switch to a multi minked layout for a view of the source inputs to all analyzers by spotlighting the instrument then using the toolbar softkey .

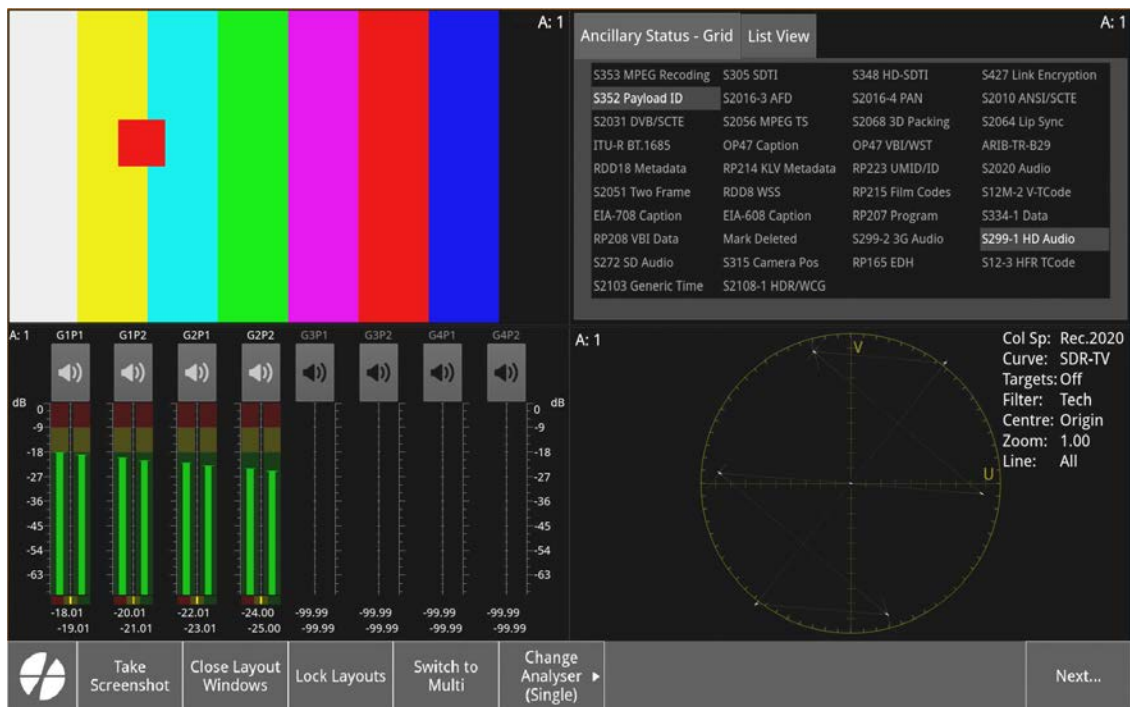



Figure 2-61: Single Linked Layout with All Analysis Instruments Using Input from Analyzer A

When you switch to a single linked layout from a multi linked layout, the unit first displays the four

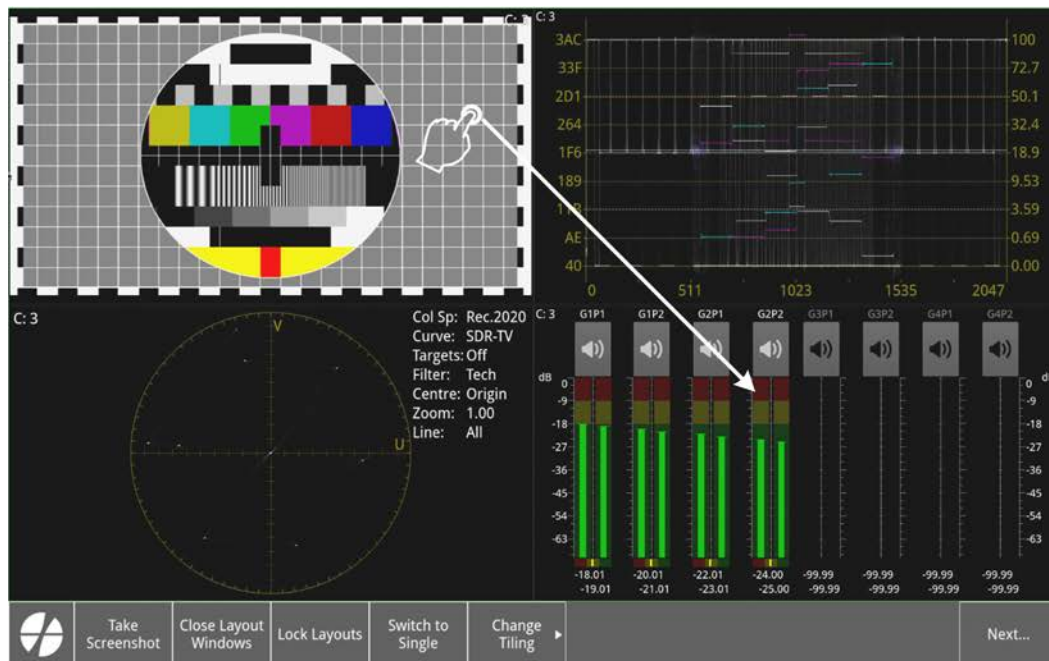
instruments assigned to analyzer **A**. You can then use the softkey  to display one of the four groups of instruments associated with the selected analyzer. Instrument windows are always displayed in a tiled format of four 1/4 screen instrument windows.

From a single linked layout, you can switch quickly back to a multi linked layout by tapping the softkey

 in the toolbar.


Moving Instrument Windows in a Single Linked Layout

You can move any of the open windows in a single linked layout by touching the target window and dragging it to a new position in the group. When you release the target window, the neighboring windows move to fill the original gap and prevent overlapping.



Touch and Drag Target Window to New Position

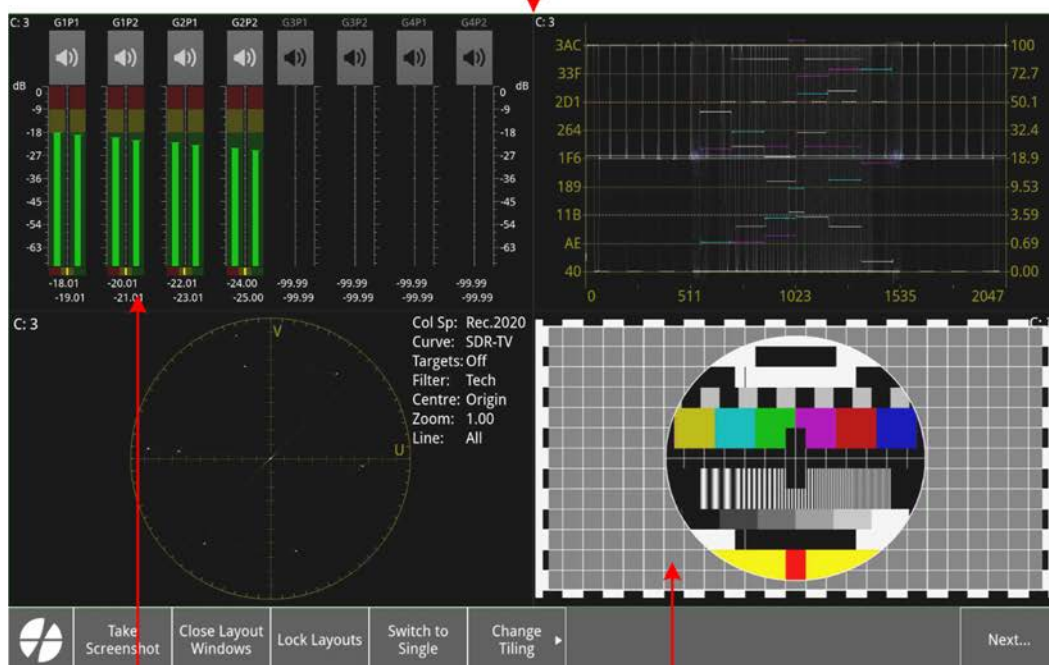Drop Window in the Desired Position



Replaced Window Moves to Fill the Gap

Window Moves to the New Position

Figure 2-62: Single Linked Layout - Switching Tiling Formats

Navigating Through Layouts

Overview

The LPX500 provides a number of methods you can use to navigate through your layouts. For example, you can choose between using swipe gestures on the touchscreen(s) or the mouse cursor. There is no recommended method, choose whichever method best suits your working style.

When navigating between LPX500 layouts, think of the layouts as a linear series of screens running from left to right. You can add new layouts to the extreme left or extreme right of the existing series of layouts. It is not possible to insert layouts in the middle of the series, however, you can use the **Layouts** dialog to change the order in which layouts are displayed, if desired.

You can configure and save up to **16** screen layouts with associated instruments and settings. On starting the system, you are initially presented with one screen layout, to which you can add up to 15 more layout screens, with up to 16 non-overlapping instruments visible on a single layout. You can open instrument windows on each available layout and navigate between layouts using either touch gestures, the mouse cursor, softkeys in the layouts toolbar, or by switching to a different layout in the Layouts dialog.

You might find that the optimum layout on the touchscreen features up to four quarter screen-size instruments per layout but this depends entirely on your preference. The following graphic shows a configuration of seven layouts, each configured with four instruments.

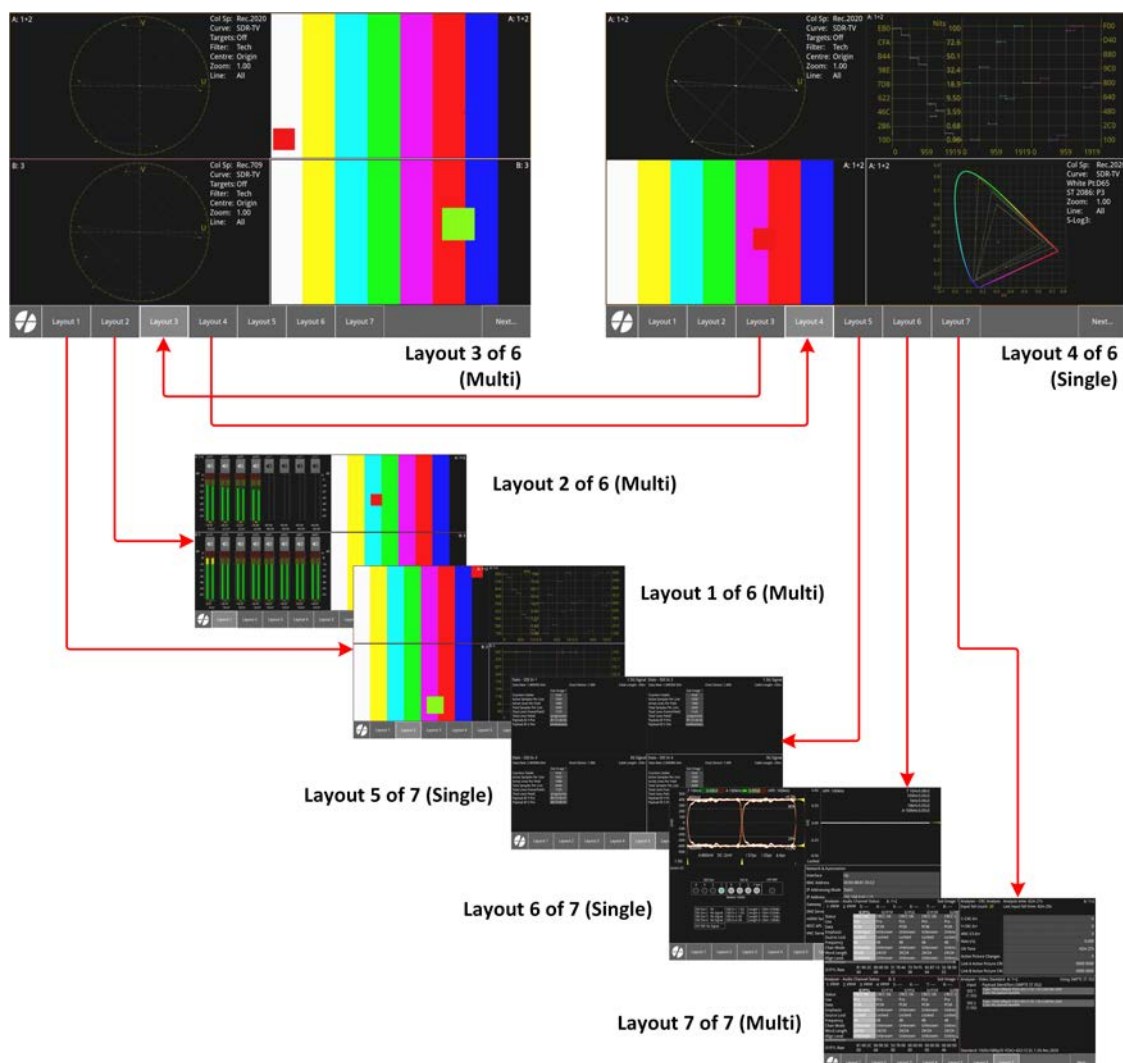


Figure 2-63: Navigation Through Multi and Single Layouts Using Softkeys (Dual Analyzers)

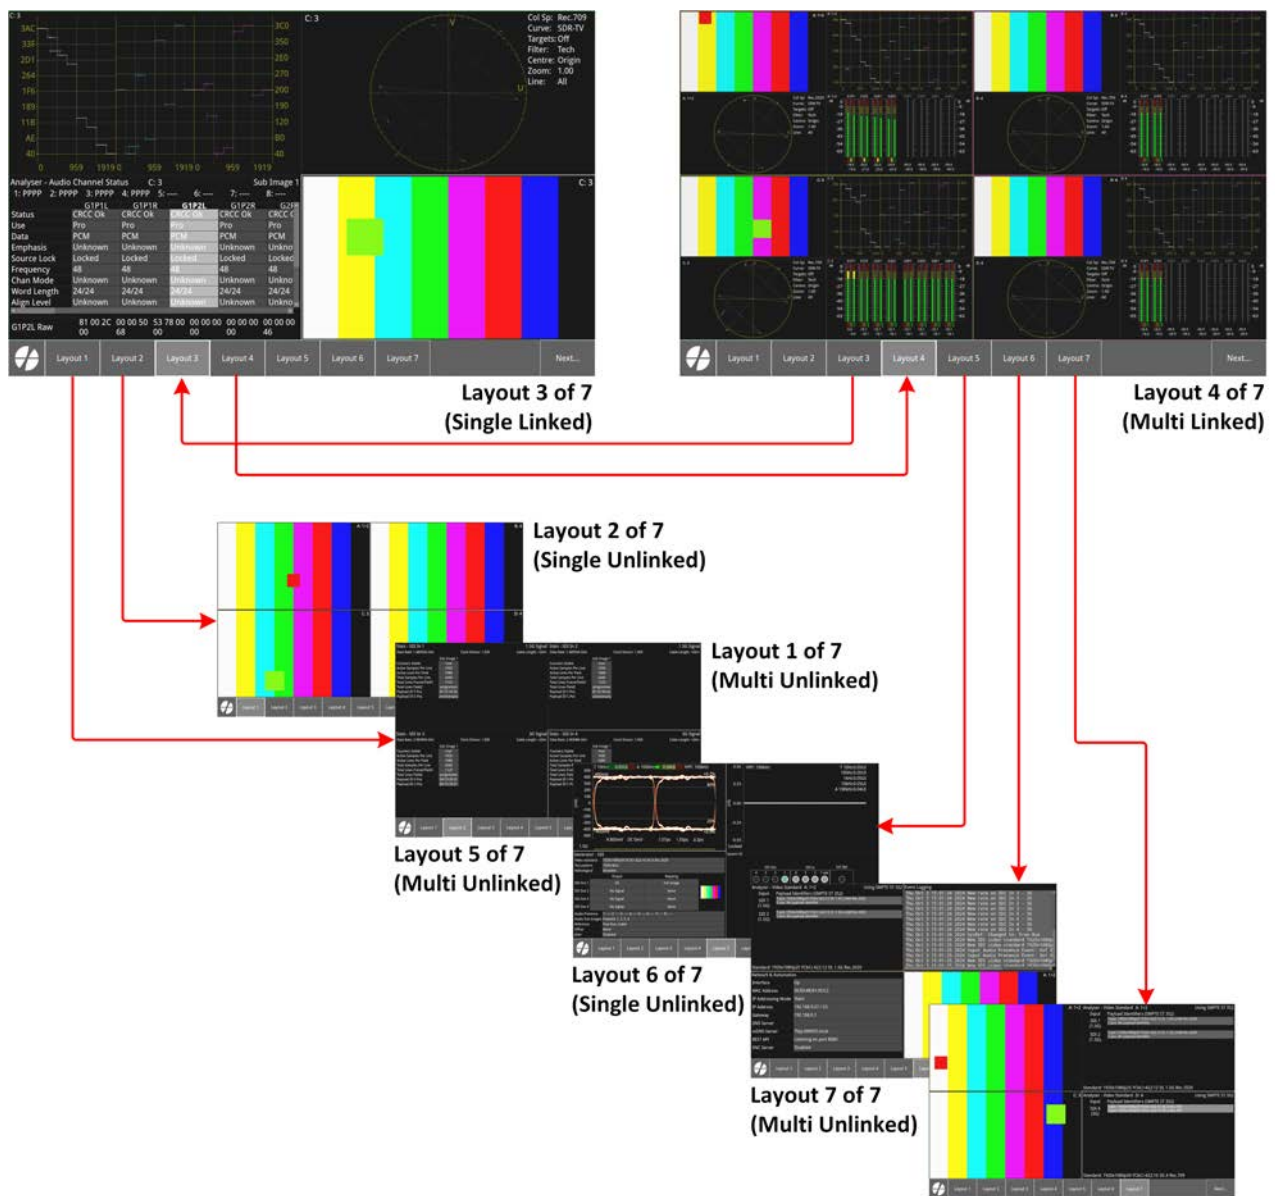


Figure 2-64: Navigation Through Multi, Single and Linked Layouts Using Softkeys (Quad Analyzers)

Note: In this user manual, we refer to the current display as the **Active Layout**.

Each new layout that you add is reflected as a new softkey, displaying the name of the layout, in the layouts toolbar. You can change the displayed order of the softkeys, or change the displayed name in the toolbar, using the Layouts dialog in the Settings tab.

Using Touch Gestures in Layouts

If you have access to the unit, using swipe gestures on the touchscreen of the main unit or optional second display is a quick way to move between layouts. The following graphic shows navigation through a series of three layouts.

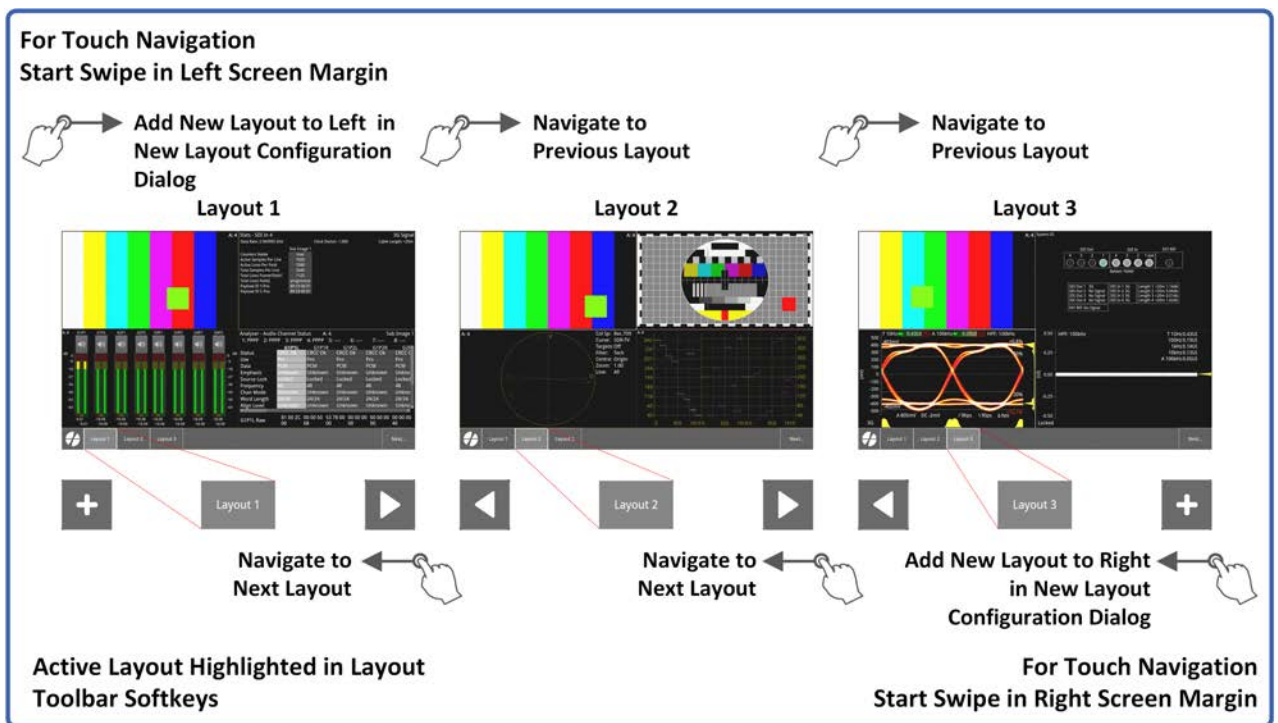


Figure 2-65: Navigating Through Layouts Using Swipe Gestures on the Touchscreen(s)

When using swipe gestures to navigate, you will briefly see one of the following icons displayed in the middle of the left- or right-hand sides of the screen, depending on your position in the series of layouts and whether navigating left or right:

- < Display the **previous** layout to the left.
- > Display the **next** layout to the right.
- + Add a **new** layout to the left or right of the active layout. This is displayed only when you are at the extreme left or right of the current series of layouts. The New Layout Configuration dialog opens enabling you to choose the type of layout required. If you only have a single layout (e.g., when starting from factory defaults) you will see this icon at both left and right sides of the screen once you have launched at least one instrument. If your layout is empty, this icon will only be displayed after first launching an instrument in the active layout.

From the initial, default multi layout, you can add additional layouts to the right or left of the active layout.

If you require a new layout, when layouts are unlocked, you can add a new layout to left or right either by swiping on the touchscreen when the Add Layout button (+) is displayed, or by clicking + on a remote display.

- Swipe right-to-left toward the left-hand + to add a layout to the right. Alternatively, swipe left-to-right toward the right-hand + to add a layout to the left.

In an unlocked layout, you can touch anywhere inside an instrument window to spotlight it, then drag it to a new position on the screen. In a locked layout the positions of instrument windows are fixed until you unlock the layout.

When swiping in an unlocked layout, make sure that your swipe gesture starts in the swipe zone at the left or right of the screen (shown below) to avoid accidentally moving instrument windows.

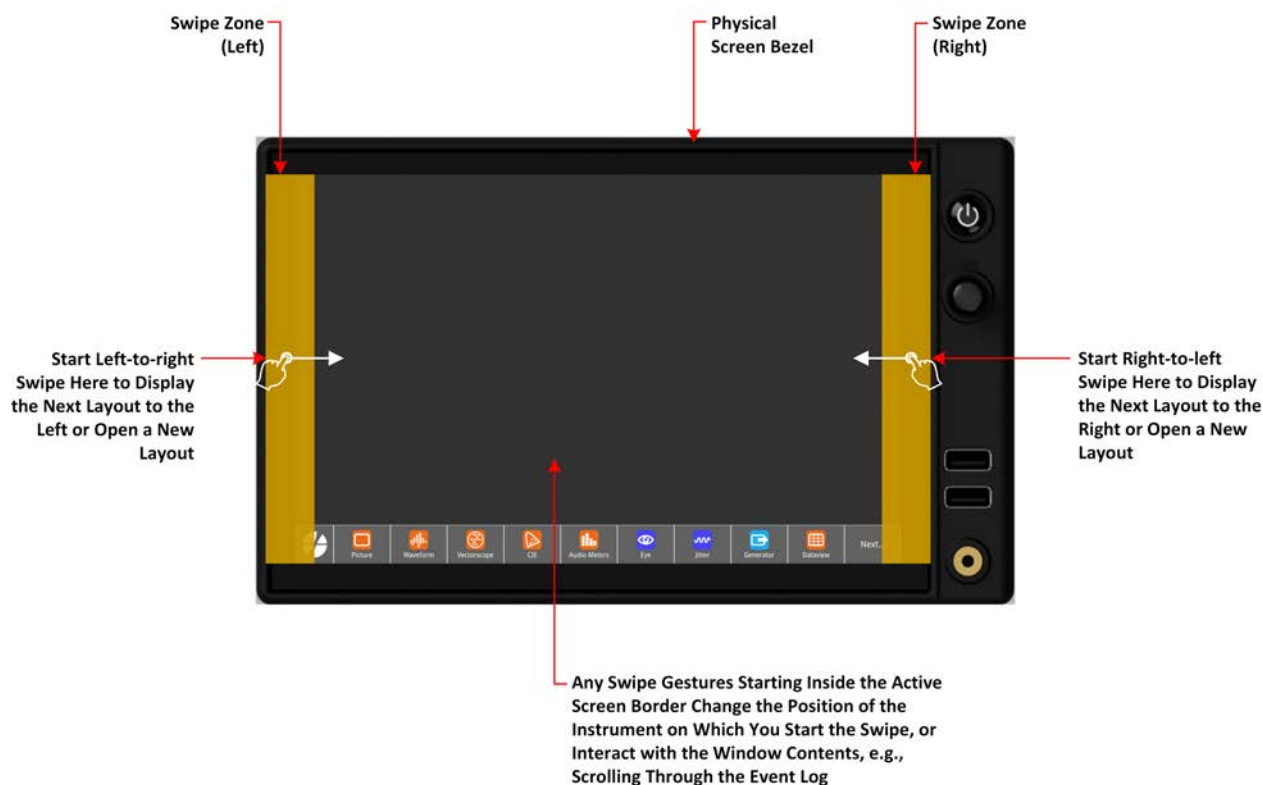


Figure 2-66: Swipe Zones for Using Swipe Gestures to Navigate Layouts

Using Mouse Cursor Control in Layouts

You can use the mouse cursor to navigate layouts on the main unit or optional second screen if you prefer that to touch gestures. If you do not have direct access to either screen (e.g., when working remotely on a DisplayPort screen or over noVNC) then mouse control is the only option to navigate through layouts.

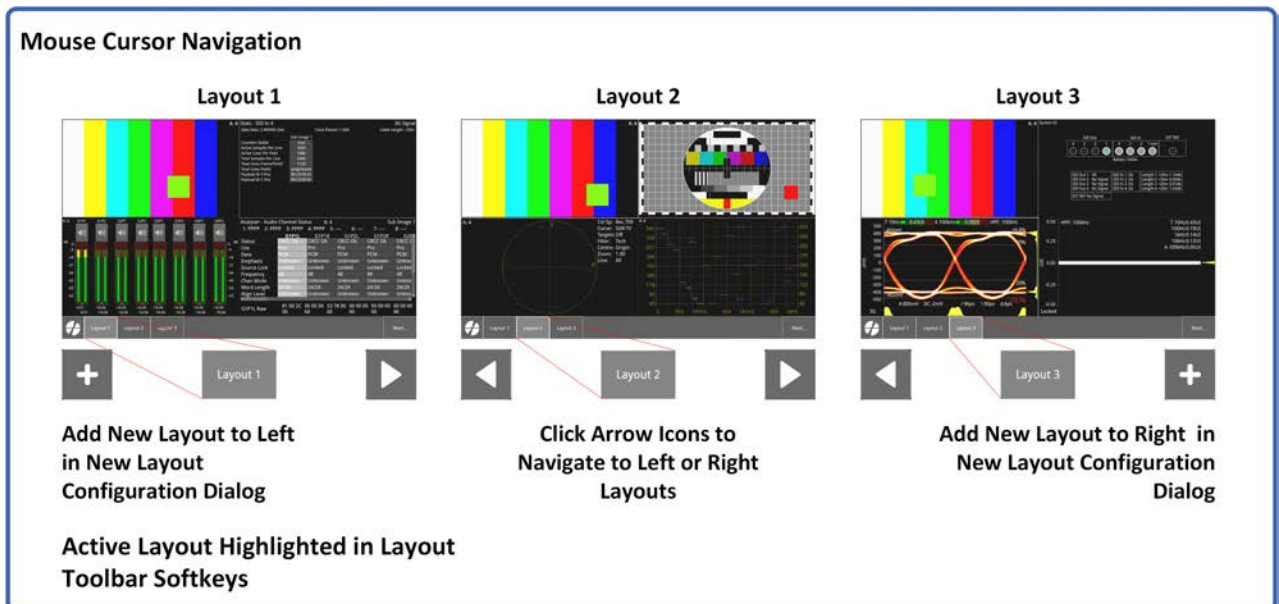






Figure 2-67: Navigating Through Layouts Using the Mouse Cursor



Move your mouse cursor to the center of the left-hand or right-hand edge of the screen and you will see one of the following icons displayed:

-  Display the **previous** layout to the left.
-  Display the **next** layout to the right.
-  Add a **new** layout to the left or right of the current layout. This is displayed only when you are at the extreme left or extreme right of the current series of layouts. This will open the New Layout Configuration dialog enabling you to choose the type of layout required.

From the initial, default multi layout, you can add additional layouts to the right or left of the current layout.

In an unlocked layout, you can also click anywhere inside a window to spotlight it then drag to move it to a new position on the screen. In a locked layout the positions of instrument windows are fixed until you unlock the layout.

If you require a new layout, when unlocked, you can add a new layout to left or right either by swiping on the touchscreen when the Add Layout button () is displayed, or by clicking  on a remote display.

- Click the right-hand  to add a layout to the right, or click the left-hand  to add a layout to the left.

Using the Layouts Toolbar and/or Layouts Dialog

The Layouts toolbar or the Layouts dialog, available in the Settings tab, provide further methods to navigate through your layouts.

The Layouts toolbar may contain up to **16** softkeys if you have configured the maximum number of layouts on your unit.

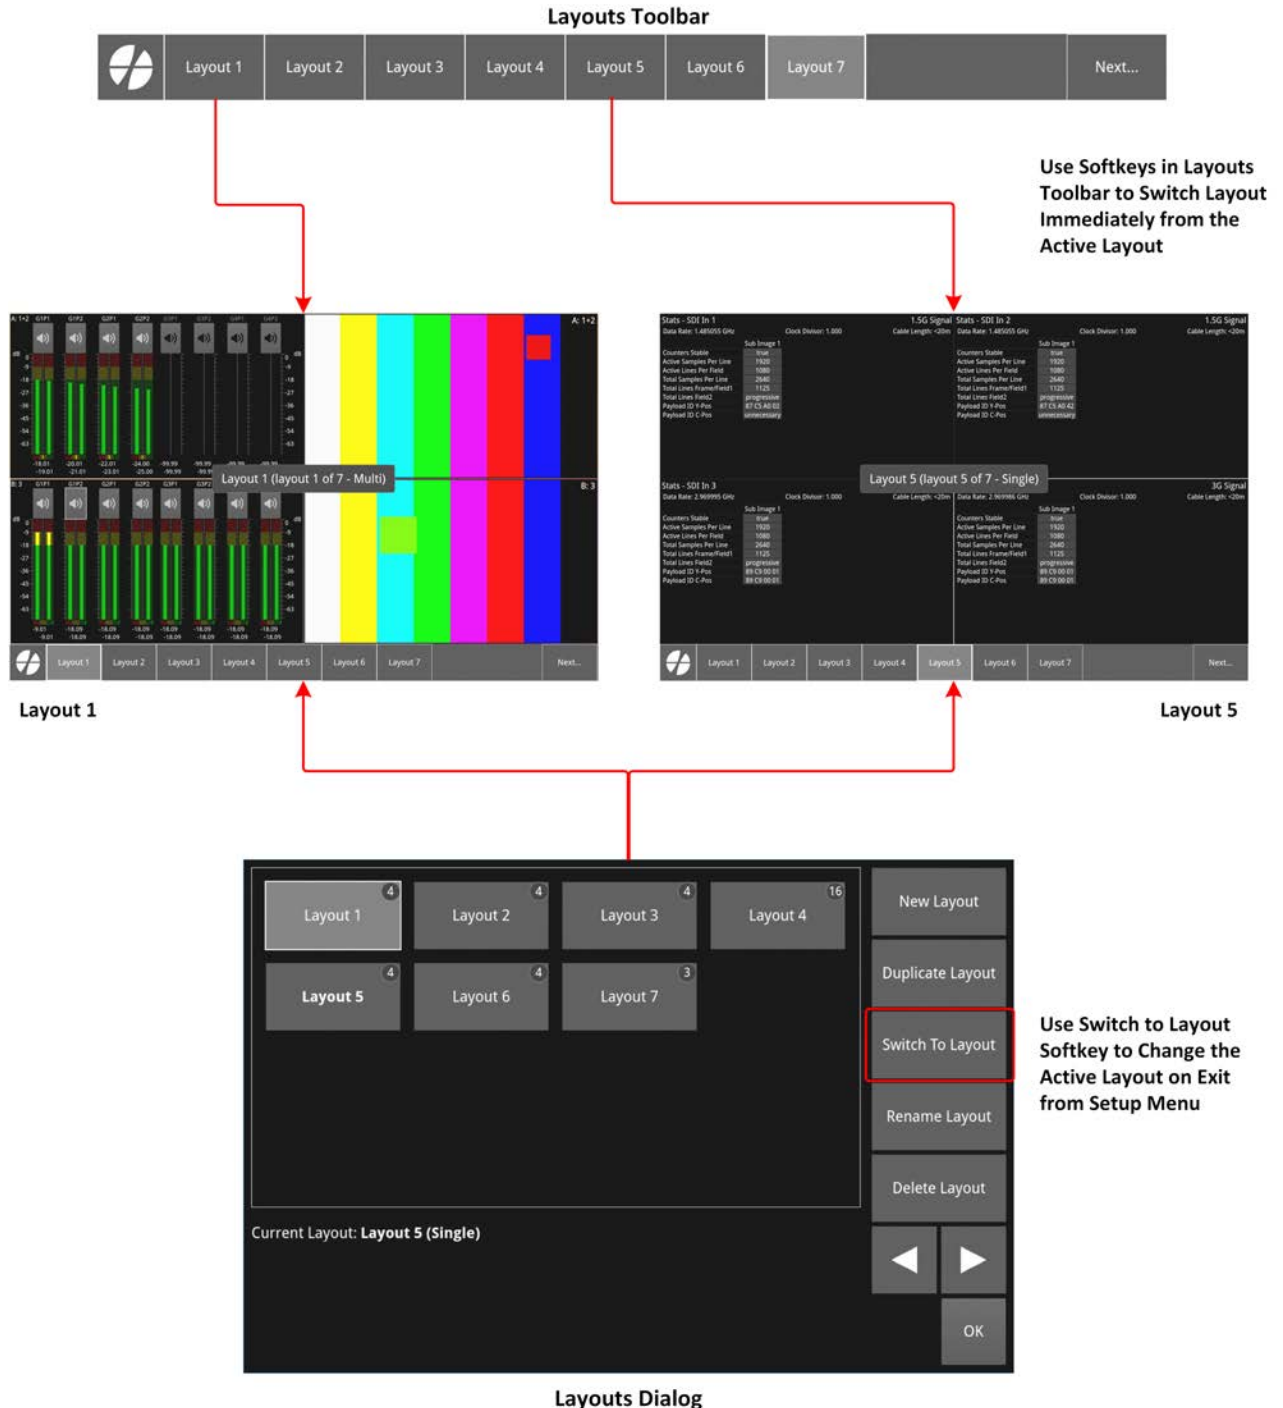




Figure 2-68: Navigating Through Layouts Using the Layouts Dialog or Layouts Toolbar

To navigate through the available layouts on the touchscreen, open the layouts toolbar and tap the desired softkey. On a remote display (DisplayPort or noVNC) move the mouse cursor to the bottom of the screen, navigate to the layouts toolbar, then select the desired softkey.


Note: You can use the layouts dialog and toolbar by touch or the mouse cursor.

To change the active layout using the Layouts toolbar:

1. Tap or click the  softkey until the Layouts toolbar is displayed.
2. Tap or click the softkey representing the layout you want to display.
3. If you have configured more than nine layouts, you may need to tap or click the  softkey to display additional softkeys.

You can manage your layouts, including changing the order of softkeys displayed in the layouts toolbar, using the layouts dialog in the Settings tab. In addition, you can create new layouts or duplicate existing layouts for modification. Once you have added a layout, you can continue to add further empty layouts, as required, until you reach the maximum number of 16.


To open the layouts dialog:

1. Tap or click  to open the Setup menus and open the Settings tab.
2. Tap or click Layouts to open the layouts dialog.

For more information on the layouts dialog, see [Managing Layouts Using the Layouts Dialog](#).

Navigating in Unlocked or Locked Layouts

To secure your layout configuration, you can lock it using the  softkey in the toolbar


or  in the Setup Menus. This locks the position and size of all instruments in all configured layouts.

When locked, you can navigate between available layouts but certain actions are prevented such as opening the Layouts dialog in the Settings tab, adding instruments, closing instruments, adding new layouts, etc. Furthermore, you can resize an instrument to full-screen size and, using the rotary control, swipe or click to switch between all instruments in the layout, which will be shown at full-screen size. Navigating using swipe or click to the next or previous layout is prohibited when the layout contains more than one full-screen instrument with the layout lock enabled. You can, however, still use the Layouts toolbar to navigate to another layout, if necessary. See the section [Locking and Unlocking Layouts](#). You can unlock the layout at any time.

Layout Identification Messages

When you navigate to a different layout screen, the unit briefly displays the layout name, mode, and its position relative to other layouts, as a tooltip in the center of the screen, for example:

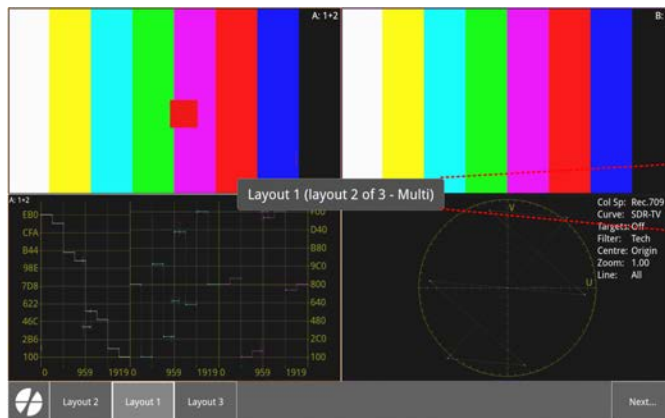
To identify the mode of your active layout, tap the softkey representing the active layout (the highlighted softkey with bold font) and the unit displays the identification message in the center of the screen.



Default Layout Type: Multi

Layout 1 (layout 2 of 3 - Multi)

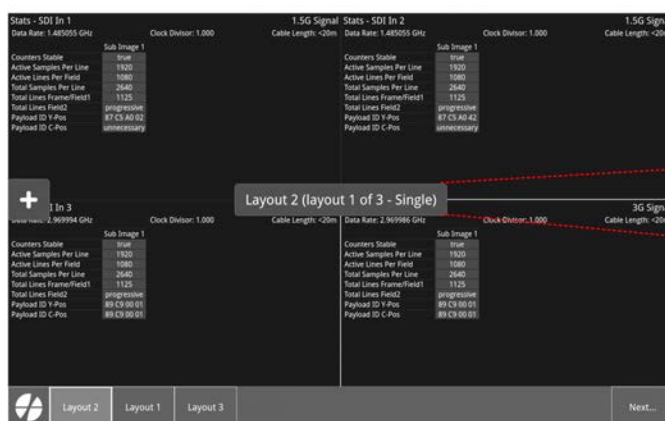
Layout Identification Message Displayed on Navigating to a New Layout or Tapping a Layout Softkey Displays Name, Number and Type of Layout



Layout Type: Single

Layout 2 (layout 1 of 3 - Single)

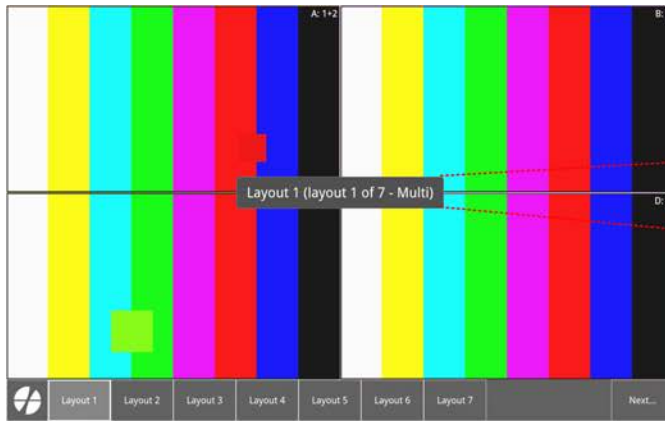
Figure 2-69: Messages Identifying the Current Active Layout (Dual Analyzers)



Default Layout Type: Multi


Layout 1 (layout 1 of 7 - Multi)

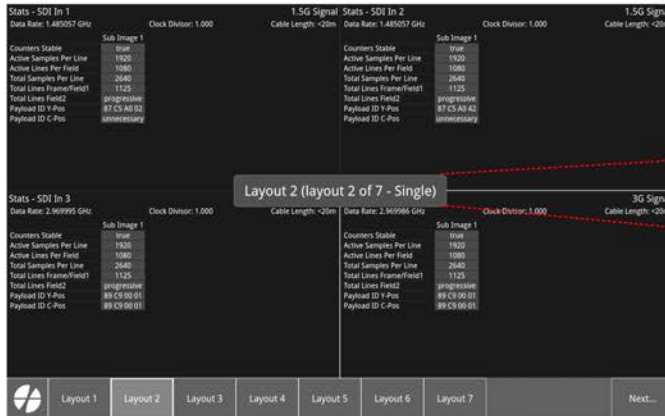Layout Identification Message Displayed on Navigating to a New Layout or Tapping a Layout Softkey Displays Name, Number and Type of Layout




Layout Type: Single

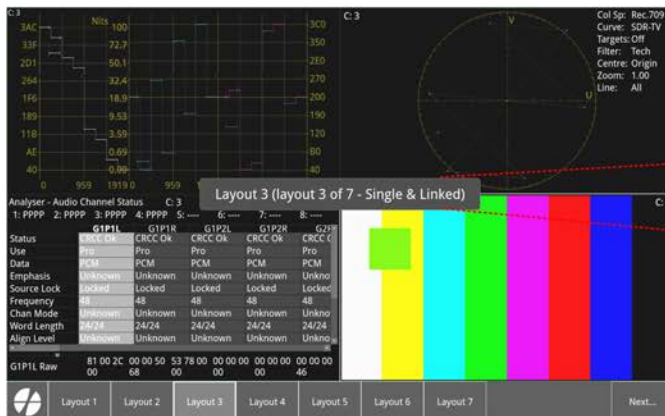Layout 2 (layout 2 of 7 - Single)



Layout Type: Single Linked

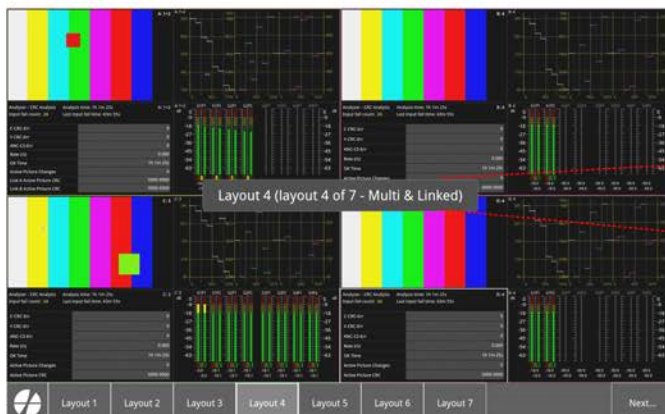Layout 3 (layout 3 of 7 - Single & Linked)



Layout Type: Multi Linked

Layout 4 (layout 4 of 7 - Multi & Linked)


Figure 2-70: Messages Identifying the Current Active Layout (QuadAnalyzers)

You can open the same instrument in different layouts; however, the instrument settings are the same in all layouts and the only active instance of the instrument is that in the currently selected, active layout.

Note: A Preset may contain up to **16** layouts or, if the optional second screen is included, **32** layouts (16 per screen). When you load a preset you will also load the layouts associated with that preset.

If you have already configured the maximum number of layouts, then to add another layout, either delete an old or unused layout, or adapt the configuration of an existing layout.

Locking and Unlocking Layouts

When satisfied with the configuration and instruments available in your layout, you can lock the layout to prevent accidental changes using either the softkey  in the toolbar or the lock icon at the top-left of the screen in the Setup menus.

Note: This action locks **all** layouts, including any on the optional second screen, not only the active layout.

An **unlocked** layout:

- Appends any newly added instruments to the favorites toolbar of the active layout, even if not included in your favorites list, for ease of identification (e.g., when hidden behind another instrument.)
- Matches the favorites toolbar to the instruments in the active layout when switching between layouts (including instruments already in the favorites list.)

Note: If you apply default settings, the unit removes only those instruments from the favorites toolbar that are not included in your favorites list.



- Allows you to move instrument windows.
- Allows you to add new layouts of any mode.
- Allows you to delete or rename layouts.
- Allows you to access the **Layouts** dialog to manage layouts.
- Allows you to add new instruments to a layout or remove instruments.

A **locked** layout:

- Allows you to navigate through all existing layouts.
- Prevents accidental changes to instrument window positions when swiping the touchscreen to navigate between layouts.
- Configures the favorites toolbar to show only the instruments in the active layout when switching between layouts (excluding instruments in the favorites list unless used in the layout).

Note: If you apply Default Settings to a unit with a locked layout, the unit removes any instrument shortcuts that were not originally included in the Instrument Favorites toolbar.

Note: When you apply Restore Default Settings, the unit returns to an unlocked layout state.

- Allows you to toggle the size of an instrument window between its current size and full-screen size and back with no intermediate sizes (excluding linked layouts on optional quad analyzer units.)
- Enables you to scroll left or right through full-screen size instruments either by turning the rotary control to the left or right, swiping left or right, or tapping / clicking  or .
- Prevents you from closing open instruments until you unlock the layout.

- Prevents users from adding new instruments until unlocked.
- Prevents users from adding new layouts until unlocked.
- Prevents access to the Layouts dialog until unlocked.

To lock or unlock the layout, toggle either the Lock / Unlock Layouts softkeys in the toolbar or the padlock icon in the Setup menus:

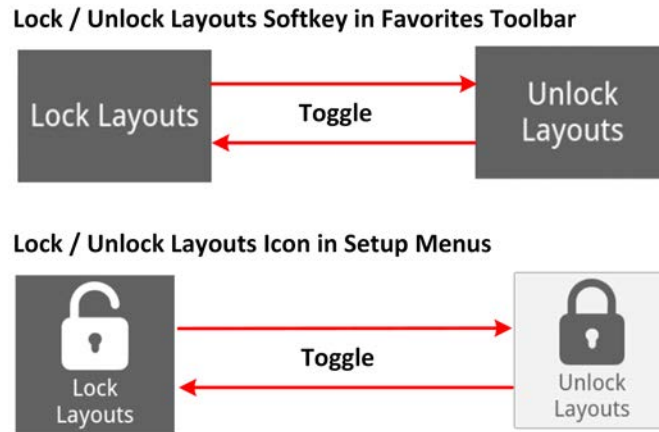


Figure 2-71: Toggling the Lock / Unlock Layouts Softkey and Icon

To add a new layout, first unlock the layout using one of the available methods.

When you lock a layout, the Layouts dialog launcher in the Settings tab is grayed-out and no longer available:

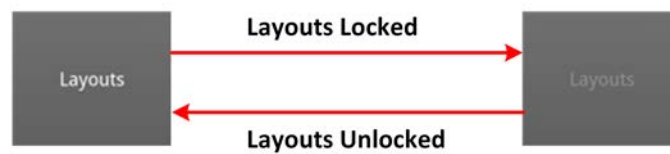


Figure 2-72: Accessing the Layouts Dialog when Layouts Locked or Unlocked

Managing Layouts Using the Layouts Dialog

Overview

As previously described, layouts enable you set up a series of screen layouts to the left or right of your initial screen.

Instead of adding a new layout by swiping to the extreme left or right of your operational layouts to add a new layout, you can add empty layouts in the **Layouts** dialog from the Settings tab.

To access the **Layouts** dialog, tap or click  to display the Setup menus, open the **Settings** tab and select **Layouts**.

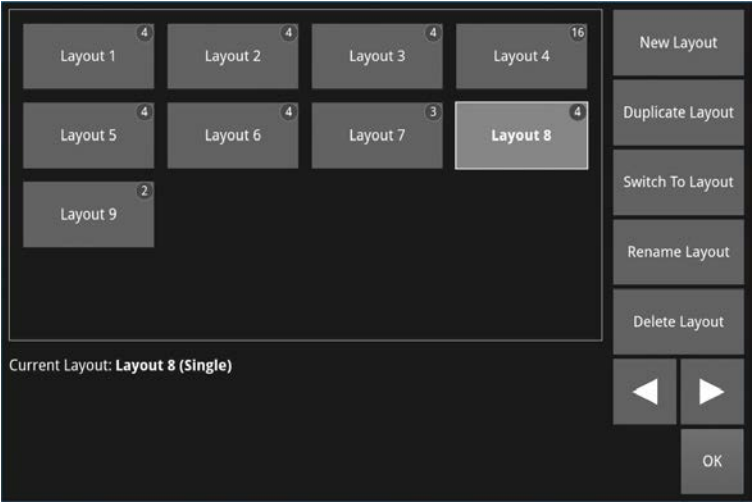


Figure 2-73: Adding a New Layout From the Layouts Dialog

You can create multiple new layouts, as required, using the New Layout softkey or by copying an existing layout using Duplicate Layout. This enables you to build a library of up to 16 bespoke layouts per screen (with the optional second screen) tailored to your specific operational tasks. The unit displays each new layout in both the Layouts toolbar and the Layouts dialog.



To access the **Layouts** toolbar from the active layout, tap or click  until the Layouts toolbar is displayed.



Figure 2-74: Accessing Layouts from the Layouts Toolbar

Note: If you have created more than nine layouts, you may need to tap or click  to display additional layouts in the toolbar.

Standard Dual Analyzer Units

Create a new layout by tapping:  in the Layouts dialog.

The **New Layout Configuration** dialog opens, where you can choose the type of layout required.

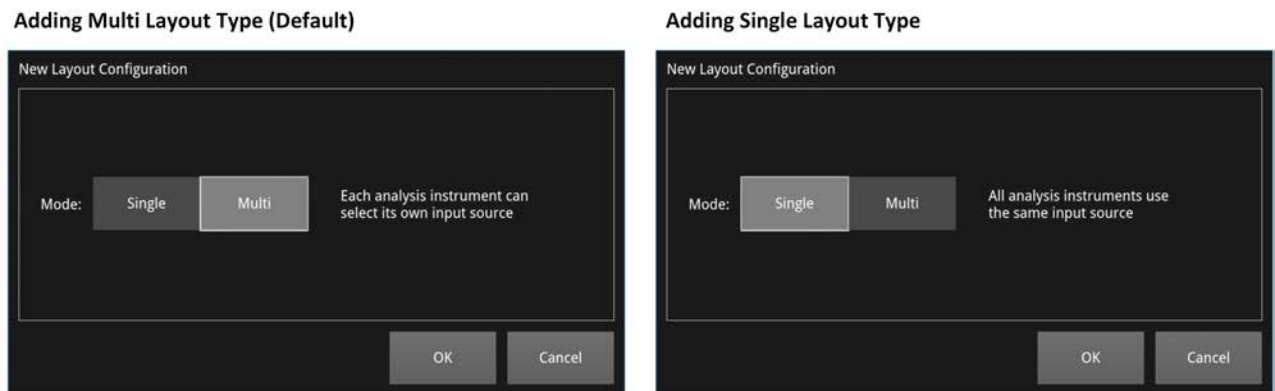




Figure 2-75: Adding a New Layout Using the New Layout Configuration Dialog

At this point you need to choose between **Single** or **Multi** layout modes, depending on how you want to set up your analysis instruments and how to display the layouts with the source inputs associated with the analyzers.

After validating the selection, the unit adds a layout to the next available position of the dialog. The new layout initially contains no instruments. You will notice that this action also adds a softkey to the Layouts toolbar with the same label. You can now use the dialog controls to change the name of the layout, or its position in the series. You can add as many layouts as you need, up to the maximum of **16**, and then populate them with instruments when needed.

You can also add a new layout by swiping left or clicking  or  on the first layout or right on the last active layout as shown in the following figure.

Note: Swiping away from a newly created empty layout, using the method above, removes the empty layout from the list. Layouts can only be added in Layout unlocked mode. When you have created fewer than 16 layouts you can create more layouts.

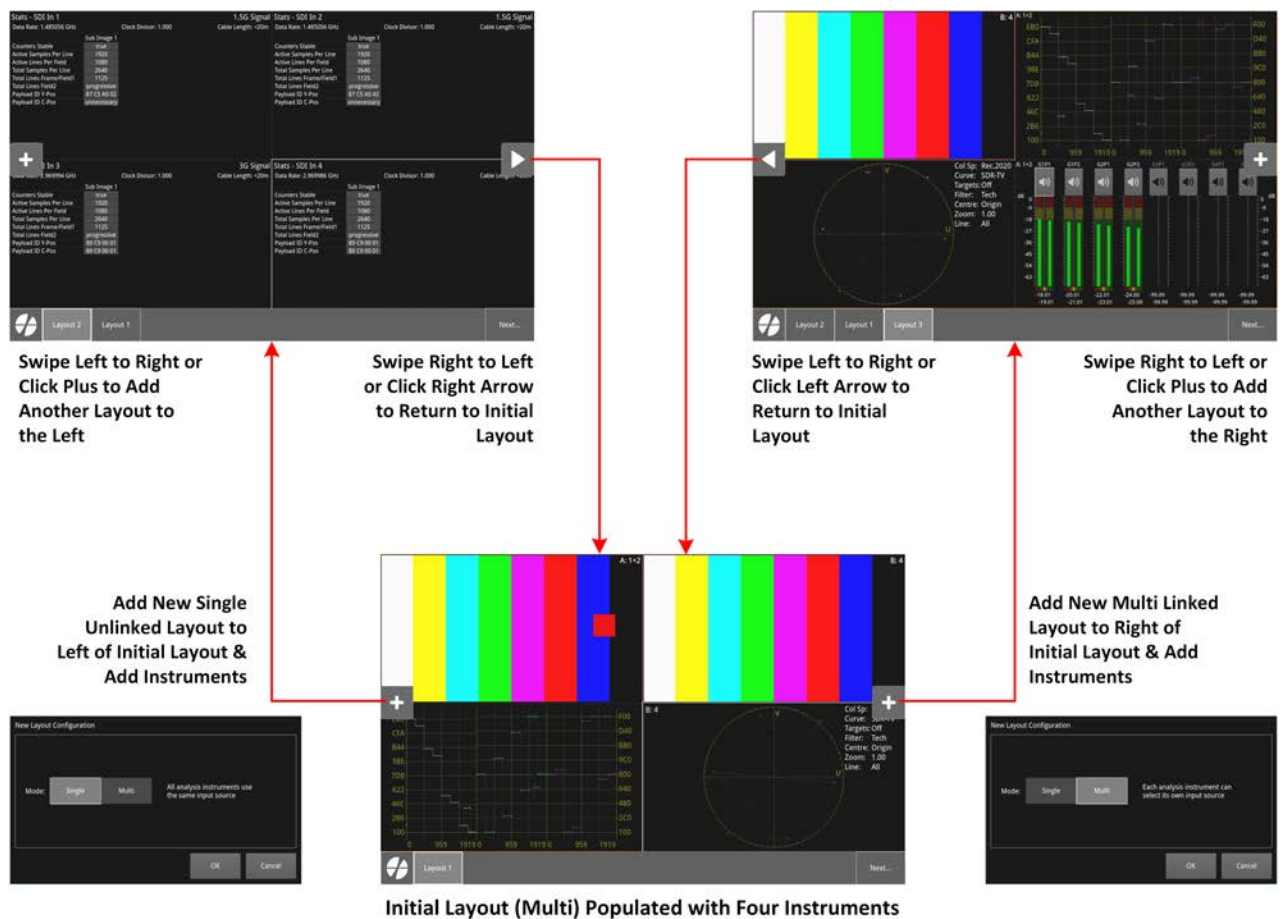



Figure 2-76: Adding New Layouts from the First Default Layout (Dual Analyzers)

Units with Optional Quad Analyzers

Create a new layout by tapping:  in the Layouts dialog.

The **New Layout Configuration** dialog opens, where you can choose the type of layout required.

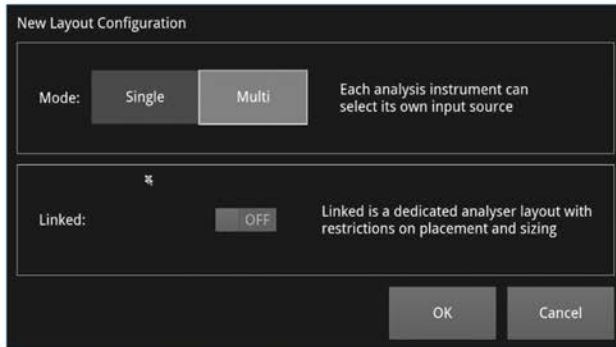Adding Multi Unlinked Layout Type (Default)




New Layout Configuration

Mode: ☐ Single ☒ Multi Each analysis instrument can select its own input source

Linked: ☒ OFF Linked is a dedicated analyser layout with restrictions on placement and sizing

OK Cancel

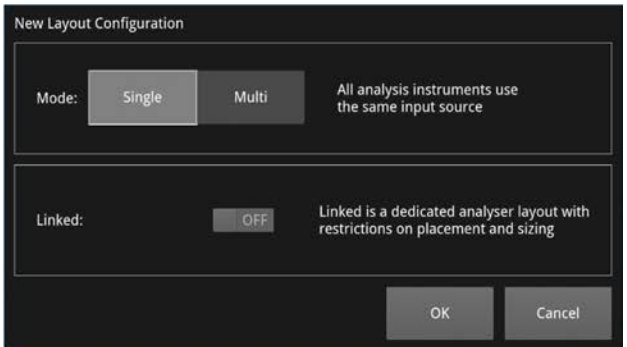Adding Single Unlinked Layout Type




New Layout Configuration

Mode: ☒ Single ☐ Multi All analysis instruments use the same input source

Linked: ☒ OFF Linked is a dedicated analyser layout with restrictions on placement and sizing

OK Cancel

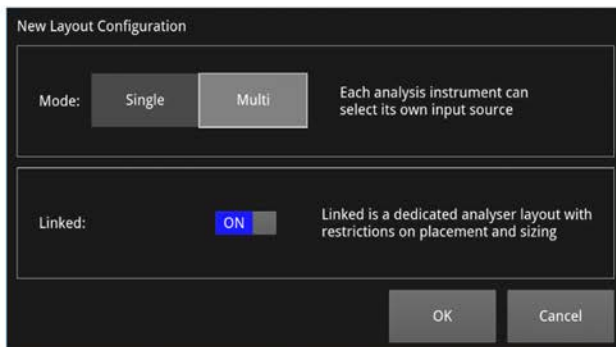Adding Multi Linked Layout Type




New Layout Configuration

Mode: ☐ Single ☒ Multi Each analysis instrument can select its own input source

Linked: ☒ ON Linked is a dedicated analyser layout with restrictions on placement and sizing

OK Cancel

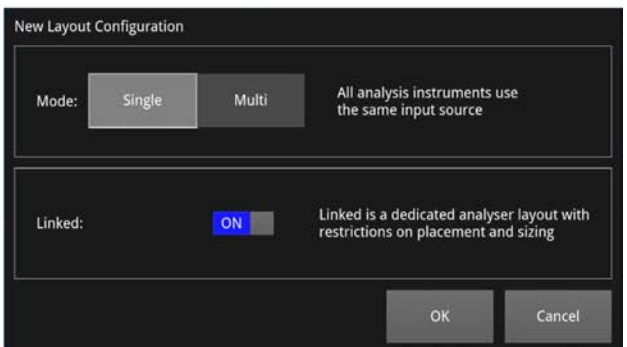Adding Single Linked Layout Type



New Layout Configuration

Mode: ☐ Single ☒ Multi All analysis instruments use the same input source

Linked: ☒ ON Linked is a dedicated analyser layout with restrictions on placement and sizing



OK Cancel

Figure 2-77: Adding a New Layout Using the New Layout Configuration Dialog (Quad Analyzers)

At this point, depending on how you want your analysis instruments to be set-up, and layouts to be displayed, using the source inputs associated with the analyzers, you need to choose:

- Between **Multi** (default) or **Single** layout mode
- Whether to **Link** single and multi modes. Layouts on a quad analyzer unit are unlinked by default but linking enables quick switching between multi and single modes.

After validating the selection, the unit adds a layout to the next available position of the dialog. The new layout initially contains no instruments. You will notice that this action also adds a softkey to the Layouts toolbar with the same label. You can now use the dialog controls to change the name of the layout, or its position in the series. You can add as many layouts as you need, up to the maximum of **16**, and then populate them with instruments when needed.

You can also add a new layout by swiping left or clicking  or  on the first layout or right on the last active layout as shown in the following figure.

Note: Swiping away from a newly created empty layout, using the method above, removes the empty layout from the list. Layouts can only be added in Layout unlocked mode. When you have created fewer than 16 layouts you can create more layouts.

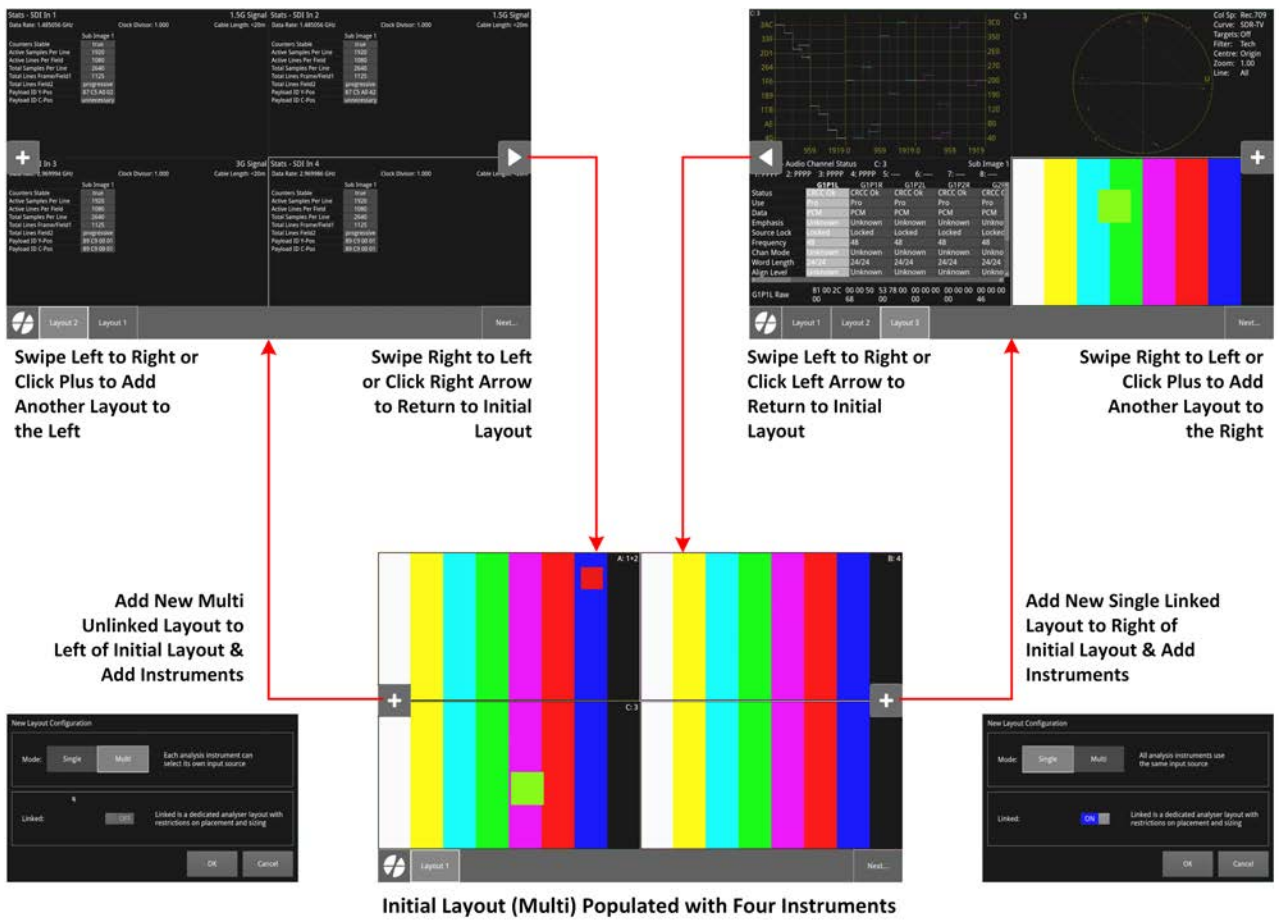


Figure 2-78: Adding New Layouts from the Initial Default Layout (Quad Analyzers)

Working with the Layouts Dialog

To access the **Layouts** dialog, tap or click  to display the Setup menus, open the **Settings** tab and select **Layouts**.

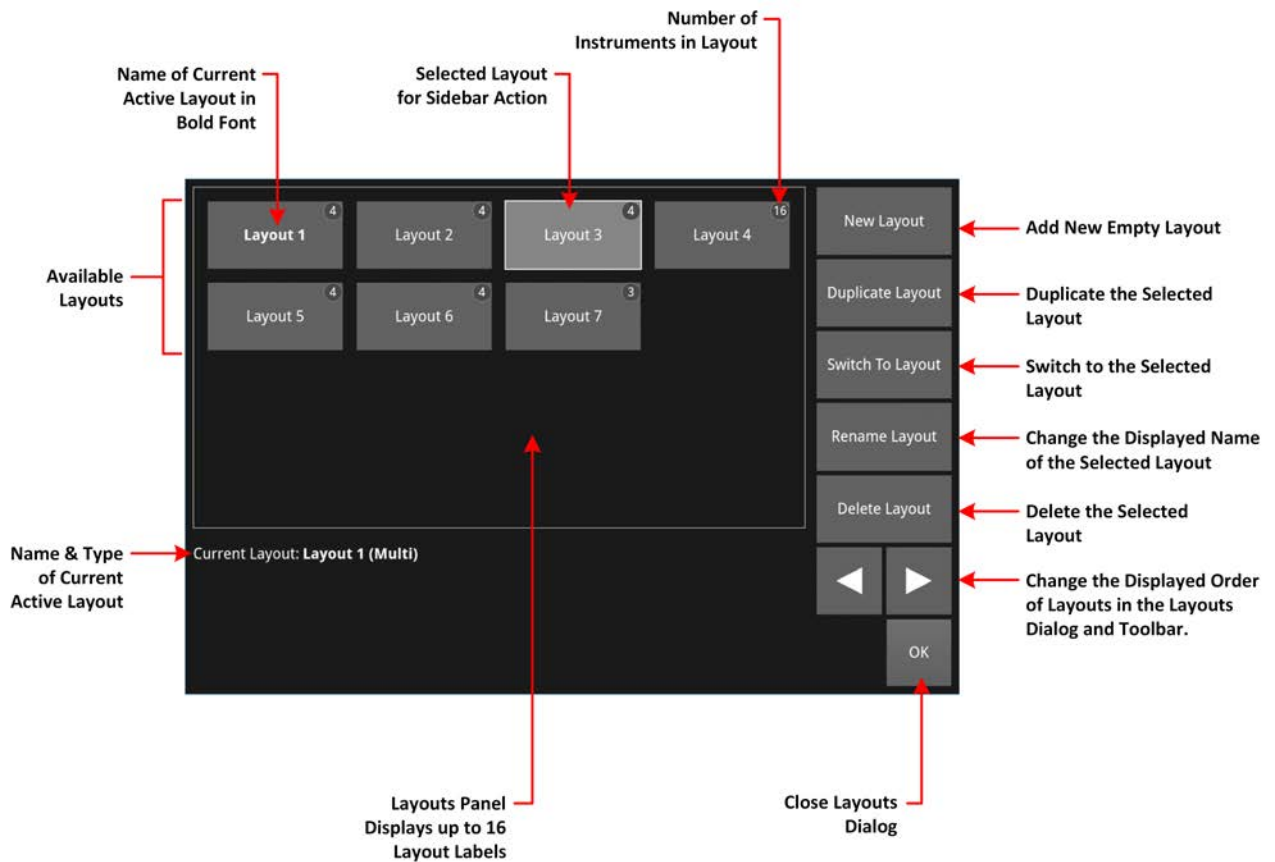


Figure 2-79: Layouts Dialog and Controls

The Layouts dialog provides an overview of all currently defined layouts. The name of the current active layout is displayed in a bold font on the layout label and also below the layouts panel.

You can use the Layouts dialog to manage the softkey labels displayed in the layouts toolbar. The number displayed in the top-right corner of each layout label represents the number of instruments currently defined in that layout. When you add a new layout in the Layouts dialog, you will see **0** (zero) displayed in the layout label, indicating a layout without any instruments.

Using the layout controls at the right-hand side of the panel, you can do the following:

- Create a new empty layout.
- Duplicate an existing layout for later modification.
- Switch to the selected layout. You will see the name of the selected layout displayed in the lower section of the dialog and when you return to the operational view, this layout will be active. Whenever you switch to the Setup menu, you will see the name of the active layout displayed in the top-left of the screen below the Lock / Unlock Layouts icon.
- Rename a layout label; the changed name is displayed in the Layouts dialog, at the top left of the Setup menu, and in the corresponding softkey of the Layouts toolbar.
- Delete a layout that is no longer required.

Note: This action cannot be reversed.

- Change the displayed order of a layout in the Layouts dialog and toolbar using the left and right arrow keys: .

After adding the maximum number of layouts (**16**) the dialog controls are grayed-out and can no longer be used to add or duplicate a layout.

If you load a preset from the presets dialog, then the layouts in the dialog are those that were defined when you saved the preset, including those defined for the optional second display, if available.


Note: The controls at the right-hand side of the layouts panel become active once you select a layout label in the layouts panel. The **New Layout** control is active until you configure the maximum number of layouts (16).

Adding a New Layout

Add a new layout placeholder to the set displayed in the layouts panel and toolbar.

From the layouts dialog in the Settings tab, select .

This opens the New Layout Configuration dialog where you can define the type of layout required. The unit places a label in both the layouts panel and the layouts toolbar.

You can now select the new layout then use  to make the empty layout screen active, into which you can launch various combinations of instruments according to the type of layout you have chosen.

By default, this action adds the new layout label to the last position in the Layouts panel and toolbar and automatically labels each layout sequentially as **Layout 1**, **Layout 2**, **Layout 3**, etc. If necessary,

use  to change the layout name.

Duplicating an Existing Layout


A quick way to define a new layout is to duplicate an existing layout and then change the open instruments in that layout.

From the **Layouts** dialog available in the **Settings** tab of the Setup menus, select one of the existing

layouts to duplicate then tap or click: .

When you duplicate a layout, the unit adds the new layout label next to the one being duplicated and appends **-n** to the text of the label, where **n** is an incremented number, starting with **2**.

Switching to a Different Layout

When working with layouts in the layouts dialog, you can tap or click  to switch the current active layout immediately in the operating view to the selected layout. You will see the string below the layouts panel change to show the name of the selected layout and the label of the layout displayed in bold font. The layout name displayed in the top-left of the Setup menu also changes. After switching layout, you can duplicate, rename or re-position the layout in the layouts dialog. Press

OK to close the dialog, then you can add instruments to the layout or edit the layout in the operating view.

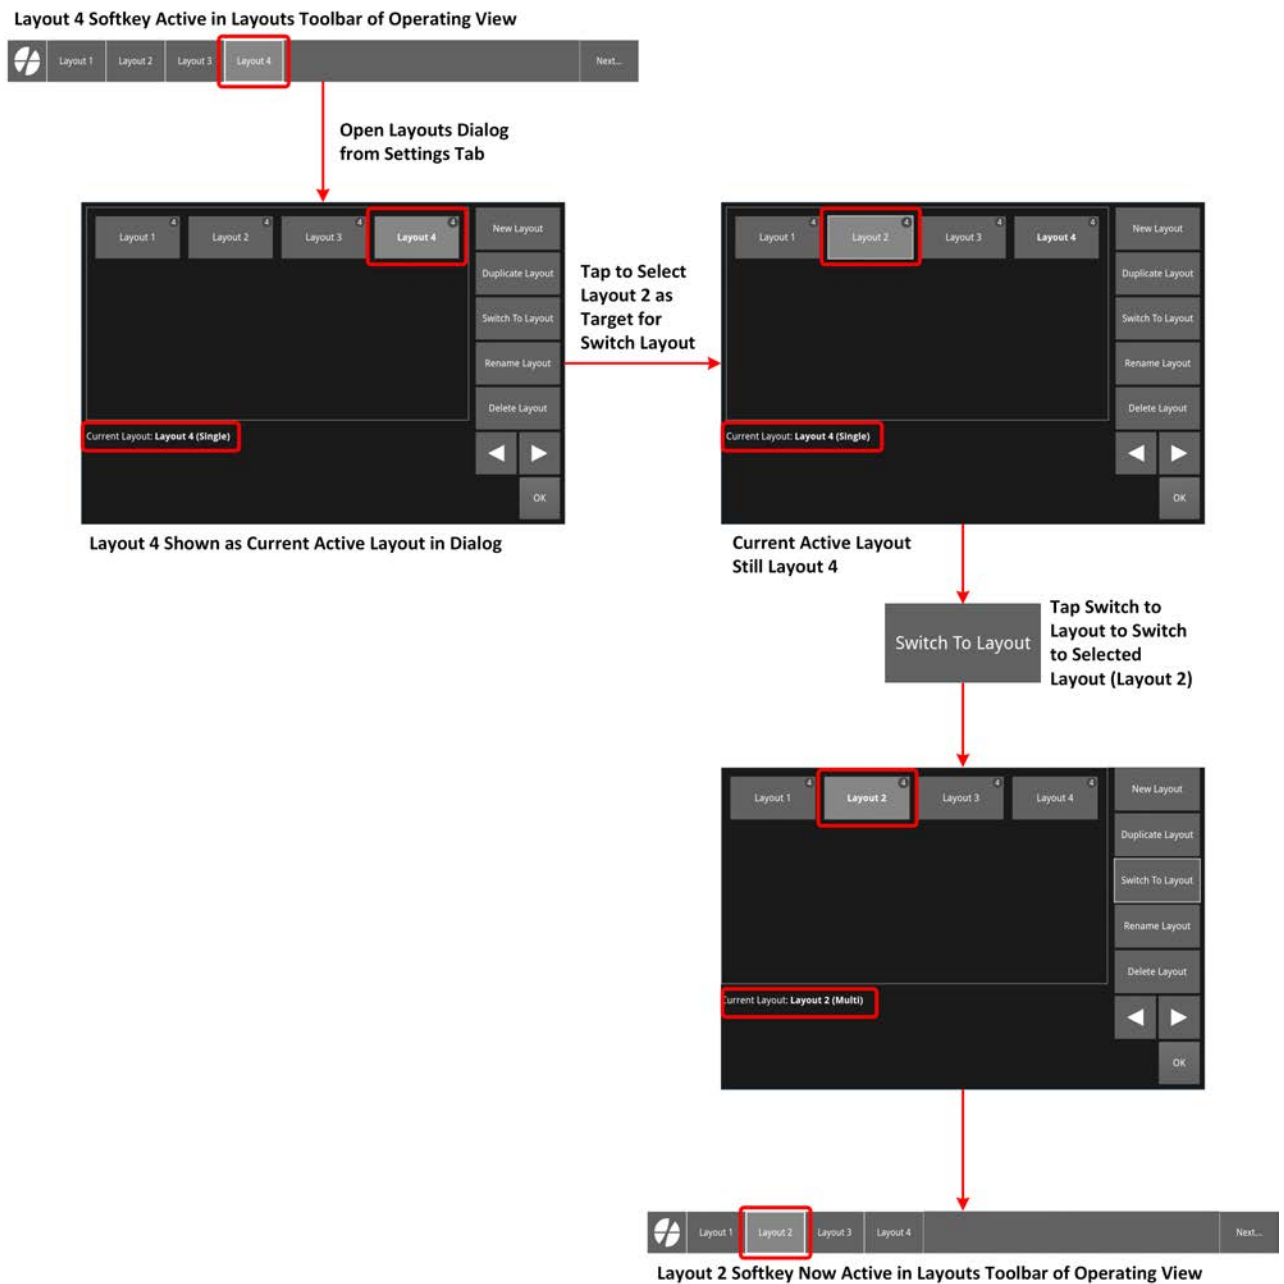




Figure 2-80: Switching Active Layout from the Layouts Dialog

Renaming a Layout

Note: You can use either the on-screen keyboard, a noVNC connection, or a USB keyboard connected to one of the USB ports of the unit to edit the name of an existing layout. The on-screen keyboard is displayed when enabled in the Display Settings.

To rename a layout:

- Tap or click  to display the Setup menus, open the **Settings** tab then select **Layouts** to open the layouts dialog.

- Select the layout you would like to rename from those available in the layouts panel. Select  and enter the new name in the text field using either the on-screen or a USB keyboard. Tap or click **OK** in the New name dialog to save your changes.

The existing layout settings are saved under the new name.

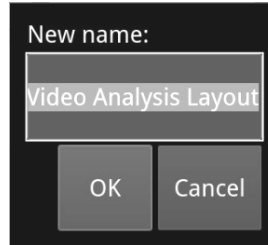




Figure 2-81: Rename Layout Dialog

Deleting a Layout

To delete a Layout:

- Tap or click  to display the Setup menus, open the **Settings** tab then select **Layouts** to open the layouts dialog.
- Select the layout you would like to delete. Select  and then select **Delete** in the confirmation dialog. If you decide not to delete the layout, select **Cancel**. Tap or click **OK** to close the layouts dialog.

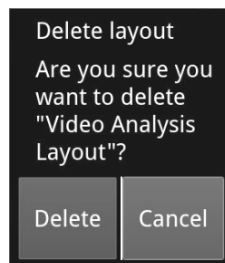





Figure 2-82: Delete Layout Confirmation Dialog

Note: Deleting a layout cannot be undone.


Reordering a Layout in the Toolbar and Layouts Dialog

To change the displayed order of layouts and of the layout softkeys in the layouts toolbar:

- Tap or click  to display the Setup menus, open the **Settings** tab then select **Layouts** to open the layouts dialog. Use the softkeys   to change the position of the selected layout label to the left or right in the layouts panel.

The order you choose is reflected both in the softkeys of the layouts toolbar and in the displayed order of layouts when swiping through the layout series.

Closing Layout Windows

The Close Layout Windows softkey  in the toolbar closes **all** open instruments in the active layout, leaving an empty screen. Any instruments running in other layout screens remain open.

Note: This operation is not reversible so you will either need to open new instruments for the active layout, or reload the preset including that layout (if previously saved.) The Close Layout Windows softkey is available only when the layout is unlocked.

Managing Multiple Analyzers

Overview

The standard LPX500 unit is equipped with two analyzers enabling the analysis instruments of the standard unit to analyze two, single link SDI inputs simultaneously. Software option **LPX500-QUAD**, extends the unit to four analyzers, enabling analysis of four, single link SDI inputs simultaneously.

The unit supports the input of the following SDI standards:

- SD, HD, 3G, 6G, 12G.

The SDI source inputs are connected to the four, physical BNC SDI input connectors on the rear panel (**SDI In 1** through **SDI In 4**).

For both dual and quad analyzer systems you can connect any of the following SDI source inputs to the rear panel SDI connectors:

- Four single SDI inputs (each up to 12G): SDI In 1, 2, 3, or 4
- Two dual input links: SDI In 1 and 2, or SDI In 3 and 4
- One quad input link: SDI In 1, 2, 3, and 4.

You can assign a combination of the SDI inputs to the unit's analyzers within the limitations of the licensed configuration of your unit.

Once connected to the unit, you can decide which of the inputs you want to analyze by assigning the source inputs to the analyzers using the **Analyzer Input Assignment** dialog from the Settings tab.

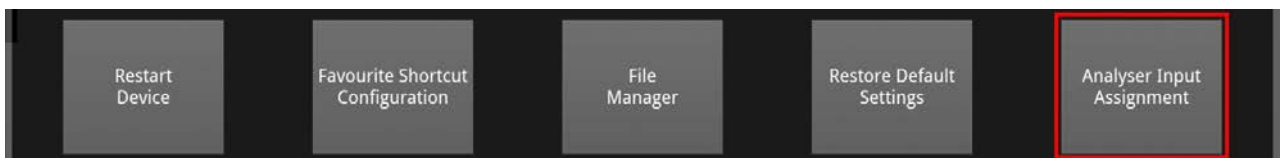


Figure 2-83: Analyzer Input Assignment Launcher in the Settings Tab

Assigning Source SDI Inputs to Analyzers

To enable your analysis instruments to evaluate the SDI source inputs, you need to assign each of up to four physical inputs to the SDI In BNC connectors on the rear panel to the two (or optionally four) analyzers.

To do so, launch the Analyzer Input Assignment dialog from the Settings tab as shown below. In a standard dual analyzer unit, the two analyzers are referred to as:

- **Analyzer A** and
- **Analyzer B**

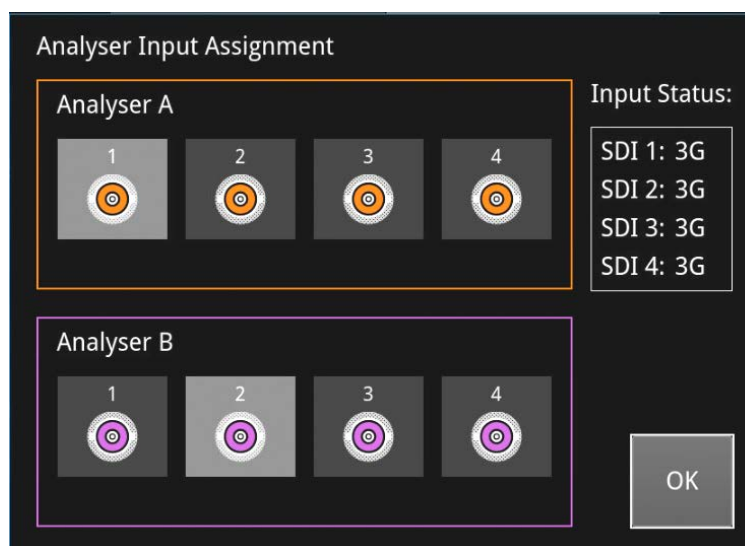


Figure 2-84: Analyzer Input Assignment Dialog Standard Dual Analyzer Unit

In an optional quad analyzer unit, the four analyzers are referred to as:

- **Analyzer A**
- **Analyzer B**
- **Analyzer C** and
- **Analyzer D**



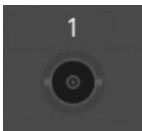



Figure 2-85: Analyzer Input Assignment Dialog Optional Quad Analyzer Unit

Each analyzer block in the input assignment dialog displays four *connector icons* representing the SDI input BNC connectors on the rear panel. When there is a signal on a particular input you will see that the middle ring of the connector icon displays the same color assigned to that analyzer in the Display Settings and also used for the border of the analysis instrument windows used by that analyzer.

To assign an SDI input to an analyzer, tap or click the connector icon corresponding to the physical connector on the rear panel. When assigned, the connector icon takes on a light-gray background which changes back to dark-gray when unassigned.

Table 2-5 : Connector Status Changes in the Analyzer Input Assignment Dialog

Connector Icon	SDI Input Status
	Valid SDI input connected to SDI In 1; not assigned in the input assignment dialog.
	Valid SDI input connected to SDI In 1 and assigned (selected) in the input assignment dialog.
	No (or invalid) input to SDI In 1 and unassigned.
	No (or invalid) input to SDI In 1 but assigned (selected) in the input assignment dialog. You will see the following warning message displayed: Signal not present on all selected links

The following figures for dual and optional quad analyzer units show how the physical BNC connectors relate to the analyzer input assignment dialog.

Note: A multi-linked layout does not allow analysis of multi-link (DL and QL) signals. With this type of layout the unit treats each signal on the SDI In connectors as a single-link signal.

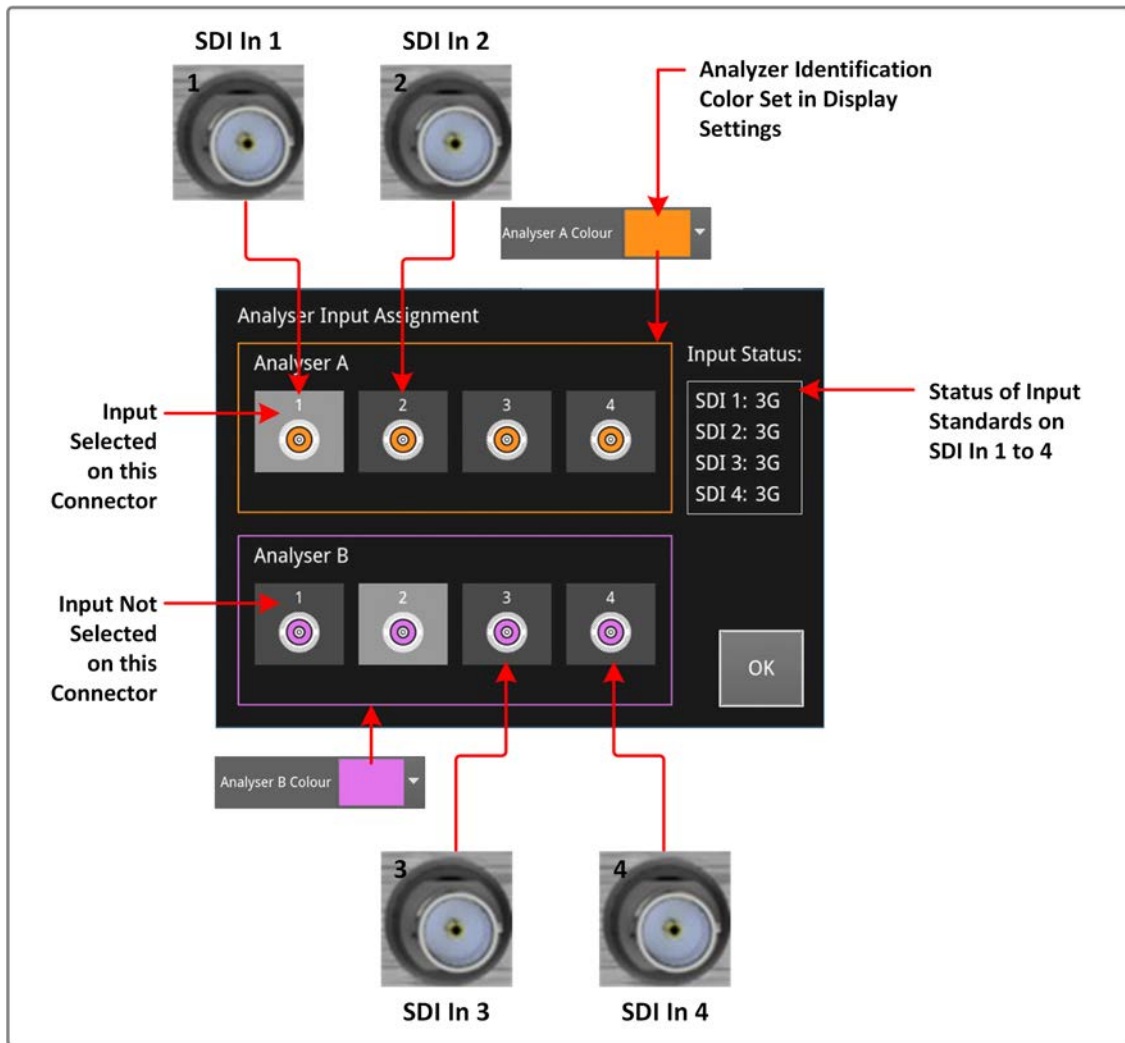


Figure 2-86: Analyzer Input Assignment Dialog Standard Dual Analyzer Unit


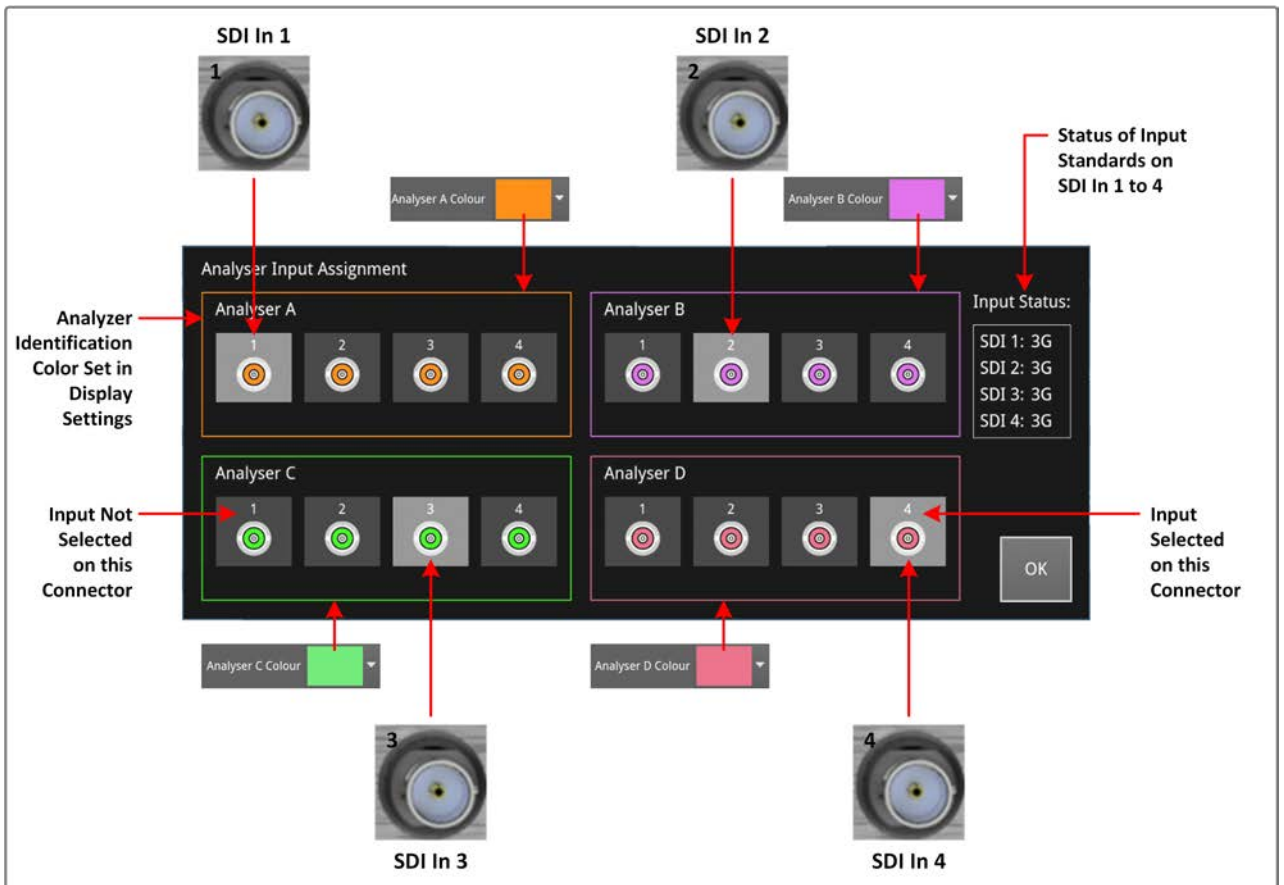


Figure 2-87: Analyzer Input Assignment Dialog Optional Quad Analyzer Unit

When you configure Instruments in your layouts, depending on the type of layout, you can configure the analyzer assignment using various different methods after setting up the analyzer source input assignment, see the section [Working with Layouts](#). This is also shown in the following figures [Figure 2-86](#) and [Figure 2-88](#)


Note: The Analyzer Input Assignment is a system setting and as such all analyzer instruments in all layouts are affected by any changes you make to the source input assignment. The source input assignment is implemented immediately on selecting the BNC connector icon.

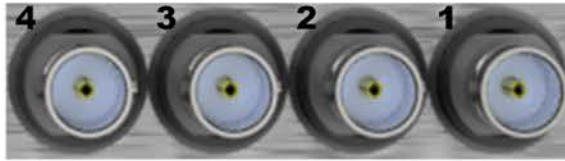Physical BNC Input Connectors on Rear Panel



Up to Four SDI Inputs
(4 x Single, 2 x Dual, or 1 x Quad)

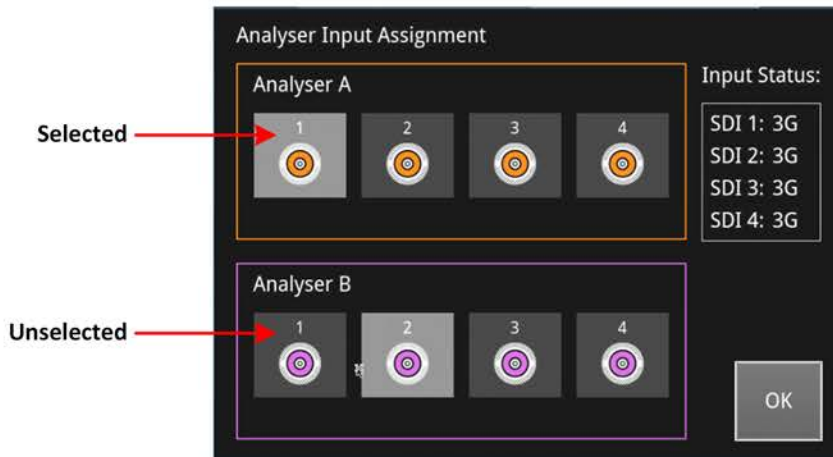Launch Analyzer Input Assignment from Settings Tab



Use to Select Which Physical SDI Inputs are Assigned to Analyzers A and B

In this Example:

SDI In 1 is Assigned to Analyzer A,

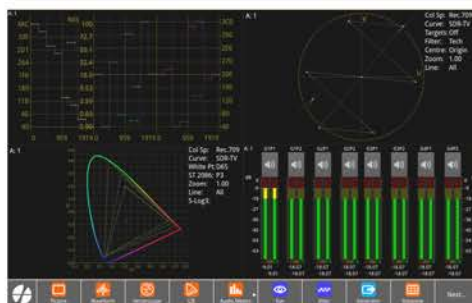
SDI In 2 is Assigned to Analyzer B,

SDI In 3 and SDI In 4 have Active SDI Inputs but are Unassigned

Define Layout(s)

Available Layout Types

Single Layout



All Analyzer Instruments Use the
Same Analyzer Input Source

Multi Layout



Each Analyzer Instrument Can Select
Source Input from Either Analyzer

Note: No Linked Layouts Available with Dual Analyzers

Figure 2-88: Assigning Source Inputs to Analyzers (Standard Dual Analyzers)

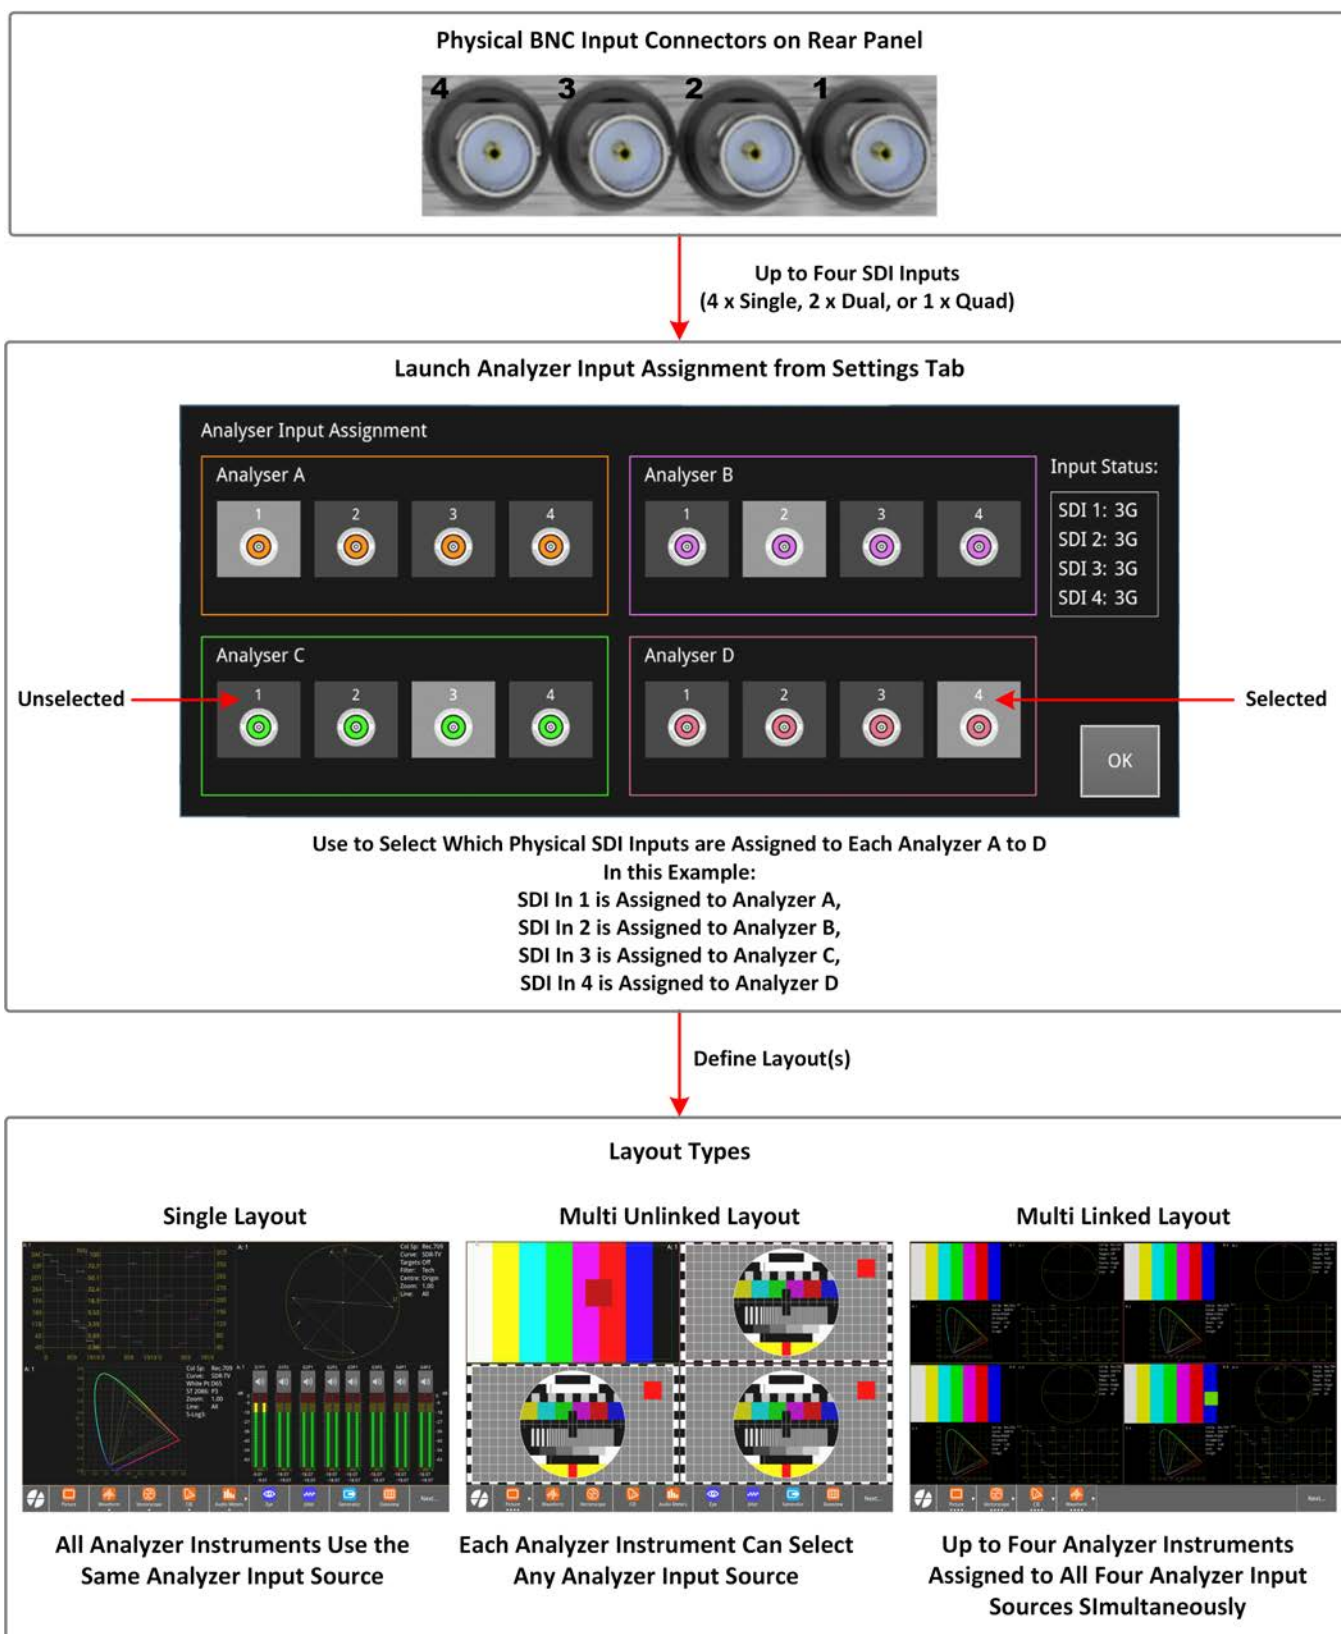


Figure 2-89: Assigning Source Inputs to Analyzers (Optional Quad Analyzers)

Using Single Link SDI Source Inputs

With a standard dual analyzer unit, you can connect four single link SDI signals to the BNC connectors **SDI In 1 to 4** on the rear panel.

When assigning SDI signals to the analyzers, however, you can assign only two of the source inputs to the analyzers for simultaneous analysis. Each single link SDI source input can be assigned to any analyzer, giving multiple combinations including:

- A: 3 and B: 4;
- A: 1 and B: 3;
- A: 2 and B: 4;
- A: 4 and B: 1, etc.

For example, you might assign the signal on SDI In 1 to Analyzer A and the signal on SDI In 2 to Analyzer B as follows:

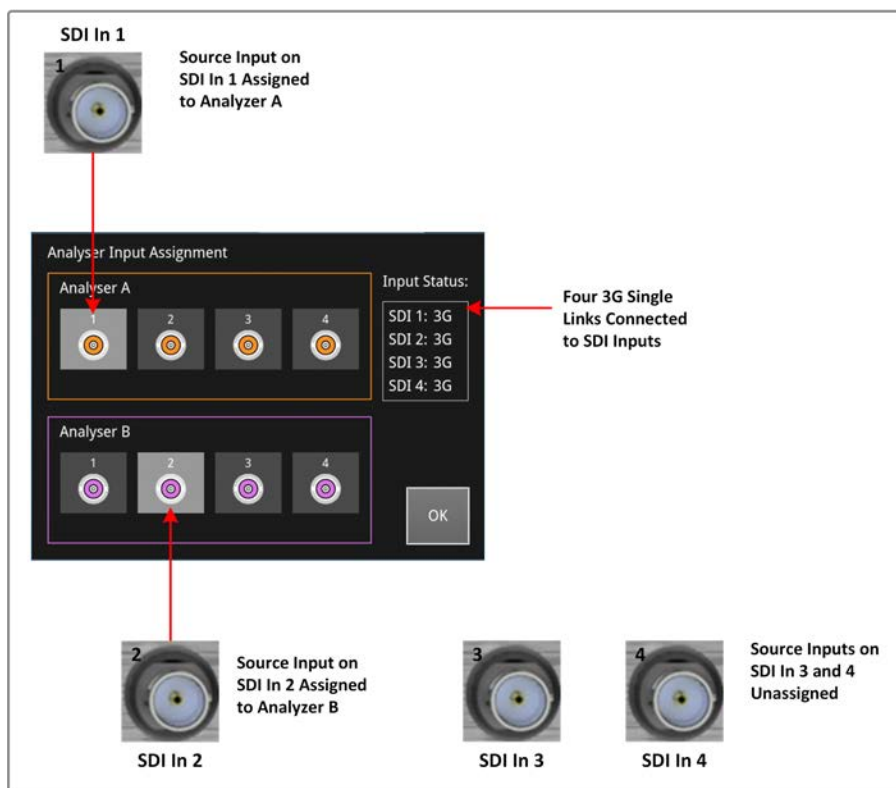


Figure 2-90: Assigning Single Link Source Inputs to Analyzers (Standard Dual Analyzers)

With an optional quad analyzer unit, you can connect four single-link SDI signals to the BNC connectors **SDI In 1 to 4** on the rear panel.

When assigning SDI source inputs to the analyzers you can assign all four source inputs to each analyzer for simultaneous analysis. Each single link SDI source input can be assigned to any analyzer, giving multiple combinations including:

- A: 3, B: 3, C: 3, and D: 3;
- A: 2, B: 2, C: 1, and D: 1;
- A: 1, B: 1, C: 1, and D: 1;
- A: 4, B: 4, C: 3, and D: 3; etc.

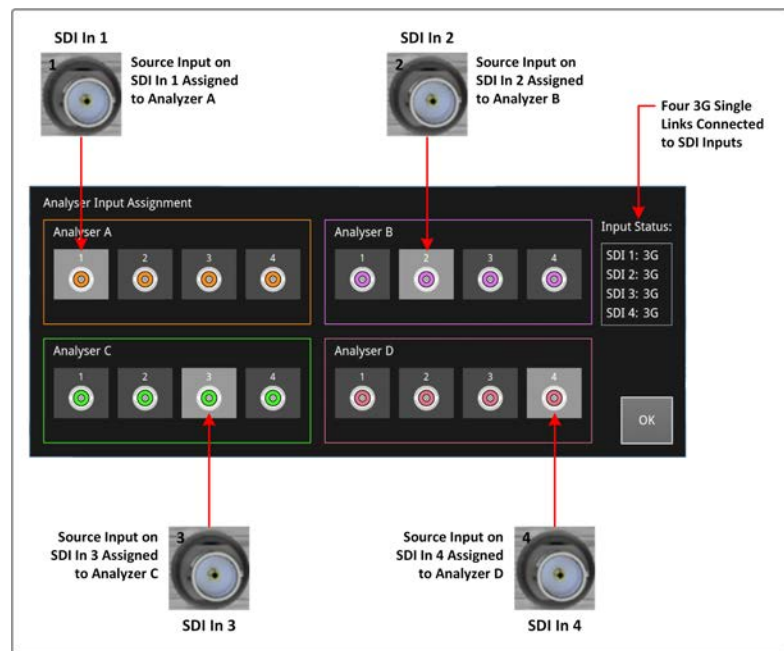


Figure 2-91: Assigning Single Link Source Inputs to Analyzers (Optional Quad Analyzers)

Using Dual Link SDI Source Inputs

With a standard dual analyzer unit, you can connect two dual link SDI signals to the **SDI In 1 to 4** BNC connectors on the rear panel.

To enable the unit to identify the dual link source input, always connect the dual link pairs as follows:

- **SDI In 1 and SDI In 2** or
- **SDI In 3 and SDI In 4**

Similarly, in the analyzer input assignment dialog, assign the pairs for an analyzer as **1 + 2** or **3 + 4** only. If you try other combinations with a dual link input, you will receive an **Invalid Selection** error message.

When assigning SDI source inputs to the analyzers, however, you can assign only two of the source inputs for simultaneous analysis. For example, you might assign the dual link source inputs on SDI In 1 and SDI In 2 both to Analyzer A as follows:

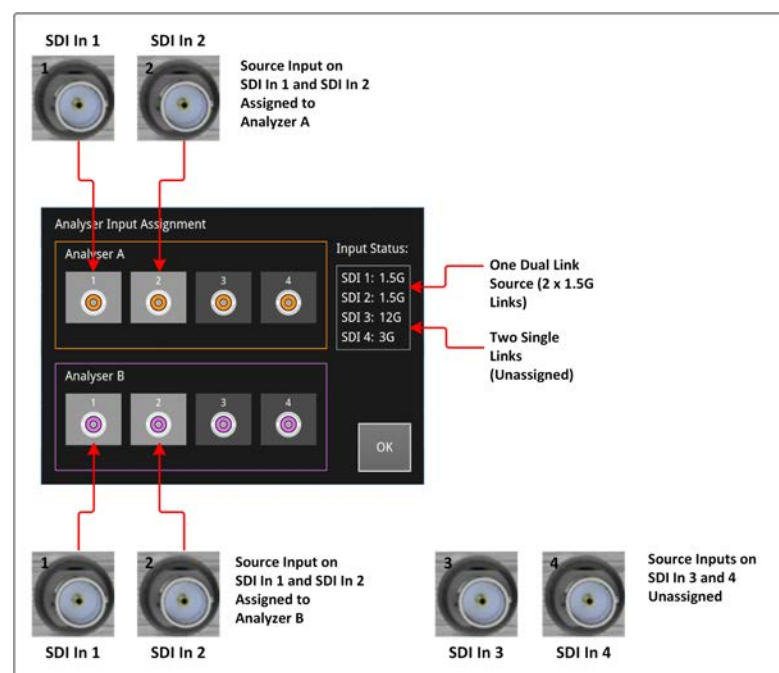


Figure 2-92: Assigning Dual Link Source Inputs to Analyzers (Standard Dual Analyzers)

If you also assign the SDI In 1 and 2 inputs to Analyzer B, as shown above, then you can compare the same dual link video in two picture windows, alongside each other.

You can assign a dual link source input to analyzers in the following combinations:

- Analyzer A: 1+2 or Analyzer A: 3+4
- Analyzer B: 1+2 or Analyzer B: 3+4
- Analyzer A: 1+2 and Analyzer B: 3+4
- Analyzer A: 3+4 and Analyzer B: 1+2
- Analyzer A: 1+2 and Analyzer B: 1+2
- Analyzer A: 3+4 and Analyzer B: 3+4

In a similar way, with optional quad analyzers, you can assign two dual link source inputs to analyzers in the following combinations:

- Analyzer A, B, C, or D only
- Analyzers A, B, C, and D: 1+2

- Analyzers A, B, C, and D: 3+4
- Analyzers A: 1+2, B: 3+4, C: 1+2, D: 3+4
- Analyzers A: 3+4, B: 1+2, C: 3+4, D: 1+2
- Analyzers A: 1+2, B: 3+4, C: 1+2, D: 3+4
- Analyzers A: 3+4, B: 3+4, C: 1+2, D: 1+2
- Analyzers A: 1+2, B: 1+2, C: 3+4, D: 3+4

Using Quad Link SDI Source Inputs

With a standard dual analyzer unit, you can connect one quad link SDI signal to the **SDI In 1 to 4** BNC connectors on the rear panel.

To enable the unit to identify the quad link source input, always connect as follows:

- **SDI In 1, SDI In 2, SDI In 3, and SDI In 4**

Similarly, in the analyzer input assignment dialog, assign the quad link to an analyzer as **1, 2, 3 and 4**. If you try other combinations with a quad link input, you will receive an **Invalid Selection** error message.

When assigning SDI source inputs to the analyzers, however, you can assign the quad source inputs either to one or both analyzers for simultaneous analysis, as follows:

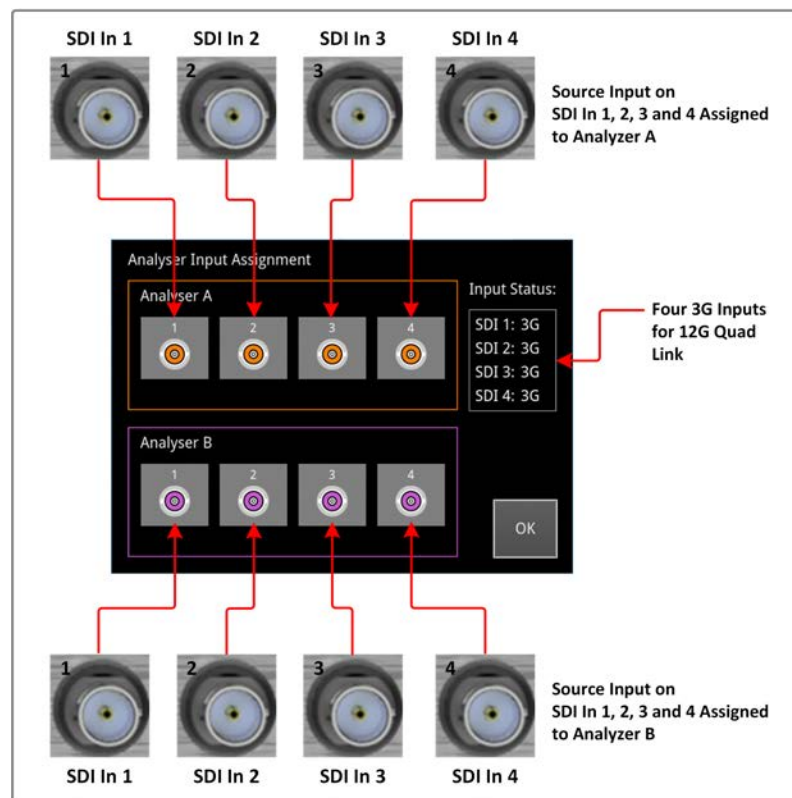


Figure 2-93: Assigning Quad Link Source Inputs to Analyzers (Standard Dual Analyzers)

If you also assign the SDI In 1, 2, 3 and 4 inputs to Analyzer B: 1-4, as shown above, then you can compare the same quad link video in two picture windows, alongside each other.

To summarize, you can assign a quad link source input to analyzers as follows:

- Assign to **Analyzer A** only (**A: 1-4**)
- Assign to **Analyzer B** only (**B: 1-4**)
- Assign to both **Analyzers A and B** (**A: 1-4** and **B: 1-4**) for side-by-side comparison.

In a similar way, with optional quad analyzers, you can assign a single quad link source input to analyzers as follows:

- Assign to **Analyzer A** only (**A: 1-4**)
- Assign to **Analyzer B** only (**B: 1-4**)
- Assign to **Analyzer C** only (**C: 1-4**)
- Assign to **Analyzer D** only (**D: 1-4**)
- Assign to all **Analyzers A, B, C, and D (A: 1-4, B: 1-4, C: 1-4, D: 1-4)** for side-by side comparison.

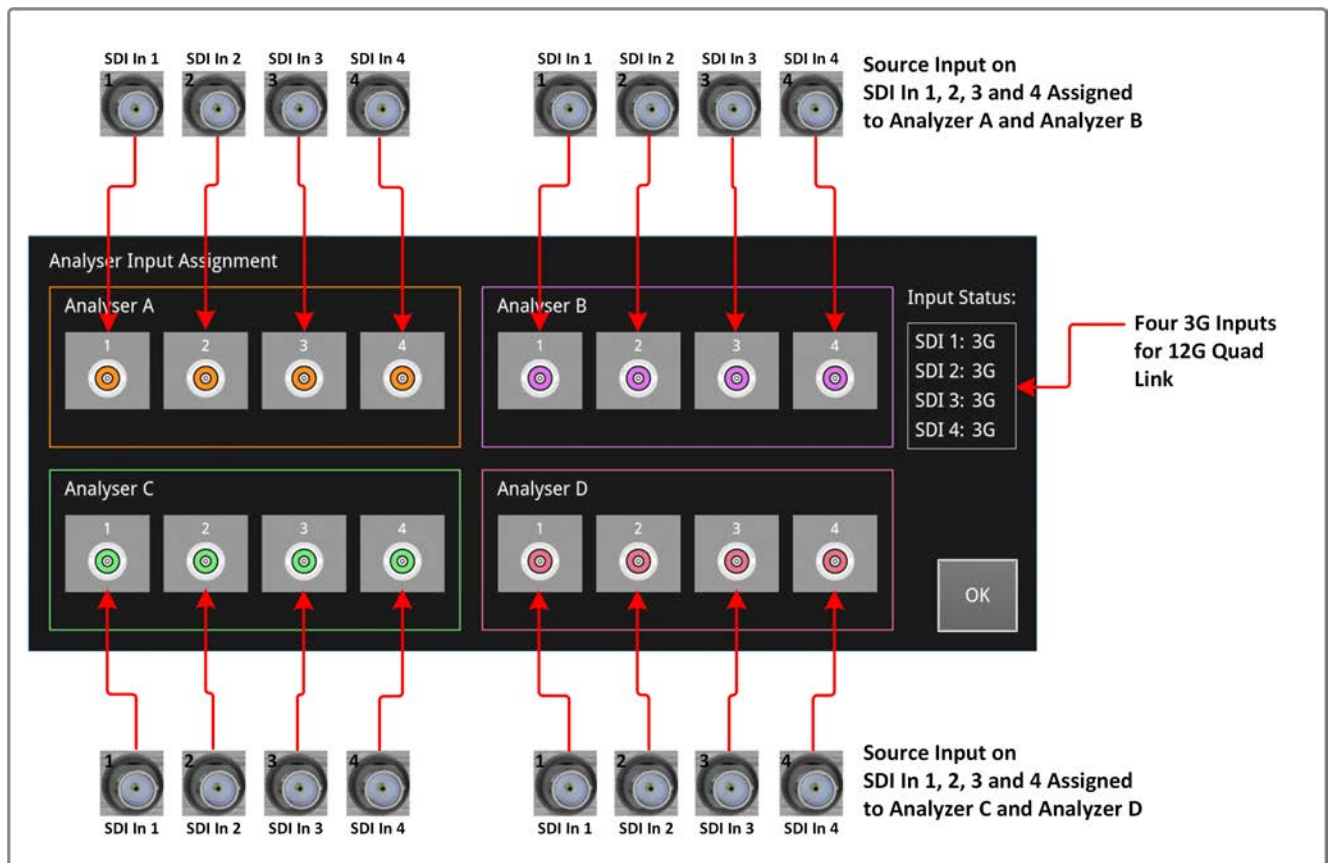


Figure 2-94: Assigning Quad Link Source Inputs to Analyzers (Optional Quad Analyzers)

Working with the Optional Second Display

Overview

When your system includes the optional second display (option **LPX500-EM**) it acts as a display independent from the main unit. You can open instruments, save presets, define and save layouts and perform most tasks on the second display in the same way you would on the main unit.

The main unit, however, provides the memory storage and processing for the whole system so that items you define or generate on the second display (for example, screenshots, presets, layouts, etc.) are saved to the main unit. Consequently, some features like the File Manager are available only on the main unit, which also includes the USB ports for the insertion of USB memory sticks.



Figure 2-95: LPX500 with Optional Second Screen Connected (Shown in the Rack Mount)

Presets apply to both the main unit and the optional second display, if available. If you save a preset when the second display is connected and active, the saved preset includes configuration settings for both the main unit and second screen. Consequently, the same Presets toolbar is displayed on both the main unit and the second screen. This situation is different for the Layouts toolbar. This means that you see the same Presets toolbar on both the main unit and second display. Layouts, however, are specific to the main unit or second display so you will have different Layout toolbars on both displays. It is important to note that, as layouts are included when you save presets, different layout toolbars will be displayed when you load a preset.

Connecting and Disconnecting the Second Display


The optional second display connects to the main unit by way of the dedicated USB type C v3.1 high-speed cable, supplied with the display. This ensures that the second display can draw its power from the main unit. Always locate the second display to the left-hand side of the main unit, when viewed from the front.


If you are planning to disconnect the second display and use only the main unit, always save a named preset of your current configuration before disconnecting. This will allow you to restore the windows you had open on the second screen when you return to using both together again. After disconnecting, reboot the main unit so that it can work in single display mode.

Note: If you update the dual display preset while in single screen display mode the second display layout and preset information will be deleted.

When you reconnect the second display, reboot the main unit to initiate the dual display mode. Once rebooted, you can reload your preset to restore the screen layouts and instruments from before the disconnection.

Taking Screenshots on the Second Display



Tap the  softkey on either the main unit or second display to take screenshots of both screens, simultaneously. The unit automatically saves two screenshot files to the **../screenshots** (default) folder on the main unit that you can retrieve using the File Manager.

To differentiate the screenshots, the unit appends a suffix **S1** or **S2** to the filename as follows:

- Main unit screenshot: **yyyy-mm-ddT<timestamp>S1.png**
- Second display screenshot: **yyyy-mm-ddT<timestamp>S2.png**

Note: The file manager is available only from the Settings tab of the main unit.

Remote Connection to the Second Display Using noVNC

With the optional second screen installed, you can choose which noVNC client you connect to when making a remote connection to the unit by appending the suffix **_1** to the **noVNC** address in the browser address bar. For details, see: [Connecting to the Unit Using noVNC from a Web Browser.](#)

Managing Presets

Note: Presets from the Qx Series are not recognized on the LPX500.

Overview

The system periodically saves its current configuration to memory so that when you restart the unit, the last used configuration is automatically restored. In addition, whenever you work with the LPX500, you can save your current layouts and settings as a named **Preset**, at any time, for ease-of-use and convenience. If you decide to start a different task, you can launch a preset rather than opening and adjusting individual layouts and/or instruments.

You can save multiple presets as required, giving you a library of screen layouts and configurations tailored to specific operational tasks. The unit saves each preset to both the **Presets Toolbar** ([Figure 2-96](#)) and to the **Presets Dialog** in the Settings tab ([Figure 2-97](#)).

Note: If you use the file manager utility to upload presets from another LPX500 unit, make sure that you reboot the unit after uploading the presets. This ensures that the presets are registered on the new LPX500 unit. Once the presets are registered, you can rename them as described later in this section.

To access the Presets toolbar, tap  from the active layout.





Figure 2-96: Available Presets in the Presets Toolbar

To access the **Presets** dialog, tap or click  to display the Setup menus, open the **Settings** tab and select **Presets**.

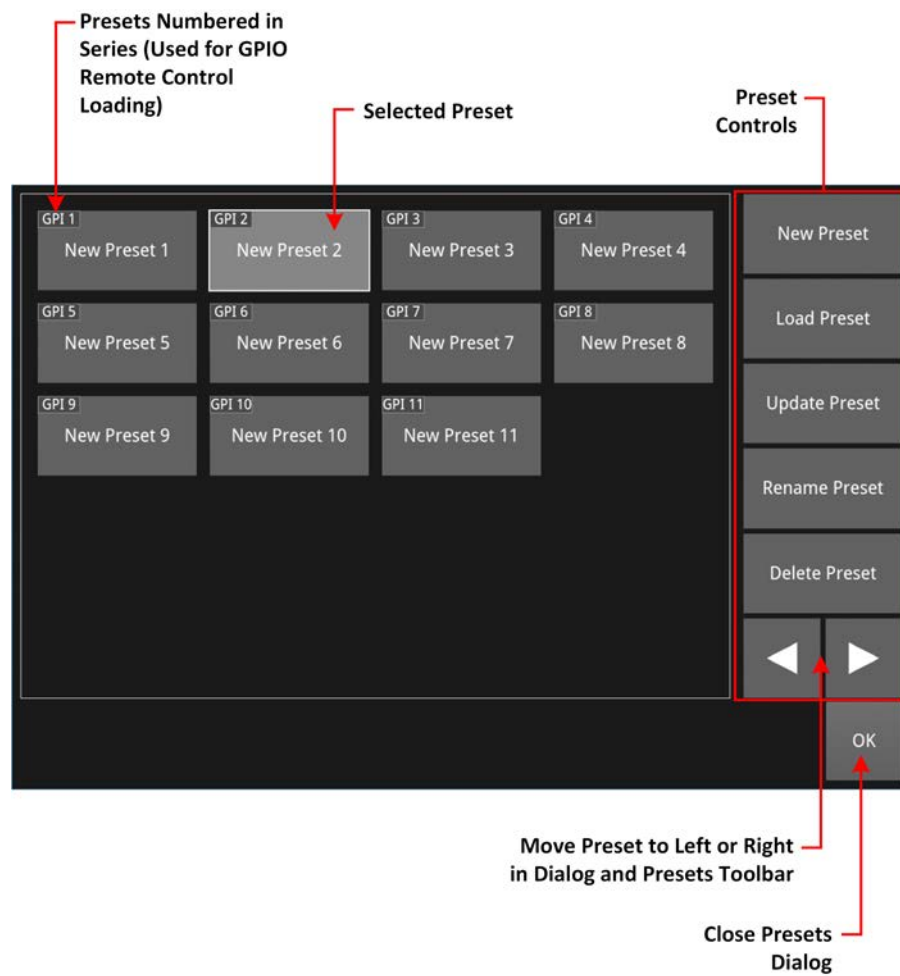


Figure 2-97: Presets Dialog and Controls

You can use the presets dialog to manage the presets displayed in the presets toolbar. The preset controls at the right-hand side of the panel enable you to do the following:


- Create a new preset.
- Load an existing preset.
- Update a preset with current instrument layout and/or settings.
- Rename a preset.
- Delete a preset that is no longer required.
- Change the displayed position of a preset in the presets toolbar (and dialog) using the left and right arrow keys.

Tap or click **OK** to close the presets dialog.

Adding a Preset

Add a preset to the current set displayed in the presets panel and the presets toolbar using the **Presets** dialog available in the **Settings** tab of the Setup menu.

Once you have organized the layouts with your required instruments configured as required, open

the presets panel and select .

This adds the new preset to the last position in both the presets panel and presets toolbar. Each preset is automatically labeled sequentially as **New Preset**, **New Preset 1**, **New Preset 2**, etc. If necessary, use the **Rename Preset** control to change the assigned name.

A preset includes the following features:

- All defined layouts with their associated instruments.
- All user-defined instrument settings.
- All user-defined system settings, for example, display brightness.


To save other presets, organize the display layouts as required, and repeat as above. Tap or click **OK** to close the presets dialog.


Loading a Preset

Loading a preset from your available list is a quick way to launch a suite of instruments, preconfigured for your intended task, simultaneously.

To load an existing preset, either:

- Tap  in the toolbar until you reach the presets toolbar, then select a preset from those available, or



Note: If you have saved more than nine presets, you may need to tap  to display additional presets in the toolbar.

- Tap or click  to display the Setup menus, select **Presets** then select a preset from the full list available in the presets panel. You may need to scroll up or down the available list, depending on the number of existing presets. Tap or click **OK** to close the Presets dialog.

Updating a Preset

Instead of creating a new Preset each time, if you are satisfied with any changes you have made to layouts and/or settings, you can choose to update a preset.

To update an existing preset:

- Tap or click  to display the Setup menus, select **Presets** then select the preset you would like to update from the full list available in the Presets panel. You may need to scroll up or down the list.
- Select  and confirm that you are happy to overwrite the selected preset.

Any layout and instrument setting changes are saved to the same preset name and the previous settings are overwritten. Tap or click **OK** to close the presets dialog.





Figure 2-98: Confirm Existing Preset can be Overwritten and Updated

Renaming a Preset

Note: You can use either the on-screen keyboard, or a USB keyboard connected to one of the USB ports of the unit, to edit the name of an existing preset.

To rename a preset:

- Tap or click  to display the Setup menus, select **Presets** then select the preset you would like to rename from the full list available in the presets panel. You may need to scroll up or down the list. Select  and enter the new name in the text field using either the on-screen or a USB keyboard. Tap or click **OK** in the new name dialog to save your changes. Tap or click **OK** to close the presets dialog.

This changes the displayed name of the preset.

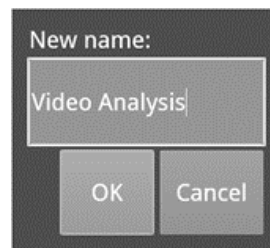




Figure 2-99: Rename Preset Dialog

Deleting a Preset

To delete a preset:

- Tap or click  to display the Setup menus, select **Presets** then select the preset you would like to delete from the list available in the presets panel. Select  and then select **Delete** in the delete preset dialog to confirm the deletion. If you decide not to delete the preset, select **Cancel**. Tap or click **OK** to close the presets dialog.

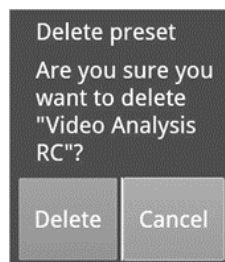




Figure 2-100: Delete Preset Confirmation Dialog

Reordering a Preset in the Toolbar and Presets Dialog

To change the displayed order of presets in the Presets toolbar and Presets panel:

- Tap or click  to display the Setup menus, select **Presets** then select a preset you would like to move in the list available in the Presets panel. You may need to scroll up or down the list.

Use the softkeys  to change the displayed position of the selected preset to the left or right in the presets panel.

The order you choose is also reflected in the softkeys of the presets toolbar.

Loading Presets Using the REST API or External Remote Control

You can use the REST API or an external remote control interfacing with the 15 pin D-type GPIO connector on the rear panel of the unit to load presets.

To do so, you need to know of the GPIO number of the desired preset in the presets dialog. In addition, you need to enable the REST API in the **Network & Automation** instrument.

For more information on the remote control loading of presets, see [Remote Control of Preset Loading](#).

Customizing the Instrument Favorites Toolbar

Note: When the optional second screen is available, the same favorite shortcuts are applied to the instrument favorites toolbar on both screens. You can change the shortcuts configuration on either screen but it is recommended only to configure the toolbar from one screen at a time. Opening and closing the shortcut configuration dialog on both screen at the same time can cause undesired effects.

You can customize the nine instrument softkeys available in the Instrument Favorites Toolbar using the **Favorite Shortcut Configuration** dialog in the Settings tab of the Setup menus.

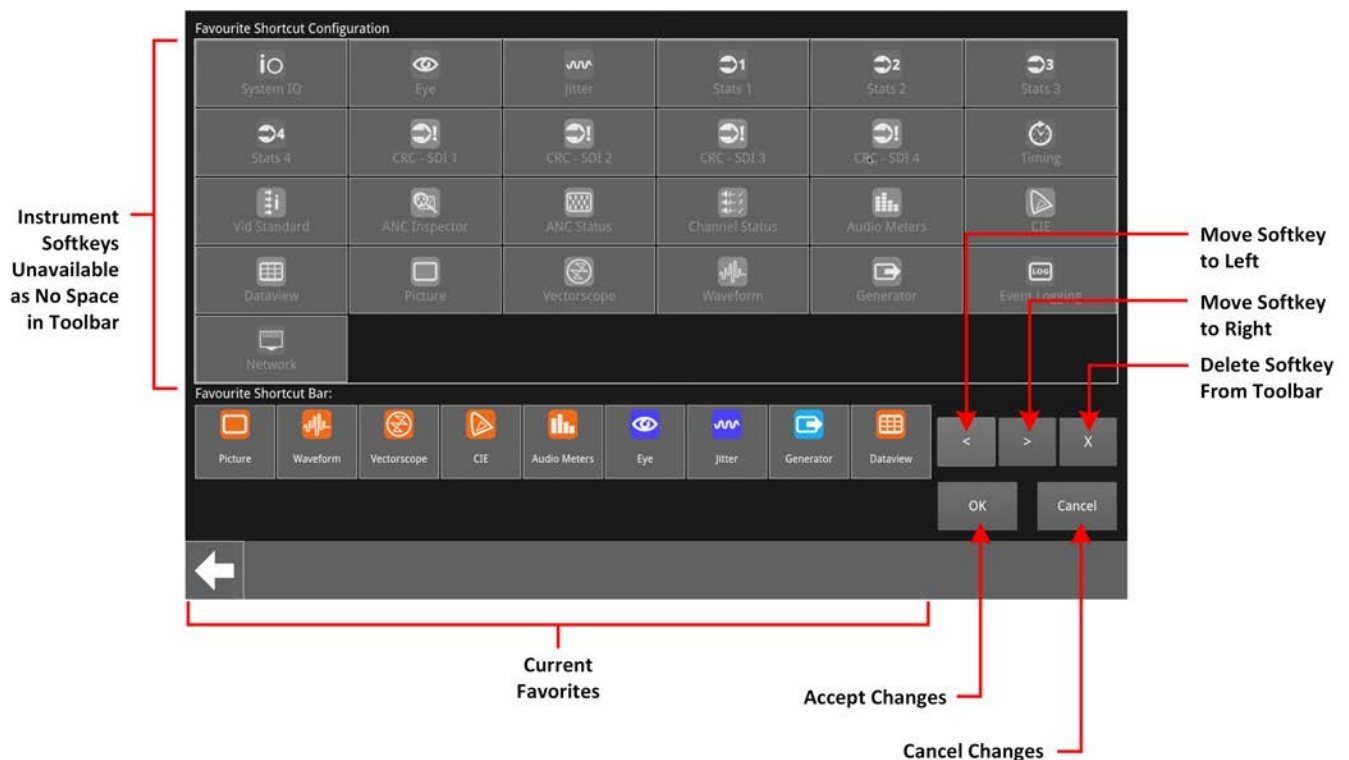


Figure 2-101: Favorite Shortcut Configuration Dialog

Change the instrument softkeys displayed in the Favorites Toolbar as follows:

1. Delete any unwanted softkeys from the toolbar by

Selecting an unwanted softkey in the current favorites list then tap or click



You will see the available instrument icons in the library are now displayed in color, see [Figure 2-102](#).

2. Tap or click a replacement softkey to add to the toolbar from the available library of softkeys.



3. Adjust the position of the softkey in the toolbar using:

4. Tap or click **OK** to accept your changes to the toolbar.

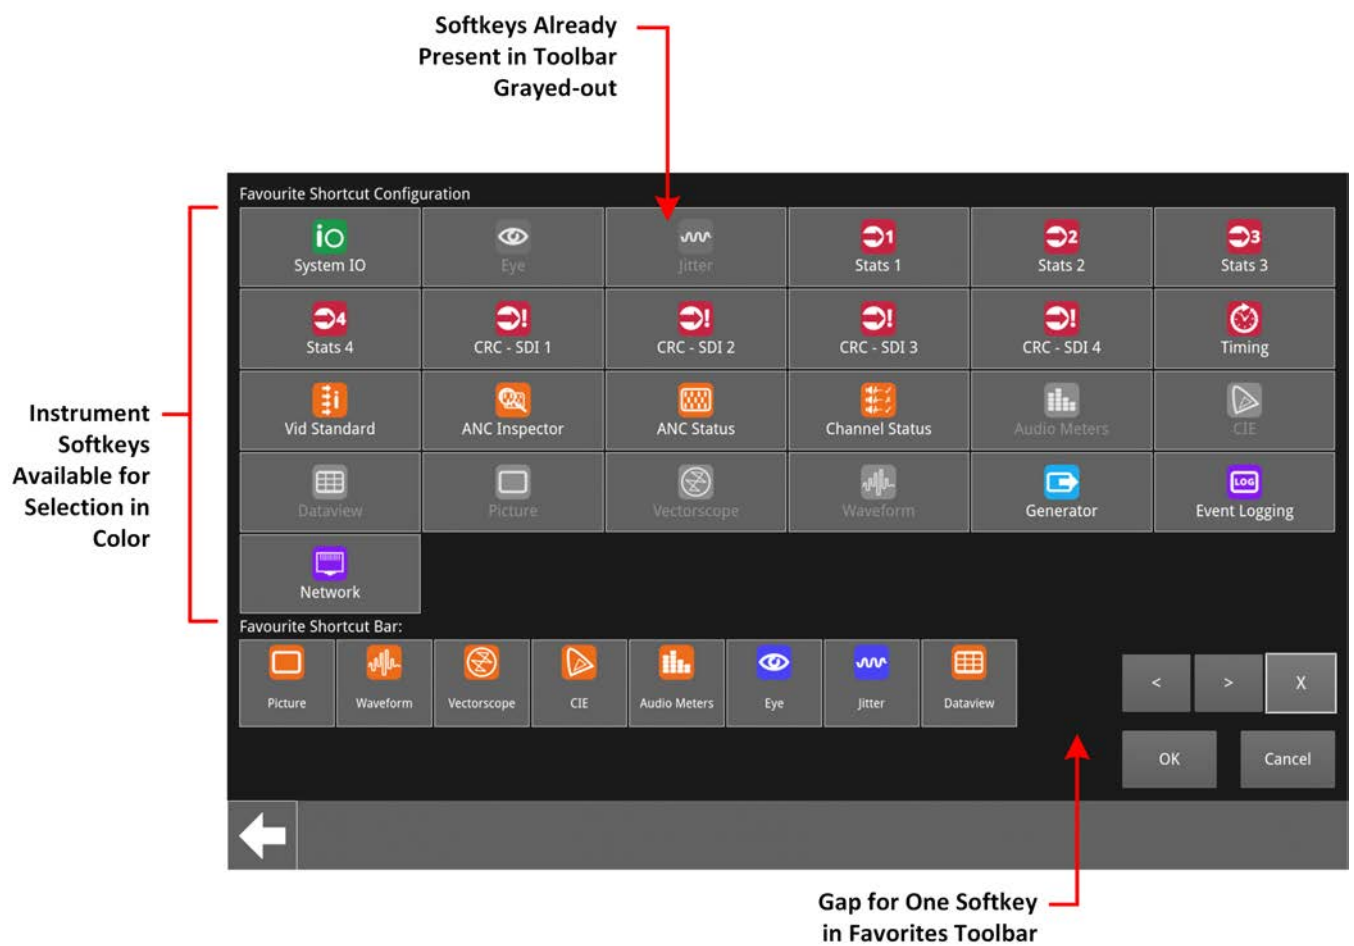


Figure 2-102: Favorite Shortcut Configuration Dialog

Instrument Icon Quick Reference

The icons shown below each represent a different Instrument (some optional) and are displayed in the Instrument Bar when the corresponding Instrument is active.

System Instruments:



Event Logging



Network & Automation

Video Standard Analyzer Instruments:



Analyzer - CIE Chart



Analyzer - Data View



Analyzer - Picture



Analyzer - Vectorscope



Analyzer - Waveform



Analyzer - Video Standard



Analyzer - Ancillary Inspector



Analyzer - Ancillary Status



Analyzer - Audio Channel Status



Analyzer - Audio Meters

Physical Analyzer Instruments:



Eye - SDI in 1



Jitter SDI in 1

Raw Data Instruments:



System IO

Datastream Analyzer Instruments:



Stats - SDI in 1



Stats - SDI in 2



Stats - SDI in 3



Stats - SDI in 4



Video Timing & System Reference



CRC Analysis SDI In 1 to 4

Configuring and Checking the Unit

This chapter describes how to set-up some fundamental parameters and check that the unit is working correctly; it includes the following sections:

- [Network and Automation](#)
- [Setting the Time and NTP Server](#)
- [Setting-up the Display](#)
- [Checking the Unit](#)
 - [Checking the System Health](#)
 - [Checking the Licenses](#)
 - [Restarting the Unit](#)
 - [Restoring Default Settings](#)
- [Upgrading the Unit](#)
- [Managing Files with the USB File Manager](#)
- [Event Logging on the Unit](#)
- [Remote Connection to the Unit](#)



Overview

The **Network & Automation** instrument provides all the network information and facilities you need to connect the unit to a network and then interact remotely with the unit over the network.

Once the unit is powered on and an RJ45 Ethernet connector inserted in the management port, you can access the unit remotely and get its date and time from an NTP server. You can choose either dynamic or static IP addressing for the management Ethernet port.

You can control the unit from a remote location using a number of methods, including:

- Virtual Network Computing (VNC)
- REST API (for remote control).

Network & Automation	
Interface	Up
MAC Address	00:E0:4B:81:35:C2
IP Addressing Mode	Dynamic
IP Address	10.50.102.36
Gateway	10.50.100.1
DNS Server	10.50.100.2
mDNS Server	lpx-000025.local
REST API	Listening on port 8080
VNC Server	Disabled

Figure 3-1: Network & Automation Instrument

Using Virtual Network Computing (noVNC or VNC) for Remote Access

The virtual network computing or VNC facility enables you to connect either to the main unit or the optional second screen from a remote location and provides you with direct screen control of the unit(s).

When you enable the **VNC Server** parameter in the options menu, the unit allows remote access to the noVNC clients, from a standard web browser. In addition, you can also connect remotely using a suitable, locally-installed VNC client viewer (for example, VNC® Connect, etc.)

For more information on establishing a remote connection to the unit using noVNC or from a VNC client, see the section [Using Virtual Network Computing \(VNC\)](#).

Instrument Menu Options

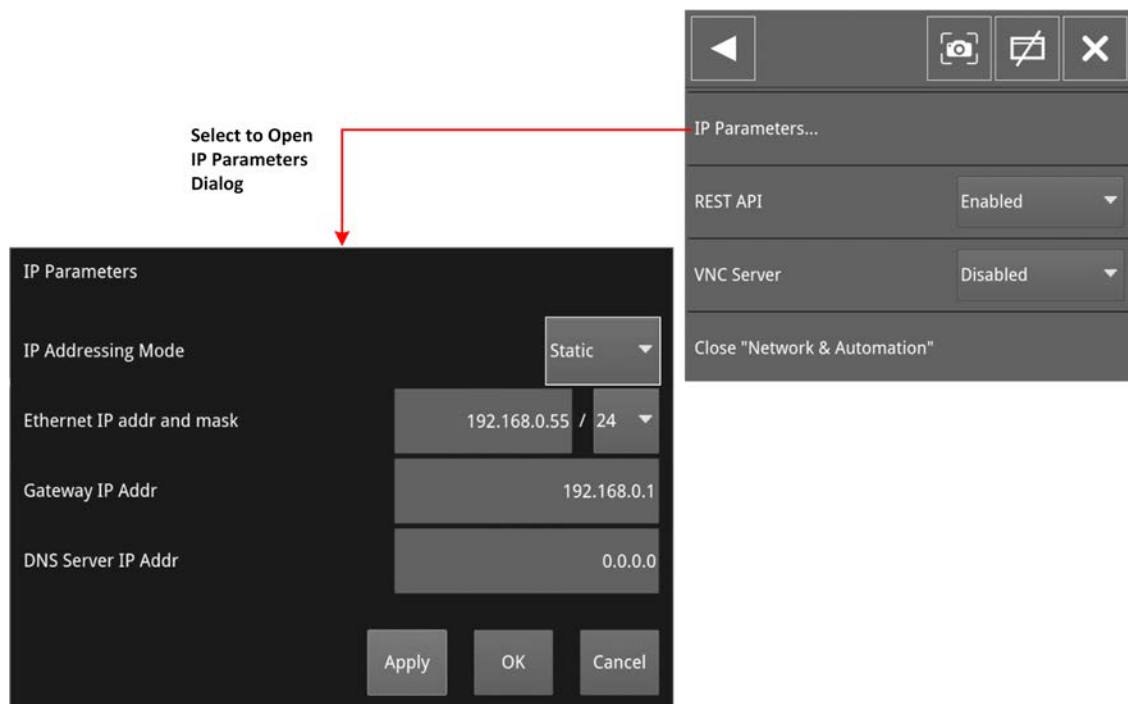


Figure 3-2: Network & Automation Instrument Menu Options

The following table lists the configurable parameters in the Network & Automation instrument options menu:

Table 3-1 : Network & Automation Menu Options

Item	Options	Description
IP Parameters		
IP Addressing Mode	Dynamic Static	For remote access to the unit, you can assign the IP address of the unit either dynamically, on a DHCP enabled network, or specify a static IP address manually. When assigned dynamically, the following IP address fields are automatically populated and cannot be edited.
Ethernet IP addr and mask	Enter static IP address and mask (range: 8 to 31) as required.	Only active when static IP addressing is selected. Use the dropdown list to select the Mask. The unit uses CIDR notation; with a default value of /24. Use either a USB keyboard or the on-screen numeric keypad to enter the address.
Gateway IP Addr	Enter the IP address of the Gate-	Only active when static IP addressing is selected. Use

Item	Options	Description
	way as required.	either a USB keyboard or the numeric keypad to enter the address.
DNS Server IP Addr	Enter the IP address of the DNS Server.	<p>Only active when static IP addressing is selected. Use either a USB keyboard or the on-screen numeric keypad to enter the address.</p> <p>After entering all required static IP parameters, click Ok to save.</p> <p>Note: A gateway address is required, even if on a network without a default gateway. Use a dummy gateway address if this is the case.</p>
Remote Connection Parameters		
REST API	Enabled Disabled (Default)	<p>When enabled the REST API allows the use of the unit's web server and the remote loading of presets. It is recommended to use the IP Address (or mDNS Hostname if your client's host supports it) as the recipient of the request, and the REST API Port is the port towards which requests need to be directed.</p> <p>Use a suitable software program or script to access and control the unit e.g. cURL or PostMan.</p> <p>To load presets using remote control, you will need to enable either Bit or Binary mode in the System IO options menu, see Remote Control Loading of Presets.</p>
VNC Server	Enabled Disabled (Default)	<p>When enabled allows remote connection to the main unit or optional second screen from either:</p> <ul style="list-style-type: none"> • A standard web browser using integrated noVNC to connect to the noVNC client on the unit, or • A locally installed VNC client viewer (for example, VNC® Connect). <p>The VNC Server field of the Network & Automation window shows the number of current VNC connections to the unit. Once a connection is made, or ended, this number is automatically updated. For more information on using VNC to connect remotely to the unit, see the section Using Virtual Network Computing (VNC).</p> <p>Note: When the optional second screen is connected, the number of connections displayed is the total number of VNC connections open on the main unit and second screen.</p>

Note: The mDNS Hostname has the following case-sensitive syntax:



lpx-*<serial number>*.local. For example: **lpx-123456.local**

Using the Numeric Keypad to Enter Static IP Details

If you select the static IP addressing mode in the IP Parameters dialog, tap or click in any of the IP address fields to display the on-screen numeric keypad as shown in [Figure 3-3](#).

Note: The on-screen numeric keypad is available only if the on-screen keyboard is enabled in the Display Settings dialog (this is the default setting.) Otherwise, you can use a USB keyboard connected to the unit or the keyboard of your remote connection.

Enter an address using the keypad as follows:

1. Use the backspace to remove digits to be replaced or highlight a section to overwrite.
As you delete digits, the remainder of the address will change color to yellow indicating that the address is not valid.
2. Enter the new address using the number keys and period key as required.
When you enter a full IP address, the font color changes back to white indicating that the address is valid.
3. Tap or click **Save** to save the new address and close the numeric keypad.
 To quit the numeric keypad without saving, tap or click .
4. If you need to change the subnet mask, select the appropriate value from the dropdown box.
5. When satisfied with all IP addressing parameters, tap or click **Ok** to save and exit the dialog.

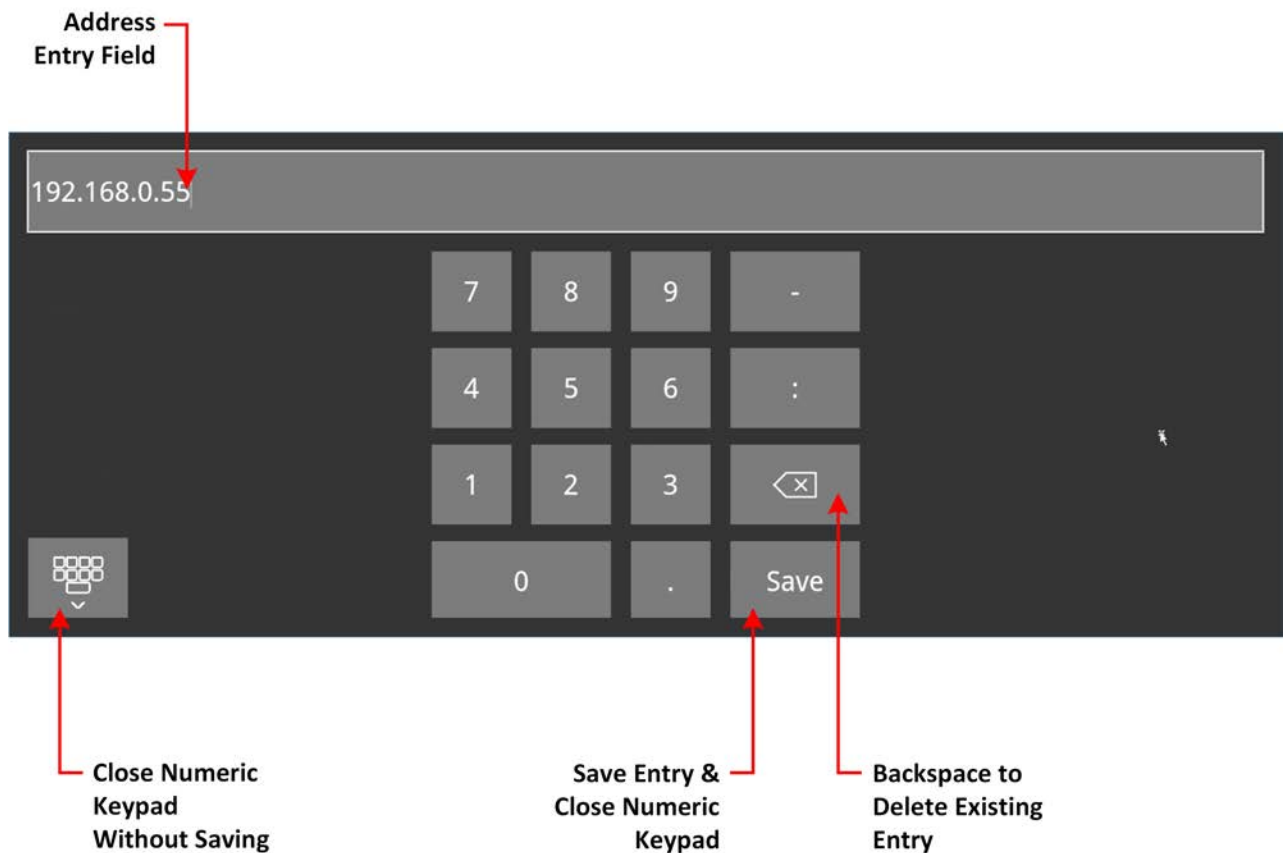


Figure 3-3: Numeric Keypad to Enter Static IP Addresses

Setting the Time, Date and NTP Server

The unit displays the system date and time in the top-right corner of the screen in the Setup menus.

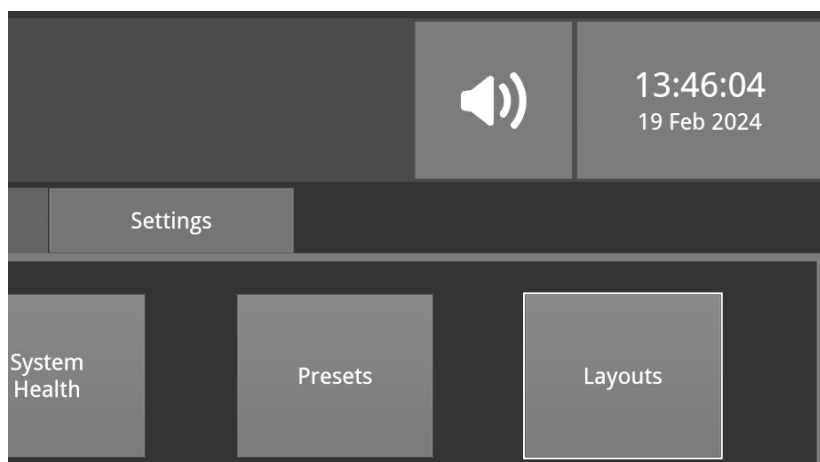



Figure 3-4: Time and Date Display in Setup Menu

You can configure the unit to use a date and time transmitted by a target Network Time Protocol (NTP) server or set the time and date manually in the **Time and Date** dialog.

Configure the date and time as follows:

1. Tap or click  to open the Setup Menu.
2. Tap or click the time/date display in the top-right corner of the screen.
This opens the Time and Date dialog:






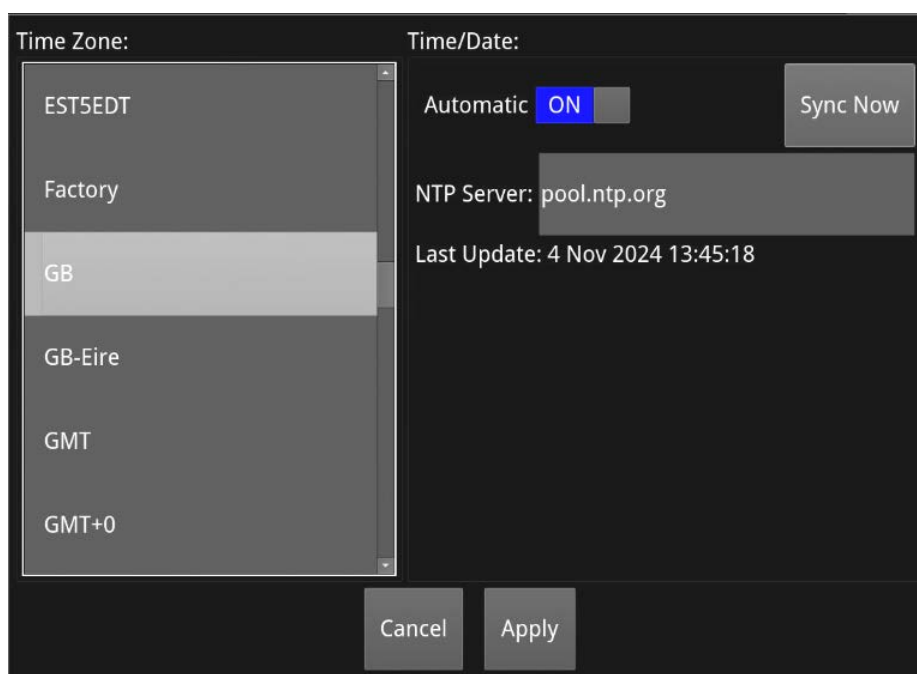Figure 3-5: Time and Date Dialog

3. To use the automatic time and date from an NTP server:
 - a. Set the **Automatic** toggle switch to .
 - b. Enter the address of the NTP server using the on-screen keyboard or a USB keyboard.
For example: **pool.ntp.org**
 - c. Select your local time zone from the **Time Zone** list box.
 - d. Click **Sync Now** to synchronize to the selected time zone.
 - e. Click **Apply** to save your changes and quit the dialog.
To discard your changes, click **Cancel**.
3. To set a time and date for the unit manually:
 - a. Set the **Automatic** toggle switch to .
 - This displays the manual date and time fields.

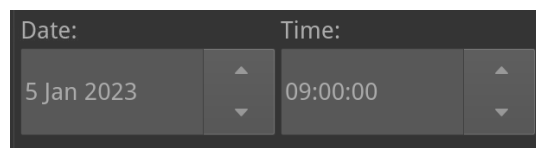





Figure 3-6: Manual Date and Time Fields

- b. Adjust the date by clicking the target field and either enter a new date using the keyboard or adjust the day using the up/down arrow buttons at the right of the field.
- c. Adjust the time by double-tapping or -clicking the target hours, minutes, or seconds to select, then increase or decrease the setting using the up/down arrow buttons at the right of the field.
- d. Click **Apply** to save your changes and quit the dialog.
To discard your changes, click **Cancel**

Table 3-2 : NTP Traffic Generation

Automatic Toggle Switch Setting	Action	Result
	None	Unit stops synchronizing with NTP servers. No NTP traffic generated.
	Tap or click Sync Now	Force one-time synchronization with NTP server. Note: Generates NTP traffic for the single sync and then no longer.
	Tap or click Apply	Unit automatically synchronizes with the NTP server and continues to do so, generating NTP traffic. Closes Time Setting dialog. Unit displays UTC time according to the selected timezone.

Note: If the optional second screen is connected, you can adjust the clock settings only from the Setup menu on the main unit.

Setting-up the Display


Modifying the Display Settings

The unit's Display Settings in the Settings tab enable you to set the following:

- Output frame rate, and brightness of the user interface and display backlighting.
- Use of the onscreen keyboard and the displayed units for all temperature measurements.
- Popup function bar for remote access to the unit over DisplayPort or using the SDI monitor output (SDI MON connector). For local touchscreen access and noVNC remote access it is recommended to disable this feature to prevent the popup of the toolbar.
- Presence of color-coded Analyzer instrument window frames.
- Colors of the analyzer instrument window frames assigned to each of the two (or optionally four) Analyzers, when window frames are enabled. The colors are also used in the Analyzer Input Assignment dialog.
- Color of the generator instrument window frames, when window frames are enabled, and in the System IO instrument to show active generator output.

Configure the touchscreen(s) and any external display to which the unit is connected as follows:

Note: Changes to the Display Settings apply to both screens simultaneously, if the second optional display is included, irrespective of the display from which the dialog is launched.

1. Tap or click  to open the Setup Menus and select the **Settings** tab.
This displays the dialog to adjust the display settings.

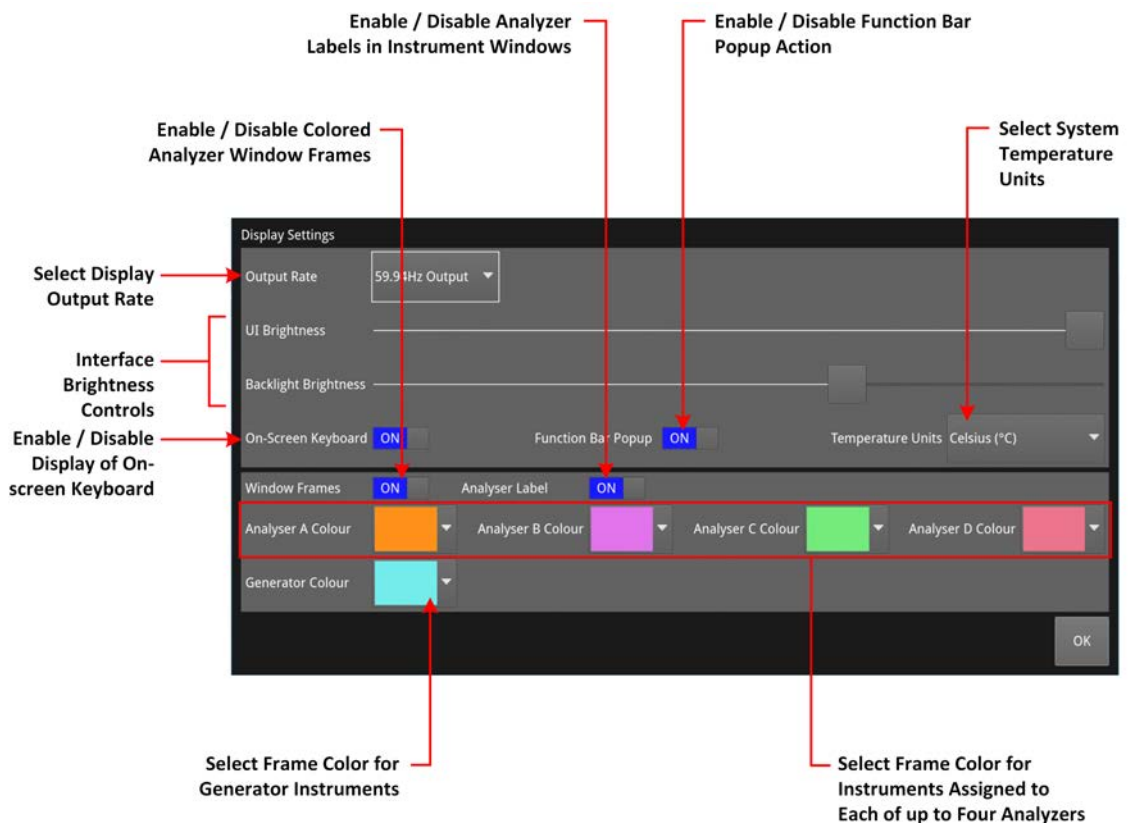


Figure 3-7: Display Options in the Settings Tab


2. Select the desired frame rate from the **Output Rate** dropdown list:

- 47.98 Hz
- 48 Hz
- 50 Hz
- 59.94 Hz
- 60 Hz

3. Drag the **UI Brightness** slider left or right to decrease or increase the brightness of the user interface to a comfortable level. This affects both the touchscreen(s) and any connected external display.

You can also adjust the brightness in increments, or to maximum / minimum values, using the following softkeys:

UI Brightness slider softkeys:



Backlight Brightness slider softkeys:



Note: When using the Screenshot function to capture the display, it is recommended to set the brightness to the maximum setting to increase the clarity of the saved image.

4. Drag the **Backlight Brightness** slider left or right to decrease or increase the brightness of the touchscreen backlighting. This affects only the touchscreen display(s).
5. Choose whether to use the **Onscreen Keyboard** for text and numeric entry in instrument dialog fields. The onscreen keyboard is enabled by default. If you choose to disable the onscreen keyboard you will need to have a USB keyboard connected to one of the USB ports on the unit. Alternatively, you can also use the keyboard connected to a PC from which you have initiated a remote connection to a unit using noVNC.
6. Choose whether to prevent the toolbar popping-up from the lower section of the screen when using the touchscreen locally or noVNC to access the unit remotely. If using DisplayPort or the SDI Monitor output for remote viewing of the user interface, you will need to enable this feature so that the function bar becomes available for use with the mouse.
7. Choose whether to display system temperature measurements in units of degrees Celsius (°C) or Fahrenheit (°F) from the **Temperature Units** dropdown. The selected units are used in all instruments where a temperature measurement is displayed.
8. Choose whether to display a border around the instruments by switching on or off the **Window Frames** toggle switch. When disabled, you switch off all border color differentiation between analyzer instruments.
9. Choose whether to display an **Analyzer Label** to identify the assigned analyzer in the top-left or -right of the analyzer instrument window.
10. When the **Window Frames** toggle switch is set to **ON**, you can change the border color of analyzer instruments as described in the section [Using the Color Picker](#).

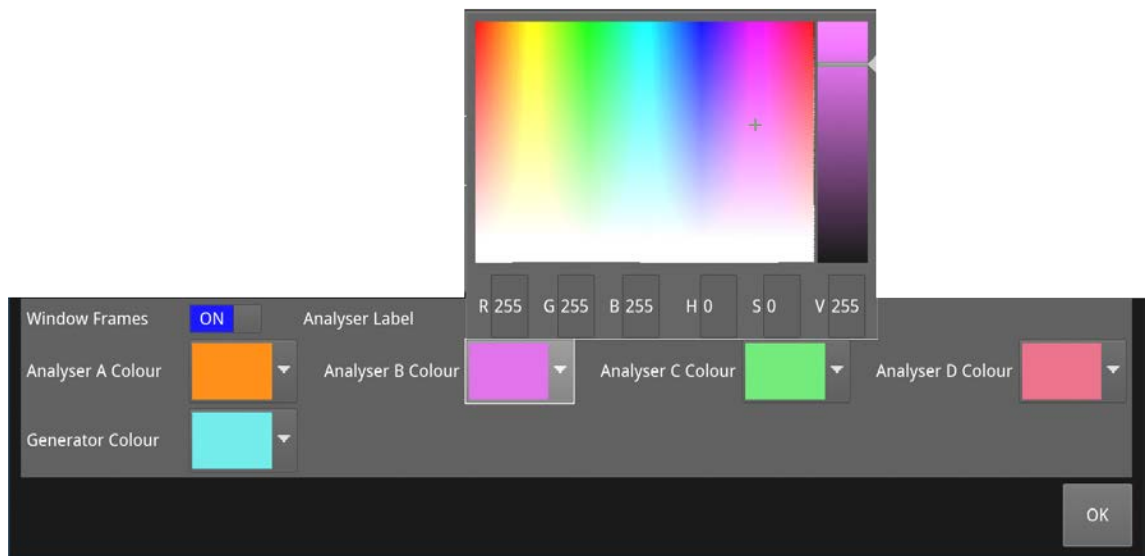



Figure 3-8: Selecting a Color for Analysis Instruments Assigned to Analyzer B in the HSV Window

Note: The borders and icons of System Instruments are always colored light gray.

11. Selected colors are applied immediately. Click anywhere outside the HSV window to close the dialog.
12. Click **OK** to close the Display Settings dialog.
13. Tap or click  to exit the Setup Menus and return to the active layout.

Checking the Unit

Overview


Your unit should now be powered on, with the correct date and time displayed in the Setup Menus and at least a basic layout displayed, including any of your modifications. At this point you should confirm that the unit is healthy and running correctly, as expected, by checking the following:

- System Health
- Licensing and ordered licensed options
- Software and firmware versions.

These items are described in the following sections.

Checking the System Health

You can check the current health status of the unit in the **System Health** dialog as follows:

1. Tap or click  to open the Setup Menus and select the **Settings** tab.
2. Tap or click: **System Health**.
This opens the System Health dialog displaying the current health of the unit's hardware, including: CPU and FPGA temperature in degrees Celsius or Fahrenheit, and the revolutionary speed of the cooling fans.

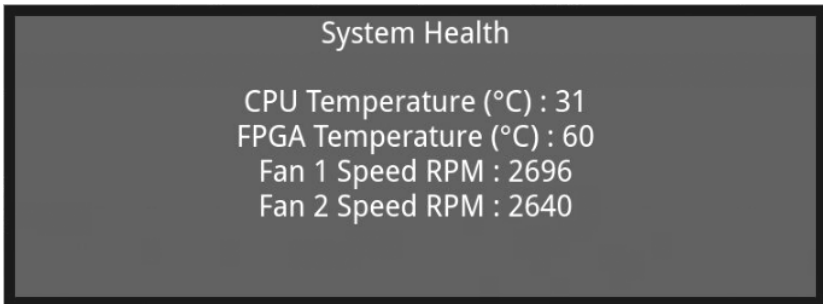


Figure 3-9: System Health Information


Table 3-3 : System Health Recommended Thresholds

Item	Safe Range	Description
CPU Temperature	From 0° to 60°C (32° to 140°F)	Unit will issue a high temperature warning at 60°C (140°F) and switch off at 85°C (185°F)
FPGA Temperature	From 0° to 60°C (32° to 140°F)	Unit will issue a high temperature warning at 60°C (140°F) and switch off at 85°C (185°F)
Cooling Fans	1500 to 8000 rpm	Speed of fans varies with the temperature of the FPGA. Two cooling fans are located in the rear of the unit and operate at 25% of the maximum capability of the fans.

Checking the Unit Licenses

It is important at this point to confirm that your unit has been shipped with the software options and corresponding licenses documented in your original order.

Check the licensing details and other system information in the **About** dialog as follows:

1. Tap or click  to open the Setup Menus and select the **Settings** tab.
2. Tap or click: **About**.
This opens the About dialog, displaying license and version information. Use the scroll bar to display the complete list. Information includes:
 - Software version and build
 - Unit serial number
 - License details
 - Build ID
 - FPGA and CPU ID and versions
 - Calibration details.
3. Tap or click anywhere outside the About window to close the dialog.

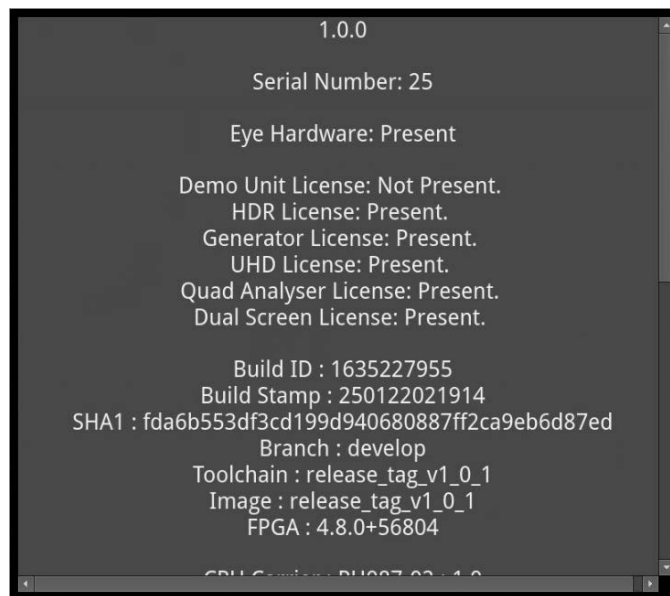


Figure 3-10: Serial Number and License Information

Restarting the Unit

If at any time you want to restart the unit, you can do so from the **Settings** tab of the Setup Menu without powering-down the unit.

Restart the unit as follows:

1. Tap or click  to open the Setup Menu and select the **Settings** tab.

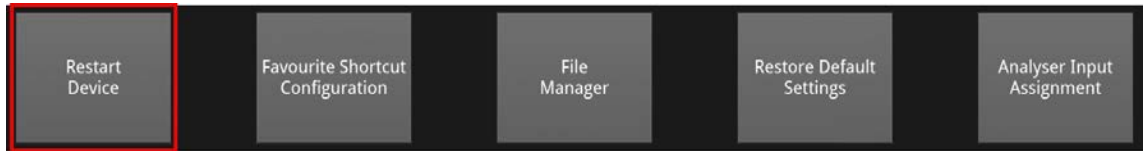


Figure 3-11: Restart Device Launcher in Settings Tab

2. Tap or click **Restart Device**.
This opens a Restart confirmation dialog:

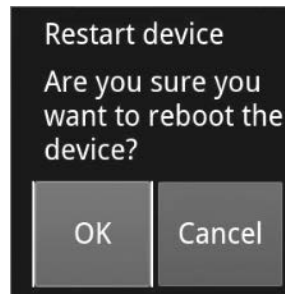



Figure 3-12: Restart Confirmation Dialog

3. Click **OK** to confirm the restart or **Cancel** to quit without restarting.
When you confirm the restart, the unit immediately enters boot mode and displays its status using the LED behind the On switch.

Restoring Factory Default Settings

If you make configuration changes to the unit which you would rather discard, you can restore the unit to the factory default settings at any time.

Restore the factory defaults as follows:

1. Tap or click  to open the Setup Menu and select the **Settings** tab.
2. Tap or click: **Restore Default Settings**.
This opens a confirmation dialog, prompting you to confirm your choice before the factory defaults are restored.

Note: It is recommended first to copy all your saved Presets to a USB memory stick as a backup, using the File Manager, before restoring the factory defaults.

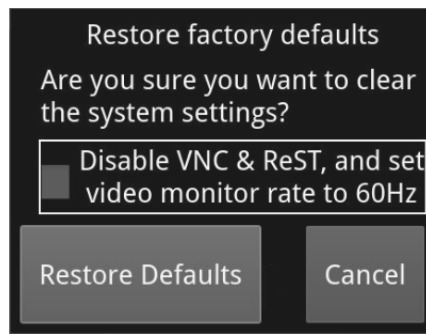


Figure 3-13: Confirmation Dialog to Restore Factory Default Settings

3. If you want to restore VNC, ReST and video monitor rates to factory defaults (disabled, disabled and 60 Hz respectively) select the checkbox. Otherwise, leave the checkbox unchecked.
4. Tap or click: **Restore Defaults** to confirm or **Cancel** to quit.

Upgrading the Unit

Upgrading the System Software and Firmware

New software releases will be made available regularly as the product is developed.

Software downloads are approximately 300 MB in size and can be found in the Support area of the LeaderPhabrix website currently located at:

<https://leaderphabrix.com/contact-support/leaderphabrix-product-software/>

1. Complete and submit the access request form.
2. Click the generated link to download the latest software.
3. Download the **.pug** file for the selected software release.

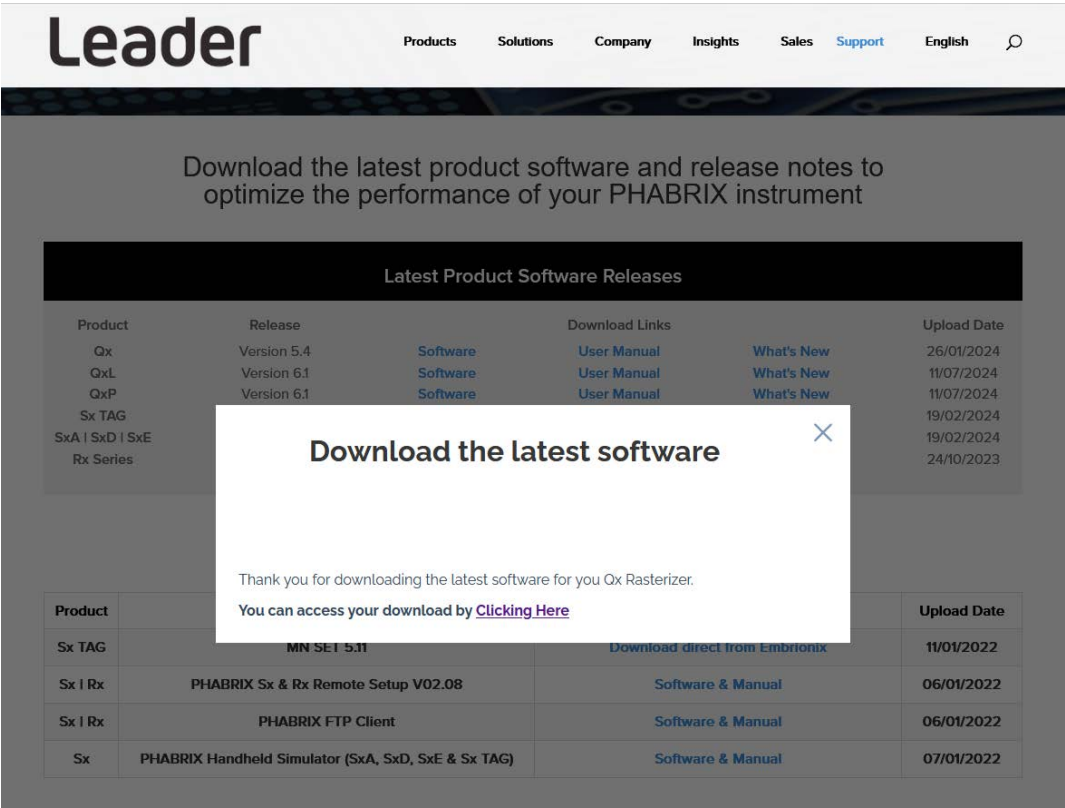


Figure 3-14: Downloading the Software Bundle from the Software Downloads Page

4. Upgrade the software on the unit using one of the following methods described below.

Upgrading the Software from a USB Stick

Upgrade the software using a USB memory stick as follows:

1. Copy the downloaded **.pug** file to the root directory of a FAT32 or exFAT formatted USB stick.
2. Make sure that the unit is switched OFF before upgrading.
3. Insert the USB stick into a USB port on either the front or rear panel of the unit.
4. Press the power button to power-up the unit.

The fans will run-up to full speed during the upgrade process. Please wait approximately three minutes as the unit upgrades. It will automatically display the active layout when complete. Use the File Manager to eject the USB stick on completion.

Note: The software upgrade progress will also start automatically, after 30 seconds, if a USB stick containing the ***.pug** file, is inserted into a USB port on the unit while it is running.

Remote Upgrade Using SFTP

You can upgrade the software on your unit(s) from a remote location using a standard SFTP client (e.g., FileZilla, etc.) as follows:

1. Complete and submit the access request form.
2. Click the link to download the **.pug** file for the desired software release, see above.
3. Log on remotely to a unit to be upgraded using SFTP, enter:
sftp user@<LPX_IP_Address>. or
sftp user@<LPX_Hostname>
For more information, see the section [Using Secure FTP \(SFTP\)](#).
4. Enter the password for the leader user: **leader**
You should see the message **Connected to user@<LPX_IP_Address>** or **Connected to user@<LPX_Hostname>**
5. Use the SFTP **put** command to upload the upgrade **.pug** file to the upgrade directory of the unit: **/transfer/upgrade**.
You should see the percentage completion and time remaining for the transfer displayed at the right of the terminal window.

```
C:\Users\technical.author\Downloads>sftp user@lpx-000025
Leader 70PJ [X86] Yocto 4.0.15 (kirkstone) lpx-000025
user@lpx-000025's password:
Connected to lpx-000025.
sftp> ls
transfer
sftp> cd transfer
sftp> cd upgrade
sftp> ls
sftp> put LPX-1596229956-7.0.0-prod.pug
Uploading LPX-1596229956-7.0.0-prod.pug to /transfer/upgrade/LPX-1596229956-7.0.0-prod.pug
LPX-1596229956-7.0.0-prod.pug 100% 312MB 100.1MB/s 00:03
sftp> |
```

Figure 3-15: Uploading the Upgrade File Remotely to the Unit

6. On completion of the transfer the unit automatically detects the presence of the upgrade file and starts its upgrade cycle.

Upgrading the Software Options

You can order and install licenses for optional software toolkits at any time after purchasing your unit. You will receive an email from LeaderPhabrix with an encrypted license file attachment:

encrypted_license_file.enc.

Install the license(s) for an optional toolset or toolsets as follows:

1. Make sure that the unit is powered on.
2. Download the email attachment and copy it to a FAT32 or exFAT formatted USB memory stick.
3. Insert the USB memory stick into any of the USB ports on the front or rear of the unit.
The unit detects the software package and displays a dialog box listing the licenses currently installed alongside the new licenses available with the option upgrade.

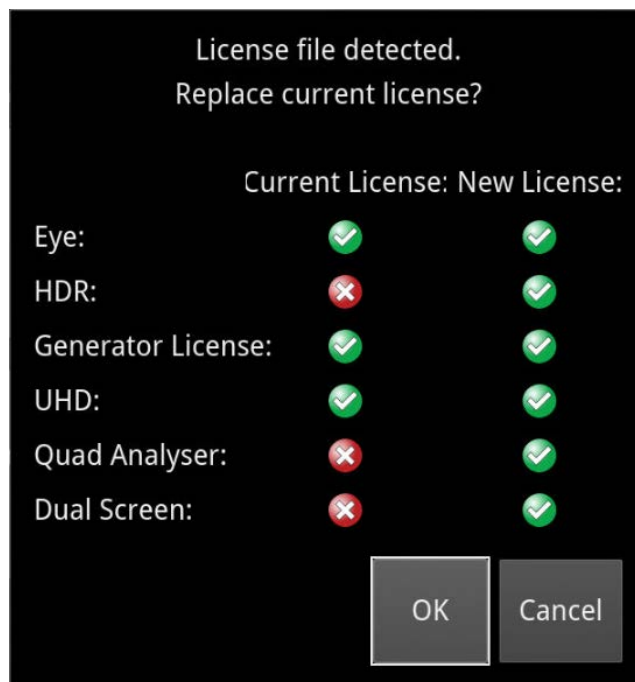


Figure 3-16: Confirmation Dialog for Software Option Upgrade

4. Make sure that the new license(s) you have purchased are listed in the **New License** column with a green check mark then click **OK** to update the license(s).
After updating the license(s), the unit opens a further dialog box requesting you to restart the unit to apply your changes and activate the new option(s).

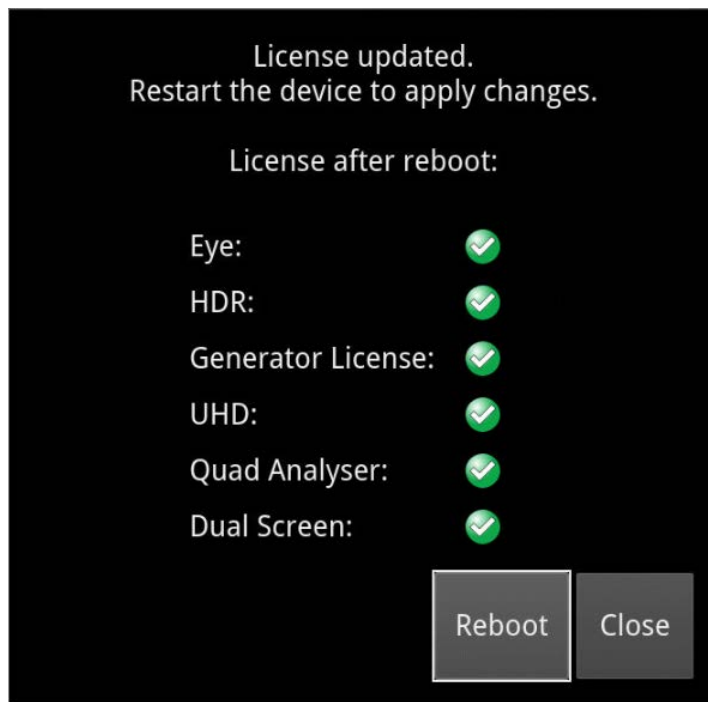


Figure 3-17: Requesting a Reboot to Activate the New Option(s)

5. Confirm that all expected licenses have been updated, then click **Reboot**.
The unit reboots and the upgraded options will be available for use. Tap or click **Cancel** to close the license dialog.
6. Open the **About** dialog from the **Settings** tab of the Setup Menus and confirm that your new license(s) are available.

Managing Files with the USB File Manager

Overview

To transfer and manage your files, the unit provides a File Manager which enables you to download files from the unit to a FAT32 or exFAT formatted USB memory stick or to upload files from USB to the unit. To display the USB File Manager, either insert a USB memory stick into one of the USB connectors on the front or rear panels of the unit or launch from the Settings tab. When displayed, the File Manager window is divided into two panels – the left-hand panel displays files and folders available on the unit and the right-hand panel displays files and folders on the USB stick. You can either select files and then choose a copy option from the menu or drag selected files and drop them into the desired target window.

Note: The unit supports a single inserted USB memory stick at any one time. If a second stick is inserted, it will not be recognized until the first USB stick is removed.

With the USB File Manager you can:

- Select files on either device
- Copy selected files in two directions (from unit to USB or USB to unit)
- Drag and drop selected files between the unit and USB device
- Rename files on the USB stick
- Create folders on the USB stick
- Delete files from the unit or USB stick.

You can upload or download the following file types to or from the unit:

- Test patterns
- Screenshots
- Presets
- Logfiles
- Test pattern image files (TIFF file format.)

Available space on both the unit and USB stick is displayed at the bottom of each of the File Manager panels.

Note: When using the File Manager over a remote connection (for example, when using noVNC) you will need physical access to the unit both to insert the USB and to remove it after ejecting.

Opening the File Manager

Note: You can launch the File Manager only from the Settings tab of the main unit. The File Manager launcher is grayed-out in the Settings tab of the optional second screen.

To open the File Manager:

- Insert a USB memory stick into one of the USB ports on the front or rear panel of the unit.

This automatically opens the File Manager window on the main unit's display:

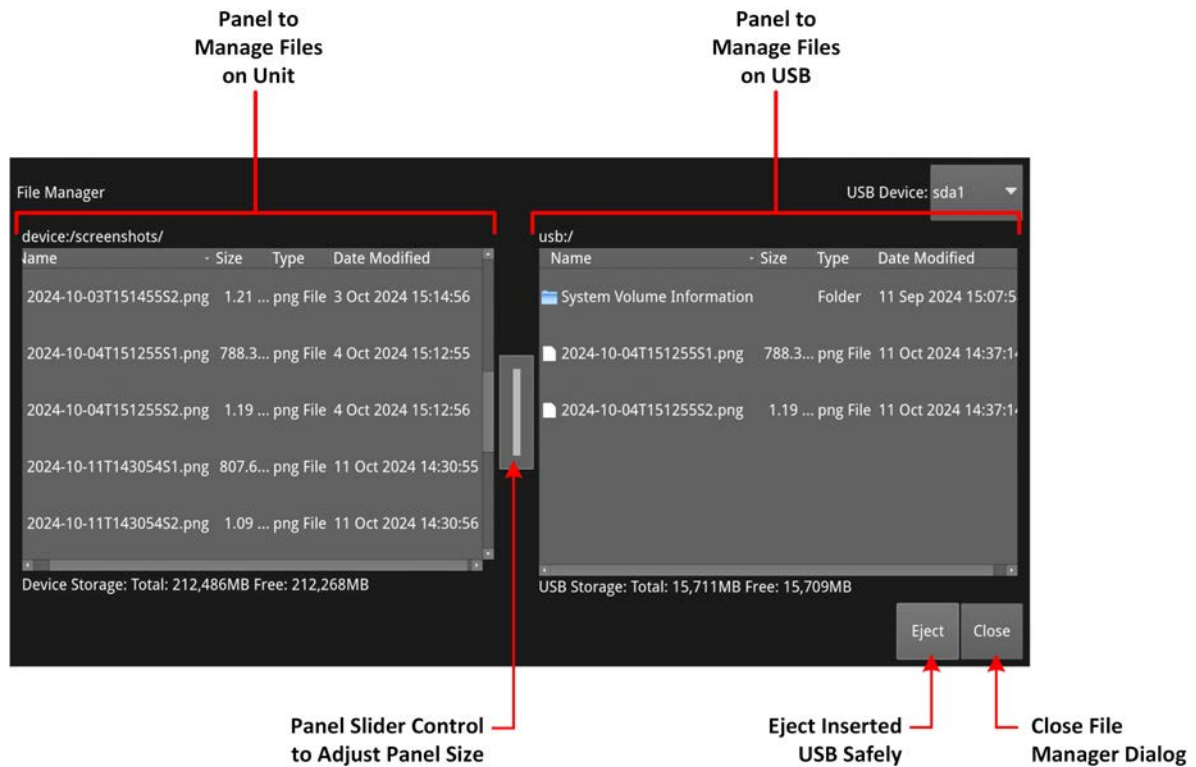



Figure 3-18: File Manager Window

Alternatively, you can launch the File Manager from the **Settings** tab of the Setup Menus as follows:

1. Tap or click  to open the Setup Menus and select the **Settings** tab.
2. Tap or click **File Manager** to display the File Manager window.

Copying Files from the Unit to USB

Copy files from the unit as follows:

1. Insert a USB stick into one of the USB ports and wait for the File Manager to open.
2. Double-tap or double-click the folder icon containing the files to copy.
3. Tap or click to select the files to copy in the left-hand panel.
You can also tap and hold or right-click then choose **Select All Device Files** from the File Manager menu.

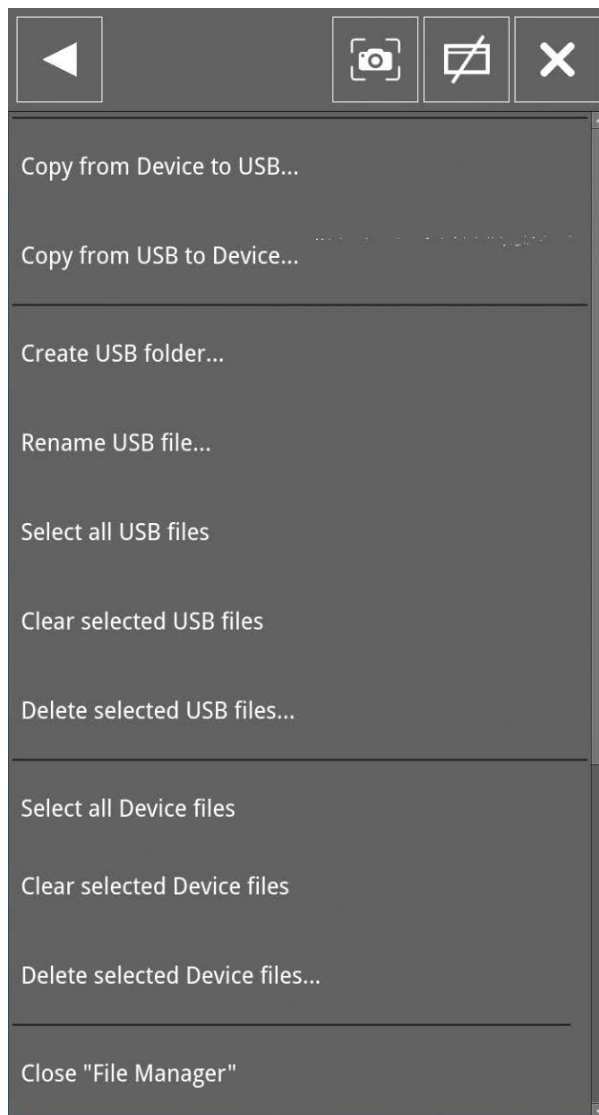


Figure 3-19: File Manager Menu

To deselect a file, simply tap or click it again. You can also choose **Clear Selected Device Files** from the File Manager menu to deselect multiple files.

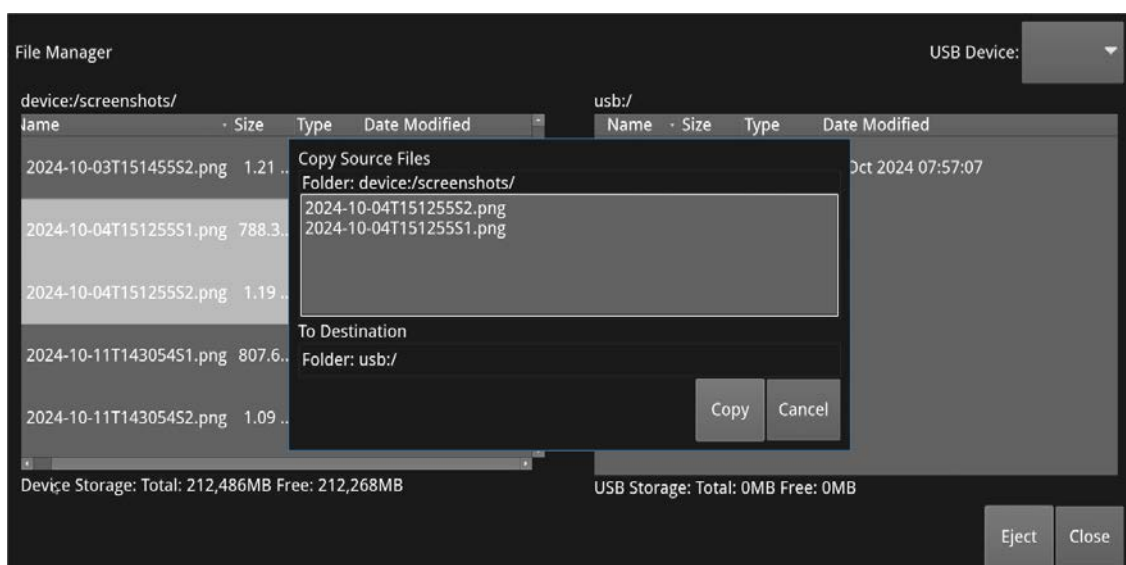


Figure 3-20: Copying Selected Files from the Unit to a Connected USB Stick

4. Tap and hold or right-click anywhere in the File Manager window to display the menu and select **Copy from Device to USB...** This opens the Copy Source Files dialog.
5. Check that the selected files and destination are correct, then tap or click **Copy** to confirm.

Uploading Files from USB to the Unit

Upload files to the unit as follows:

1. Insert a USB stick into one of the USB ports and wait for the File Manager window to open.
2. Select the files you want to upload in the right-hand panel, or choose **Select all USB files** from the menu.
3. Select the target folder on the unit, in the left-hand panel.
4. Tap and hold or right-click anywhere in the File Manager window to display the menu and select **Copy from USB to Device...** This opens the Copy Source Files dialog.
5. Check that the selected files and destination folder are correct then tap or click **Copy** to confirm.

Note: If uploading presets from another unit, always reboot the unit to register the presets on completion of the upload.

Deleting Files from the Unit

Delete files on the unit as follows:

1. Launch the File Manager from the **Settings** tab of the Setup Menus.
2. Select the files you want to remove in the left-hand panel, or choose **Select all Device files** from the menu.
3. Tap and hold or right-click anywhere in the File Manager window to display the menu and select **Delete selected Device files...** This opens the Delete Files dialog.
4. Check that you have selected the correct files then click **Delete** to confirm.

Note: When you delete a file using the File Manager the action cannot be undone. Take care to delete only files you know are no longer required.

Event Logging on the Unit



Overview

Event logging on the unit enables you to view the logs in the **Event Logging** Instrument window. The unit allocates 500 lines for logging detail before overwriting log data. It will also recall the log data last captured if the unit is restarted.

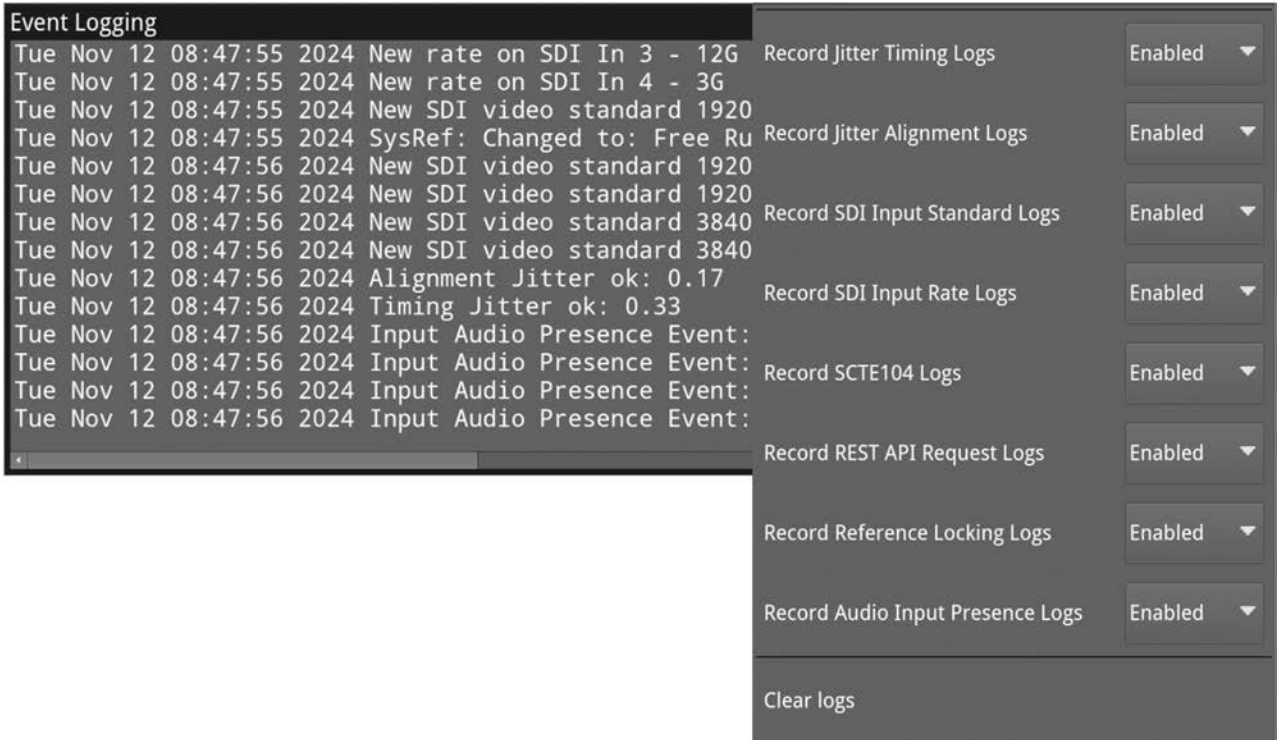



Figure 3-21: SDI Event Logging with Options Menu Showing All Event Logs Enabled

Available Event Logging Options

To enable event logging options, either tap and hold inside the Event Logging border, tap  or right-click the mouse in the instrument window to enable or disable the following event logs in the Options menu:

- Record Jitter Timing Logs
- Record Jitter Alignment Logs
- Record SDI Input Standard Logs
- Record SDI Input Rate Logs
- Record SCTE104 Logs
- Record REST API Request Logs
- Record Reference Locking Logs
- Record Audio Input Presence Logs

Select the **Clear logs** control to clear the contents of the currently active logs.

Remote Connection to the Unit

Overview

Various methods are provided to enable you to establish a remote connection to your unit and optional second screen, depending on your requirements, for example you could establish a remote connection using one of the following methods:

- Integrated noVNC or other standard VNC client
- SFTP
- Web browser.

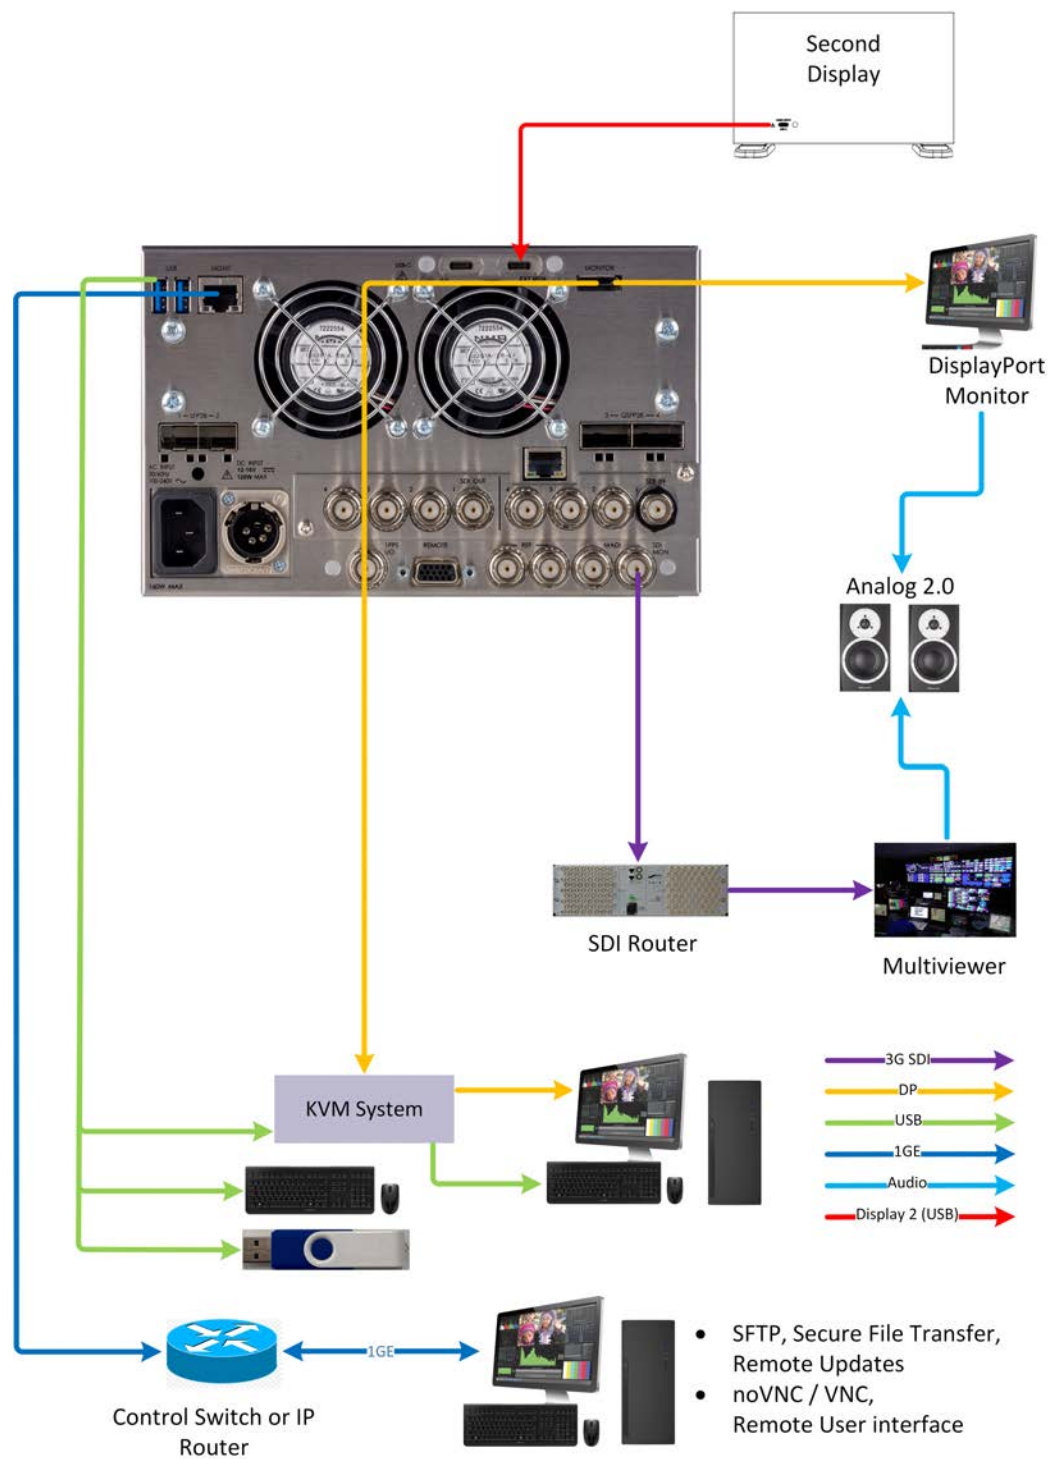


Figure 3-22: Remote Connectivity Overview

Available Functionality

Remote Operational Control:

- **noVNC:** View the screen and control the user interface from a remote location from a standard web browser using noVNC.
- **VNC:** View the screen and control the user interface from a remote location using a suitable VNC client installed on your PC.
- **REST API:** Remote control loading of presets.

Remote File Management:

- **SFTP:** Upgrade the unit from a remote location. Retrieve log, preset, and screenshot files. Delete preset or screenshot files. Add saved presets from a different unit. Add, retrieve, and delete user-created test pattern files.
- **Web Browser:** View and retrieve, Log, Preset, Screenshot, and User Test Pattern files. Alternatively, use the USB File Manager function to transfer files.

Note: In the setup directions that follow, **192.168.0.70** and **lpx-000480** are used as examples only. Be sure to use the IP Address, hostname or mDNS hostname specific to your unit.

Using Virtual Network Computing (VNC)

The virtual network computing or VNC facility enables you to connect from a remote location and provides you with direct screen control of the unit.

When you enable the **VNC Server** parameter in the **Network & Automation** instrument, the unit allows remote access from either:

- A standard web browser using noVNC to connect to the noVNC client on the unit, or
- A locally installed VNC client viewer (for example, VNC® Connect).

For more information on establishing a remote VNC connection to the unit, see the section [Network and Automation](#).

Enabling VNC on the Unit

From the **Network & Automation** Instrument, enable the options menu parameter **VNC Server**.

When enabled, the VNC Server field displays the number of current VNC connections to the unit. Once a connection is made or ended, this number is automatically updated.

Note: If the optional second screen is connected, the number of connections displayed is the total number of main unit and second screen VNC connections.

Connecting to the Unit Using noVNC from a Web Browser

The following are the minimum versions of web browsers supported for use with noVNC:

- Chrome 64
- Firefox 79
- Safari 13.4
- Edge 79

Note: The Opera web browser is not supported for use with this unit.

Once the **VNC Server** is enabled on the unit, you can access the unit using noVNC from a standard web browser on your local PC as follows:

1. If necessary, launch the **Network & Automation** instrument to obtain the host name or IP address of the target remote unit.
2. Enter either of the following URLs into a new browser tab to access the noVNC client **main unit**:

http://<Unit_Serial_Number>/novnc_0 or **http://<IP_Address>/novnc_0**

For example: **http://lpx-000480/novnc_0** or **http://192.168.1.72/novnc_0**

3. Enter either of the following URLs into a new browser tab to access the noVNC client on the optional **second screen**:

http://<Unit_Serial_Number>/novnc_1 or **http://<IP_Address>/novnc_1**

For example: **http://lpx-000480/novnc_1** or **http://192.168.1.72/novnc_1**

4. Click **Connect** in the noVNC title screen.

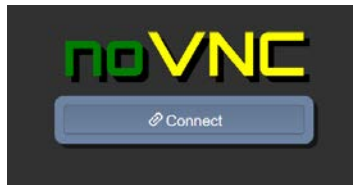


Figure 3-23: noVNC Connect Button

5. For the default username **user**, enter the unit's password: **leader**
6. Switch the display to **full-screen mode** using the noVNC side menu.

This will ensure that you can access the Favorites Toolbar to manage the user interface when working remotely on the unit. You can also set the noVNC Scaling Mode to Local Scaling. In addition, you can choose to enable the function bar popup in the Display Settings.

Note: You may need to reconnect to the unit after a reboot.

Using a Generic VNC Client to Connect Remotely to the Unit

Make a remote connection to the main unit, or optional second screen, using a locally installed VNC Client viewer, as follows:

1. From the Instruments tab of the Setup menus, open the Instrument **Network & Automation** then tap and hold to open the options menu.
2. For the option **VNC Server** select **Enabled**.
This enables the VNC server on the unit. The Network & Automation instrument displays the total number of current VNC server connections.
3. Install a VNC client viewer of your choice (for example, VNC® Connect) on the remote PC and launch the viewer.
4. Initiate a connection to the unit by entering the IP address or hostname of the unit displayed in the **Network & Automation** instrument.
5. When required, enter the password: **leader** for the default username **user**.

A view of the desktop will open on your computer screen. You can now control the unit or optional second screen with your local mouse and keyboard. You should see that the total number of current VNC server connections displayed in the Network & Automation instrument has increased.

To connect to the optional second screen using a generic VNC client, set the port to **:1** or **5901**.

Note: Remote monitoring of the audio output from the unit is not available over VNC.

Using SFTP

You can use a standard SFTP client (e.g., FileZilla, etc.) to perform the following tasks on the unit:

- Upgrade the software from a remote location, see [Upgrading the Unit](#).
- Retrieve event logs, presets, screenshots and user-defined test pattern files
- Delete presets, screenshots and user-defined test pattern files
- Upload presets from another unit and user-defined test patterns.

Connecting to the Unit Using SFTP

Run your chosen SFTP client application on the computer from which you will connect to the unit.

Enter the unit's host address using the specific IP address of your unit or its hostname, in one of the following formats:

- **sftp://192.168.0.70**
- **sftp://lpx-000094.local**

In addition, enter the following details:

- Username: **user**
- Password: **leader**
- Port: **22**

Once connected, open the transfer directory to access the following folders on the unit:

- **common licenses**
- **log** - for the Event Log

- presets
- screenshots
- testPatterns
- upgrade
- userTestPatterns

You can download files from any of these folders or delete files from the userTestPatterns, upgrade, and presets folders. In addition, you can add or upload files to the presets, upgrade and userTestPatterns folders.

Using a Web Browser

You can use a standard web browser to view and retrieve Event Log, Screenshot, Preset, and User Test Pattern files.

Connecting to the Unit Using a Web Browser

In the web browser of your choice on your computer, enter the IP address of your unit or serial number, in either of the following formats:

- **http://192.168.0.70** or
- **http://lpx-<Serial_Number>**

For example:

- **http://lpx-000028**

Once connected, you can access any of the following folders:

- userTestPatterns
- presets
- logs
- screenshots
- usbDrives

When connected, you should see a similar display to the following (depending on your choice of browser):

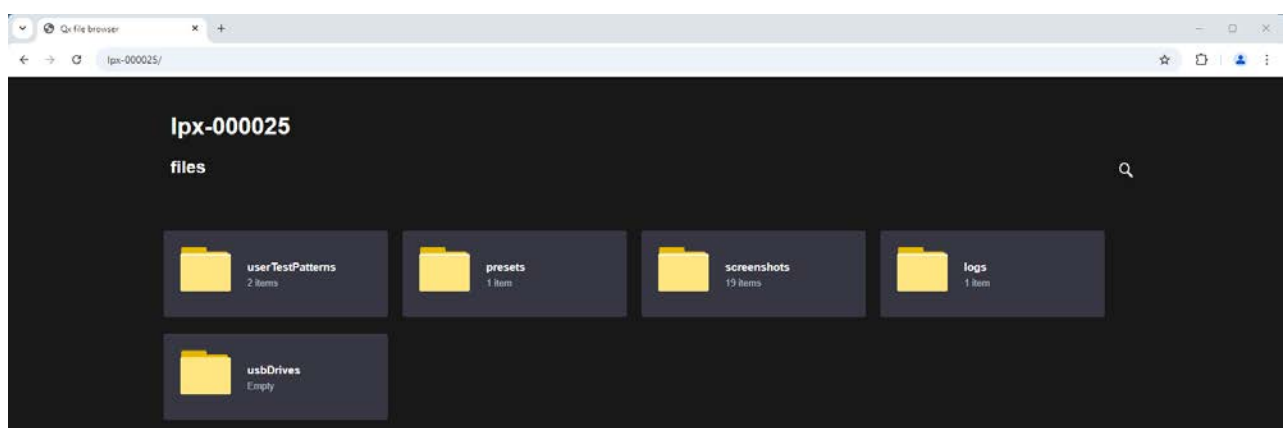


Figure 3-24: Web Browser Access to the Unit's Folders

View and save files to your computer as required.

Note: Files cannot be deleted using the web browser.

Remote Control Loading of Presets

You can use the 15-pin D-type remote control connector (labeled **REMOTE** on the rear panel) to load presets using the GPIO interface.

Two methods are available to load presets using remote control:

- **Bit mode:** Each of the pins 2 to 9 of the REMOTE GPIO connector corresponds to a bit in the preset series. Use pin 2 to pin 9 to load presets **1 to 8**.
- **Binary mode:** Set pin 2 as the least significant bit (LSB) to pin 7 as the most significant bit (MSB) and use binary code to load presets **1 to 60**.

Select the desired method from the options menu of the **System IO** instrument:

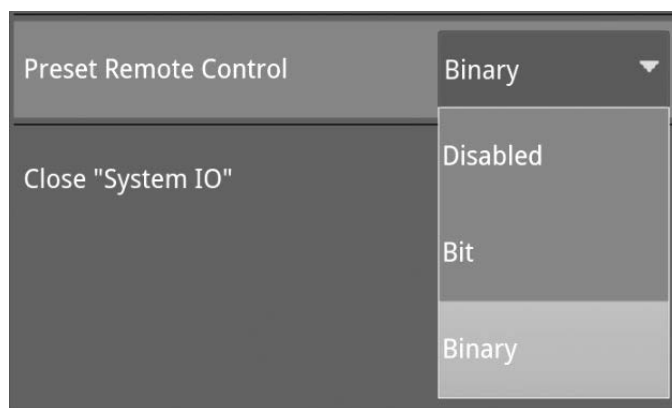


Figure 3-25: Selecting the Preset Remote Control Method in System IO Options Menu

Note: Only the first 63 presets can be triggered via GPIO.

Control Timing

The input connectors respond to active-low signals. Do not apply negative voltages or voltages that exceed +5 V. The active-low signal must be stable for at least 350 ms. Following an active-low signal, wait at least 1 second before applying the next signal.

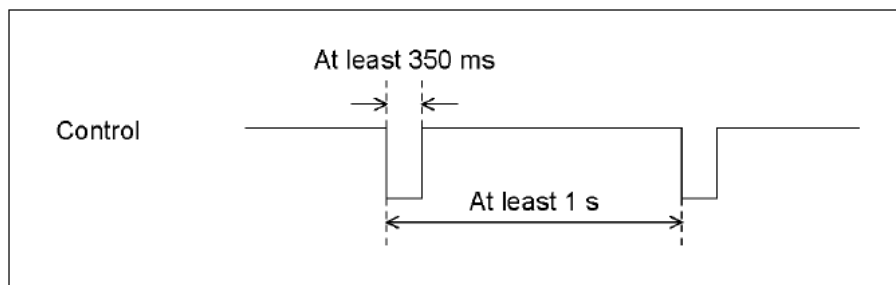


Figure 3-26: Control Timing 1

After making a setting, it may take about 3 seconds for the operation to finish. If you configure subsequent settings before the initial operation finishes, only the last setting will take effect. All settings in between will be discarded. (In the following figure, Control 2 will be discarded.

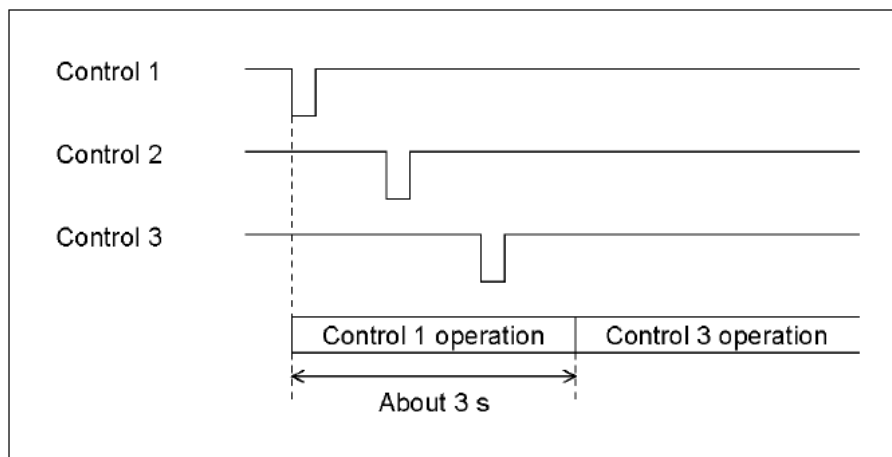


Figure 3-27: Control Timing 2

SDI Setup and Configuration

- [SDI Connections to the Unit](#)
 - [SDI Input and Output Schematic](#)
 - [SDI Input / Output Configurations](#)
 - [SDI Inputs Using BNC Connectors](#)
 - [SDI Outputs Using BNC Connectors](#)
- [System IO](#)
- [Video Timing & System Reference](#)

SDI Connections to the Unit

Overview

All SDI inputs and outputs are by way of BNC connectors for the transmission of SDI signals in to and out of the unit as shown below.



**BNC Connector (Male) on
SDI Cable**



**BNC Connector (Female)
on Rear Panel**

Figure 4-1: BNC SDI Input / Output Connectors

SDI Input and Output Schematic (SDI Input / Output)

The following graphic shows a schematic view of SDI inputs and outputs, to and from the Analyzer and Generator circuitry respectively, using BNC connectors.

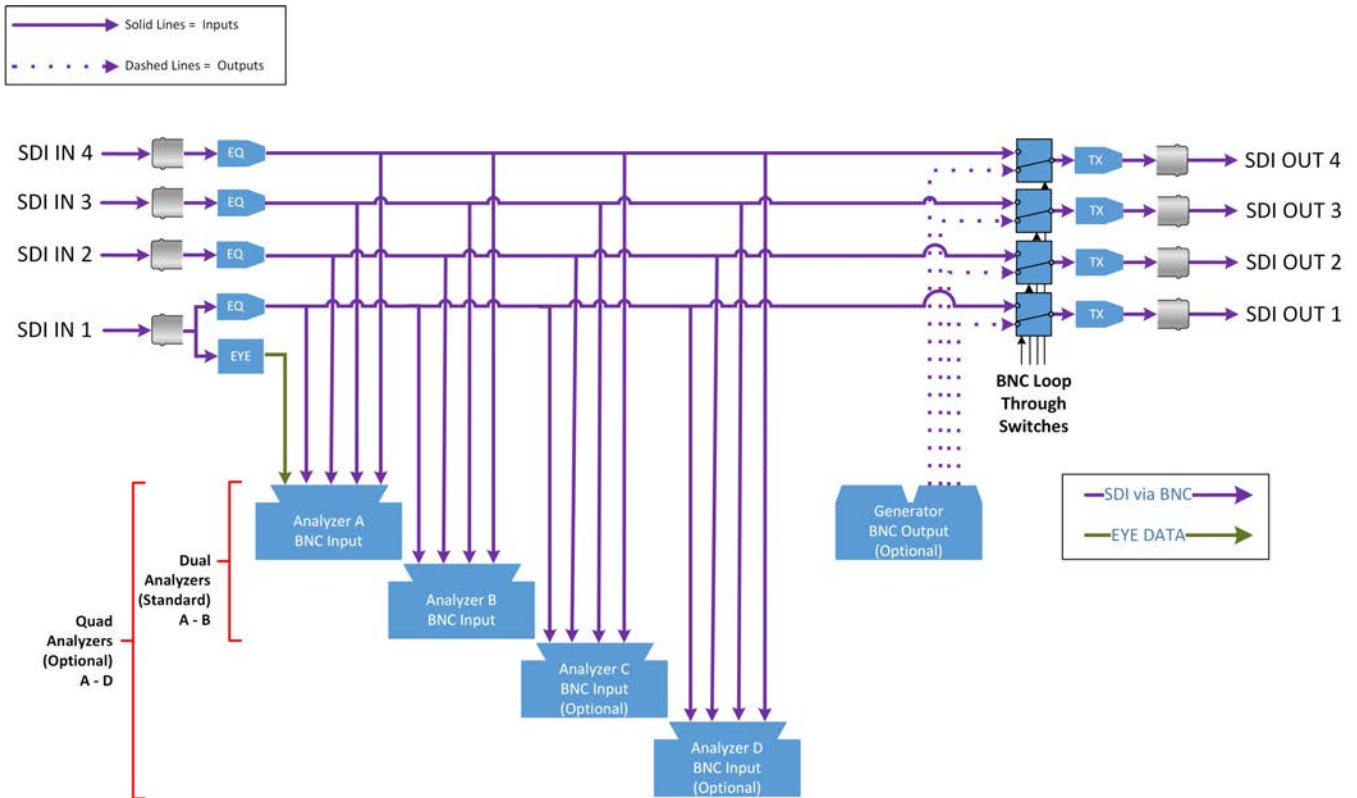


Figure 4-2: SDI Input / Output Connectors to Analyzer / Generator Circuitry

Where:

- **EQ** = SDI Cable Equalizer
- **Tx** = Signal Transmitter
- **EYE** = RTE™ Real-time Eye Processing Circuitry

For SDI Inputs:

- All BNC input connectors **SDI In 1**, **SDI In 2**, **SDI In 3**, and **SDI In 4** support both SD-SDI and HD-SDI input, including 270M, 1.5G, 3G as standard
- All BNC input connectors **SDI In 1**, **SDI In 2**, **SDI In 3**, and **SDI In 4** can optionally support UHD SDI input, including: 6G-SDI and 12G-SDI (requires **LPX500-UHD** license).
- Optional Eye and Jitter analysis is available for the source input connected to **SDI In 1** only.

Note: The SDI BNC Loop feature for HD-SDI inputs is available with SDI connector configuration BNC In / BNC Out only.

For SDI Outputs:

- To generate multi-link signals, when the optional generator is available (**LPX500-GEN**) the corresponding SDI Out BNC connectors are used.

- To duplicate a generated single-link signal, the option **Generator Output Copy** must be **Enabled** (see [Generator \(Video\)](#)) and the desired SDI Out connector must be set to **Generator** (see [System IO](#)). The Generator Output Copy function is not available for SD-SDI signals.
- To loop-out an active SDI In signal, see [System IO](#).

SDI Input / Output Configurations

Depending on your purchased software options, your unit may have two (standard) or four (requires software option: **LPX500-QUAD**) analyzers.

You can choose different combinations of BNCs for input / output, to and from the unit, as follows:

- Single Link Inputs: Use BNCs **SDI IN 1, 2, 3**, or **4**
- Dual Link Inputs: Use BNCs **SDI IN 1** and **2**, or **SDI IN 3** and **4**
- Quad Link Inputs: Use BNCs **SDI IN 1, 2, 3**, and **4**.

You can assign any of your connected SDI inputs to the dual or quad analyzers using the **Analyzer Input Assignment** dialog in the Settings tab, see [Managing Multiple Analyzers](#).

Select the SDI output connector configuration you require in the **System IO** instrument options menu by configuring the **BNC Out** parameters. For more information, see: [System IO](#).

SDI Inputs Using BNC Connectors

Note: You need to assign the source SDI input to the desired Analyzer using the **Analyzer Input Assignment** dialog in the Settings tab of the Setup Menus.

The Physical Layer input connection for eye and jitter is the right-most BNC input connector (when viewed from the rear) fitted with a black-colored nut. This provides the multirate eye and jitter connection from 270M SD-SDI to 12G HD-SDI.

Note: The **SDI In 1** BNC is always the source SDI input on which physical layer Eye / Jitter analysis is performed, irrespective of SDI inputs connected to BNCs **SDI In 2** through **4**.

The input connectors to the Analyzer have the following capabilities:

- Four 270M SD-SDI to 12G HD-SDI capable, input BNC connectors: **SDI In 1, 2, 3, and 4**.

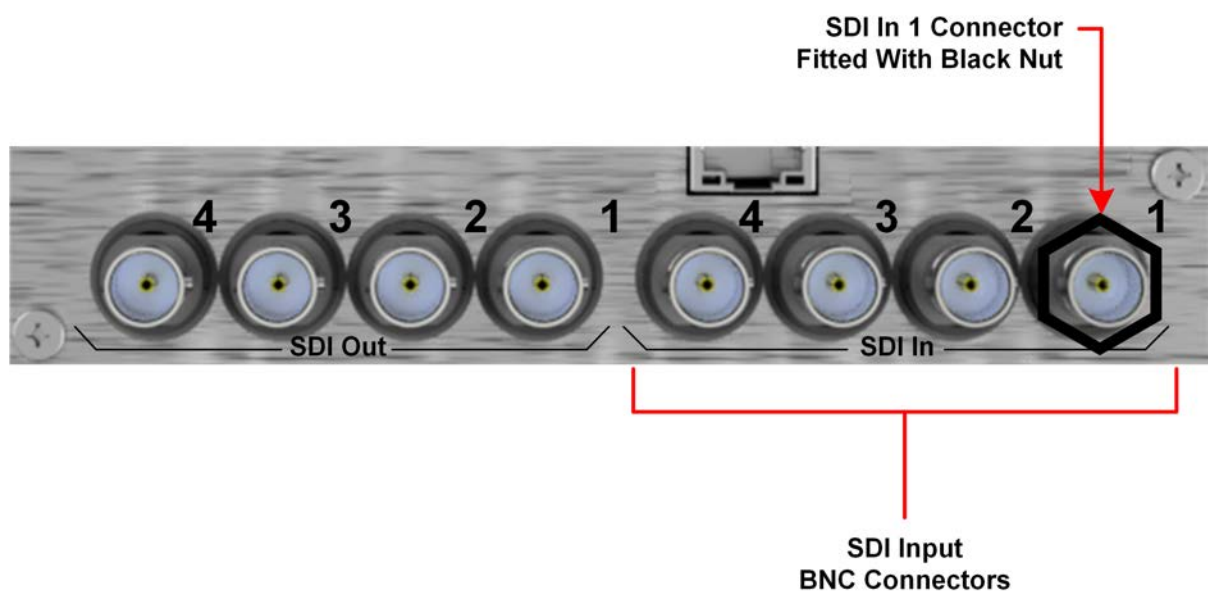


Figure 4-3: Rear Panel SDI Input BNC Connectors

Up to four SD-SDI or HD-SDI inputs can be connected at any one time. The system automatically determines the signal-set to analyze on each BNC input, whether single-, dual-, or quad-link.

For HD-SDI inputs, if the SMPTE ST 352 packets are known to be incorrect then you can select **Ignore** for the parameter **Payload Identifiers** in the **Analyzer - Video Standard** instrument options menu.

SDI BNC In-to-SDI BNC Out signal pass-through is provided by selecting the **Loop SDI In 1, 2, 3, or 4** parameter in the **System IO** or **Generator** instrument options menu, making the SDI input signal(s) available on the corresponding SDI BNC output connector(s).

For a summary of the input and output capabilities with SD-SDI and HD-SDI, see [Table 4-1](#) in the following section.

SDI Outputs Using BNC Connectors

You can control the output signal independently on each of the four SDI BNC output connectors **SDI Out 1, 2, 3, or 4** using the **System IO** or **Generator** instruments.

SDI Out 1 is present, by default, and carries the first HD-SDI signal in the group, **SDI Out 2** is active for dual- and quad-link HD-SDI standards, and **SDI Out 3** and **SDI Out 4** are active for quad-link HD-SDI standards.

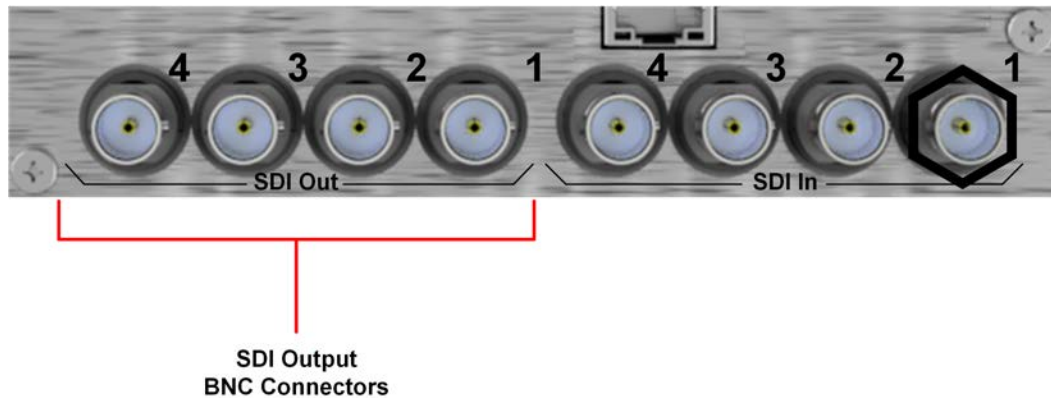


Figure 4-4: Rear Panel SDI Output BNC Connectors

For each of the four output BNC connectors, you can select from the following optional modes either from the options menu of the **System IO** instrument or using the SDI Output Assignment submenu of the **Generator**:

- **Off:** Mutes the selected SDI Out connector.
- **Loop SDI in 1, 2, 3, or 4:** Enables you to repeat the signal presented to the SDI BNC inputs as an output from the SDI BNC Outputs. When selected, there is a direct mapping between the **SDI In** BNC connector and its corresponding **SDI Out** BNC connector, for example, **SDI In 1** loops to **SDI Out 1**, **SDI In 2** loops to **SDI Out 2**, and so on.
- **Generator:** The unit sends the output signal from the Generator to the selected SDI Out connectors. For single link signals you can enable the **Generator Copy** mode in the options menu to copy the signal to additional output connectors.

Table 4-1 : Summary of SD- and HD-SDI Capabilities on BNC Input and Output Connectors

BNC Connector	SD-SDI			HD-SDI		
	SD-SDI Input	Generator Copy	Loop Through	HD-SDI Input	Generator Copy	Loop Through
Input Connectors						
SDI In A	Yes	N/A	Yes	Yes	N/A	Yes
SDI In B	Yes	N/A	Yes	Yes	N/A	Yes
SDI In C	Yes	N/A	Yes	Yes	N/A	Yes
SDI In D	Yes	N/A	Yes	Yes	N/A	Yes
Output Connectors						
SDI Out A	N/A	N/A	Yes	N/A	Yes	Yes
SDI Out B	N/A	Yes	Yes	N/A	Yes	Yes
SDI Out C	N/A	Yes	Yes	N/A	Yes	Yes
SDI Out D	N/A	Yes	Yes	N/A	Yes	Yes

Where: N/A = Not Applicable

Colorimetry Range Definitions for the LPX Series

The LPX Series supports the analysis of 10 or 12 bit video signals. For each RGB or YCbCr color channel in a 10 bit video signal there are 1024 possible values, from **0 to 1023**. This represents the **Full Range**, abbreviated to **FR** in the **Manual Configuration** dialog of the **Analyzer - Video Standard** instrument. See [Figure 4-5](#), adapted from EBU R 103, for a schematic overview.

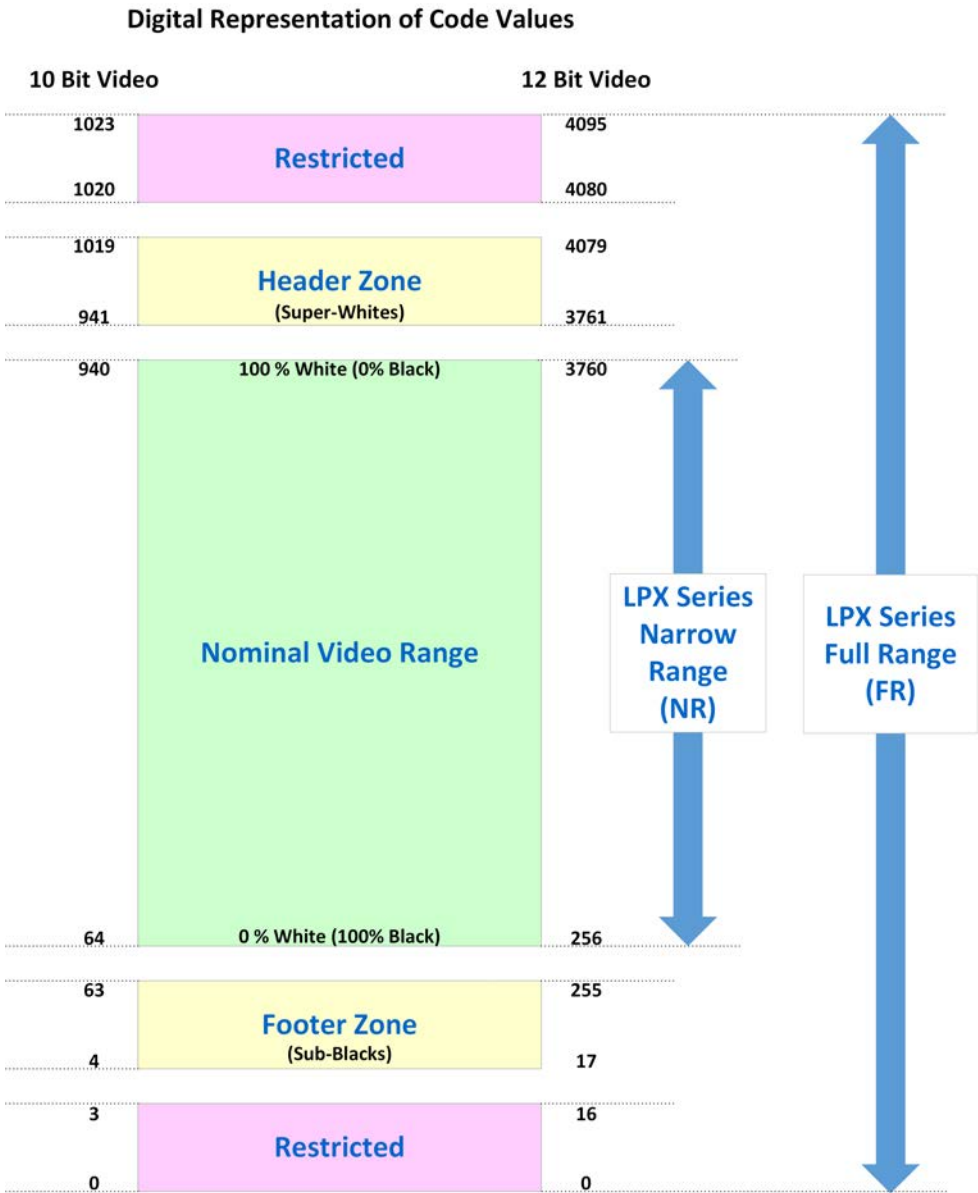


Figure 4-5: Typical Video Code Values and Equivalent LPX Range Definitions (SDI Only)

SMPTE defines the first 4 bits (**0 to 3**) and last 4 bits (**1020 to 1023**) of a 10 bit video signal as reserved for signal processing so these must not contain video data. This leaves the range of available code values for color display as **4 to 1019**. In this range, **4** represents the darkest black of the sub-blacks and **1019** the brightest white of the super-whites at the bottom and top of the color scale, respectively. The nominal video range for a 10 bit video signal is the code range extending from 100% Black to 100% white, excluding the sub-blacks and super whites. For a 10 bit video signal this range is between code values **64** and **940** and is defined as **Narrow Range (NR)** in the LPX Series.

In addition, EBU R 103 defines a header zone between the nominal video range and the restricted bits at the upper extent of the range and a footer zone between the nominal video range and the

restricted bits at the lower extent of the range. The header and footer zones, containing the super-whites and sub-blacks respectively, are intended as buffer zones in case color ranges exceed the upper or lower limits of the nominal video range. When converting from YCbCr to RGB formats and *vice versa*, the foot- and headroom provide buffer space if required. The number of code values in the header and footer depends on the bit depth of the video signal.

For a 10 bit video signal there are 1024 possible values in the Full Range (**FR**) from **0** to **1023**. Similarly, for a 12 bit video signal there are **4096** possible values giving the Full Range (**FR**), from **0** to **4095**. In this case, the first and last 15 bits are reserved for signal processing.

To summarize, the following table shows the Full and Narrow ranges as implemented in the LPX Series for SDI signals:

Range Terminology in LPX Series	10 Bit Code Values	12 Bit Code Values
Full Range (FR)	0 - 1023	0 - 4095
Narrow Range (NR)	64 - 940	256 - 3760

For more detailed information about video signal ranges, see the recommendation EBU R 103 *Video Signal Tolerance in Digital Television Systems*.

Overview

Due to the complexity of the UHDTV standards, LeaderPhabrix has introduced innovative ways to display status information. The **System IO** instrument provides a quick status overview of the signal inputs and outputs connected to the unit. In addition, System IO displays the status of signal interfaces, external reference, cable length and attenuation, and connector details.

System IO also enables you to select the BNC connectors for your SDI outputs using the options menu. In addition, a **Loop** function enables you to pass-through the SDI BNC input signal(s) making them available on the corresponding **SDI BNC** output connector(s).

System IO for SDI Input

The top half of the instrument window shows a graphical view of the rear panel connectors, displaying from left to right: SDI BNC outputs, SDI BNC inputs, and external reference. In addition, the connector icons show the active I/Os at any of the connectors).

With the optional Eye functionality (chassis option **LPX500ISE**) you will see the legend **eye** displayed above the connector representing SDI In 1, showing that physical layer eye and jitter analysis is available for SDI input on **SDI In 1**.

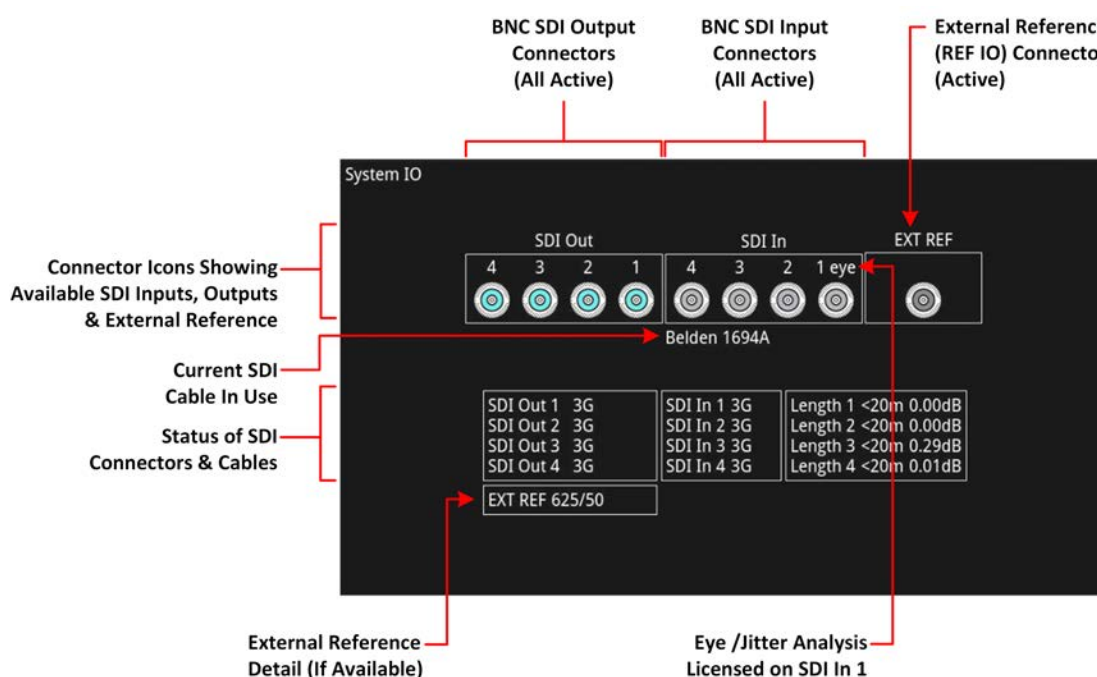





Figure 4-6: System IO Instrument Showing Analyzer Input as SDI Source

Active SDI outputs are indicated by color-coded connectors; with the color assigned by the Generator color scheme selected in the Display Settings, see the section [Modifying the Display Options](#).

When successfully receiving SDI inputs on SDI In 1 to 4, the SDI In connector icons display a light-gray middle ring. A connector icon with a black middle ring indicates that a signal is not present, as shown below:

-  Active SDI input (or external reference) to rear panel BNC.
-  No input /output to / from rear panel BNC.
-  Active SDI output from rear panel BNC (requires option **LPX500-GEN**).

Instrument Menu Options

You can configure the SDI signal IO mechanism using the instrument options menu.



Figure 4-7: System IO Instrument - Menu Options

The following table lists the configurable parameters of the System IO instrument:

Table 4-2 : System IO Menu Options

Item	Options	Description
BNC Out 1 BNC Out 2 BNC Out 3 BNC Out 4	Off Generator (Default) Loop SDI In 1, 2, 3, or 4 (SD-SDI or HD-SDI)	Choose whether to configure each SDI BNC Out connector (1, 2, 3 or 4) individually, to use either the Loop SDI In 1, 2, 3, or 4 signal, the Generator signal, or to switch off the output.
Cable Type	Belden 8281 Belden 1505 Belden 1694A (Default) Belden 1855A Canare L5CFB Image 1000	The selected cable type is shown below the SDI In BNC connector view. Note: Cable lengths can only be estimated if the cable is one of these supported types.
Preset Remote Control	Disabled (Default) Bit Binary	Use to enable the loading of presets using remote control by way of the 15-pin GPIO D-type connector on the rear panel. You can choose between Bit mode and Binary mode. See Remote Control Loading of Presets for further details.

Signals presented to the unit's SDI BNC Inputs can be repeated out on the SDI BNC outputs of the unit, by enabling the **Loop SDI In 1, 2, 3, or 4** options for the appropriate interface connector(s). When this loop feature is activated, there is a one-to-one mapping between the BNC 1, 2, 3, and 4, inputs and outputs respectively.

Note: To use the Loop SDI feature for a single-link input signal you need either a valid SD-SDI or HD-SDI input connected to any of the input BNCs. You can also loop-out a connected dual or quad link signal but you need to ensure that all components of the signal are looped out. If not the receiving unit may be unable to interpret the received signal correctly.

To duplicate output of the generated single-link or dual-link video standard on all unused SDI Out BNCs, enable the option **Generator Copy** in the **Generator** options menu, see the section [Generator Copy and SDI Out Configuration](#) for more information.

Note: Copying of the Generator output is not applicable to quad-link standards as all outputs are used.

The presence of an external reference and its standard is also displayed graphically with a colored connector. If you set the system to lock to an external reference and achieve a stable lock, then the inner ring of the EXT REF BNC connector icon is highlighted in gray. The following EXT REF BNC colors relate to various external reference statuses:

- Gray (reference connected)
- Red (reference in error)
- Black (no reference connected)

Note: The EXT REF BNC shows the status of an external reference only, which is not necessarily the system reference. Overall system reference is selected in the **Video Timing and System Reference** instrument.

The tables displayed below the connector icons show the input and output status, cable length and attenuation, and external reference standard and status information. You can hover the mouse over the external reference information to display a tooltip containing additional status information, if necessary.

The external reference table displays the following states:

- EXT REF: No Signal, Unstable, 525/59.94, 625/50, etc.

If an external reference is not currently being used as system reference, its field text will display in yellow. When an external reference is the system reference, this table field text is colored white.

Estimated measurements for the maximum cable length (in meters) and attenuation (in decibels) are displayed for each SDI BNC input. The System IO instrument displays the cable lengths as follows:

- SD-SDI input on BNC In 1, 2, 3 or 4: Displays the cable length as **<50m**
- HD-SDI input on BNC In 1, 2, 3 or 4: Displays the cable length as **<20m**.

To measure the length of a connected cable, be sure first to select the correct cable type from the instrument options menu.



Overview

The **Video Timing & System Reference** instrument provides the following functional areas:

- An **SDI** tab to measure the timings of source inputs, allowing you to calculate any timing offsets required to synchronize broadcast equipment,
- An **SDI Co-timing** tab to evaluate the co-timing of dual and quad link SDI inputs, enabling you to ensure that the source inputs adhere to the required standards.

This section covers the measurement and adjustment tools available for SDI input to the dual or optional quad analyzers.

Video Timing in the SDI Tab

The SDI tab of the **Video Timing & System Reference** instrument window enables you to measure SDI input timings against a configurable reference signal to which the unit is locked. You can then adjust offset timings to assess and synchronize the output timing of equipment throughout the broadcast chain.

You can set the System Reference to an external reference, SDI, or Free Run.

The instrument displays the following resulting measurements in both spatial units (lines and pixels) and time units (μs or ns):

- Measured Timing
- Offset to Apply (with External Reference and SDI only)
- Offset Timing (with External Reference and SDI only).

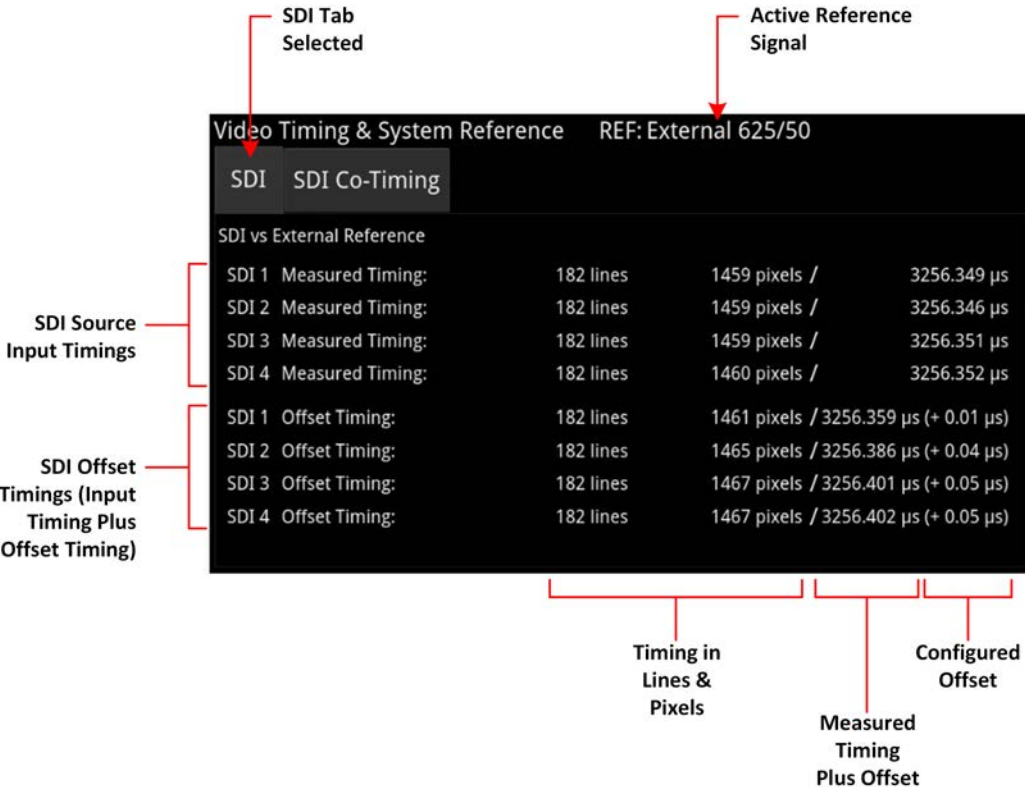


Figure 4-8: Video Timing & System Reference Instrument (SDI Tab)

Video Timing in the SDI Co-Timing Tab

The **SDI Co-Timing** tab displays a graphical view of timing information for each input of either a dual link (SDI In 1 and 2 and/or optionally SDI In 3 and 4) or quad link (SDI In 1, 2, 3 and 4) source input.

Many of the standards associated with UHD TV are a combination of signals to form the image plane, for example, four 3G inputs combined to generate a 12G composite picture. Relative timing tools show whether the dual or quad elements creating the single picture are correctly aligned and comply with the reference. The instrument presents both graphical indicators and numeric values for these critical measurements.

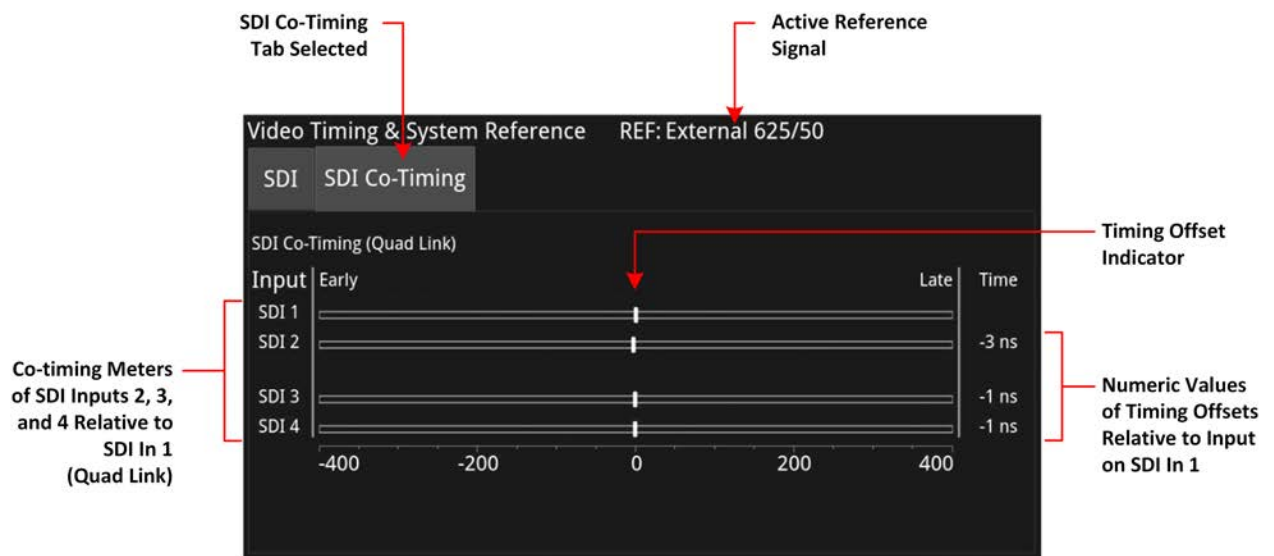


Figure 4-9: Video Timing & System Reference Instrument (SDI Co-Timing Tab)

The horizontal Early / Late timing meters show whether the timing offset on each subsequent input of the quad or dual link is earlier or later than the input signal on SDI In 1. The Instrument displays the actual timing offset values in the Time column to the right of the timing meters. Early timings are shown as negative values and late timings are positive. Any red text indicates a measurement outside the specification.

Instrument Menu Options

The following table lists the configurable parameters of the Video Timing & System Reference instrument submenu:

Table 4-3 : Video Timing & System Reference Menu Options

Item	Options	Description
System Reference	Free Run (Default) External Reference SDI	System reference locking controls define the reference to which the unit, and any signal it generates, is locked. By selecting the default option Free Run, the system locks to its internal oscillator to set its timing reference. If the system loses the external or SDI reference signal for some reason, the system will automatically switch to use the Free Run reference signal. You can view system reference lock status information by hovering the cursor over the system reference in the upper-right corner of the instrument. Any error or warning conditions concerning the state of the reference are dis-

Item	Options	Description
		played in red or yellow respectively.
SDI 1 Input Time Offset	–999999.0 to 999999.0 μ s	Set the timing offset in microseconds (μ s).
SDI 2 Input Time Offset	–999999.0 to 999999.0 μ s	Set the timing offset in microseconds (μ s).
SDI 3 Input Time Offset	–999999.0 to 999999.0 μ s	Set the timing offset in microseconds (μ s).
SDI 4 Input Time Offset	–999999.0 to 999999.0 μ s	Set the timing offset in microseconds (μ s).
Set SDI 1 Input Offset to current	System Control	Sets the input measurement offset to the same position as the current SDI In 1 source input.
Set SDI 2 Input Offset to current	System Control	Sets the input measurement offset to the same position as the current SDI In 2 source input.
Set SDI 3 Input Offset to current	System Control	Sets the input measurement offset to the same position as the current SDI In 3 source input.
Set SDI 4 Input Offset to current	System Control	Sets the input measurement offset to the same position as the current SDI In 4 source input.
Clear Input Offset	System Control	Removes any input measurement offset(s).
Co-Timing Mode	Quad Link (Default) Dual Link	Select whether the SDI Co-Timing tab displays inputs for either a quad link, or one or two dual links , depending on the number of licensed analyzers in your unit.

System Reference
External Reference ▼

SDI 1 Input Time Offset
0.01 μ s
▲ ▼

SDI 2 Input Time Offset
0.00 μ s
▲ ▼

SDI 3 Input Time Offset
0.00 μ s
▲ ▼

SDI 4 Input Time Offset
0.00 μ s
▲ ▼

Set SDI 1 Input Offset to current

Set SDI 2 Input Offset to current

Set SDI 3 Input Offset to current

Set SDI 4 Input Offset to current

Clear Input Offset

Co-Timing Mode
Quad Link ▼

Figure 4-10: Video Timing & System Reference Options Menu

Signal Generation Instruments

Note: Requires the **LPX500-GEN** License.

This chapter describes the unit's signal generator Instruments and includes the following sections:

- [Generator Video](#)
- [Generator Audio](#)



Requires Option(s):	LPX500-GEN
---------------------	------------

Overview

The optional **Generator** instrument enables you to generate the following standards, depending on the configuration of your unit:

- HD-SDI

Note: To generate UHD standards, you also require option **LPX500-UHD**.

The generation of SD-SDI video standards is not currently supported.

The options menu of the Generator provides access to further dialogs to:

- Configure the video standard.
- Select a test pattern for the generated output.
- Configure the audio signals generated.

Each configuration method is different depending on the desired output.

Generating SDI Output (Requires Option: LPX500-GEN)

Note: The generation of SD-SDI video is not currently supported in this software version.

The Generator displays a status overview of the following when generating SDI output:

- Details of the current video standard being generated
- Description of the selected test pattern
- Status of pathological insertion and, if enabled, details of the pairs inserted
- SDI output and mapping table showing which generate data are sent to which SDI Out output connectors.
- Audio signal presence and sub-images
- Reference status
- Output Offset adjustment.

The output type (**SDI**) is displayed in the title bar.


Generator - SDI		
Video standard	1920x1080p50 YCbCr:422:10 3G A Rec.2020	
Test pattern	100% Bars	
Pathological	Disabled	
	Output	Mapping
SDI Out 1	3G	Full Image
SDI Out 2	No Signal	None
SDI Out 3	No Signal	None
SDI Out 4	No Signal	None
Audio Presence	1: --- 2: --- 3: --- 4: --- 5: --- 6: --- 7: --- 8: ---	
Audio Sub Images	Enabled: 1, 2, 3, 4	
Reference	Free Run, stable	
Offset	None	



Figure 5-1: Generator - SDI Instrument

Configuring the Video Standard

To specify a video standard to generate, either:

- Open the options menu and select **Video Generator Config...** or
- With the spotlight on the Generator window, tap the softkey: 

This displays a configuration dialog from which you can select the desired parameters for the standard from the following columns:

- Resolution
- Frame Packing
- Frame Rate
- Gamut
- OTF

- Sampling
- Bit Depth and Range.

In addition, the **SDI Config** box in the top-right of the dialog enables you to set the HD-SDI output to Level A or Level B, set either single, dual or quad link and, for UHD 4K, select either 2-SI (Two Sample Interleave) or SQ (Square Division).

Selectable parameters are displayed in a bold white font and those that do not apply are grayed-out. If you select an incompatible parameter, the column header is displayed in **yellow** indicating that a correction is required. Simply tap or click the desired parameter value in each of the columns to define the standard, then tap or click **OK** to close the dialog. You can also choose to use the default test pattern for the standard (**Default (Luma Pixel Ramp)**) or open the Test Pattern dialog to select a different test pattern as described in the section [Generator Test Patterns](#).

Resolution	Frame Packing	Frame Rate	Gamut	OTF	Sampling	Bit Depth	SDI Config		
4096x2160	Progressive	60	709	SDR	YCbCr:422	12 FR	Single Link	Level A	2-SI
3840x2160	Interlaced	59.94	2020	PQ	YCbCr:444	12 NR	Dual Link	Level B	SQ
2048x1080	Segmented	50		HLG	YCbCrA:4224	10 FR	Quad Link		
1920x1080		48		S-Log3	YCbCrA:4444	10 NR	 <div>Select Test Pattern</div> <div>Default (Luma Pixel Ramp)</div> <div>OK</div>		
1280x720		47.95		S-Log3 SR Live	RGB:444				
		30			RGBA:4444				
		29.97							
		25							
		24							
		23.98							

Figure 5-2: Generator - SDI Video Configuration (Includes Option LPX500-UHD)

Note: The test pattern may take a few seconds to generate when first selected.

Tap and hold or right-click anywhere in the **Generator** window to display the options menu.

Video Configuration Parameters

The unit generates video standards for a wide range of SDI rates, resolutions, frame rates, image mappings, color gamuts, and transfer curves, depending on the available licenses. You can configure the standard to generate by selecting the required parameters from the following:

Table 5-1 : Generator Video Configuration Parameters (Includes Option LPX500-UHD)

Standard Configuration	Available Parameters			
Video Standard Configuration Parameters				
Resolution	1280x720 1920x1080	2048x1080 3840x2160 (UHD only)	4096x2160 (UHD only)	
Frame Packing	Progressive	Interlaced	Segmented	
Frame Rate	23.98 24 25	29.97 30 47.95	48 50 59.94	60
Gamut	709	2020		
OTF	SDR PQ	HLG S-Log3	S-Log3 SR Live	
Sampling	YCbCr:422 YCbCr:444	YCbCrA:4224 YCbCrA:4444	RGB:444 RGBA:4444	
Bit Depth (and Range)	10 NR	10 FR	12 NR	12 FR
SDI Output Options				
Link Type	Single Link	Dual Link	Quad Link	
SDI Output Level	Level A	Level B		
Quad Processing Type	2-SI	SQ		

Refer to the [LeaderPhabrix](https://www.leaderphabrix.com) website for the licensing requirements to generate different video standards.

Range and Bit Depth Support for Generated Video Standards

The unit can generate video standards with either a full range (**FR**) or narrow range (**NR**) code values for optional SDI output. The LPX500 uses the definitions for Narrow and Full Range as defined in EBU R 103 *Video Signal Tolerance in Digital Television Systems* and SMPTE RP 2077 *Full-Range Image Mapping*.

Note: When you choose to generate a full range standard (either **10 FR** or **12 FR**) for optional SDI output, the generated video is always *clipped* to full protected range, rather than scaled, as defined in SMPTE RP 2077.

For a full range video standard, the Generator window displays **FR** alongside the bit depth label in the description of the Video standard, see [Figure 5-3](#). If FR is not displayed, then the generated standard is narrow range.

12 Bit, Full Range:

Video standard 4096x2160 p 50 YCbCr:422:12 FR BT709 SDR

12 Bit, Narrow Range

Video standard 4096x2160 p 50 YCbCr:422:12 BT709 SDR

Figure 5-3: Generator Video Standard Descriptions Showing Video Color Range Labels

For more information on video signal range definitions as implemented in the LPX Series, see the section [Video Range Definitions for the LPX Series](#).

Generator Test Patterns

To select a test pattern for the standard from the Test Pattern dialog, open the Generator options menu then select either:

- **Test Pattern Config...** or
- **Video Generator Config...** then **Select Test Pattern** or
- With the spotlight on the Generator window, tap the softkey:

Test Pattern
Generator

The Test Pattern dialog displays all test patterns available for the selected video standard and provides two tabs as follows:

- **System Patterns:** Lists standard test patterns supplied with the unit.
- **User Patterns:** Lists any user-defined test patterns loaded into the folder `/userTestPatterns` by the user.

Note: The test patterns available can vary depending on the video standard selected in the Generator.

Tap or click the required test pattern to select, then tap or click **OK** to close the dialog.



Figure 5-4: Generator - Test Pattern Selection Dialog

The first time you select a test pattern, you may notice a slight delay as the unit generates the test pattern and stores it to the target folder. In particular, you may notice a delay with the larger test patterns: Gray Steps, Vertical Luma Ramp, UHD Quad Align, Circle and Circle 2si Numbers. The next time you load that test pattern the unit loads it directly from the cache with no observable delay.

These test patterns include:

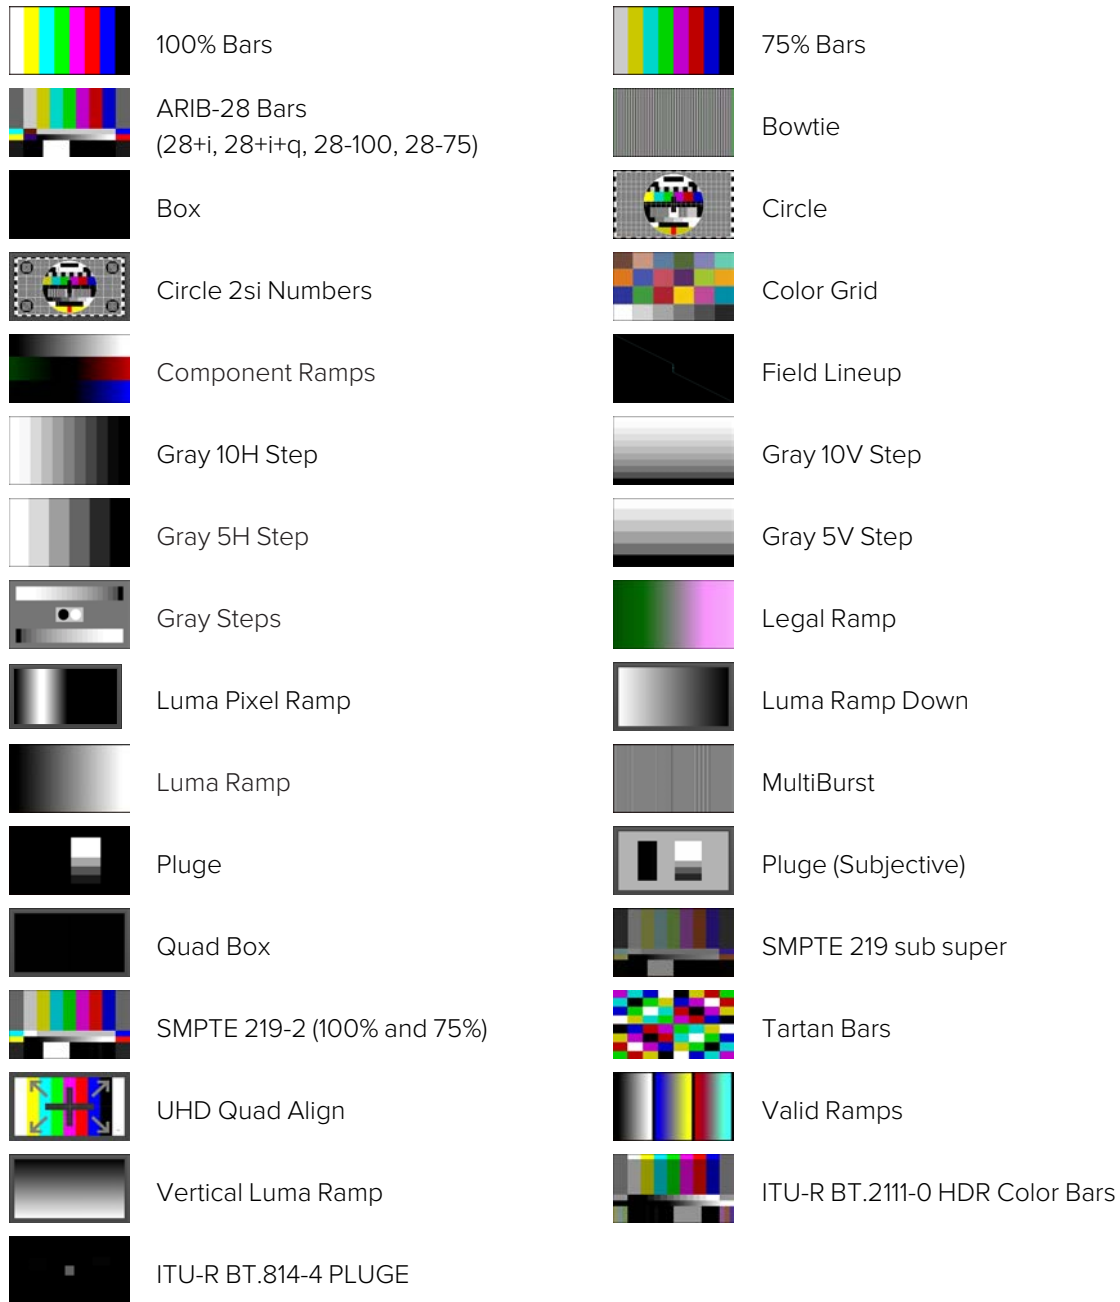


Figure 5-5: Available Test Patterns

HLG, PQ and both S-Log3 and S-Log3 SR Live (HDR Live) test pattern variants are available as part of the **LPX500-HDR** license.

To display a dynamic test pattern, you can choose to overlay a bouncing box on top of any Generator test pattern. To do so, enable the **Bouncing box** in the Generator options menu.

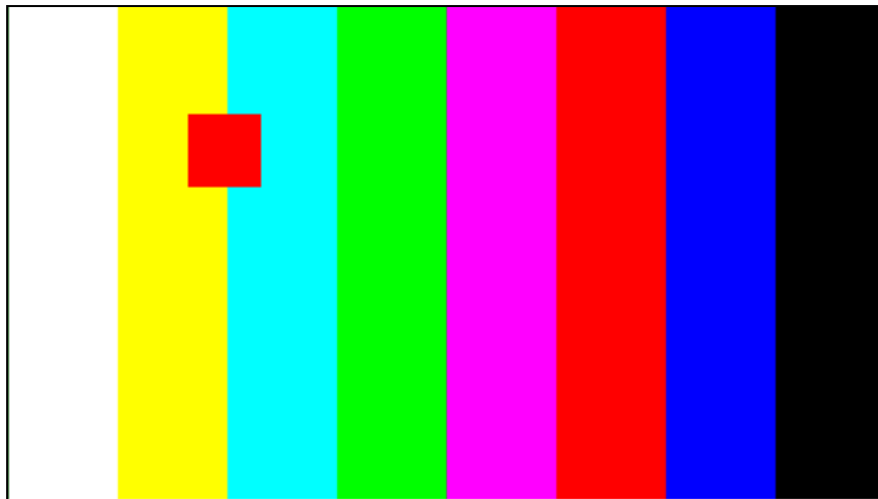


Figure 5-6: Bouncing Box Test Pattern Enabled

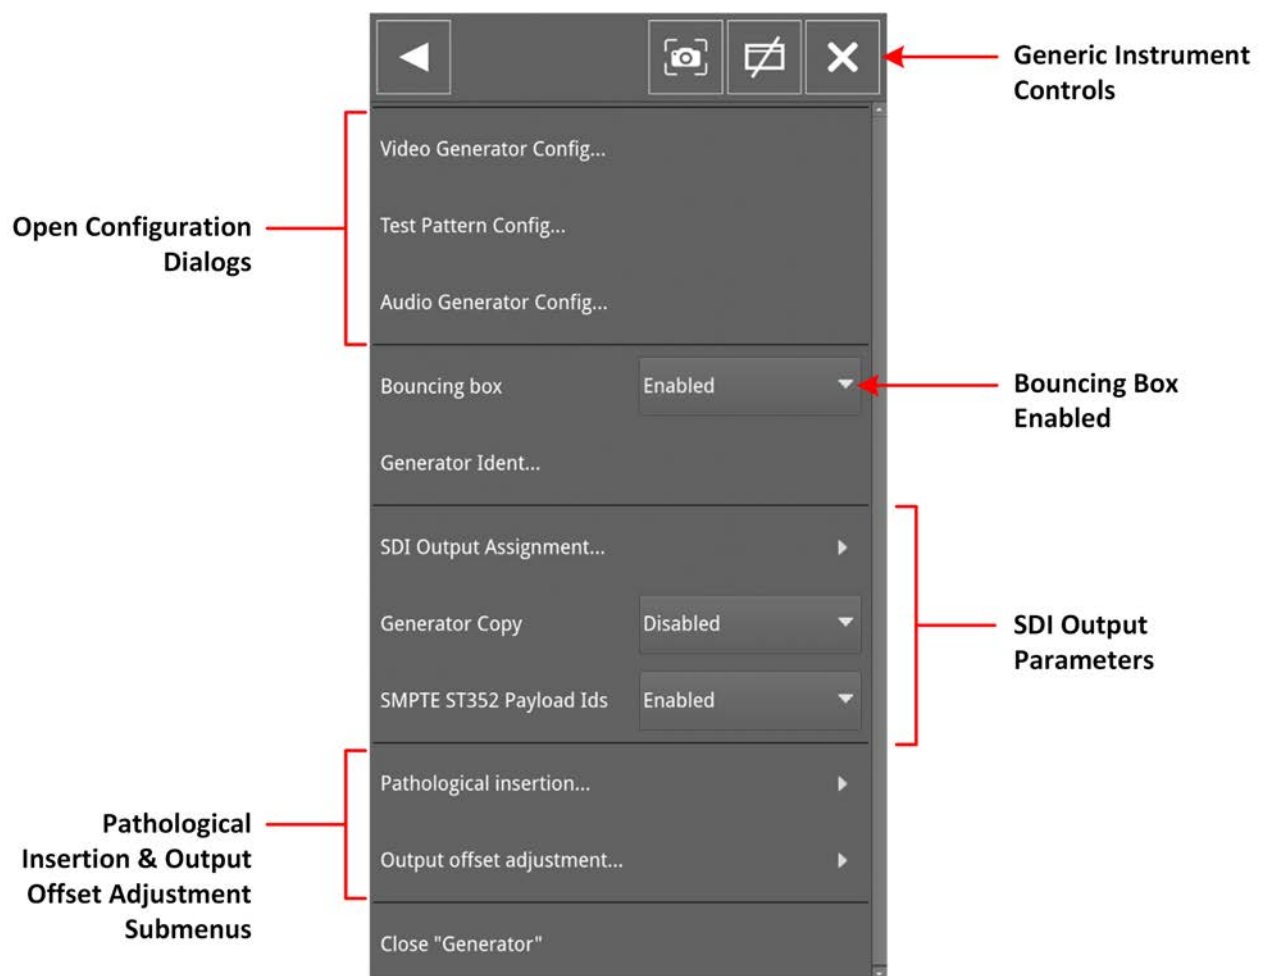


Figure 5-7: Generator - Configuration Options Menu

Including a Generator Text Identifier

You can define a text identifier (or **Ident**) to overlay on the active image of the video standard. An Ident can be useful to identify the source of the generated standard.

You can enter up to four lines of text, with a maximum of 42 characters in each line. In addition, you can select one of nine positions on the Picture instrument window in which to display the Ident, from top-left to bottom right.

To include a text Ident, open the Generator options menu then select **Generator Ident...** to display the Generator Ident dialog.

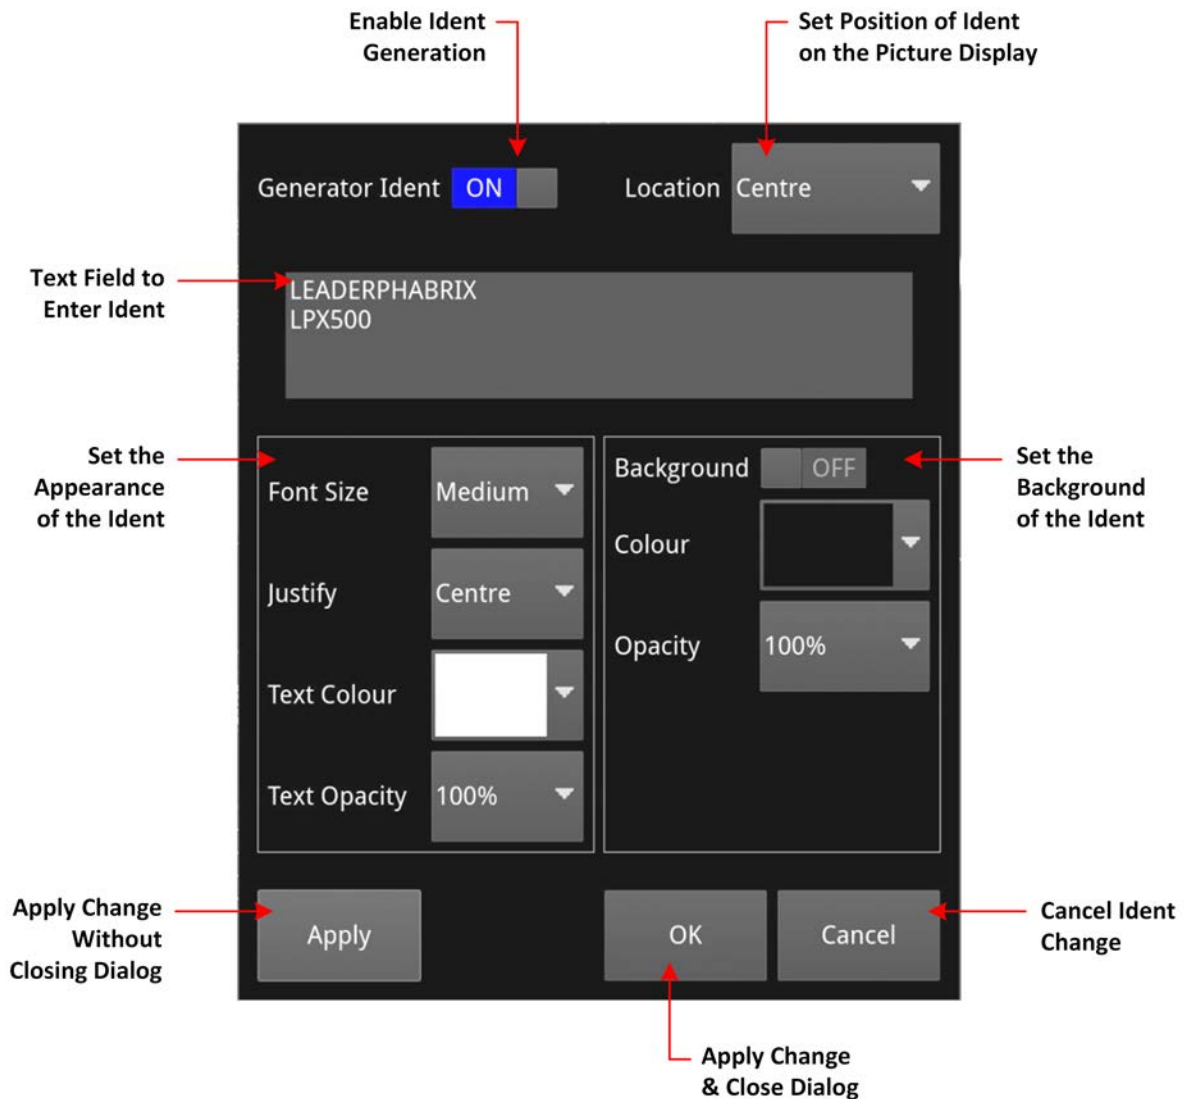


Figure 5-8: Generator - Generator Ident Dialog

Define an Ident as follows:

1. Set the **Generator Ident** toggle switch to **ON** to enable the Ident.
2. Choose where you would like the Ident displayed in the video signal from the **Location** drop-down. You can choose either:
 - Top Left
 - Top
 - Top Right
 - Left

- Center
- Right
- Bottom Left
- Bottom
- Bottom Right

3. Tap or click the cursor in the Ident text entry field.

If enabled in the Display Options, the onscreen keyboard is displayed. Alternatively, either use a USB keyboard connected to the unit or the keyboard connected to the PC from which you are running a remote noVNC session.

Note: If using the onscreen keyboard, remember to tap or click **Save** after entering the Ident text to save your changes back to the Generator Ident dialog.

4. Define how you want the ident text to appear in the video picture. You can set the following:

- **Font Size:** Small, Medium, Large
- **Justify:** Left, Center, Right
- **Text Color:** Select from the color picker by tapping or clicking anywhere in the color panel. If you need to refine your selection, use the rotary control on the unit, or the mouse scroll wheel if working remotely, for numeric entry in the RGB HSV fields.

Note: The selected text (and background) color may change depending on the gamut and transfer function (OTF) selected for the generated video standard.

- **Text Opacity:** 25%, 50%, 75%, 100%

5. Set the background attributes of the Ident. You can set the following:

- **Background:** On, Off
- **Background Color:** Select from the color picker using the rotary control on the unit, or the mouse scroll wheel if working remotely, for numeric entry in the RGB HSV fields, if necessary.

Note: The color lightness value (V) component of the background color is set to zero (black) by default when you select a color in the hue / saturation panel. To change the color of the background from black, select a lightness value in the Value sidebar at the right-hand side of the color picker. You will see the number change from zero in the **Value (V)** field to show the changed background color. For more information see the section [Using the Color Picker](#).

- **Background Opacity:** 25%, 50%, 75%, 100%

6. Click either **Apply** to review your changes while keeping the Generator Ident dialog open, or **OK** to save your changes and close the dialog.

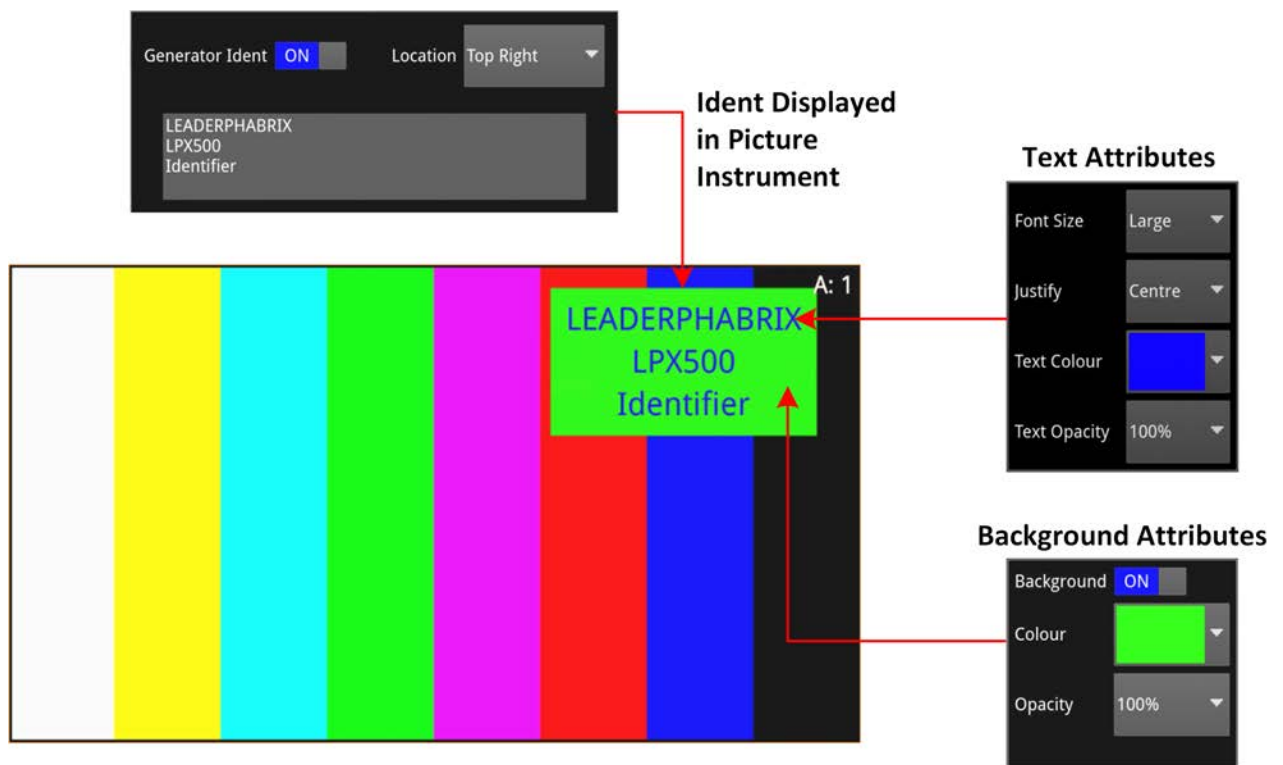


Figure 5-9: Generator Ident Displayed in Picture Instrument

User Test Patterns and Images

You can upload your own, custom test images to the unit if required.

Note: User test files must be in the Tagged Image File Format (**TIFF**) and match the exact parameters (pixel resolution, frame packing, field / frame rate, gamut, sampling, and bit depth) of the video standard you intend to use. If these conditions are not satisfied, the user test pattern will not be displayed in the **User Patterns** tab of the Test pattern selection dialog.

The specifications for user test files are detailed below:

Table 5-2 : Required Format of User Test Pattern Images

Format	Type	Extension	Pixel Resolutions	Bit Depth	Pixel Order
TIFF	Native (Files converted to TIFF from other formats are not supported)	.tif	1280 x 720 1920 x 1080 2048 x 1080 3840 x 2160 4096 x 2160	16 per RGB Component, 48 per Pixel	Interleaved

Note: Full range TIFF image files are clipped to full protect range; no scaling is applied.

If you have direct access to the unit, you can upload user test files using the [File Manager](#). If you have only remote access to the unit, use SFTP to upload test files as described in the section [Remote Connection to the Unit](#).

Upload user test files to the **transfer/userTestPatterns** directory and then restart the unit.

User test images will then be available in the **User Patterns** tab of the Generator **Test pattern selection** dialog as long as the correct standard is selected in the Generator.

Generator SDI Output Assignment

You can configure the SDI signal output to the BNC connectors using the options menu. To assign the SDI outputs to the selected BNC Out connectors, you can use the **SDI Output Assignment...** submenu from the Generator options menu:

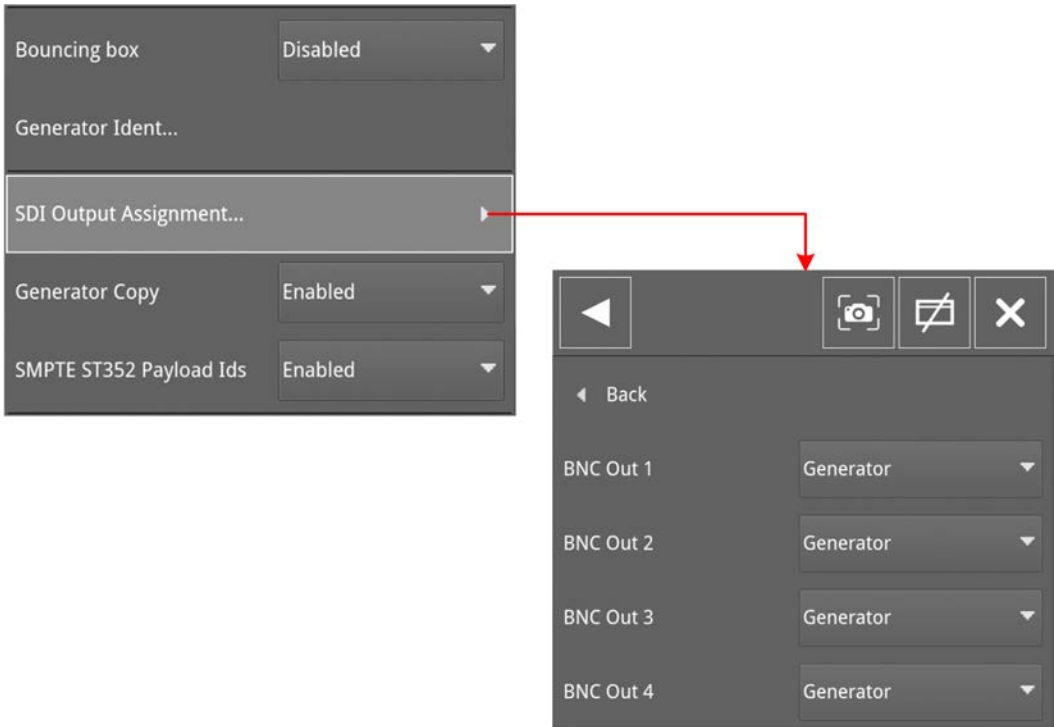


Figure 5-10: Generator - SDI Output Assignment

The following table lists the configurable SDI Output parameters for the Generator instrument:

Table 5-3 : Generator - SDI Output Menu Options

Item	Options	Description
Generator SDI Output Options		
BNC Out 1 BNC Out 2 BNC Out 3 BNC Out 4	Off Generator (Default) Loop SDI In 1, 2, 3, 4	Choose whether to configure each SDI BNC Out connector (1, 2, 3 or 4) to use either the Loop SDI In 1, 2, 3, or 4 signal, the Generator signal or to switch off the output. If necessary, when using the Generator output, you can enable the option Generator Copy in the Generator options menu to copy a single or dual link signal to other output BNC connectors.

When configuring the Generator SDI outputs, see also the section [System IO](#).

Insertion of ST352 Video Payload IDs for SDI Outputs

The unit includes SMPTE ST352 Payload IDs in the generated standards by default. By looping the SDI Output to the SDI Input and using the analyzer instruments, you can view the SMPTE 352 data in hexadecimal format using the **Analyzer - Dataview** instrument (on Analyzer A). Alternatively select the Identifier **ST352 Payload ID** in the options menu of the **Analyzer - Ancillary Inspector** instrument.

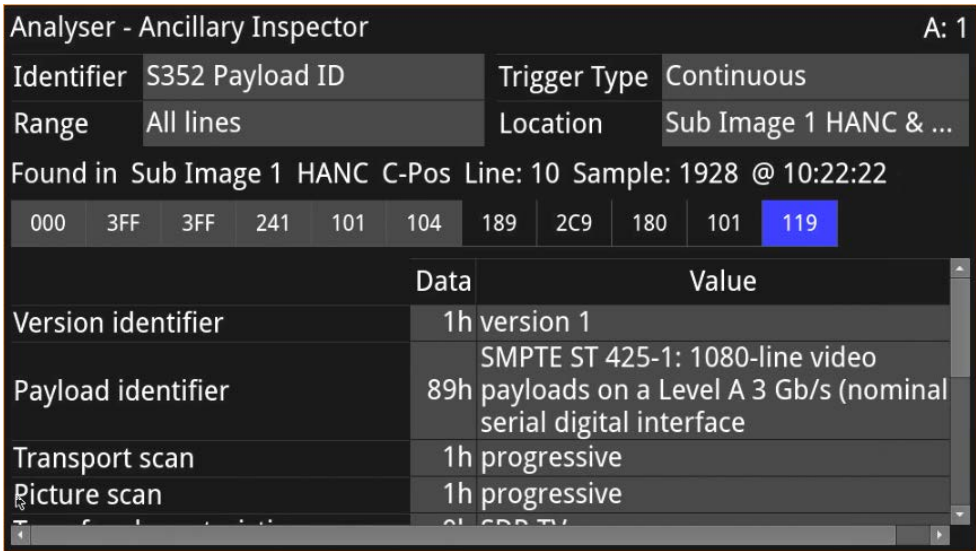


Figure 5-11: Analyzer - Ancillary Inspector Showing SMPTE ST352 Payload IDs

If you need to disable this feature (for example, for test purposes) you can do so by setting the parameter **SMPTE ST352 Payload Ids** in the Generator options menu to **Disabled**. When you select this option, the Generator window displays the selected video standard in yellow and appends the text **ST 352 DISABLED**.

For example:



Output Offset Adjustment

You can configure the Generator to generate a signal with a fixed offset, relative to the system reference using the **Output offset adjustment...** submenu available from the **Generator** options menu.

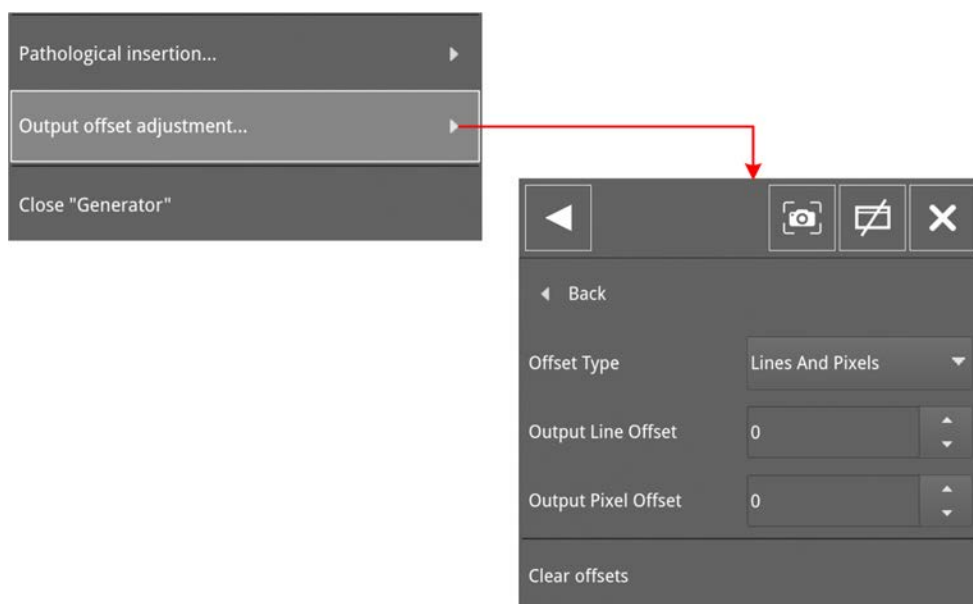


Figure 5-12: Generator - Output Offset Adjustment Submenu

The following table lists the output offset adjustment options available:

Table 5-4 : Generator - Output Offset Adjustment Menu Options

Item	Options	Description
Output Offset Adjustment Options		
Offset Type	Lines And Pixels (Default) Time	Select whether to make offset adjustments using either spatial or temporal values.
Output Line Offset	0 to +/- (Total number of Lines for current standard minus one)	When set to Lines and Pixels, use the combo-box to set the Line offset component as a number of whole lines.
Output Pixel Offset	0 to +/- (Total number of Pixels per Line for current standard minus one)	When set to Lines and Pixels, use the combo-box to set the Pixel offset component as a number of pixels per line.
Output Time Offset	0.00, +/- 0.01, etc...	When set to Time, use the combo-box to set the timing offset in microseconds.
Clear Offsets	System Control	Select to remove the current Generator offset.




Requires Option(s):	LPX500-GEN
---------------------	------------

Overview

Note: In this section the term *audio* refers to the audio signal embedded in the SDI video. It does not describe standalone audio generation.

You can configure the generation of up to 32 channels of PCM audio in the **Audio Generator Config...** dialog of the **Generator** options menu.

To configure the generation of an audio signal, either:

- Open the generator options menu and select **Audio Generator Config...** or
- With the spotlight on the Generator window, tap the softkey: .

This opens the audio configuration dialog.

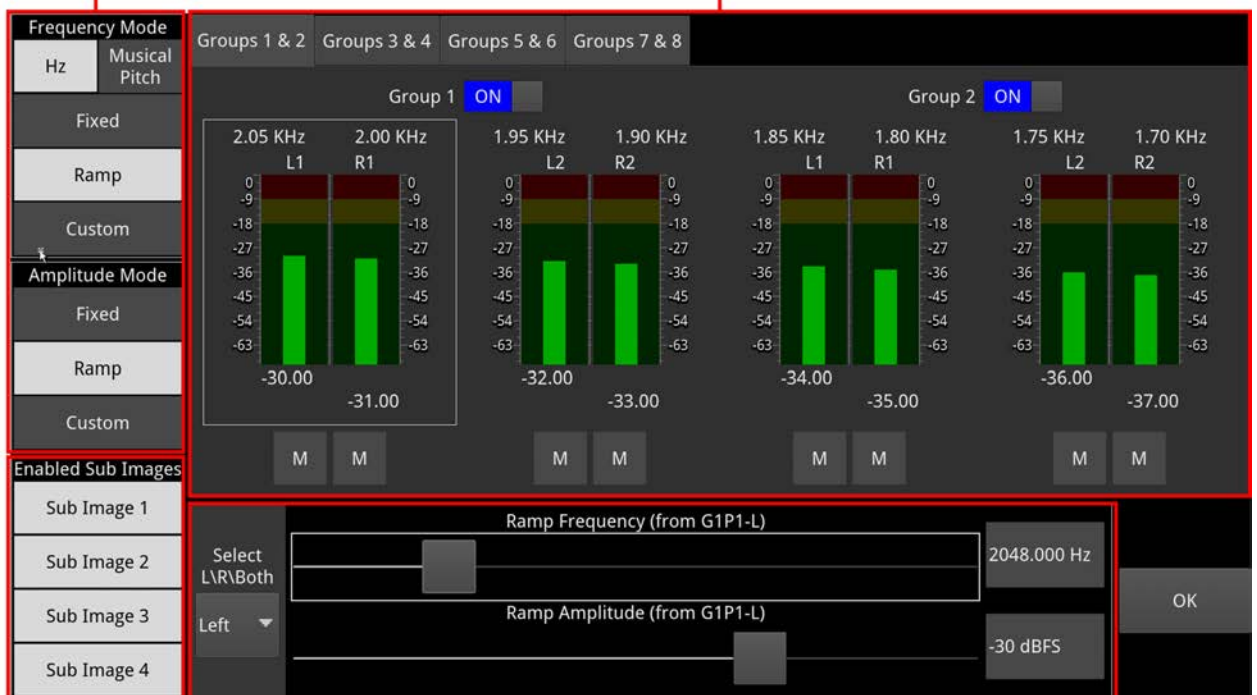
Using the audio generator configuration dialog you can:

- Generate a fixed audio frequency (in Hertz or musical pitch) for **all** audio channels
- Generate a ramped audio frequency (in Hertz or musical pitch), in decreasing steps of 50 Hz (0.05 kHz), for **all** audio channels
- Generate a fixed audio amplitude (in dBFS) for **all** audio channels
- Generate a ramped audio amplitude (in dBFS), in increasing steps of 1 dBFS, for **all** audio channels
- Generate a custom frequency (in Hertz or musical pitch) for either both channels, the left channel only, or right channel only of the **selected channel pair**
- Generate a custom amplitude for either both channels, the left channel only, or right channel only of the **selected channel pair**.

The audio generator configuration dialog is roughly subdivided into four functional areas as shown in [Figure 5-13](#). To configure an audio output signal, first select the required audio options in the left-side options panel then select the target groups, channel pairs or single channel using the toggle switch or target channel selector as appropriate. Finally, adjust the frequency and / or amplitude sliders to set the audio output signal as required.

Available Options
(Highlighted When
Selected)

Audio Group and Channel
Selection & Mute Controls



Sub Image Selection
for Optional SDI
Output Only

Frequency / Amplitude Adjustment
Controls & Target Channel Selector for
Custom Modes

Figure 5-13: Audio Generator Configuration Dialog

Depending on the generated video standard, up to eight audio groups (32 channels) are available. In the Audio Generator Configuration dialog, you can switch audio groups on or off using the **Group *n*** ON/OFF switches. Use the Audio Group tabs to display additional groups.

The options side panel ([Figure 5-14](#)) enables you to select the desired frequency and / or amplitude modes and, in addition, enable or disable the video sub-image to include the audio signal.

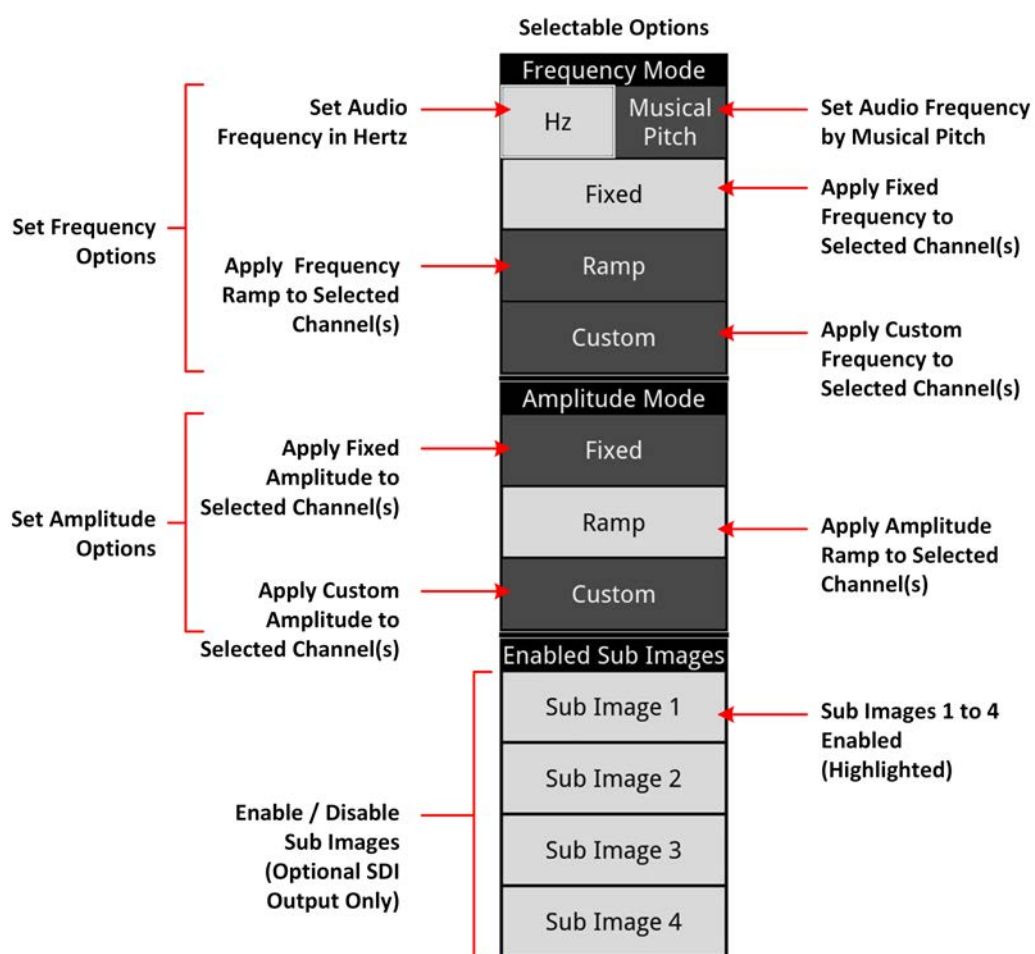


Figure 5-14: Audio Generator Configuration Dialog - Options Panel

After selecting the desired audio options in the side panel, use the audio group and channel selection controls ([Figure 5-15](#)) to activate or deactivate the target audio groups or to mute channels for the output of the generated audio signal. You can tap or click to select a pair of channels within a group of two pairs of channels as the target for a custom frequency or amplitude setting. A selected pair is shown with a white border.

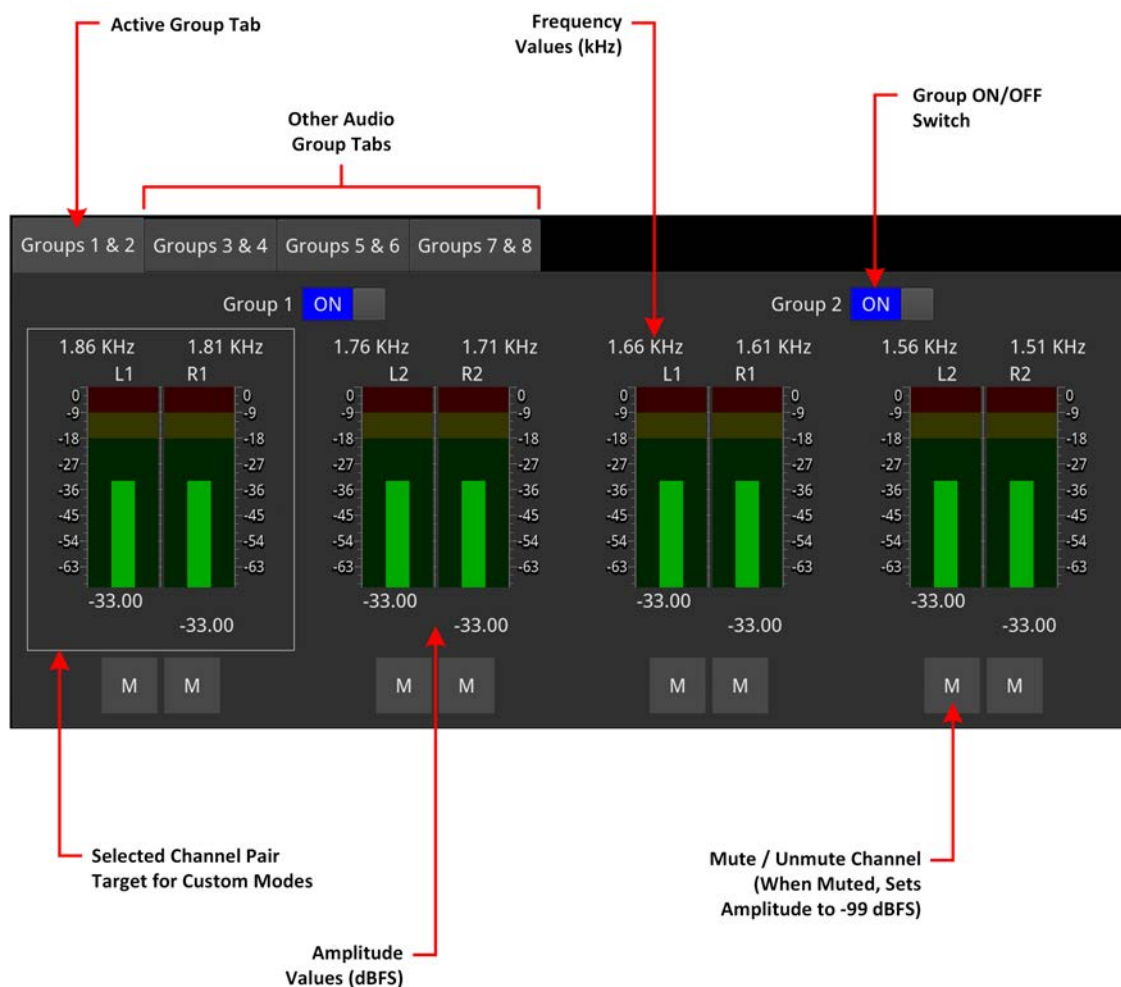


Figure 5-15: Audio Generator Configuration Dialog - Audio Group Selection Panel

You can also use this panel to mute or unmute any of the individual channels.

When setting either a fixed frequency or frequency ramp and/or amplitude for all channels, slide the appropriate control(s) in the adjustment controls panel ([Figure 5-16](#)) to the left or right as required.

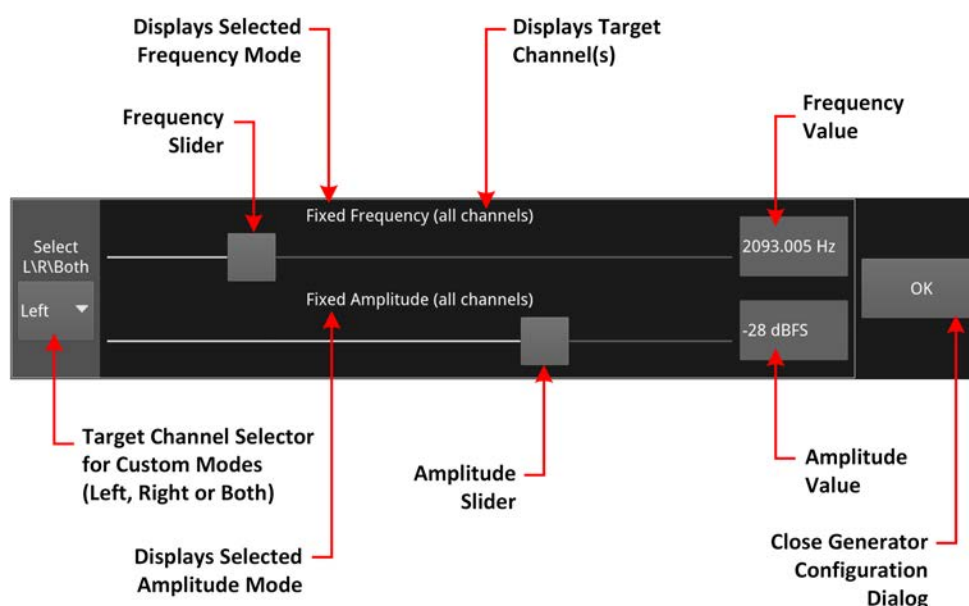


Figure 5-16: Audio Generator Configuration Dialog - Adjustment Controls

When configuring a custom setting for either frequency, and/or amplitude, use the *target channel selector* to define the channels or individual channels to which the custom setting applies. This could be either the selected pair's left channel, right channel, or both channels. You will see the target channel(s) displayed in the label above the appropriate slider.

Audio Generator Configuration Dialog

Using the Audio Configuration dialog, you can configure each channel by frequency and amplitude. In addition, you can set the frequency by musical pitch, at a fixed or custom frequency (in Hz):

Table 5-5 : Audio Generator Parameters

Audio Feature	Available Parameters																																																				
Channel	Group 1 to 8; then for each Group: <ul style="list-style-type: none">• Pair 1 Left• Pair 1 Right• Pair 2 Left• Pair 2 Right																																																				
Type and Frequency	<div>Tone</div> <div>Select Frequency from: 0 to 10,000 Hz (10 kHz)</div> <div>Music Pitch</div> <div>Select Frequency from:</div> <table><tr><td>C 3,</td><td>C#/D\flat 3,</td><td>D 3,</td><td>D#/E\flat 3,</td></tr><tr><td>E 3,</td><td>F 3,</td><td>F#/G\flat 3,</td><td>G 3,</td></tr><tr><td>G#/A\flat 3,</td><td>A 3,</td><td>A#/B\flat 3,</td><td>B 3,</td></tr><tr><td>C 4,</td><td>C#/D\flat 4,</td><td>D 4,</td><td>D#/E\flat 4,</td></tr><tr><td>E 4,</td><td>F 4,</td><td>F#/G\flat 4,</td><td>G 4,</td></tr><tr><td>G#/A\flat 4,</td><td>A 4,</td><td>A#/B\flat 4,</td><td>B 4,</td></tr><tr><td>C 5,</td><td>C#/D\flat 5,</td><td>D 5,</td><td>D#/E\flat 5,</td></tr><tr><td>E 5,</td><td>F 5,</td><td>F#/G\flat 5,</td><td>G 5,</td></tr><tr><td>G#/A\flat 5,</td><td>A 5,</td><td>A#/B\flat 5,</td><td>B 5,</td></tr><tr><td>C 6,</td><td>C#/D\flat 6,</td><td>D 6,</td><td>D#/E\flat 6,</td></tr><tr><td>E 6,</td><td>F 6,</td><td>F#/G\flat 6,</td><td>G 6,</td></tr><tr><td>G#/A\flat 6,</td><td>A 6,</td><td>A#/B\flat 6,</td><td>B 6,</td></tr><tr><td>C 7</td><td></td><td></td><td></td></tr></table>	C 3,	C#/D \flat 3,	D 3,	D#/E \flat 3,	E 3,	F 3,	F#/G \flat 3,	G 3,	G#/A \flat 3,	A 3,	A#/B \flat 3,	B 3,	C 4,	C#/D \flat 4,	D 4,	D#/E \flat 4,	E 4,	F 4,	F#/G \flat 4,	G 4,	G#/A \flat 4,	A 4,	A#/B \flat 4,	B 4,	C 5,	C#/D \flat 5,	D 5,	D#/E \flat 5,	E 5,	F 5,	F#/G \flat 5,	G 5,	G#/A \flat 5,	A 5,	A#/B \flat 5,	B 5,	C 6,	C#/D \flat 6,	D 6,	D#/E \flat 6,	E 6,	F 6,	F#/G \flat 6,	G 6,	G#/A \flat 6,	A 6,	A#/B \flat 6,	B 6,	C 7			
C 3,	C#/D \flat 3,	D 3,	D#/E \flat 3,																																																		
E 3,	F 3,	F#/G \flat 3,	G 3,																																																		
G#/A \flat 3,	A 3,	A#/B \flat 3,	B 3,																																																		
C 4,	C#/D \flat 4,	D 4,	D#/E \flat 4,																																																		
E 4,	F 4,	F#/G \flat 4,	G 4,																																																		
G#/A \flat 4,	A 4,	A#/B \flat 4,	B 4,																																																		
C 5,	C#/D \flat 5,	D 5,	D#/E \flat 5,																																																		
E 5,	F 5,	F#/G \flat 5,	G 5,																																																		
G#/A \flat 5,	A 5,	A#/B \flat 5,	B 5,																																																		
C 6,	C#/D \flat 6,	D 6,	D#/E \flat 6,																																																		
E 6,	F 6,	F#/G \flat 6,	G 6,																																																		
G#/A \flat 6,	A 6,	A#/B \flat 6,	B 6,																																																		
C 7																																																					
Amplitude	Adjust amplitude levels in decibels relative to full scale (dBFS), select: -99 to 0 dBFS																																																				

Analysis Instruments

This chapter describes the analytical instruments provided with the unit and includes the following sections:

- [Analyzer - Video Standard](#)
- [Stats - SDI in 1, 2, 3, 4](#)
- [CRC Analysis](#)



Overview

The **Analyzer - Video Standard** instrument for SDI inputs displays, by default, the payload details of the SDI video input being analyzed as described by the SMPTE ST 352 payload ID packets. The instrument then uses this data to identify the appropriate standard corresponding to the video input.

The Analyzer - Video Standard displays the payloads on the input signals for SDI BNCs (SDI In 1, 2, 3, and 4). The entries in the Video Standard overview also identify the current video standard in use, the status of ST 352 usage or any analyzer overrides already set, see [Figure 6-1](#).

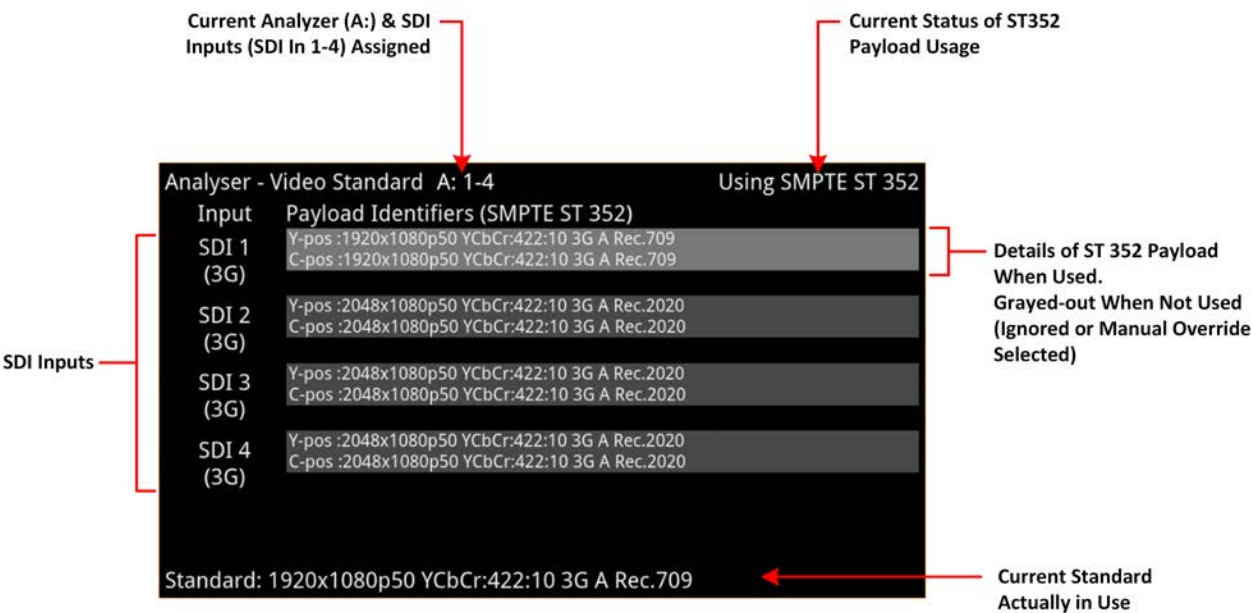


Figure 6-1: Analyzer - Video Standard Instrument (Showing Quad Link SDI Inputs Assigned to Analyzer A)

The input table displays the characteristics of the inputs to the SDI connectors. These inputs may be the links of a multi link input (as opposed to four single link inputs). The definition of the current input (standard) being analyzed, if valid, is displayed below the table, at the bottom of the window.

If the instrument detects unstable ST 352 payloads or receives HD or UHD video input containing damaged or missing ST 352 packets, then it highlights errors using a red font and warnings in yellow.

Colorimetry Range and Bit Depth Support

The LPX500 uses the definitions for Narrow and Full Range as defined in SMPTE RP 2077 *Full-Range Image Mapping*.

If the incoming ST 352 (VPID) signals SMPTE Full Range, the unit will extract the colorimetry range parameter from the ST 352 payload and display the full range indicator (**FR**), by default, next to the bit depth parameter in the standard definition. If **FR** is not displayed in a standard definition, then the video signal being analyzed is SMPTE Narrow Range.

For example, you might see the detected standard defined as follows for a full range input:

1920 x 1080i50 YCbCr-422:10FR 1.5G Rec.2020

The active colorimetry range is also displayed in the definition for the standard currently in use at the bottom of the display.

For more information on colorimetry range definitions as implemented, see the section [Colorimetry Range Definitions for the LPX500](#).

Manual Override Configuration

You can configure manual overrides for a video standard by selecting **Manual Configuration...** from the options menu of the Video Standard instrument. Use this dialog to configure a standard manually to override the standard automatically detected from the ST 352 payload.

To use the manual override instead of the auto-detected standard, select the option **Manual** from the **Payload Identifiers** dropdown in the options menu.

Resolution	Frame Packing	Frame Rate	Gamut	OTF	Sampling	Bit Depth	SDI Format		
4096x2160	Progressive	60	601	SDR	YCbCr:422	12 FR	Single Link	Level A	2-SI
3840x2160	Interlaced	59.94	709	PQ	YCbCr:444	12 NR	Dual Link	Level B	SQ
2048x1080	Segmented	50	2020	HLG	YCbCrA:4224	10 FR	Quad Link		
1920x1080		48		Unspecified	YCbCrA:4444	10 NR			
1280x720		47.95			RGB:444				
720x576		30			RGBA:4444				
720x485		29.97							
		25							
		24							
		23.98							
OK									

Figure 6-2: Analyzer - Video Standard Instrument - Manual Override Dialog

For the Manual Configuration override to be a compatible standard, the following criteria must be satisfied:

- The number of physical links are the same or less
- The number of sub-images are the same or less
- The incoming signal (as defined in the **Stats - SDI In 1 to 4** instrument) and the manual configuration override standard have the same values for following items:
 - Active Samples per Line
 - Active Lines per Field
 - Total Samples per Line
 - Total lines per Frame/Field1.

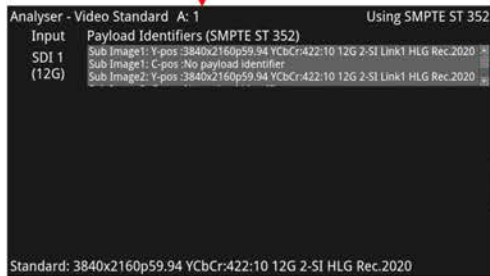
Changing the Payload Identification Source

In general, it is recommended to keep the default setting for the **Payload Identifiers** parameter **From S352** so that the unit automatically detects the video standard from the incoming ST 352 payload. In situations where the accuracy of incoming ST 352 packets cannot be relied upon, you can either force the instrument to use your manually-defined standard by selecting the **Manual** option or to ignore both the ST 352 payload *and* manual override by selecting **Ignored**.


Video input with ignored ST 352 packets is indicated in the top-right of the **Analyzer - Video Standard** window, see [Figure 6-3](#).

Video Standard in Analyzer – Picture window (Analyzer A: 1):
3840x2160p59.94 YCbCr:422:10 12G 2-SI Rec.2020

Open Analyzer –
Video Standard



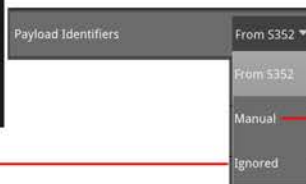Standard Identified
Automatically Using
ST 352 Payload Identifiers




Select to Ignore S352
Payload Identifiers


Select to Use a
Manual Override



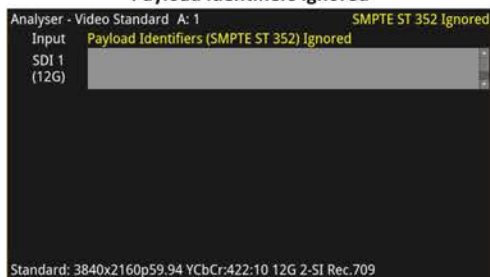
Payload Identifiers Ignored



Manual Override Selected

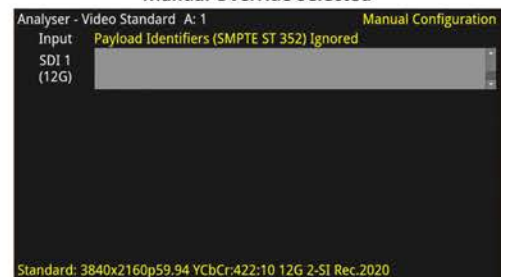

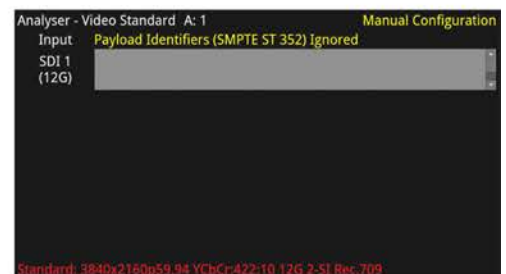- Display of Payload Identifiers Grayed-out
- Yellow Text to Inform User that Payload IDs are Not In Use.
- Standard in Yellow Text Shows the Override Standard is Active and Compatible with the Input Signal.



- Display of Payload Identifiers Grayed-out
- Yellow Text to Inform User that Payload IDs are Not In Use.
- Red text Informs User that Selected Manual Override is Not Valid for the Input Signal.

Figure 6-3: Analyzer - Video Standard with Warning and Error Displays (Requires LPX500-HDR and LPX500-UHD)

Instrument Menu Options

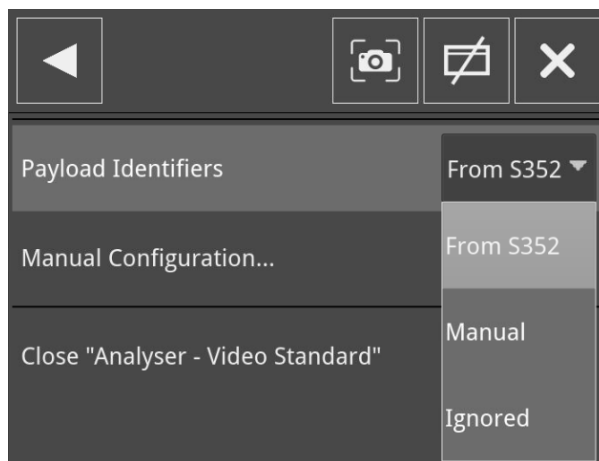


Figure 6-4: Analyzer - Video Standard Instrument - Options Menu

The following table lists the options available to configure the Analyzer - Video Standard instrument:

Table 6-1 : Analyzer - Video Standard Options

Item	Options	Description
Payload Identifiers	From S352 (Default) Manual Ignored	<p>By default, set to From S352, the instrument uses the SMPTE ST 352 payload identifiers in the incoming video signal to identify the video standard.</p> <p>Ignore ST 352 data when parameter set to Ignored. Instead, the unit uses firmware counters to attempt to identify the standard. As some features cannot be identified using this method (for example, gamut configuration) the Gamut is set to 709 by default.</p> <p>You can choose a manual override configuration using the Manual Configuration... dialog. The instrument displays the applied manual configuration in yellow if it matches, or is compatible with, the input signal; otherwise, an error message is displayed in red.</p>
Manual Configuration...	Instrument Control	<p>Opens a manual override dialog enabling you to override the various parameters defining the video standard. If you select a parameter which is incompatible, the text of the column heading containing the incompatible parameter changes color to yellow.</p>

Stats - SDI In 1, 2, 3, 4



Requires Model(s):	LPX500M-IS or LPX500M-ISE
--------------------	---------------------------

Overview

The **Stats - SDI In 1, 2, 3 and 4** windows provide information to verify the format of the signals being analyzed, and the length of the input cable. A video signal may be comprised of up to four separate SDI links each providing a sub-image.

Stats - SDI In 2					12G Signal
Data Rate: 23.736258 GHz		Clock Divisor: 1.000		Cable Length: 40m	
	Sub Image 1	Sub Image 2	Sub Image 3	Sub Image 4	
Counters Stable	true	true	true	true	
Active Samples Per Line	1920	1920	1920	1920	
Active Lines Per Field	1080	1080	1080	1080	
Total Samples Per Line	2200	2200	2200	2200	
Total Lines Frame/Field1	1125	1125	1125	1125	
Total Lines Field2	progressive	progressive	progressive	progressive	
Payload ID Y-Pos	CE CA 80 01	CE CA 80 01	CE CA 80 01	CE CA 80 01	
Payload ID C-Pos	CE CA 80 01	CE CA 80 01	CE CA 80 01	CE CA 80 01	

Figure 6-5: Stats - SDI In 2: Displaying Data from Single 12G Input on SDI Input 2

Stats - SDI In 1

1.5G Signal

Data Rate: 1.483514 GHz

Clock Divisor: 1.000

Cable Length: <20m

Sub Image 1

Counters Stable

true

Active Samples Per Line

1920

Active Lines Per Field

540

Total Samples Per Line

2200

Total Lines Frame/Field1

563

Total Lines Field2

562

Payload ID Y-Pos

85 06 00 01

Payload ID C-Pos

unnecessary

Stats - SDI In 2

12G Signal

Data Rate: 23.736258 GHz

Clock Divisor: 1.000

Cable Length: 40m

Sub Image 1

Sub Image 2

Sub Image 3

Sub Image 4

Counters Stable

true

true

true

true

Active Samples Per Line

1920

1920

1920

1920

Active Lines Per Field

1080

1080

1080

1080

Total Samples Per Line

2200

2200

2200

2200

Total Lines Frame/Field1

1125

1125

1125

1125

Total Lines Field2

progressive

progressive

progressive

progressive

Payload ID Y-Pos

CE CA 80 01

CE CA 80 01

CE CA 80 01

CE CA 80 01

Payload ID C-Pos

CE CA 80 01

CE CA 80 01

CE CA 80 01

CE CA 80 01

Stats - SDI In 3

12G Signal

Data Rate: 23.736258 GHz

Clock Divisor: 1.000

Cable Length: 21m

Sub Image 1

Sub Image 2

Sub Image 3

Sub Image 4

Counters Stable

true

true

true

true

Active Samples Per Line

1920

1920

1920

1920

Active Lines Per Field

1080

1080

1080

1080

Total Samples Per Line

2200

2200

2200

2200

Total Lines Frame/Field1

1125

1125

1125

1125

Total Lines Field2

progressive

progressive

progressive

progressive

Payload ID Y-Pos

CE CA 80 01

CE CA 80 01

CE CA 80 01

CE CA 80 01

Payload ID C-Pos

CE CA 80 01

CE CA 80 01

CE CA 80 01

CE CA 80 01

Stats - SDI In 4

3G Signal

Data Rate: 2.967032 GHz

Clock Divisor: 1.000

Cable Length: 20m

Sub Image 1

Counters Stable

true

Active Samples Per Line

1920

Active Lines Per Field

1080

Total Samples Per Line

2200

Total Lines Frame/Field1

1125

Total Lines Field2

progressive

Payload ID Y-Pos

89 CA 00 01

Payload ID C-Pos

89 CA 00 01

Stats 1

Stats 2

Stats 3

Stats 4

More...

Next...

Figure 6-6: Stats - SDI In 1, 2, 3, 4: Displaying Data from Four Inputs (2 x 12G, 1 x 3G and 1 x 1.5G)



Overview

The **CRC Analysis SDI 1 to 4** instruments check for CRC (Cyclic Redundancy Check) errors in the received signal on each of the four SDI input connectors. The number of SDI input failures, the last failure time, total analysis time, and error rate are also displayed. Depending on the input required for the standard under test (i.e., quad-, dual-, or single-link signal(s)) the Sub Image columns will display any errors occurring in each of the Sub images. In the larger window size, the Link rows will display any errors occurring per Link for Level B signals.

Analyser - CRC Analysis SDI 1 Analysis time: 4h 52m 46s Input fail count: 0				
	Sub 1	Sub 2	Sub 3	Sub 4
C-CRC-Err	0	0	0	0
Y-CRC-Err	0	0	0	0
Rate (/s)	0.000	0.000	0.000	0.000
OK Time	4h 52m 46s	4h 52m 46s	4h 52m 46s	4h 52m 46s
Active Picture Changes	1260135	1260135	1260135	1260135
Active Picture CRC	139E D080	04C1 E45A	139E D080	04C1 E45A
<div><div>←</div><div>Menu</div><div>Resize</div><div>Close</div><div>Clear Spotlight</div></div>				

Figure 6-7: Analyzer - CRC Analysis Instrument for SDI In 1

The **OK Time** shows the length of time an image/sub image has been received without error.

The **Active Picture CRC** is created by the receiver for each image or sub-image video frame (dependent on standard) and displayed.

The instrument detects and counts changes in the active picture CRC. This can be used to show that an SDI path is transparent and error free.

The reported CRC error **Rate (/s)** is the number of instances of the addition of the Y- and C-channel CRCs and ANC checksum errors in each second.

- Y- and C-channel CRCs are calculated for each video line in accordance with SMPTE standards

Errors are collected either from the analysis start time, or from the last reset of errors and running time. The reported error rate per second is the total number of errors divided by the total time of analysis.

Instrument Menu Options

The following table lists the configurable parameters in the Analyzer - CRC Analysis instrument options menu:

Table 6-2 : Analyzer - CRC Analysis Options

Item	Options	Description
Ignore CRC on switch lines	Disabled (Default) Enabled	When enabled, ignores CRC errors on the switching line.
Reset errors on Input failure	Disabled (Default) Enabled	When enabled, clears the counters on input failure.
Reset errors and running time	System Control	Use this control to reset CRC errors and running time in all active CRC analysis instruments.

Content Analysis Instruments

This chapter describes the Instruments used to analyze the quality of the video signal and includes the following sections:

- [Analyzer - Picture](#)
- [Analyzer - Waveform](#)
- [Analyzer - Vectorscope](#)

Note: For the optional Analyzer - CIE Chart, see [Analyzer - CIE Chart](#) in the Chapter [HDR Analysis Instruments](#).



Overview

The **Picture** window shows the video input currently being analyzed by the unit. Double-tap or -click anywhere in the window to resize it between:

- One sixteenth (1/16) of the screen
- One quarter (1/4) of the screen
- Full screen.

Some features of the Picture instrument are dynamically linked to the Dataview and Waveform analyzer instruments to enable more precise, real-time analysis of the picture.

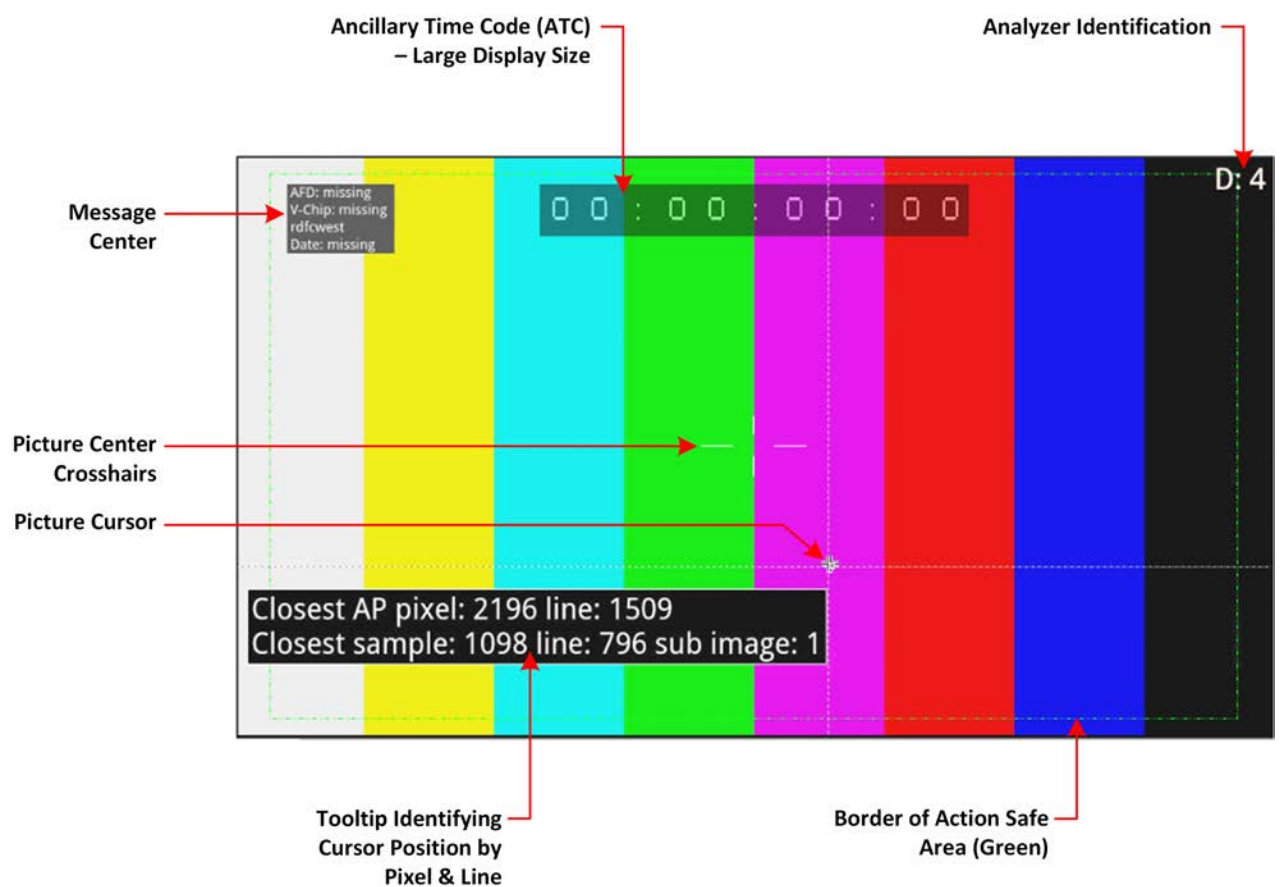


Figure 7-1: Components of the Analyzer - Picture Instrument

In addition to displaying the video picture, you can configure the Picture instrument to overlay various data elements, extracted from the ancillary data in the signal, for quality control purposes, including:

- Closed Captions
- Ancillary Time Code (ATC)
- Picture Cursor and Position Tooltip
- Picture Safe Area
- Picture Center Crosshairs
- Message Center displaying V-chip, AFD, Input Name, ST309 Date, and SCTE104 data (depending on configuration)

- HDR False Color Overlay and Grayscale Mode (HDR Mode Only). See the section [HDR Heat-map \(False Color Overlay\)](#) for more information.

Picture Aspect Ratios

The Picture window features set scaling functionality so that you can view the signal's full picture. These scaling functions enable the source video input to fill the standard 1920 x 1080 (16:9) Picture window with the maximum possible image size.

To scale an image to fit the window correctly, the unit will automatically insert borders either at the top and bottom sides of the window - referred to as **Letter-boxing** - or at the left and right sides of the window - referred to as **Pillar-boxing**, see [Figure 7-2](#).

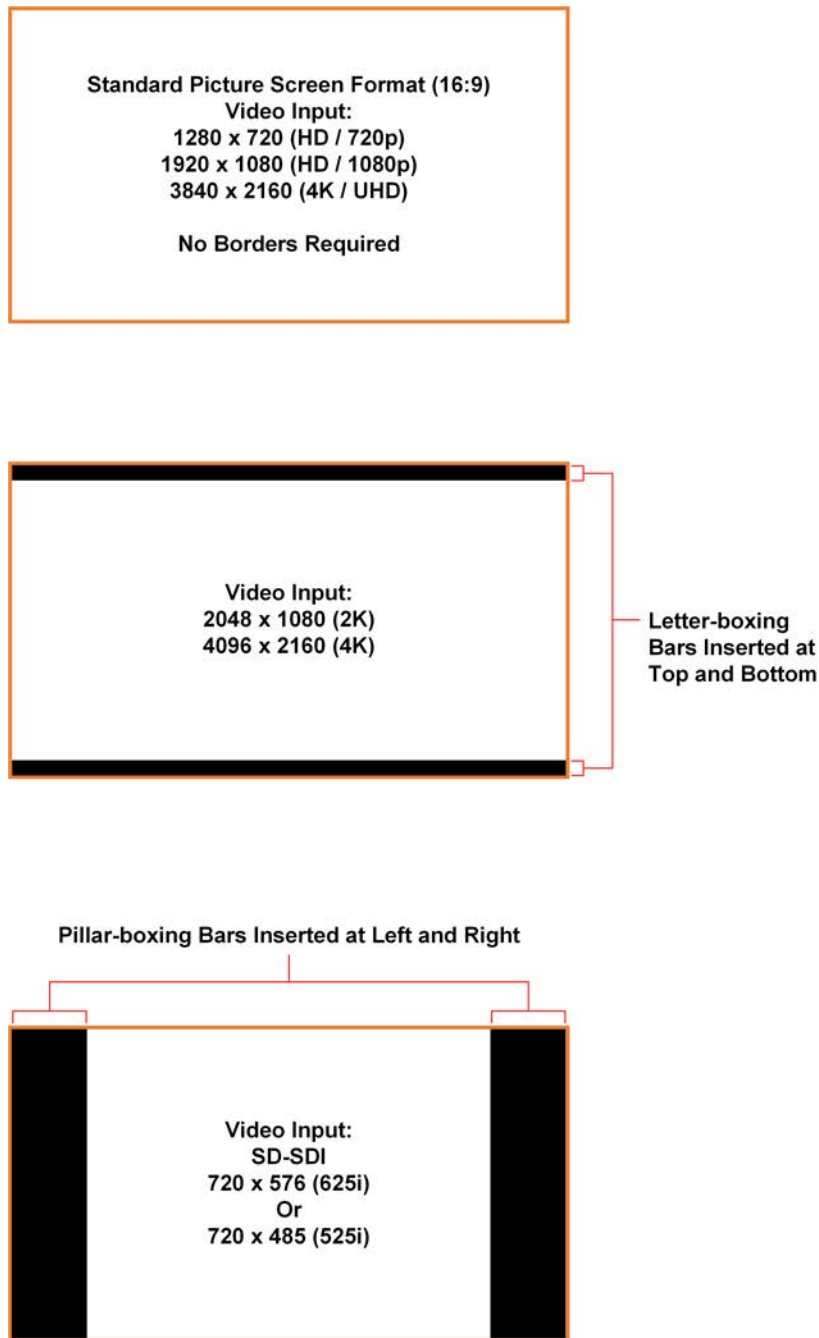


Figure 7-2: Letter-boxing and Pillar-boxing in Picture Instrument

The following table shows where pillar-boxing and letter-boxing borders are displayed:

Table 7-1 : Picture Framing by Screen Resolution

Screen Resolution	Type of Picture Framing Required
SD-SDI 525i: 720 x 485	Scaled to a 4:3 aspect ratio. Pillar-box borders added to left and right sides
SD-SDI 625i: 720 x 576	Scaled to a 4:3 aspect ratio. Pillar-box borders added to left and right sides
1280 x 720	Scales to fit 16:9 aspect ratio of Picture window. No additional borders required.
1920 x 1080	Scales to fit 16:9 aspect ratio of Picture window. No additional borders required.
2048 x 1080	Scaled to a 16:9 aspect ratio. Letter-box borders added to top and bottom sides
3840 x 2160	Scales to fit 16:9 aspect ratio of Picture window. No additional borders required.
4096 x 2160	Scaled to a 16:9 aspect ratio. Letter-box borders added to top and bottom sides

Instrument Menu Options

Closed Captions	OP47
OP47 Page	888
OP47 Show Unboxed	Disabled
Picture Cursor	Enabled
Line	564
Pixel	426
Anc Time Code	Enabled
Anc Time Code Type	VITC
Anc Time Code Size	Large
Anc Time Code Position	Top
Anc Time Code Field	Disabled
Action Safe Area	Disabled
Graphics Safe Area	Disabled
4x3 Safe Area	Disabled
Custom Safe Area	Enabled
Custom Height %	90
Custom Width %	90
Custom Height offset %	6
Custom Width offset %	0
Crosshair	Enabled
Message Centre	Top Left
Transparency	Disabled
Message Timeout	1 s
AFD	Enabled
Vchip	Enabled
St309 Date	Disabled
SCTE104 Detection	Enabled
SCTE104 opID Format	Dec
Input Name	Disabled
On Video Loss	Black Screen
Greyscale mode	Disabled
False Colour Highlighting	Disabled
Close "Analyser - Picture"	

Figure 7-3: Analyzer - Picture Instrument Options Menu (Including Option LPX500-HDR)

The following table lists the standard options available in the Analyzer - Picture Instrument submenu:

Table 7-2 : Menu Options for the Analyzer - Picture Instrument

Item	Options	Description
Closed Captions	Disabled (Default)	Disables the detection of close captions in the ancillary data. When enabled, by selecting one of the following closed caption options, the unit can detect closed captions carried in the ancillary data.
	OP47	Enables the detection of OP47 standard closed captions in the ancillary data. This displays an additional menu entry: OP47 Page .
	OP47 Page	Select the desired OP47 page containing the relevant closed captions, using the slider or scrolling through page numbers in the range: 100 to 8ff.
	OP47 Show Unboxed	Select to display outside-of-box subtitles (closed captions) outside the permitted area for closed captions. When enabled, this menu item is displayed in yellow font to alert you that the subtitles are being displayed outside the usual display area. If you hover the cursor over this option, when enabled, you will see the following warning displayed: "Warning: OP47 unboxed captions are being shown, these characters should not be displayed by decoders when bit C6 (subtitle) is set." This option is disabled by default.
	608	Enables the detection of CEA 608 standard closed captions in the ancillary data. This displays an additional menu entry enabling you to select the desired target field to contain the CEA 608 format closed captions. Note: 608 closed captions are not supported for SD-SDI, use the option 608 in 708 if you need to process 608 closed captions for analog TV.
	608 in 708	Select to display 608 in 708 standard closed captions in the picture window for high definition (HD) video. This displays an additional menu entry enabling you to select the field from which to read the closed captions.
	608 Field	Select the desired field for the 608 captions, from either Field 1 or Field 2 .
Picture Cursor	Disabled (Default) Enabled	When enabled, this feature is dynamically linked to both the Waveform and Dataview analysis instruments so that measurements from the selected picture position can be taken from these tools at the same time. Allows you to select a specific line and pixel in the picture. When you specify the line and pixel numbers, the unit positions a visible crosshair at that position. You can change the location of the crosshair by tapping or clicking a different position in the Picture window. Line: Line one to maximum number of active lines for the current standard. Pixel: Pixel zero to maximum number of active pixels for the current standard minus one.
Ancillary Time Code (ATC) Display		

Item	Options	Description
Ancillary Time Code	Disabled (Default) Enabled	When enabled, displays the ATC panel in the picture window.
Ancillary Time Code Type	VITC (Default) LTC	When ATC is enabled, choose whether to display the vertical interval time code (VITC) or the linear time code (LTC) .
Ancillary Time Code Size	Small Medium Large Auto	Increases or decreases the displayed size of the ATC panel in the window. The Auto option adjusts the size of the time code panel automatically, depending on the displayed size of the instrument window.
Ancillary Time Code Position	Bottom Middle Top	Adjusts the displayed position of the ATC panel on the vertical center-line of the window.
Ancillary Time Code Field	Disabled (Default) Enabled	Activates an optional final digit, in the furthest-right position of the time code, to display a field identification flag for either 25 Hz or 24/30 Hz.
Safe Area Generation		
Action Safe Area	Disabled (Default) Enabled	When enabled, displays a 16:9 safe area border for actions as a green, dashed border.
Graphics Safe Area	Disabled (Default) Enabled	When enabled, displays a 16:9 safe area for graphics as a red, dashed border.
4x3 Safe Area	Disabled (Default) Enabled	When enabled, displays a 4:3 safe area as a cyan, dotted border.
Custom Safe Area	Disabled (Default) Enabled	When enabled, displays a user-defined, custom safe area as a white, dashed border.
Custom Height %	Enter percentage	Specifies the custom safe area height as a percentage of the picture window height, by adjusting the top and bottom margins of the safe area.
Custom Width %	Enter percentage	Specifies the custom safe area width as a percentage of the full picture window width, by adjusting the left and right margins of the custom safe area.
Custom Height Offset %	Enter percentage	The offset refers to an adjustable, vertical offset of the center of the custom safe area from the origin of the picture window (location of the crosshair, when enabled). Initially, the center of the custom safe area is located at the origin of the picture window. The custom height offset % is calculated as a percentage of the distance between the crosshair origin and the top or bottom border of the picture window. The offset can be positive (moves the custom safe area down) or negative (moves the custom safe area up).
Custom Width Offset %	Enter percentage	The offset refers to an adjustable, horizontal offset of the center of the custom safe area from the origin of the picture window (location of the crosshair, when enabled). Initially, the center of the custom safe area is located at the origin of the picture window. The custom width offset % is calculated as a percentage of the distance between the crosshair origin and the left or right border of the picture window.

Item	Options	Description
		The offset can be positive (moves the custom safe area right) or negative (moves the custom safe area left).
Crosshair	Disabled (Default) Enabled	When enabled, displays a crosshair to indicate the center (origin) of the displayed image in the picture window.
Message Center Display		
Message Center	Top Left Top Right Bottom Left Bottom Right	Defines the position of the Message Center panel in the picture window. The message center displays messages decapsulated from the ancillary data packets and includes ST309 Date, SCTE 104, AFD and V-Chip, etc.
Transparency	Disabled (Default) Enabled	When enabled, applies a transparent background to the message center in the picture window.
Message Timeout (secs)	1 to 10 seconds	Defines the length of time in seconds dynamic SCTE104 messages are displayed in the message center. SCTE104 messages are removed from the message center after the timeout period.
AFD	Disabled (Default) Enabled	Activates the display of AFD markers in the message center of the picture window.
Vchip	Disabled (Default) Enabled	Activates the display of V-chip markers in the message center of the picture window.
ST309 Date	Disabled (Default) Enabled	Activates the display of the date in the message center using ST 309 date format: dd mmm yyyy .
SCTE104 Detection	Disabled (Default) Enabled	Activates the detection of SCTE104 packets in the ancillary data and displays the message OpID, indicating the message type, in the selected hex or decimal format.
SCTE 104 OpID Format	Decimal (Default) Hexadecimal	Defines whether to display the OpID of the SCTE104 message type in decimal or hex format.
Input Name	Disabled (Default) Enabled	Displays the configured source input name of the video, for example, the ID of the originating camera.
Input Name Configuration...	Opens Input Name Configuration dialog	Use the Input Name Configuration dialog to enter a source input name manually or to extract a name from the ancillary data.
On Video Loss	N/A	Not currently available; grayed out

Closed Captions

Closed captions (or subtitles in Europe) are the text-based, encoded information included in the ancillary data of the video signal, which can optionally be displayed by the viewer. The unit can detect closed captions carried in the ancillary data and display them, when enabled, in the Analyzer - Picture Instrument for monitoring purposes.

The following closed caption formats are supported:

- **OP-47** (or SMPTE RDD-08): European and Australian standard for closed captions/subtitles on HD TV. Supports the following languages: Czech, English, Finnish, French, German, Hungarian, Italian, Portuguese, Slovakian, Spanish and Swedish
- **608** and **608 in 708**: CEA-608 (or EIA-608) is a legacy US standard for closed captions. CEA-708 is the current US standard for closed captions on HD TV and is backward compatible with CEA-608. CEA-708 acts as a wrapper for embedded CEA-608 closed captions, enabling the

unit to extract 608-standard closed captions from 708-standard ancillary data. Supports the following languages: Danish, English, Finnish, French, German, Italian, Portuguese, Spanish and Swedish.

Note: Legacy 608 (Line 21) closed captions are not supported for SD-SDI. Select the closed caption option **608 in 708** if you need to process analog TV 608 closed captions for SD-SDI video.

When configuring the Analyzer - Picture instrument to display closed captions, use the Ancillary Status and/or Ancillary Inspector instruments to establish which closed caption system is present in the video signal. The Ancillary Status display will indicate the presence of CEA-608, CEA-708 or OP-47 data packets in the vertical ancillary area of the SDI signal. You can then select the corresponding closed caption option from the Analyzer - Picture menu.

To display closed captions in the Picture view, enable one of the **Closed Captions** options from the Analyzer - Picture menu and select the desired target page (OP47) or field (608 and 608-in-708) for the appropriate standard.

When enabled, closed caption text is displayed in the Picture area as defined by the format of the selected closed caption standard.

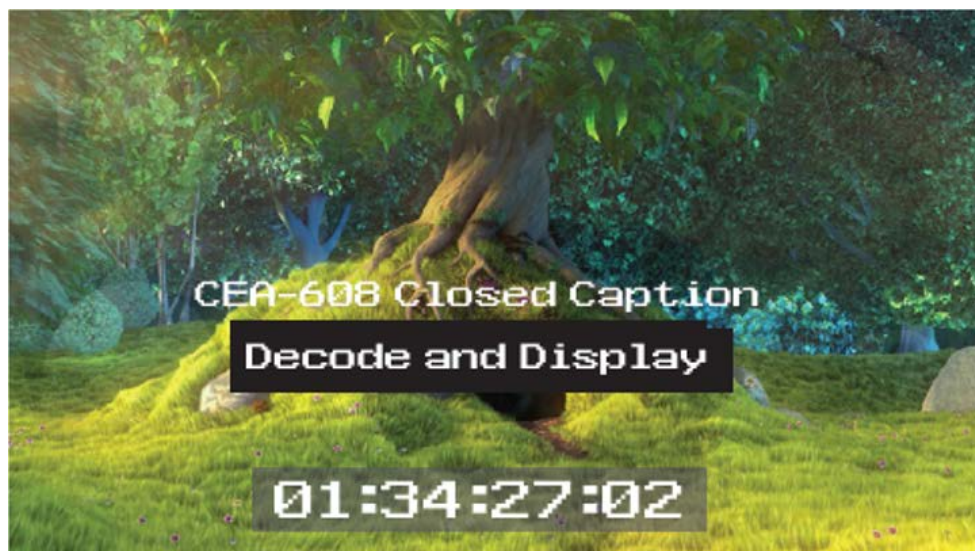


Figure 7-4: Closed Captions in the Picture Instrument

The CEA-708 closed caption system (used in the USA and Canada for HD video) embeds information in the VANC area of the HD-SDI video framework and uses data identifier (DID) 0x61 (Hex) for the Caption Distribution Packet (CDP). Typically this supports up to 6 different closed caption streams (or services).

The OP-47 closed caption system (used in Europe and Australia for HD SDI) embeds closed caption text in the VANC area of the HD-SDI video signal using DID 0x43 (Hex). This system supports closed caption pages in the range 0x100 to 0x8FF (Hex).


Comparing Multiple Picture Instruments

The LPX500 enables you to open an instance of the **Analyzer - Picture** Instrument for each active analyzer. With the standard dual analyzer unit, you can have two Picture windows open simultaneously. With an optional quad analyzer unit, you can open four Picture windows simultaneously.

To compare different features of the source input side-by-side, you can assign the same input to both (dual units) or all analyzers (quad units). For example, when positioned together, you might use the

multiple Picture windows to monitor closed captions in different languages, or to compare different screen safe areas, or even false color highlighting (HDR only).

Open two Analyzer - Picture instruments in a **multi unlinked** layout as follows:

1. Tap or click  to open the first **Analyzer - Picture** Instrument from the **Instruments** tab of the Setup menus.
2. Open the **Instruments** tab again and select a second **Analyzer - Picture** instrument.
3. Open the **Settings** tab of the Setup menus again and launch the **Analyzer Input Assignment** dialog.
4. With the input for analysis connected to one of the SDI In BNCs on the rear panel, assign that input for comparison to two analyzers.

You can now apply different elements to the Picture windows using the options menus, including:

- Ancillary Time Code
- Picture Cursor
- Closed Caption Standard
- OP-47 page
- All optional HDR functions, see the section [HDR Heat-map \(False Color Overlay\)](#).
- Picture Safe Areas and Image Center Crosshairs
- Activation of Picture Cursor
- Field for 608 or 608-in-708 closed captions
- All Message Center features.

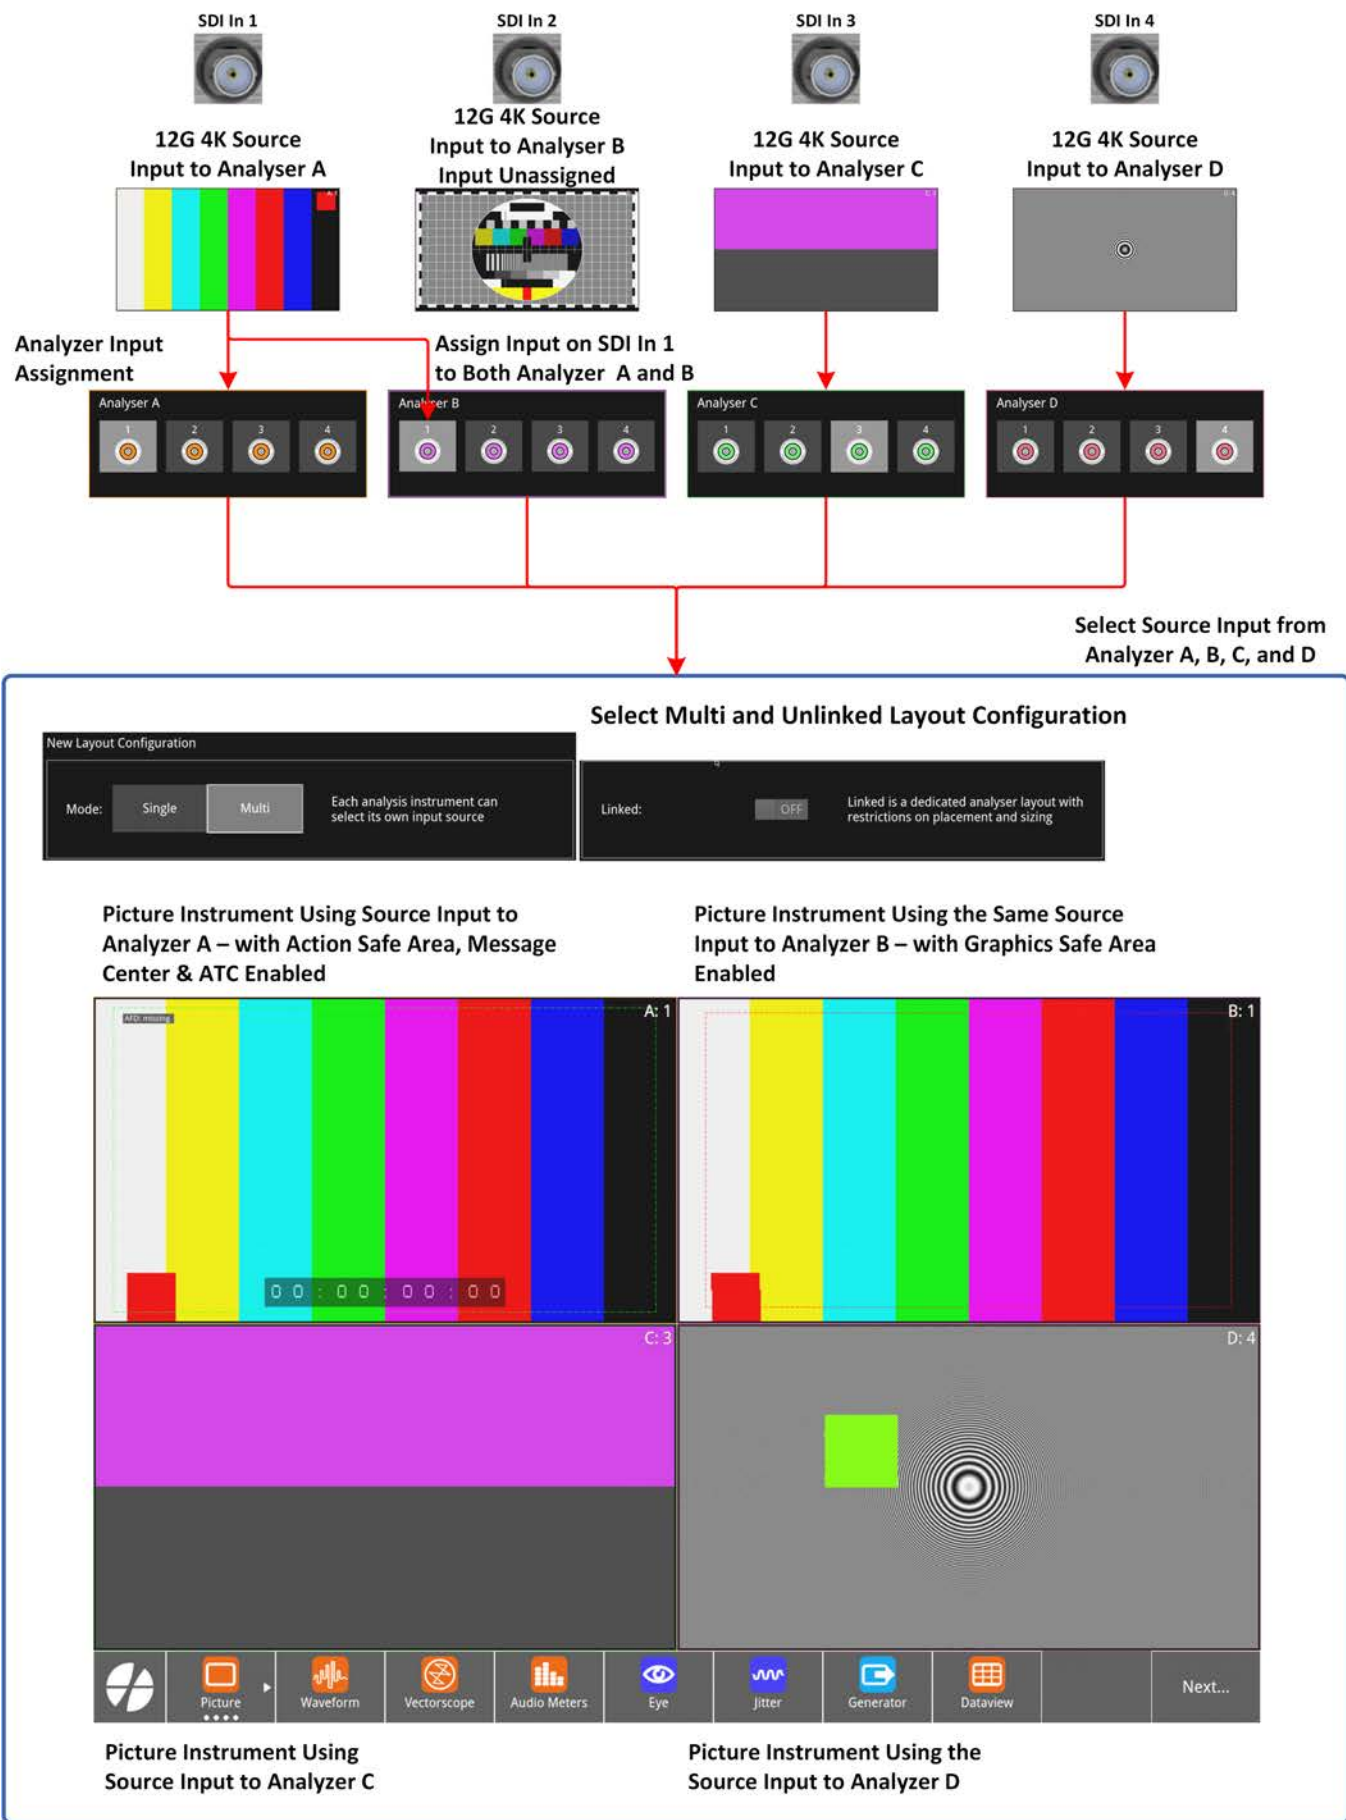


Figure 7-5: Comparison of SDI In 1 Source Input to Analyzers A and B Simultaneously (Optional Quad Analyzers)

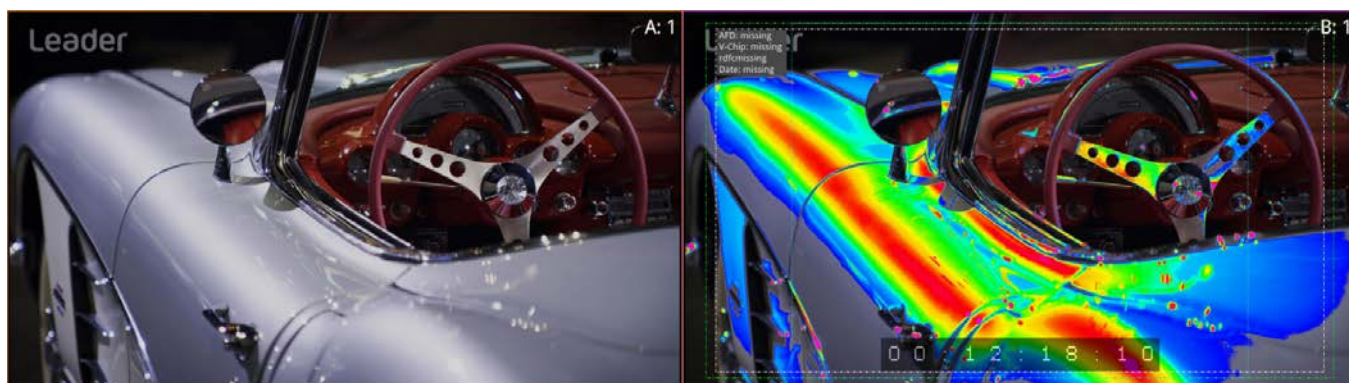


Figure 7-6: Comparison of Picture Features SDI In 1 Source Input to Analyzers A and B

Monitoring Closed Captions in Multiple Picture Instrument Windows

If required, you can open up to four Analyzer - Picture instruments (one for each analyzer) to have up to four Picture windows open at the same time. You can use this feature to monitor closed captions in a different language alongside the original language.

Select different language closed captions in dual Picture windows as follows:

1. In the both Picture windows, select either of the closed caption standards: 608 or 608-in-708.
2. In the first Picture window, set the option **608 Field** to **Field 1**.
3. In the next Picture window, set the option **608 Field** to **Field 2**.

The unit will now source the closed captions from the two different fields.



Figure 7-7: Two Analyzer - Picture Instruments Showing Closed Caption Panel

Picture Cursor

The Picture Cursor consists of two intersecting horizontal and vertical dashed lines. With the option **Picture Cursor** enabled, either tap or click anywhere inside the window boundary to position the intersection of the cursor. Alternatively, and more precisely, you can specify the exact position using the Line and Pixel options in the menu. The **Line** value adjusts the vertical position of the picture cursor and the **Pixel** value adjusts the horizontal position.

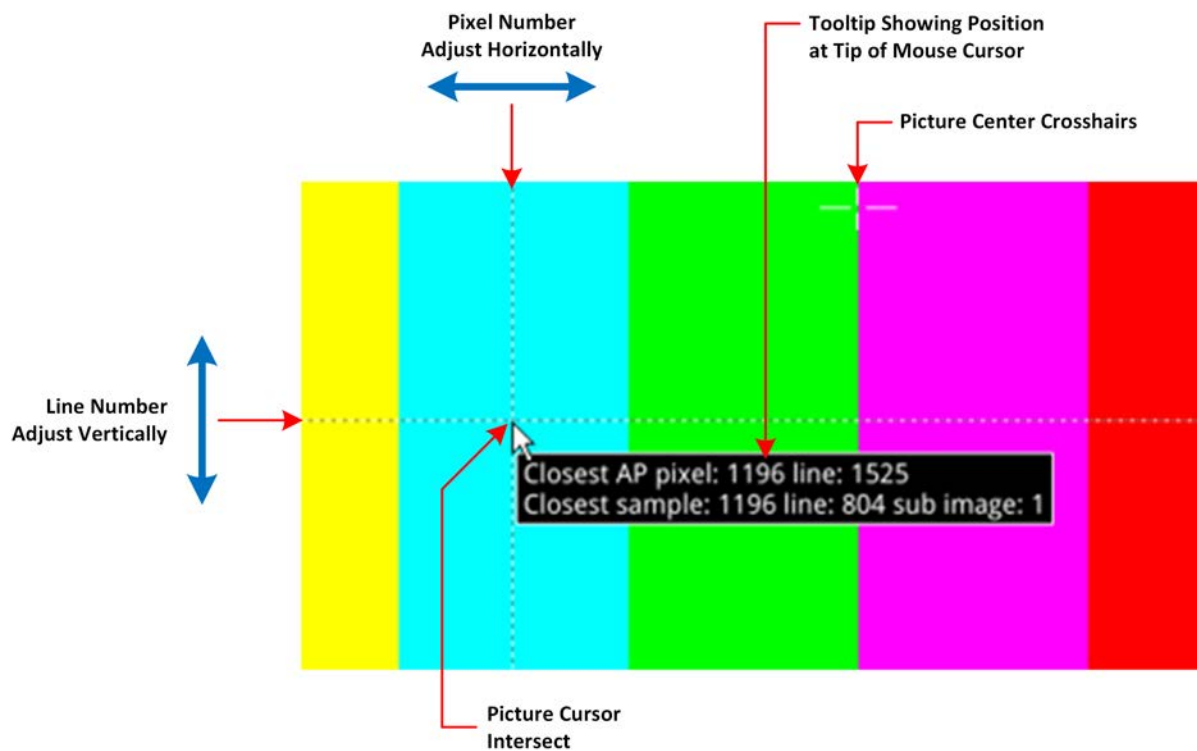


Figure 7-8: Using the Picture Cursor

If you hover the mouse cursor over the position of the picture cursor, the unit displays a tooltip showing the actual mouse cursor position in the picture by line and pixel. This feature is dynamically linked to both the Waveform and Dataview instruments so that measurements from the selected picture position can be taken from these tools at the same time.

Using the Picture Safe Areas

The **Analyzer - Picture** instrument features picture safe areas designed according to the EBU Recommendation R95 "*Safe Areas for 16:9 Television Production*". Picture safe areas define the part of the picture that can be viewed without compromise on a TV or movie screen.

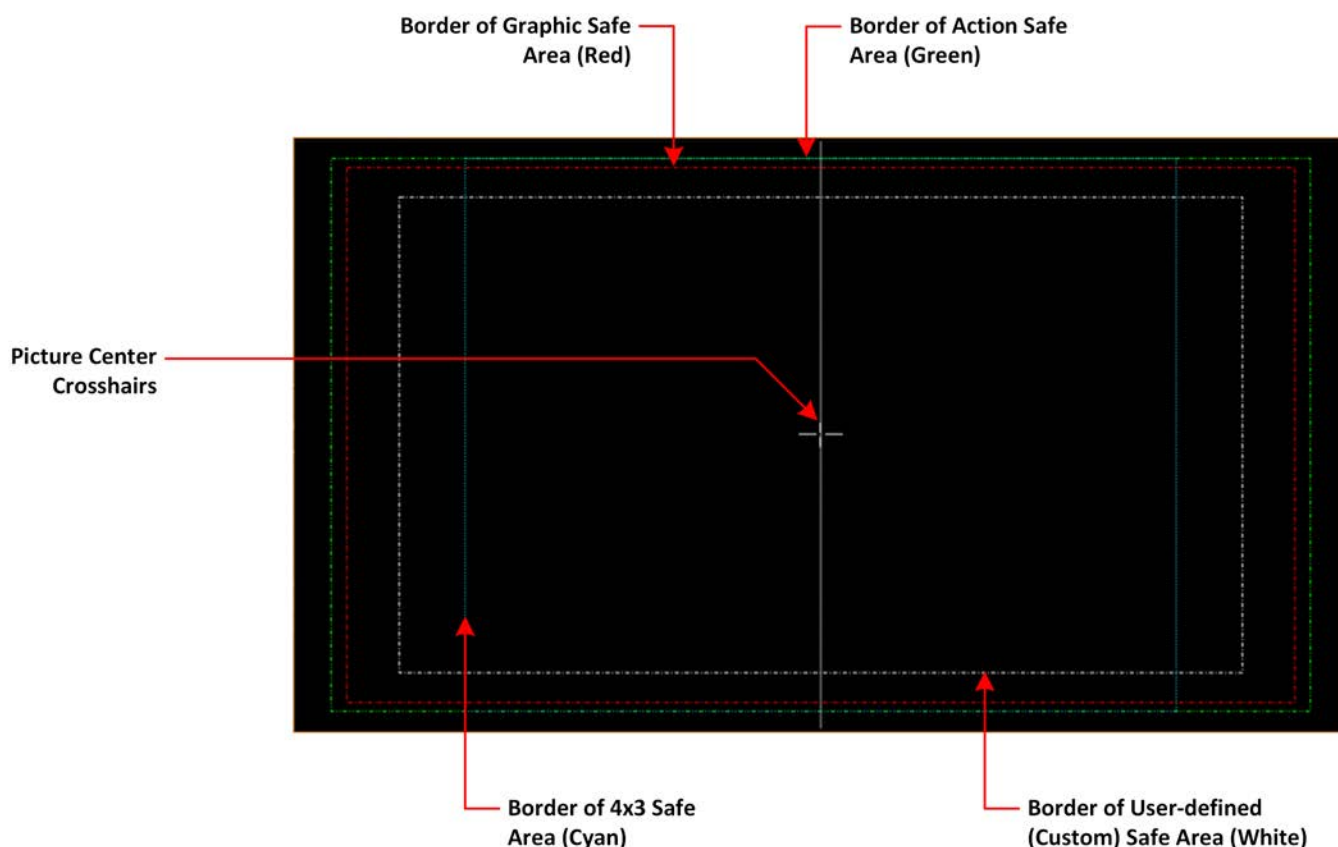


Figure 7-9: Picture Safe Areas Showing Border Colors

The Analyzer - Picture instrument can generate three predefined, independent safe areas for the following:

- **Graphics (16:9):** Smallest of the safe areas; ensures that all essential graphics are protected inside this area. The border of the Graphics safe area is 5% in from all edges of the picture .
- **Action (16:9):** Larger than the Graphics safe area; ensures that all essential program content is protected inside this area. The border of the Action safe area is 3.5% in from all edges of the picture.
- **4x3:** Shows the safe area for HD video to be viewed on domestic TVs still using a 4:3 aspect ratio.

The Picture instrument also includes a facility to generate a user-defined, custom safe area, which enables you to set the height and width of the safe area as a percentage of the picture height and width. In addition, you can also define vertical or horizontal offsets for the custom safe area as a percentage relative to the distance between the side margins (left or right, and top or bottom) and the picture center so that a 100% vertical offset is the distance between the top or bottom of the window and the center of the window.

When enabled, you can display vertical and horizontal crosshairs to mark the center-point of the picture.

The unit currently supports HD 16:9 formats, providing safe areas for 16:9 HD, 3G and UHD picture formats.

By using side-by-side picture windows, where the same source input is assigned to two analyzers, you can compare different picture safe areas. For example, you might compare the safe area of an HD service with a simulation of either a second language HD service or an SD (4:3 or 16:9) version of the service.

For more information, see the EBU Recommendation R95 "*Safe Areas for 16:9 Television Production*."

Displaying the Picture Safe Areas

Activate a safe picture area in either of the Picture windows as follows:

1. Tap and hold or right-click in the Picture window to open the options menu.
2. To display one of the standard safe areas, select **Enabled** from the corresponding dropdown list. You can differentiate the safe areas by the color of their border, for example:
 - Action Safe Area - Green dashed-line border
 - Graphics Safe Area - Red dashed-line border
 - 4x3 Safe Area - Cyan dashed-line border
 - Custom Safe Area - White dashed-line border
3. To display a custom safe area, set the **Custom Safe Area** to **Enabled**.
This displays additional fields in which to define the custom safe area, using either:
 - A percentage of the full picture window height or width relative to the top / bottom or left / right borders, or
 - A percentage offset of the custom safe area center from the origin of the picture window.

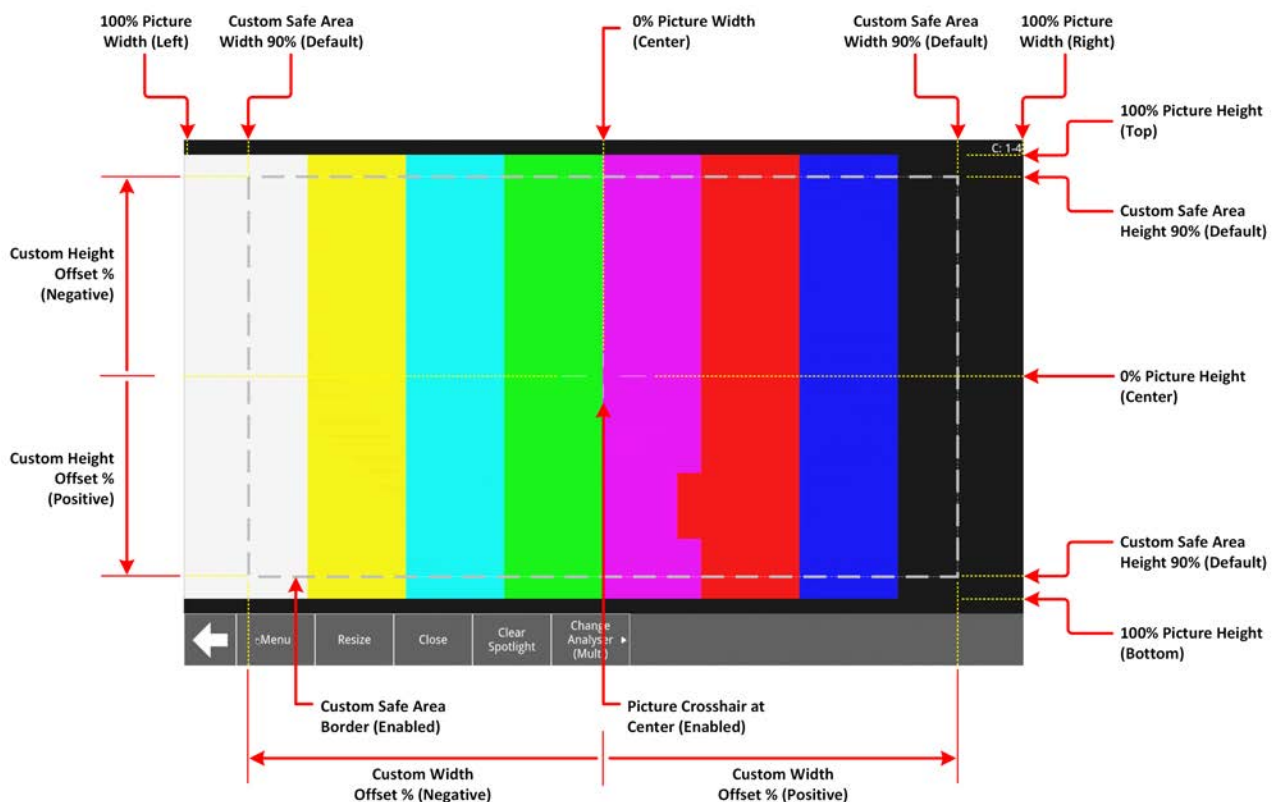


Figure 7-10: Picture - Defining the Custom Safe Area

Using the Picture Message Center

Note: For SD-SDI video input, the unit supports ancillary data as long as it is provided in ANC data packets according to SMPTE ST 291.

The **Message Center** is a designated area of the Analyzer - Picture instrument intended to alert you to the receipt of certain messages transported as packages in the ancillary data stream. The Message Center enables quality control of the source video material, both before and during transmission. On

identifying one of the target message types, the Message Center decapsulates the message and displays an appropriate marker, text or ID to reference the message. You can configure the Message Center to display the following:

- **AFD Marker:** The Active Format Description is a set of codes used to identify the aspect ratio of the video signal and the protected areas of the picture.
- **V-chip Marker:** Identifies a parental guidance rating, used primarily in the US and Canada, to categorize age-sensitive material in a TV program. The V-chip hardware in the receiving television can be configured by the viewer to block certain categories of V-chip ratings as desired.
- **ST309 Date:** The date in ST 309 format: **dd mmm yyyy**
- **SCTE104 OpID:** The industry standard for including specific program signals and markers in the video signal at various time points, for example, program parts, commercial breaks, etc.
- **Input Name:** The defined source input name of the video stream

V-chip data is included with closed caption data of type CEA-608 or CEA-608-in-708. V-chip data is not currently available with closed captions of type OP-47. If 608 or 608-in-708 closed captions are enabled but unavailable and you then enable the V-chip marker, you will see that the V-chip label in the Picture submenu is displayed in yellow as a warning. Furthermore, if OP-47 closed captions are enabled, together with the V-chip marker, the V-chip label in the Picture submenu is displayed in yellow.

Note: For SD-SDI source video, V-chip data included with legacy 608 (Line 21) closed captions is not supported. Select the closed caption option 608 in 708 if you need to use V-chip for SD-SDI video.

The Message Center separates messages into either *static* or *dynamic* message types. When enabled, static messages are always displayed in the Message Center and indicate the Analyzer source input and the presence of a V-chip or Active Format Description (AFD) code in the ancillary data (when enabled).

Note: For SD-SDI source video, the unit supports AFD data as long as it is provided in ANC data packets according to SMPTE ST 2016-1 and ST 2016-3. Wide Screen signaling (WSS) and Video Index (VI) signaling (SMPTE RP 186) are not supported for SD-SDI.

Dynamic messages, however, are displayed for a configurable timeout period (in seconds) after which they are removed from the Message Center. The unit manages the OpIDs of SCTE104 packages, detected in the ancillary data, as dynamic messages. Each consecutive SCTE104 packet received by the unit replaces the previous displayed OpID.

For ease of viewing, you can choose the specific quadrant of the Analyzer - Picture window in which to display the Message Center from:

- Top-left quadrant
- Top-right quadrant
- Bottom-left quadrant
- Bottom-right quadrant.

Note: The Message Center is displayed only when you enable at least one of the message types (AFD, V-chip, ST309 Date, Analyzer Source, SCTE104 or Input Name) in the submenu.

The layout of the Message Center adapts so that it always displays the static messages closest to the picture edge, depending on the selected screen quadrant in which it is located. This ensures that the V-chip, Analyzer Source, and AFD codes are always displayed in the same position in the window.

Dynamic SCTE104 OpID codes are appended either above or below the static messages, again depending on the quadrant in which the Message Center is located.

You can hover the mouse cursor over a SCTE104 OpID in the Message Center to display a tooltip containing the actual text of the message.

Note: When enabled, V-chip, AFD ST309 Date, Analyzer Source, and SCTE104 OpID data packets will also appear in the **Analyzer - Ancillary Status** instrument and you can view the corresponding packet contents in the **Analyzer - Ancillary Inspector** instrument.

SCTE104 Packet Detection

SCTE104 is the broadcast industry standard for including specific program signals and markers in the video signal, for example, program parts, commercial breaks, etc.

When this option is enabled, the Analyzer - Picture window displays a list of SCTE104 messages in the Message Center, with the most recent displayed at the top of the list. On receipt, the OpID code of each SCTE104 message is displayed for at least two seconds, depending on the configured timeout period.

The unit displays the following information for each SCTE104 message received:

- SCTE104 operation ID (OpID) - identifies the SCTE104 message type.
- Message type as screen tip by hovering the mouse cursor over the OpID.

You can choose to display the message OpID in either hexadecimal or decimal format.

If you are interested in SCTE104 messages, it is recommended to enable SCTE104 messages in the Event Logging instrument so that the full message type is saved to the logfile.

Input Name Dialog

The unit provides a facility to enter identification strings for input sources, for example, cameras, etc. to identify the source of the input stream. The Input Name is displayed in the Message Center for 5 seconds, with this 5 second timeout being reset each time the unit receives an Input Name ancillary packet. If the unit receives no further Input Name ancillary packets after 5 seconds, then it reports the Input Name as **Missing** in the Message Center.

You can choose either to enter the input name manually, or configure the Data Identifier (DID) and Secondary Data Identifier (SDID) value of the input name in the ancillary data of the input stream.

The Input Name is an ancillary data packet with the following message structure:

Ancillary Data Flag			DID	SDID	DC	Data	CS
0x000	0x3ff	0x3ff	0x53	0x49	nn	up to 12 ASCII chars	

Figure 7-11: Input Name Message Structure

In addition, you can define a prefix to be applied to the source input name, for example: **Input ID:**.

Enter a source Input Name as follows:

1. Tap and hold or right-click in the Picture window to open the menu.
2. Select **Enabled** from the **Input Name** dropdown.
This displays the **Input Name Configuration...** control.
3. Tap or click **Input Name Configuration...** to open the Input Name Configuration dialog.
4. Using the onscreen or USB keyboard, configure an input name as follows:
 - a. If you require a standard prefix for your input names, enter the prefix text string into the **Prefix** field, for example Source ID:.
 - b. To enter an input name manually, tap or click **User Entered** and enter the name using up to a maximum of 12 characters.
 - c. To extract an input name automatically from the ancillary data in the input feed, tap or click **Ancillary Data** and select the target DID and SDID. You can specify the DID/SDID using either decimal (default) or hex notation.
5. Tap or click **OK** to save the input name.

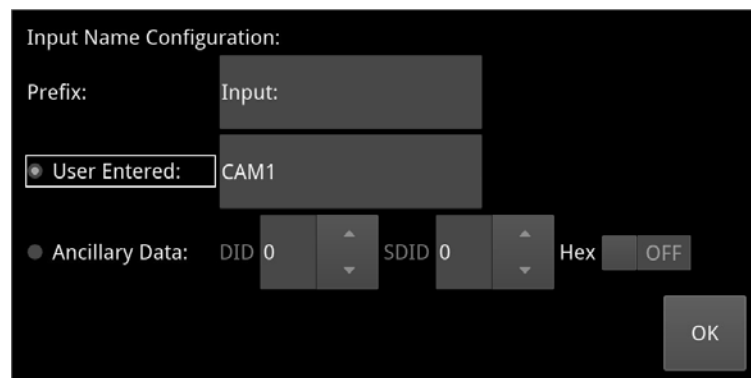


Figure 7-12: Input Name Configuration Dialog

Displaying the Ancillary Time Code

Time and control code information, used to identify video frames, is carried as the payload of packets located in the ancillary data space of the video signal. When you enable the ATC option in the Analyzer - Picture options menu, the ancillary time code is displayed in a panel overlayed across the Picture window.

The ATC is a 13 character time code with the following format:

ATC Format: (Integer Frame Rates)

hh : mm : ss : ff

ATC Format: (Non-integer Frame Rates)

hh : mm : ss ; ff

ATC Example:

00 : 00 : 00 : 00

ATC Example:

00 : 00 : 00 ; 00

Figure 7-13: Format and Example of the Ancillary Time Code

Where:

- Colon (:) Separator between seconds and frames indicates Integer frame rates
- Semi-colon (;) Separator between seconds and frames indicates drop-frame, non-integer frame rates (for example, 23.9, 29.9, 59.9, etc.)
- hh = hours (24 hour clock)
- mm = minutes
- ss = seconds
- ff = frame number

When enabled, the ATC panel is displayed in the top-center of the window by default and you can adjust both its position down the center line (top, middle or bottom) and the panel size (small, medium, large or automatic size adjustment) for ease of viewing.

The option **Anc Time Code Field** allows you to activate the display of an optional final digit in the time code, after the two digits of the frame number.

When you enable the display of ancillary time code information, the option **Anc Time Code Type**, allows you to choose whether to display the default ancillary time code - vertical interval time code (ATC-VITC) or an ancillary time code - linear time code (ATC-LTC), if available.



Overview

Note: Some of the features described in this section require the software licenses **LPX500-HDR** and/or **LPX500-UHD** to process high dynamic range (HDR) or ultra high definition (UHD) video, respectively. These are marked in the text as: **HDR Only** or **UHD Only** where appropriate.

The **Waveform** instrument displays the selected input video signal as a waveform in a number of selectable waveform and display modes.

In addition, the Waveform instrument provides numerous analytical tools including:

- Various filters
- Single-line mode link with Vectorscope instrument for Cb/Cr analysis
- Picture cursor control linked to Picture and Dataview instruments
- Full-width display
- Highlight markers (including user-defined markers)
- Configurable horizontal (Y-axis) or vertical (X-axis) measurement cursors
- Zoom and panning functions for waveform inspection.

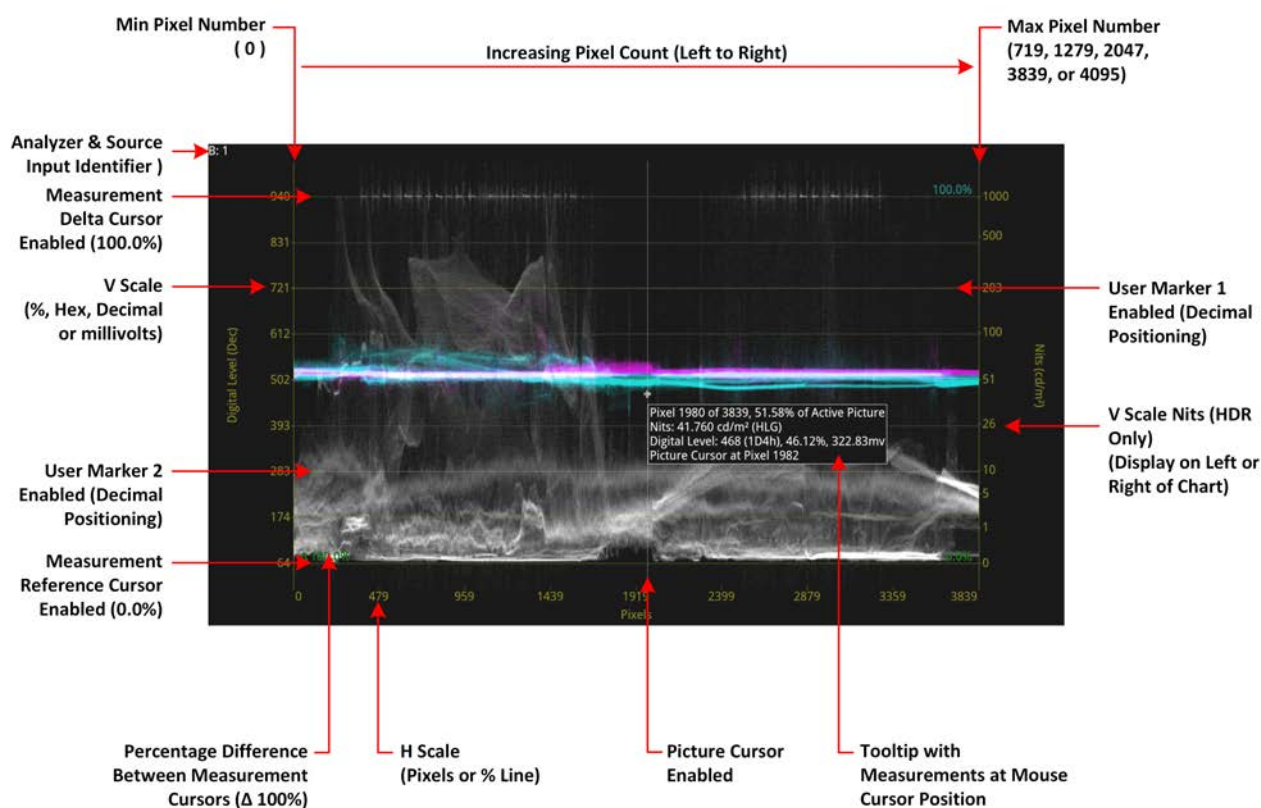


Figure 7-14: Analyzer - Waveform Instrument (Overlay Waveform Mode)

You can use the Waveform instrument in combination with the Picture and Dataview instruments while displaying and adjusting Vectorscope user markers in the Waveform CbCr traces.

When the option **Picture Cursor** is enabled, the cursor is dynamically linked to the cursor in the Picture instrument and to Dataview navigation. Tap or click a position in the Waveform window to update the pixel and active picture line positions selected in the Picture instrument, and the pixel and transport line position selected in Dataview.

If you hover the mouse cursor over any point in the waveform display, you will see a tooltip providing the following information:

- Pixel x of the maximum number of active pixels
- Equivalent value in cd/m^2 (Nits) to the Digital Level on the Y axis (HDR Only)
- Digital level in all other available but undisplayed units (decimal, Hex, percentage and mV)
- Pixel position of the Picture cursor
- Horizontal and vertical magnification factors when using the Zoom / Pan functions.

About the Display Modes

The waveform instrument can display up to four channels for analysis of the video signal color-space components in one of the following selectable display modes:

- **YCbCr**: Luma (Y), Cb, and Cr components
- **YCbCrA**: Luma (Y), Cb, Cr and Alpha (A) components
- **Y**: Individual Luma component
- **Cb**: Individual Cb component
- **Cr**: Individual Cr component
- **RGB**: Red, Green, Blue components
- **GBR**: Green, Blue, Red components
- **YRGB**: Luma, Red, Green, and Blue components
- **YGBR**: Luma, Green Blue, Red components
- **RGBA**: Red, Green Blue, Alpha components
- **Red**: Individual Red component
- **Green**: Individual Green component
- **Blue**: Individual Blue component
- **Alpha**: Individual Alpha component
- **Custom**: Customize the display (see below).

When selected, the Waveform instrument displays the Alpha component of a waveform in white, that is, the same color as the Luma (Y) component and monochrome color mode.

Setting the Vertical and Horizontal Scales

You can choose to display various vertical scales at either the left- or right-hand side of the component display and to set the horizontal scale to pixels, percentage of the video line, or even to hide it.

[Figure 7-15](#) is a schematic representation of the horizontal and vertical scales available for use with the Waveform instrument in Overlay waveform mode with an SDR standard (2048 x 1080 p50 709 SDR YCbCr:422 10bit NR) and at full screen size. The following figure shows the equivalent vertical scales available when analyzing the same standard but at a full range bit depth.

For the Digital Level V scale (Y-axis), you can choose to measure in the following units:

- mV
- Decimal color code values
- Percentage of the color code range
- Hexadecimal color code values.

Similarly you can set the H scale (X-axis) either to the number of pixels or to a percentage of the picture line.

With the HDR license available (**LPX500-HDR**) the Waveform instrument displays a Nits scale on the right-hand side by default but you can choose to switch this to the left-hand side of the display or hide it completely. If you switch to display the Nits scale on the left the Digital Level scale switches to the right-hand side of the Waveforms display.

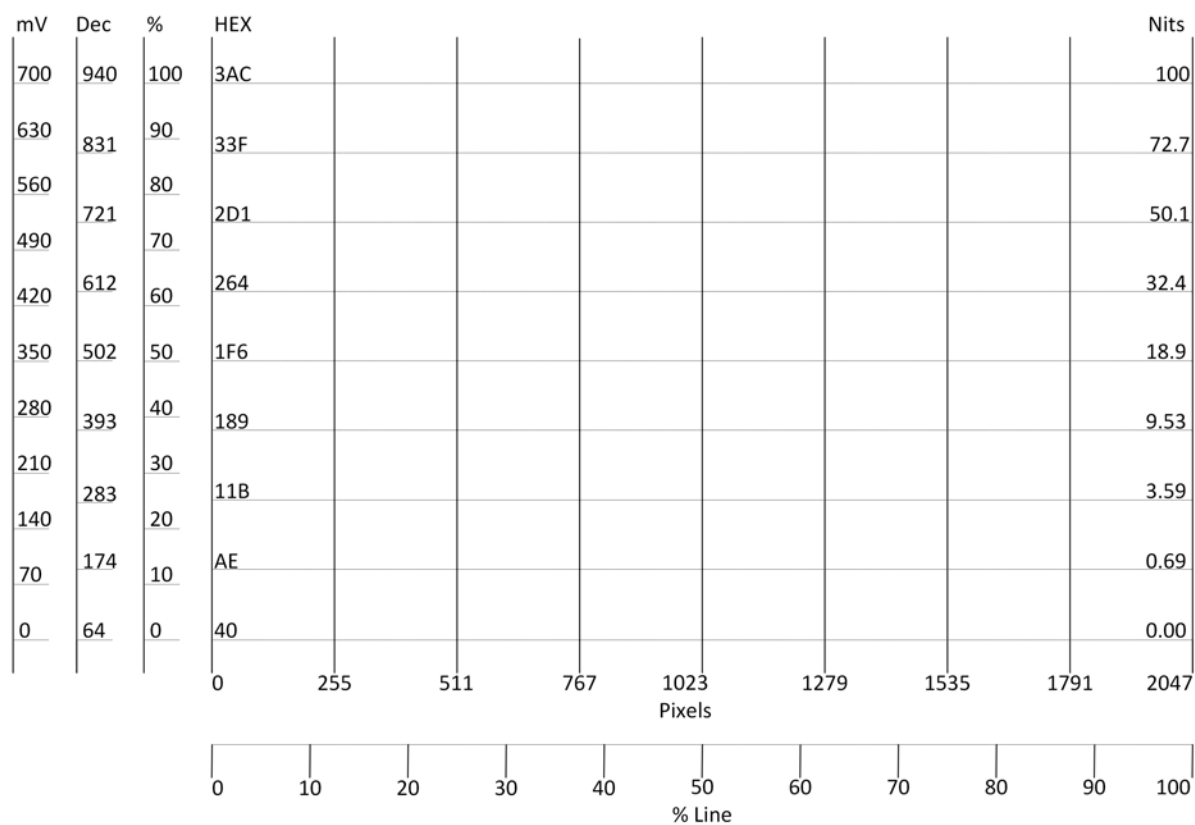


Figure 7-15: Waveform Scales (Overlay Mode; SDR 2048 x 1080; NR, Full Screen Size) (Nits Scale with HDR Only)

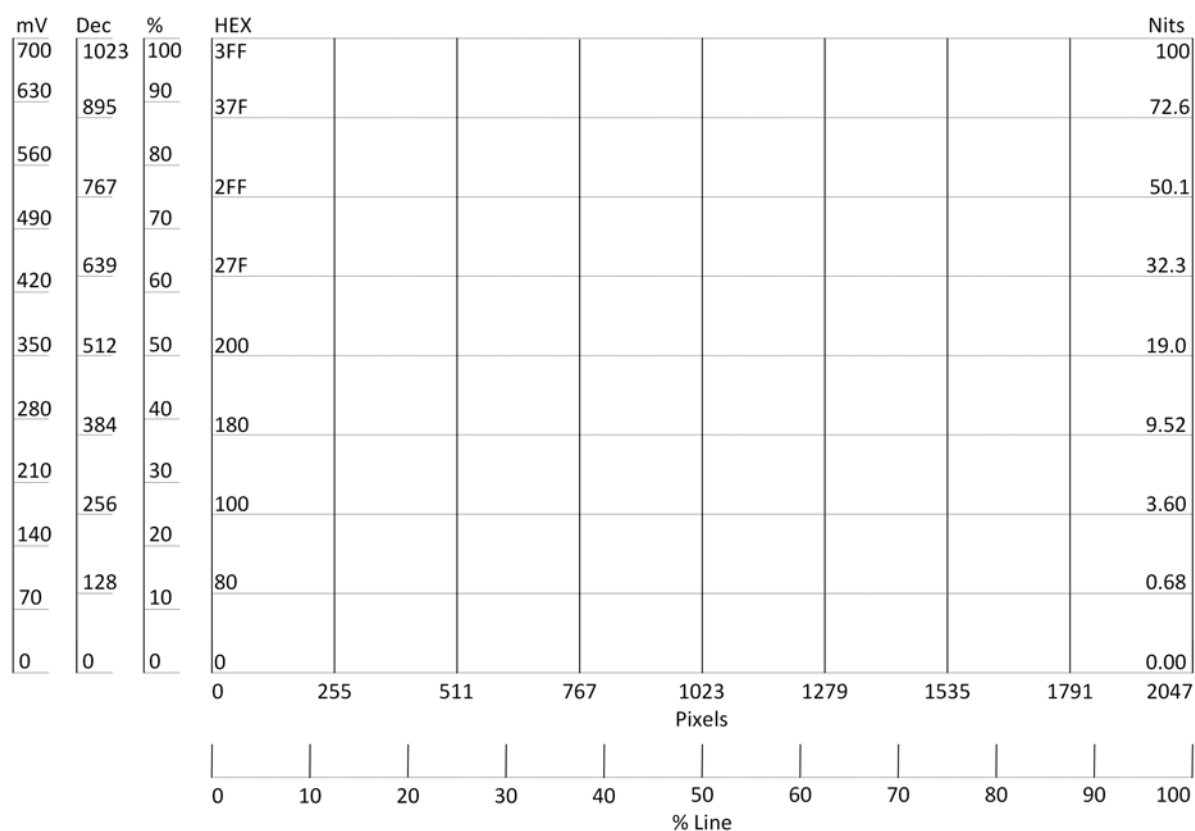


Figure 7-16: Waveform Scales (Overlay Mode; SDR 2048 x 1080; FR; Full Screen Size) (Nits Scale with HDR Only)

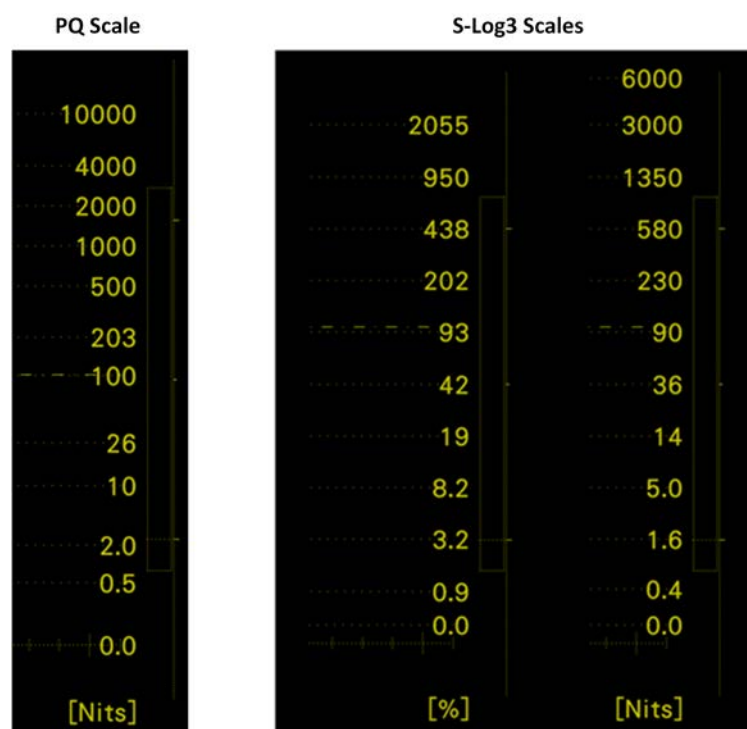


Figure 7-17: Comparison of PQ and S-Log3 Scales for HDR Waveform Analysis (HDR Only)

Note: The Nits scale applies only to the luma (Y) component of the source input (if displayed) up to 100 cd/m². A Nits scale is not displayed for either of the Cb or Cr components if these are displayed either together or on their own. (HDR Only.)

The Nits scale is displayed from 0 to 100 cd/m² for the SDR transfer curve. For source inputs using the HDR transfer curve, the Nits scale is extended beyond 100 cd/m². (HDR Only.)

Using Full-width Screen Mode

A full-width mode is available to display all waveforms in Stacked, Overlay or single-channel Parade waveform modes. The unit displays the selected waveform or waveforms across the full width of the Waveform window. The vertical and horizontal scales are superimposed over the waveforms.

Full-width mode enables you to align the overlay, stacked, or single channel parade waveform with the current video signal displayed in the Picture instrument as shown in [Figure 7-18](#).

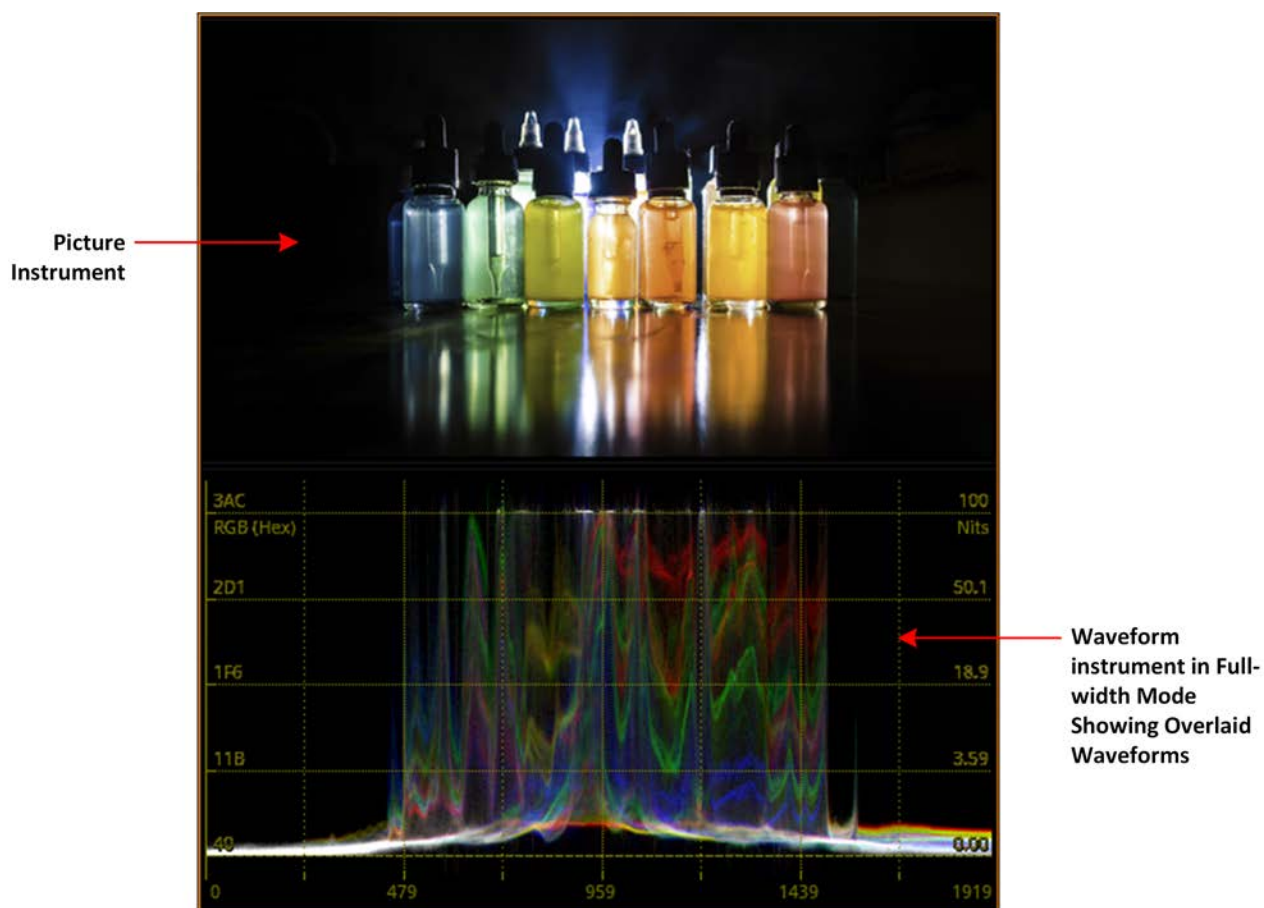


Figure 7-18: Waveform Instrument Matched to Width of Picture Instrument

Using the Custom Display Mode

In addition to using the standard display modes, you can use the Custom Display Mode Configuration option to define your own selection of channels chosen from Y, Cb, Cr, R, G, B and A.

To do so, open the **Custom Display Mode Config...** popup menu from the main options menu. You can define a display mode of up to four channels by selecting a desired luma/chroma component from the **Channel 1** to **Channel 4** dropdown menus. The Channel 2, 3 and 4 dropdown menus become active only once you select a Display Mode for the previous channel.

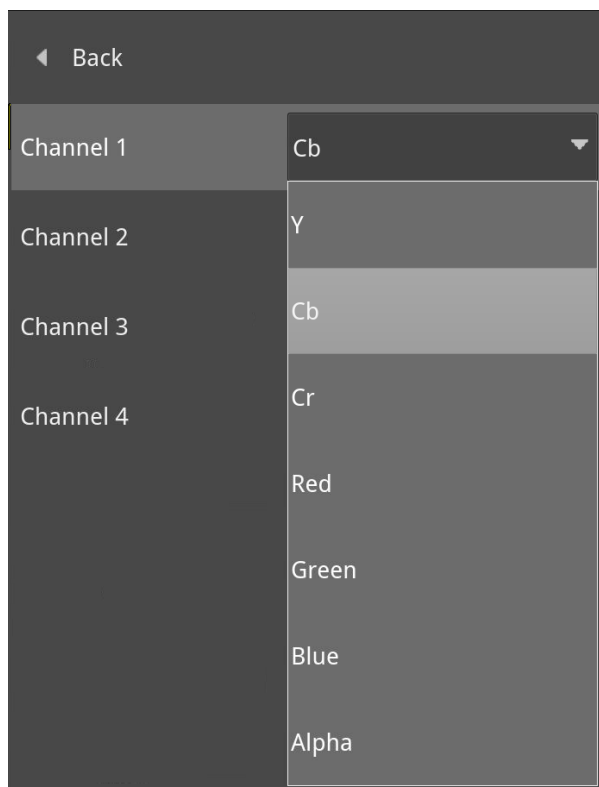


Figure 7-19: Waveform Instrument Custom Display Mode Configuration Menu

To activate your defined custom display mode, select the **Custom** option from **Display Mode** dropdown.

About the Waveform Modes

The following figure shows the source Picture and waveform analysis for each waveform mode in the display modes YCbCr and RGB.

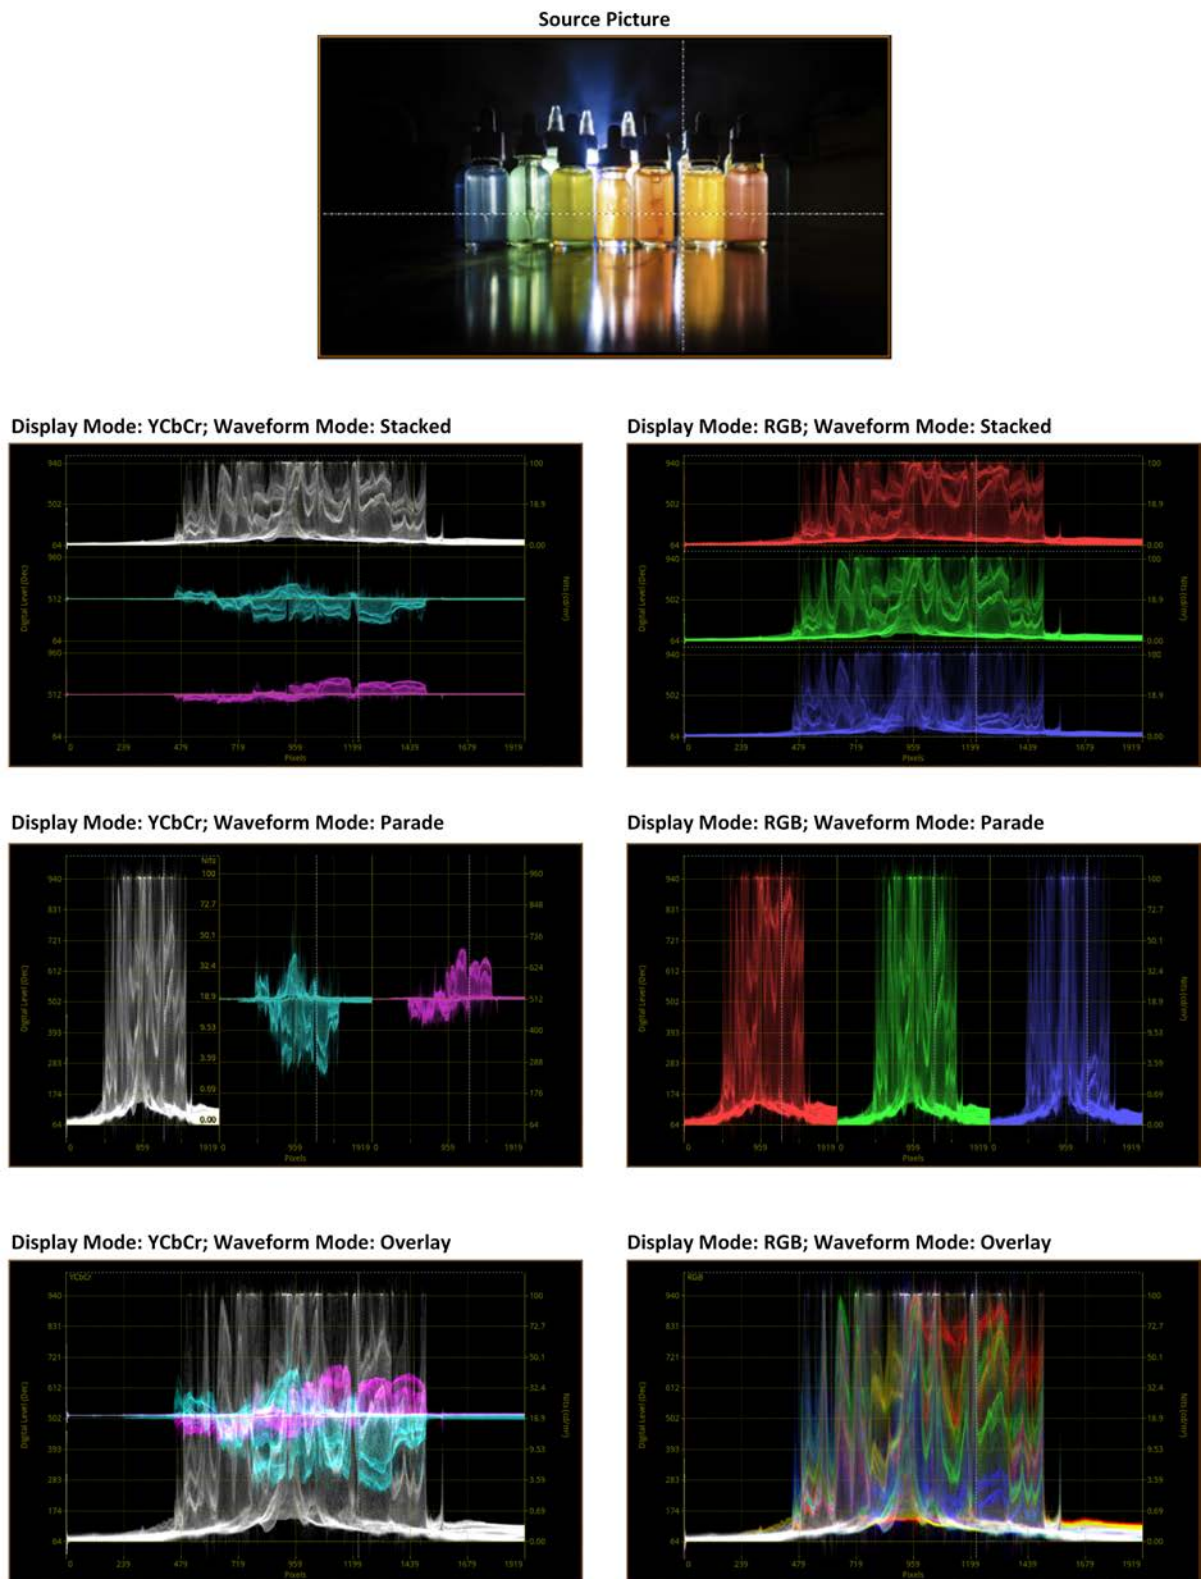


Figure 7-20: Waveform Modes for YCbCr and RGB Display Modes

For the waveform mode **Parade**, you can choose any of the following display modes:

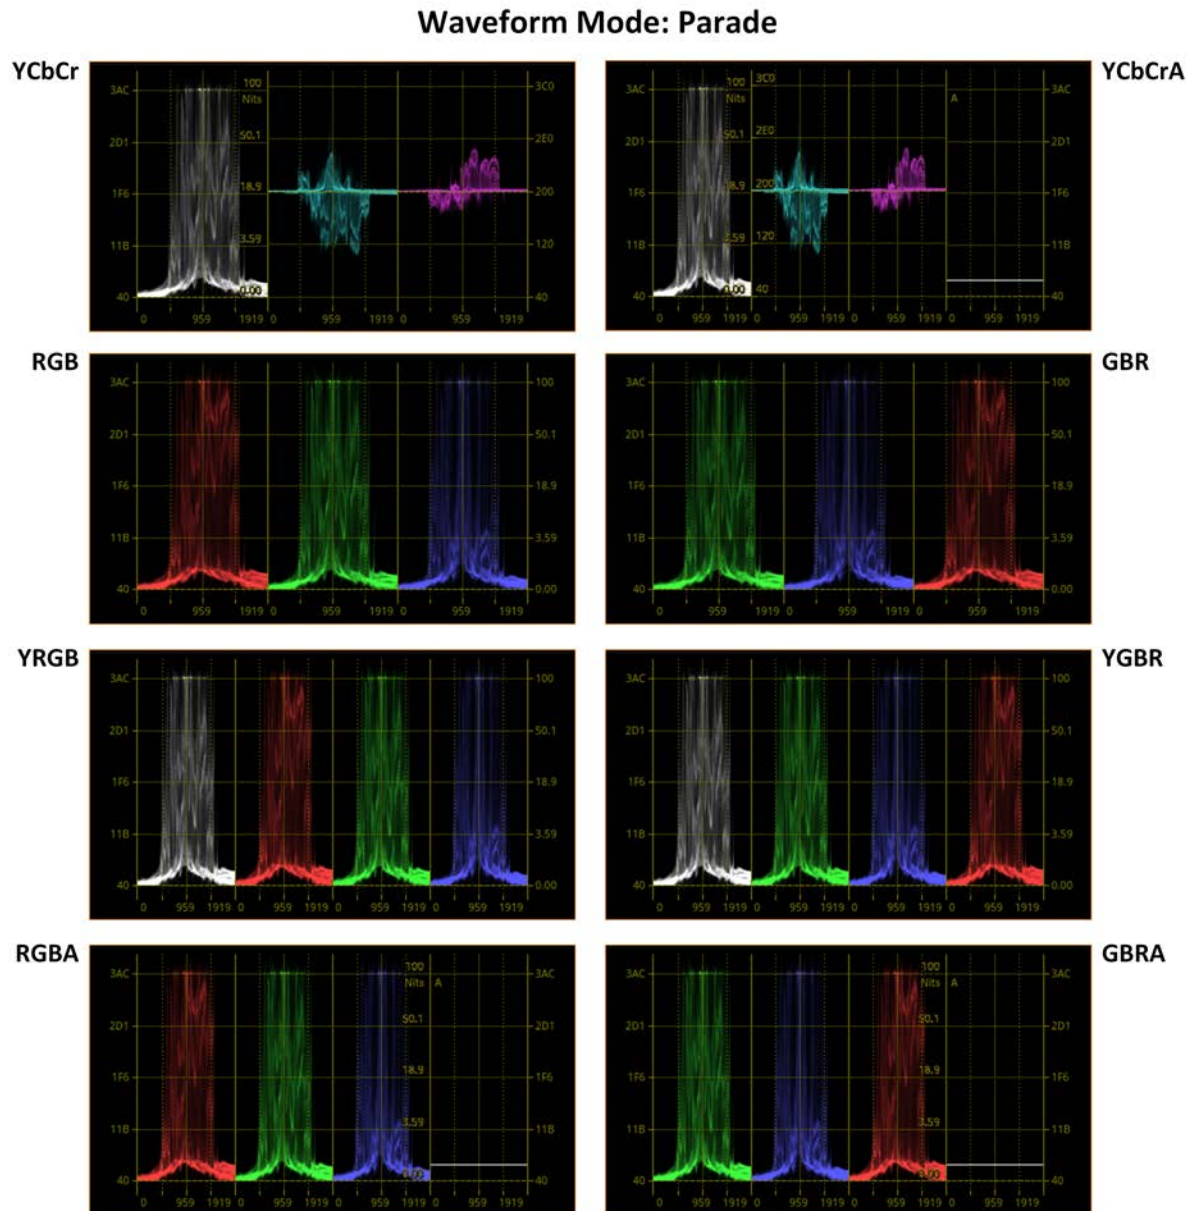


Figure 7-21: Parade Waveform Display Modes (Excludes Single Waveforms)

For the waveform mode **Stacked**, you can choose any of the following display modes:

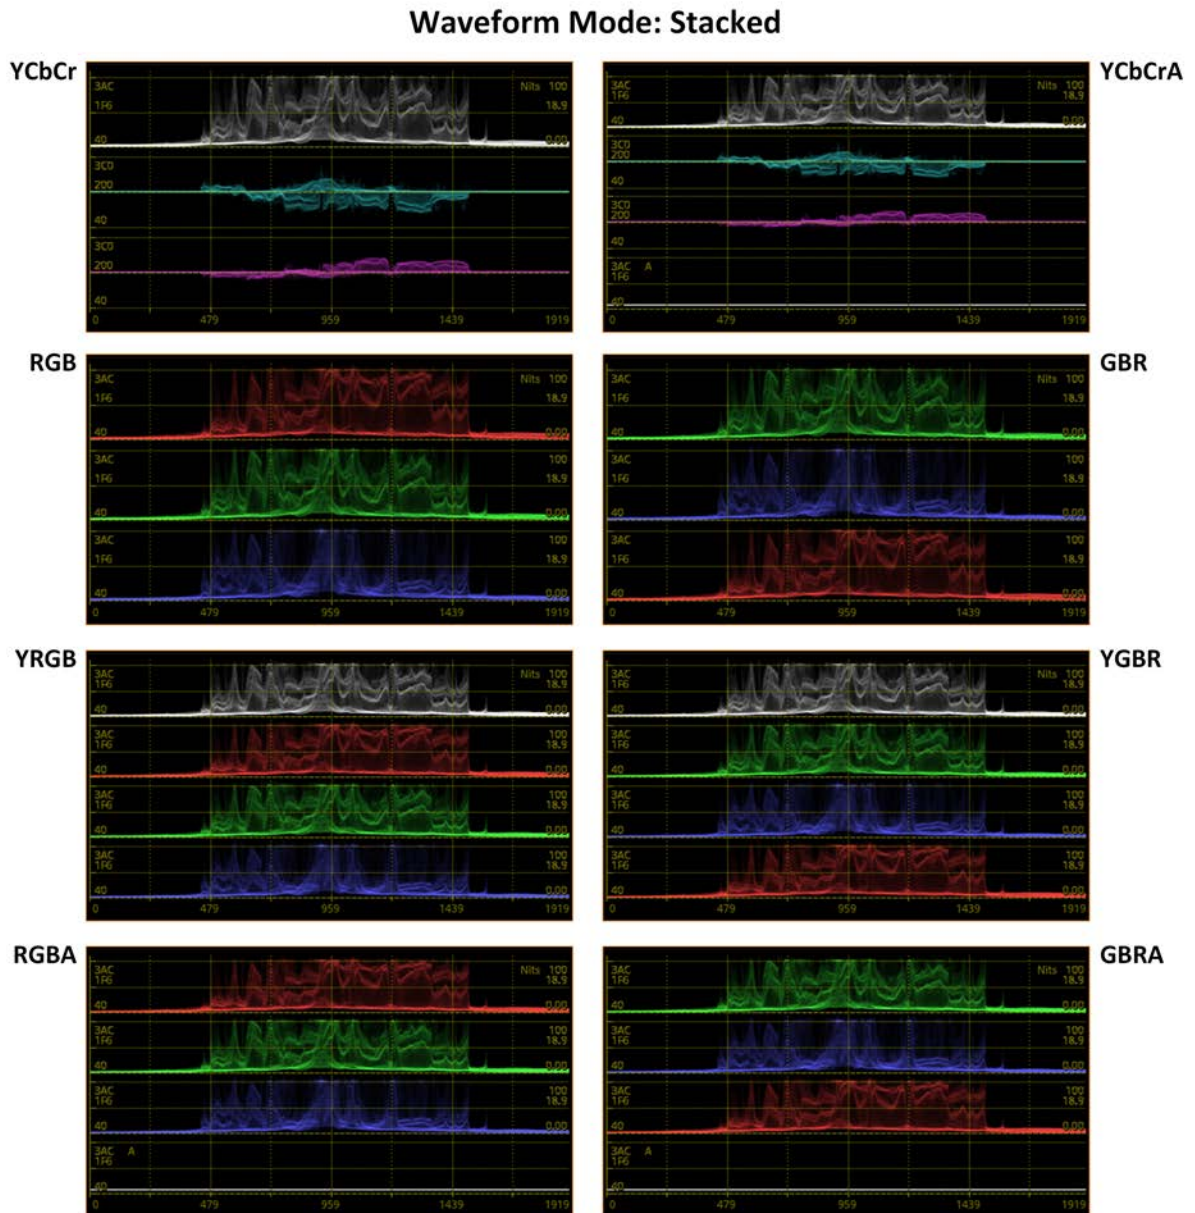


Figure 7-22: Stacked Waveform Display Modes (Excludes Single Waveforms)

The Overlay mode superimposes each waveform on top of the other, the layout of the screen does not change in Overlay mode.

Using the Zoom and Panning Controls

Note: Vertical magnification is not possible when using the stacked waveform mode.

The Waveform instrument provides controls in the options menu that enable you to zoom in/out or pan horizontally/vertically in the displayed waveform. With the options menu open:

- Adjust the **H Magnification** slider control to zoom in/out along the horizontal axis of the waveform.
- Adjust the **H Position** slider control to pan horizontally to keep the point of interest in view. (This control becomes available when you increase the H Magnification setting above 1.0.)
- Adjust the **V Magnification** slider control to zoom in/out along the vertical axis of the waveform.

- Adjust the **V Position** slider control to pan vertically to keep the point of interest in view. (This control becomes available when you increase the V Magnification setting above 1.0.)

Using Picture and Dataview with the Waveform Instrument

When you enable the Picture Cursor in either the Analyzer - Picture or Analyzer - Waveform instruments (or both), the area of the picture around the cursor is highlighted in the Dataview instrument, as shown in [Figure 7-23](#) below.

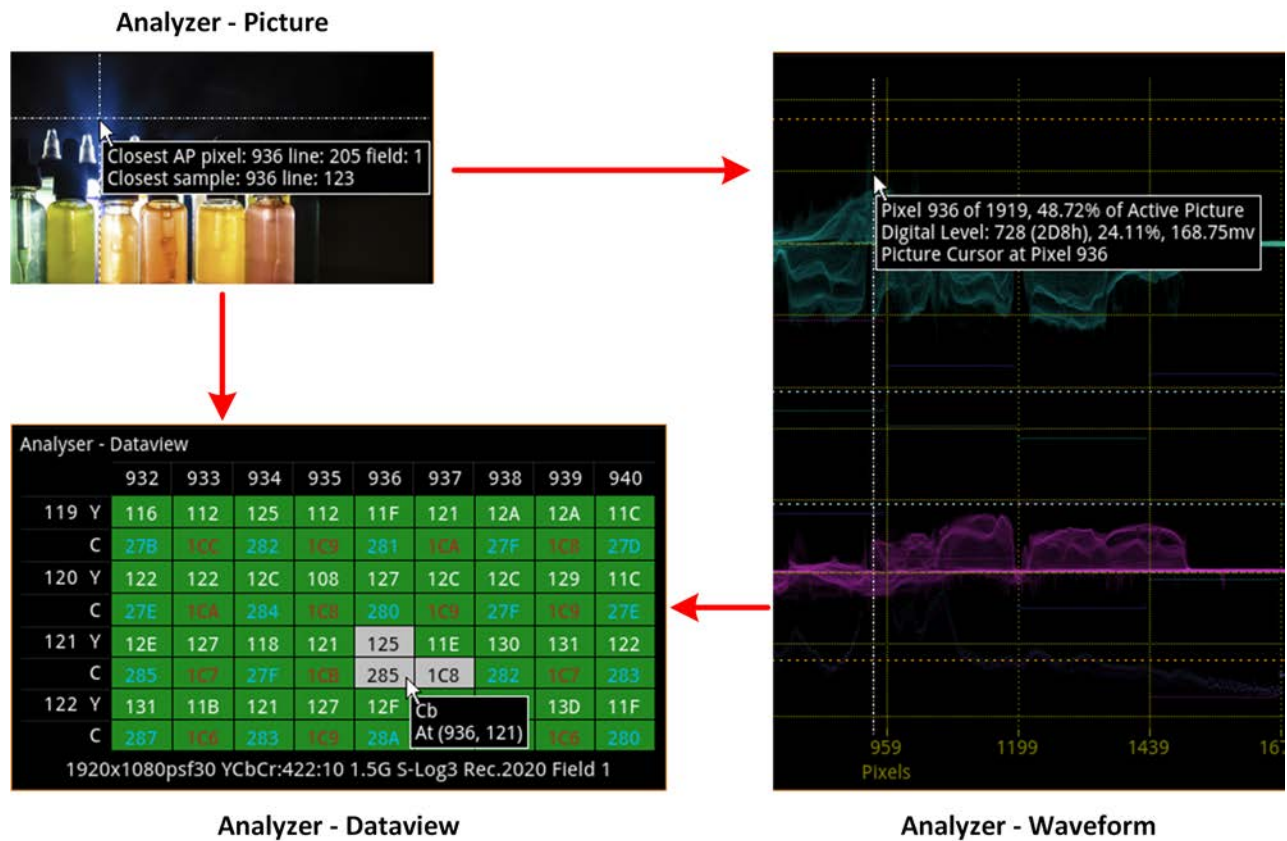


Figure 7-23: Interactive Linking of Picture Cursor in Picture, Waveforms, and Dataview

In addition, you can also use single-line mode without filtering (Raw) to perform detailed technical analysis of a waveform without artifacts generated by filtering, see [Figure 7-24](#). For information about the available filters, see the section [Instrument Menu Options](#).

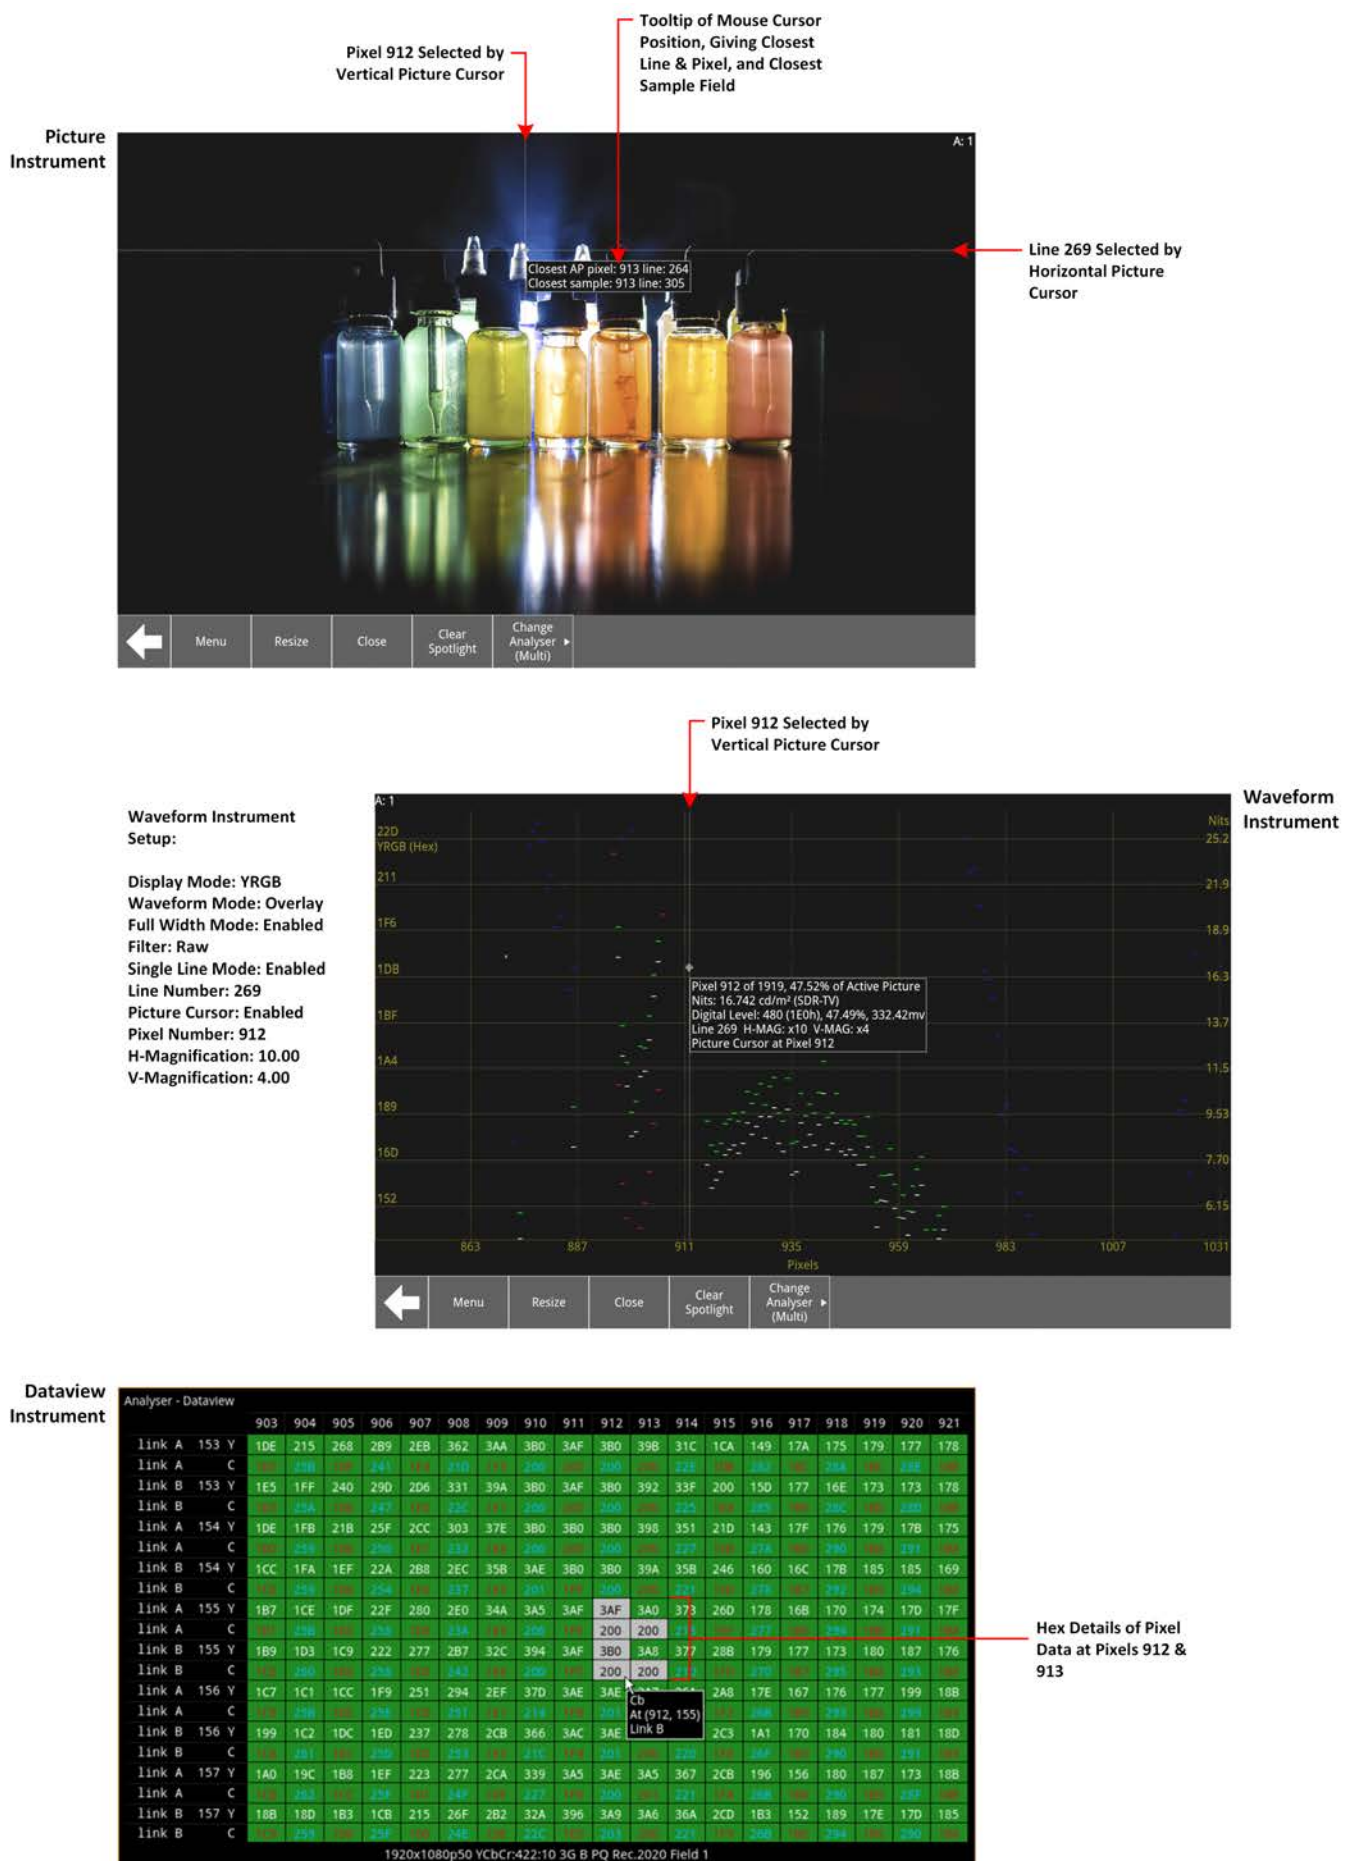


Figure 7-24: Detailed Technical Analysis of Part of Image Using Waveform and Dataview Instruments

Using the Vectorscope with the Waveform Instrument

You can use the Vectorscope and Waveform instruments in combination to analyze the Cb/Cr channels. If you enable single line mode in the vectorscope it is also automatically enabled in the waveform instrument. Similarly, when the Cb and/or Cr channels (stacked and parade waveform modes only) are active, any adjustment of the user markers in the vectorscope is also reflected in the user markers of the waveform instrument.

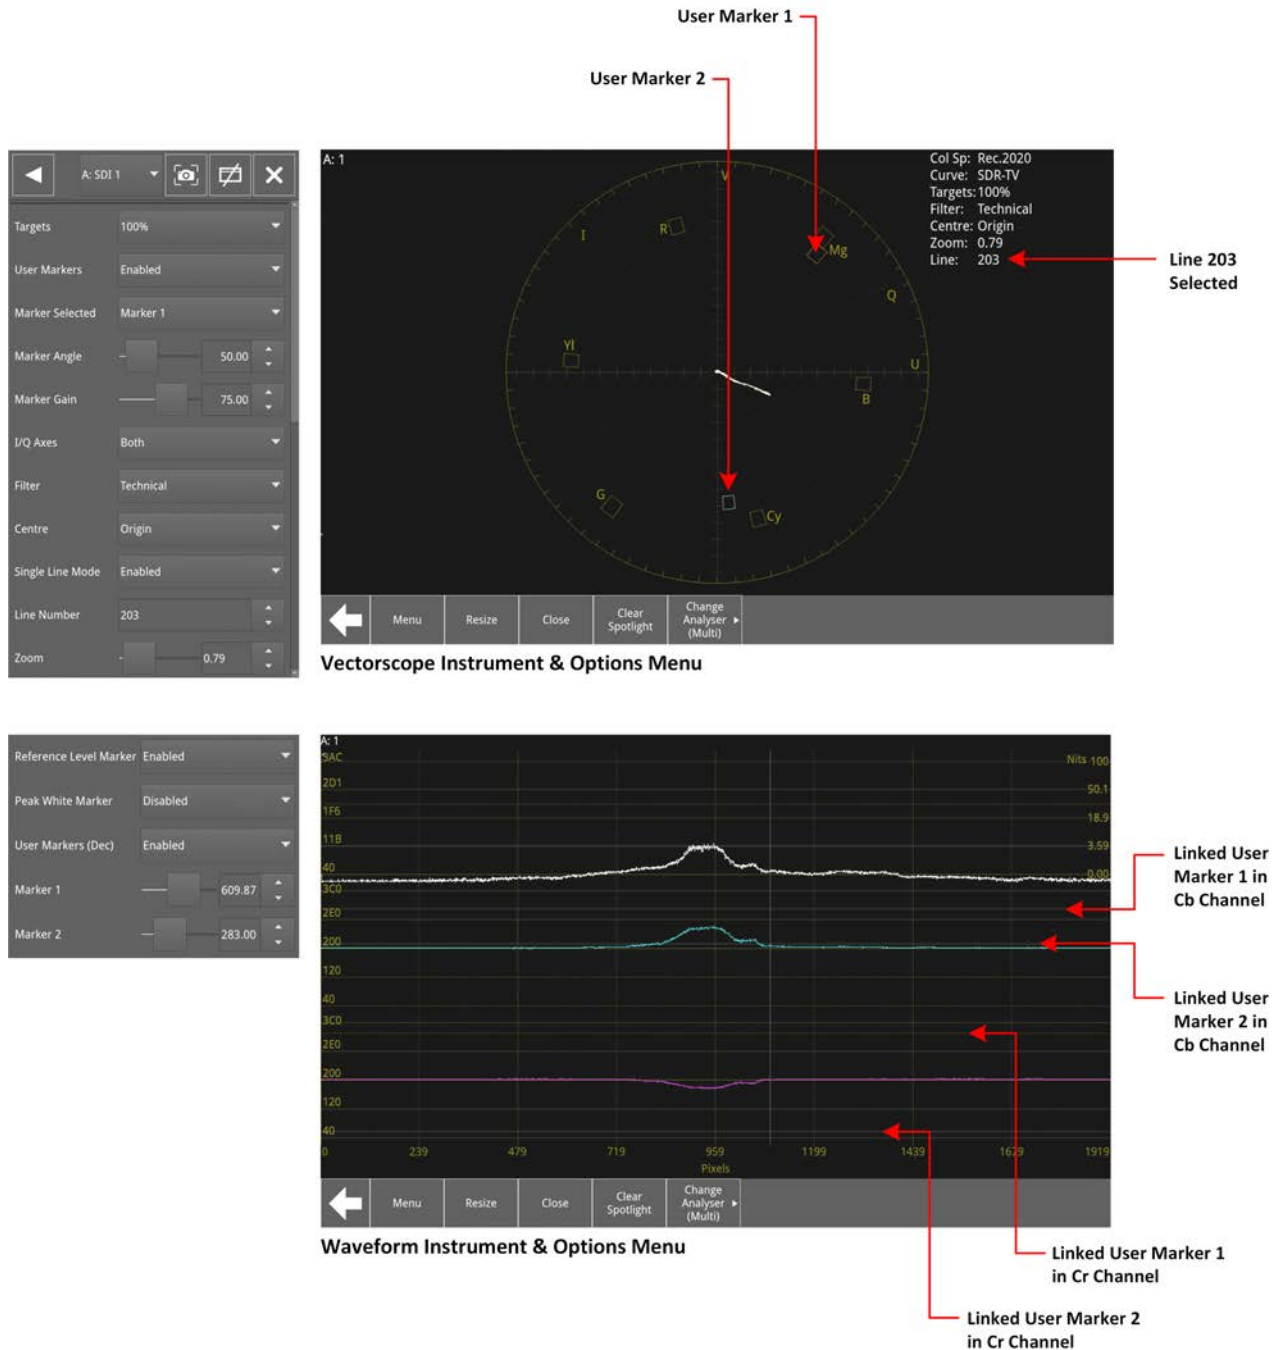


Figure 7-25: Interactive Linking of User Markers in Vectorscope and Waveform Instruments

Note: User markers must be controlled from the vectorscope. User marker changes made in the waveform instrument are not reflected in the vectorscope.

Using the Waveform Measurement Cursors

The unit provides a pair of measurement cursors which you can configure to indicate waveform values against either vertical or horizontal axes. When first enabled, the waveform measurement cursor(s) are displayed as one or two, horizontal dashed lines.

You can choose to display either a single measurement cursor or a pair of cursors. By default, the cursor(s) are aligned horizontally against the current Y axis (referred to as the **Y-axis Cursors**). You can, however, change the orientation of the cursor(s) so that they are aligned vertically to measure against the X axis (referred to as the **X-axis cursors**).

If you choose to display a single cursor, the cursor displays the value at that point; there is no delta value. The single cursor is always referred to as the **Reference** (or REF) cursor and is displayed as a green dashed line.

If you choose to display both measurement cursors, the **Reference** cursor is located at **0%** by default and the **Delta** cursor is displayed as a blue dashed line at **100%** by default.

The value(s) indicated by the cursor(s) are displayed as follows:

- **For Y-axis cursors:** On the cursor, at the right-hand side of the display
- **For X-axis cursors:** Next to the cursor, at the top of the display.

When you enable both cursors, the difference (delta) between the values measured by the Delta and Reference cursors (Delta cursor value minus Reference cursor value) is displayed as follows:

- **For Y-axis cursors:** At the bottom, left-hand side of the display, above the Reference (green) cursor
- **For X-axis cursors:** At the bottom, left-hand side of the display, next to the Reference (green) cursor.

Cursors in a pair can be independent or linked together so that they move as a single unit, with a fixed separation between them. In addition, the cursor(s) display the measured values, in the selected units, and update in real-time if their position changes.

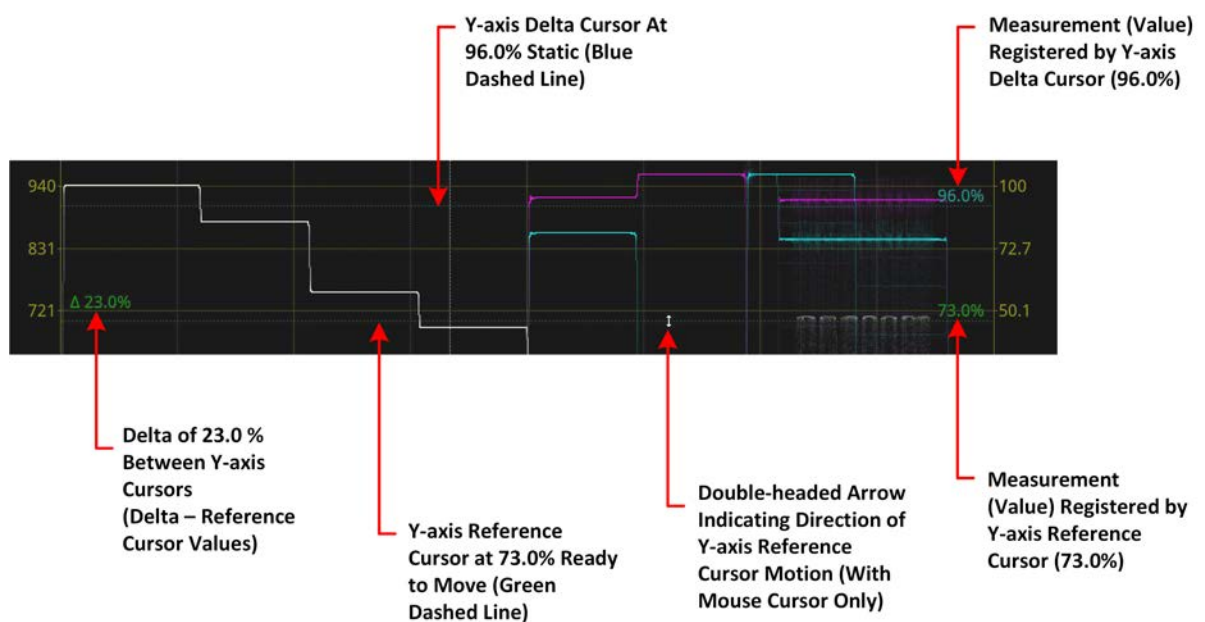


Figure 7-26: Waveform Measurement Y-axis Cursors (Independent Configuration)

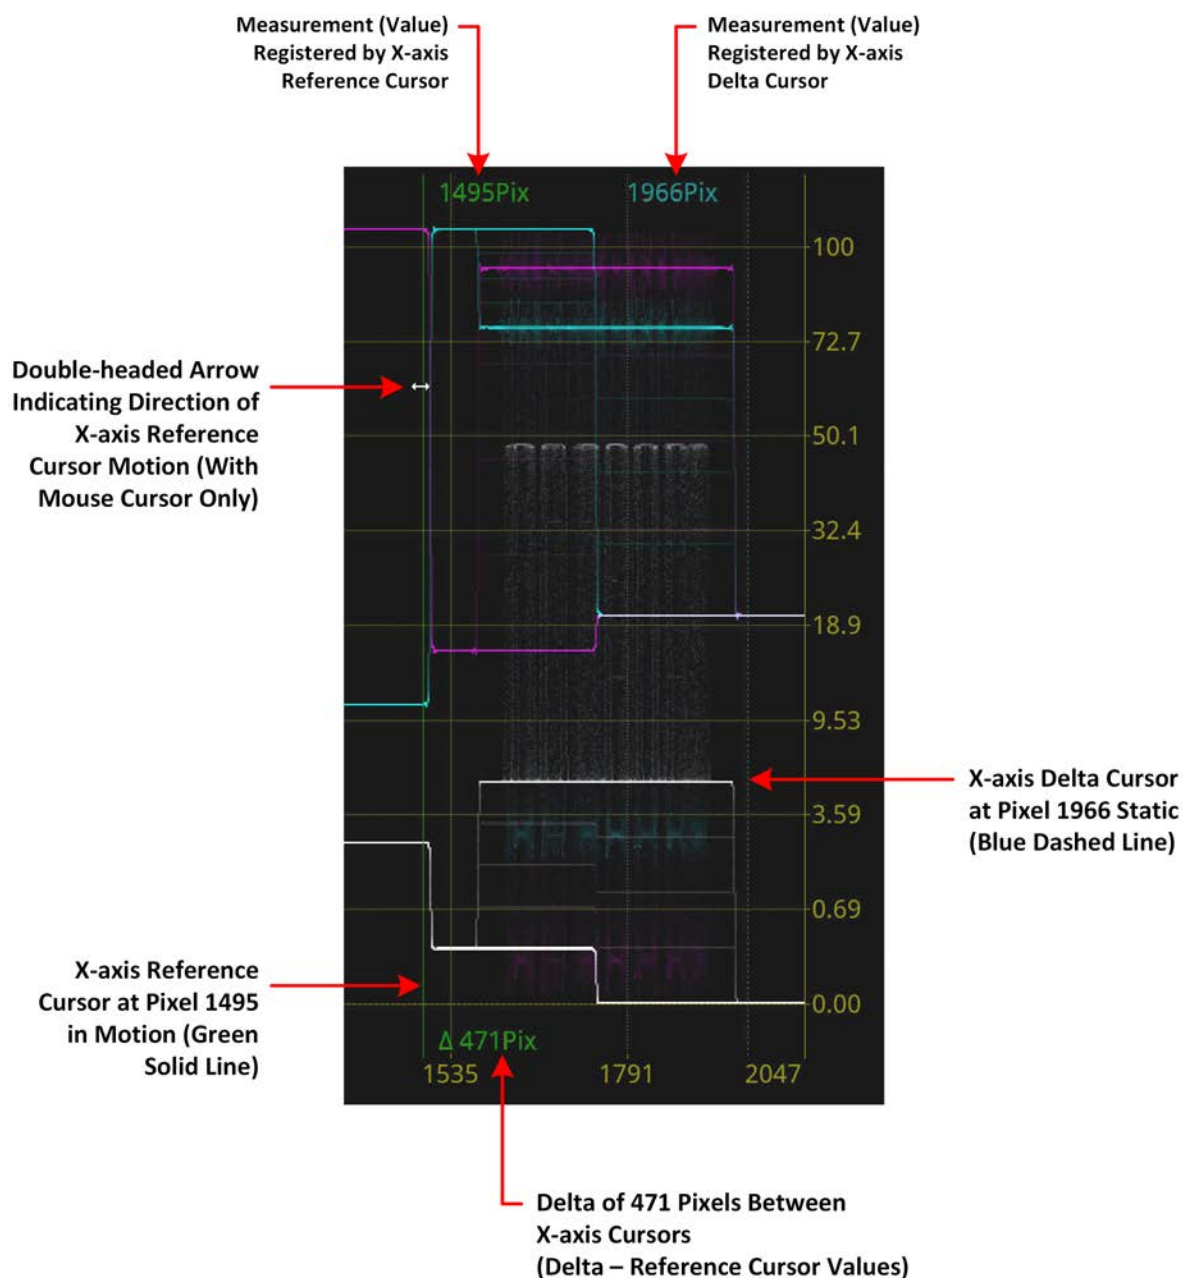


Figure 7-27: Waveform Measurement X-axis Cursors (Independent Configuration)

To position a measurement cursor, use one of the following methods:

- Open the options menu, then adjust the **Ref Cursor Position** slider to move the Reference cursor (recommended).
- Open the options menu, then adjust the **Delta Cursor Position** slider to move the Delta cursor (recommended).
- Tap to select a measurement cursor then turn the rotary control left or right to move the selected cursor(s) down / up (Y-cursors) or left / right (X-cursors), respectively.
- Preferably in a full-screen display, touch a measurement cursor and slide to a new position.
- When using a mouse, select a cursor by moving the mouse pointer over the cursor when you should see the pointer change shape to a double-headed arrow. Click the mouse and the dashed cursor line becomes solid. At this point rotate the mouse wheel or drag the cursor to a new position.
- You can also adjust the positions of the measurement cursors using the instrument softkeys, which become available when one of the cursor control sliders is activated.



Figure 7-28: Waveform Measurement X-axis Cursors

Note: If both cursors are enabled and linked, then both will move together. To move a cursor independently when both are linked, adjust the **Cursor Differential** slider in the options menu. This action moves the Delta cursor while keeping the Reference cursor fixed in position.

When in motion, the dashed line of the cursor changes to a solid blue or green line for improved visibility. You will see the measured values on the cursors change in real-time as you adjust the cursor position(s).

You can configure the measurement cursor(s) to measure in different units, as follows:

- **For Y-cursors:** Select units of percent (default), percentage of reference, millivolts, hex value decimal value, or Nits (HDR Only).
- **For X-cursors:** Select units of percent (default), number of pixels, time (μ s) or frequency (kHz).

For information about the configurable parameters of the waveform measurement cursors, see the [Measurement Cursor Configuration](#) section of the options table.

Setting a % Reference

Use the **% Reference** cursor scale to measure a position relative to a reference baseline that you set; otherwise, the measurement is relative to the 0 value of the waveform scale.

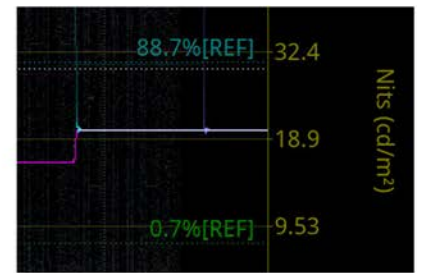
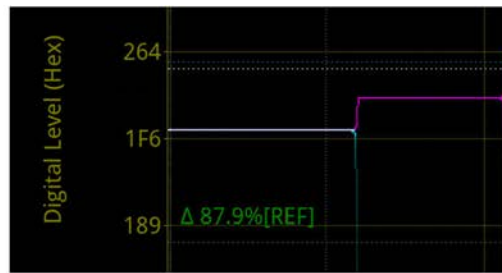
Setting the % Reference changes the reference value to the current Reference cursor position and the 100% delta cursor value to the current position of the Delta cursor.

Note: Although it is recommended to set a reference when using the % Reference cursor scale, you can use this without setting a reference, however, this is equivalent to using the cursor scale **Percent**.

In the **Measurement Cursor Config...** submenu, first set the Cursor Scale to **Percent Ref**, adjust the position of the Reference cursor to the new baseline, then tap **Set % Ref**. The Reference cursor value is displayed as **0.0%[REF]**. You can now adjust the measurement cursors to measure values within the new range.


On completion, select **Reset % Reference** to set the measurement cursors back to their default positions of 0% and 100%.

Starting Position with Delta Cursor (Blue) at 88.7% and Reference Cursor (Green) at 0.7%. Delta Between Cursors is 87.9%



In Measurement Cursor Config... Submenu, select: Set % Reference

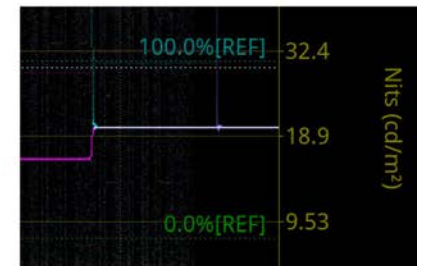New Baseline (0.0%) Set at Reference Cursor Position and 100% at Delta Cursor Position



Change the Position of the Reference Cursor

New Delta of 100% Retained

On Completion, In Measurement Cursor Config... Submenu, select: Reset % Reference

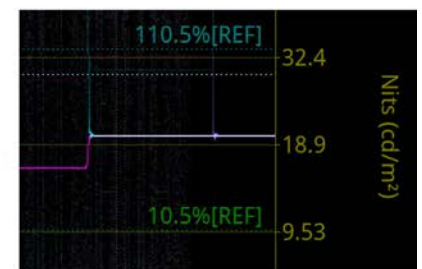


Figure 7-29: Waveform Measurement Cursors - Using Set % Reference

Instrument Menu Options

The following table lists the configurable parameters in the Analyzer - Waveform instrument submenu:

Table 7-3 : Analyzer - Waveform Options

Item	Options	Description
Display Mode	YCbCr (Default) YCbCrA Y Cb Cr RGB GBR YRGB YGBR RGBA GBRA Red Green Blue Alpha Custom	Selects the desired display mode in which to display the waveforms. For more information, see About the Display Modes .
Custom Display Mode Config...	System Control Opens the Custom Display Mode Channel configurations submenu.	See Custom Display Mode Configuration below for submenu parameters. For more information, see Using the Custom Display Mode .
Waveform Mode	Parade (Default) Stacked Overlay	Parade - displays each individual waveform separately, in horizontal, side-by-side graphs. Stacked - displays each individual waveform in vertical stacked graphs. Note: vertical magnification is not supported in this waveform mode. Overlay - displays each individual waveform on the same graph, superimposed on top of each other.
Full Width Mode	Enabled Disabled (Default) Note: In Parade Waveform Mode, you can enable full-width mode for a single channel only.	When you select waveform modes Stacked, Overlay, or any single channel Display Mode (Red, Green, Cb, Cr, etc.) you can enable (or disable) full-width mode.
Scales & Markers Config...	System Control Opens the Scales & Markers configuration submenu.	See Scales & Markers Configuration below for submenu parameters.
Filter	Technical (Default) Production Low Pass Raw	Selects the type of filtering applied to the waveform. When you select the Raw option, no filtering is applied and no waveform draw, thus eliminating filtering artifacts. Instead, the values of the pixels in the image are represented as individual points on the graph.

Item	Options	Description
Single Line Mode	Enabled (Default) Disabled	When enabled, allows single line mode analysis of the active picture. When disabled, all lines in the active picture are represented as waveforms, one per line. This is automatically linked to the Vectorscope.
Line Number	System Control 1 to Total number of active lines in the selected standard.	When single line mode is enabled, selects the line number in the active picture for analysis.
Picture Cursor	Disabled (Default) Enabled	When enabled, dynamically links the picture cursor to the Picture, Dataview, Waveform, Vectorscope and CIE Chart analysis instruments so that measurements from the selected picture position can be taken from these tools at the same time.
Pixel Number	Numeric Field 1 to Maximum Pixel Number	When Picture Cursor enabled, selects a specific pixel number, if required.
Full Range Mode	RP.2077 (Default) SDI Protected	Uses full range, by default, as defined in SMPTE RP 2077 <i>Full-Range Image Mapping</i> but can be set to use full protected range, as required. For more information see the section Video Range Definitions for the LPX Series .
Measurement Cursors	Off (Default) Single Both	Enables either one (Single) or two (Both) measurement cursors. When displayed initially, the first, Reference cursor is displayed as a green dotted line located at the bottom of the waveform display (0%). If you choose to display both cursors, the second Delta cursor is displayed as a blue dotted line at the top of the waveform display (100%). The default setting is to display horizontal cursors, measuring against the Y axis. You can change the orientation of the measurement cursors in the Measurement Cursor Config... submenu.
Measurement Cursor Config...	System Control Opens the Measurement Cursor configuration submenu.	See Measurement Cursor Configuration below for submenu parameters. For more information see the section Using the Waveform Measurement Cursors .
Ref Cursor Position	Slider Control	Available when one or both measurement cursors are enabled. Moves the Reference cursor (green) to adjust the reference level.
Delta Cursor Position	Slider Control	Available when both measurement cursors are enabled and independent. Moves the Delta cursor (blue) to adjust the difference (delta) between the two cursors.
Cursor Differential	Slider Control	Available when both measurement cursors are enabled and linked. Moves the Delta cursor (blue) relative to the Reference cursor (green) while keeping the Delta cursor static.

Item	Options	Description
H Magnification	Slider control: 1.00 (Default) to 10.00	<p>Adjusts the horizontal magnification of the waveform using the slider to zoom in to the waveform, providing a better view of a waveform section.</p> <p>Use this control together with the H Position slider to adjust the point of interest in the waveform.</p> <p>When you increase the H magnification above 1.00, the H Position control also becomes available to pan horizontally along the waveform while the Options menu is open.</p> <p>Note: The Waveform, Vectorscope, and CIE Chart instruments are all linked so that when you adjust the Horizontal Magnification in the Waveform instrument it also adjusts the Horizontal Magnification in the other linked instruments, if they are active.</p>
H Position	Slider control Horizontal Axis	<p>Displayed when the horizontal magnification is greater than 1. Pans along the horizontal axis of the waveform.</p> <p>Enables you to adjust the focus of the waveform within the instrument window, along the horizontal axis, if the position of interest moves out of view when zooming.</p>
V Magnification	Slider control: 1.00 (Default) to 4.00	<p>Adjusts the vertical magnification of the waveform using the slider to zoom in to the waveform, providing a better view of a waveform section.</p> <p>Use this control together with the V Position slider to adjust the point of interest in the waveform.</p> <p>When you increase the V magnification above 1.00, the V Position control becomes available to pan vertically through the waveform while the Options menu is open.</p> <p>Note: Vertical magnification is not supported in stacked waveform mode.</p>
V Position	Slider control Vertical Axis	<p>Displayed when the vertical magnification is greater than 1. Pans along the vertical axis of the waveform.</p> <p>Enables you to adjust the focus of the waveform within the instrument window, along the vertical axis, if the position of interest moves out of view when zooming.</p>
Brightness	Slider control: 1 to 255 (Default: 255)	Adjusts the brightness of the waveform display.
Gamma	Slider control: 0.2 to 1.00 (Default: 0.5)	Adjusts the gamma component of the waveform display.
Persistence	Slider control: 0 to 511 (Default: 255)	Adjusts the persistence of the waveform display.
Advanced...	System Control	Enables you to adjust the gain on any of the four channels independently. See Advanced Waveform Controls below.
Restore Default Levels	System Control	Resets the Waveform instrument to its default gain levels.
Color Mode	Color (Default)	Selects the desired color palette for the waveforms from

Item	Options	Description
	Highlight Green Monochrome	four different color modes. The Highlight option adds a white highlight to the input component logarithmically proportional to the amount of the displayed color.
S-Log3 Mode (HDR Only)	S-Log3 (Default) SR Live	For HDR video signals, see the section Advanced HDR Toolset . Use when analyzing an S-Log3 or S-Log3 SR Live signal. Set to SR Live to extend the range of the Nits scale.
Custom Display Mode Configuration		
Channel 1	Y Cb (Default) Cr Red Blue Green Alpha	Selects any of the available single Display Modes to display in the Channel 1 position.
Channel 2	None Y Cb Cr (Default) Red Blue Green Alpha	Selects any of the available single Display Modes to display in the Channel 2 position.
Channel 3	None (Default) Y Cb Cr Red Blue Green Alpha	Selects any of the available single Display Modes to display in the Channel 3 position.
Channel 4	Disabled (Default) None Y Cb Cr Red Blue Green Alpha	Enabled only when you select a parameter for Channel 3. Selects any of the available single Display Modes to display in the Channel 4 position.
Scales & Markers Configuration		
V Scale	Percent Hex Value (Default) Decimal Value Millivolts	Selects the units for the vertical (Y-axis) scale in the instrument window.
V Scale Nits (HDR Only)	Hidden Right Side (Default) Left Side	Selects the position of the vertical (Y-axis) Nits scale. By default the scale is positioned on the right-hand side of the waveform graph. If the right-most channel is Cr or Cb, the NITS scale is

Item	Options	Description
		displayed (by default) to the right of the Y channel, if present.
H Scale	Pixels % Line None (Default)	Selects the units for the horizontal (X-axis) scale in the instrument window. To switch off the display of the H Scale, select None.
V Graticules	Disabled (Default) Enabled	When enabled, displays vertical graticules on the waveform graph. These are disabled by default for enhanced observation of the waveform details.
H Graticules	Disabled Enabled (Default)	When enabled, displays horizontal graticules on the waveform display. These are enabled by default.
Reference Level Marker (HDR Only)	Disabled Enabled (Default)	When enabled, displays a reference level marker across all waveforms at a fixed value of 203 cd/m ² (nits), when analyzing an HDR signal. When enabled, the marker is set at 58% for Perceptual Quantizer (PQ) and 75% for Hybrid Log-Gamma (HLG) color ranges, see Figure 7-31 .
Peak White Marker (HDR Only)	Disabled (Default) 1000 Nits 2000 Nits 4000 Nits 10000 Nits	When enabled, displays a peak white marker across all waveforms in HDR standards at a selectable level in Nits.
User Markers (Dec)	Disabled (Default) Enabled	When enabled, this feature allows you to position user markers anywhere in the waveform display. Provides two sliders for Marker 1 and Marker 2, which you can adjust along the V Scale (Y-axis).
Marker 1 and Marker 2	Slider Controls	When User Markers are enabled, adjust from the minimum to maximum value of the selected V Scale. For example, if set to Hex or Decimal Value, the maximum value will vary with bit depth.
Measurement Cursor Configuration		
Cursor X/Y Select	Y (Default) X	Selects either horizontal Y-axis cursor(s) or vertical X-axis cursor(s) to display along the Y-axis or X-axis, respectively.
Cursor Scale (For Y-axis Cursor(s))	Percent (Default)	Selects the required scale for the Y-axis cursor measurements. Displays measurement values as a percentage of the range of chroma/colour values.
	Percent Ref	Displays measurement values as a percentage of the reference value at the point you selected Set % Reference , or the default reference (0%) if no user-defined reference is set.
	Millivolts	Displays measurement values in millivolt units
	Hex Value	Displays measurements as hexadecimal values.
	Decimal Value	Displays measurements as decimal values.
	Nits	Displays measurement values in Nits (cd/m ²) (HDR Only)
Cursor Scale (For X-axis Cursor(s))	Percent (Default)	Selects the required scale for the X-axis cursor measurements. Displays measurement values as a percentage of the

Item	Options	Description
		waveform width.
	Pixel	Displays measurement values in a number of pixels.
	Time	Displays measurement values in microseconds.
	Frequency (kHz)	Displays measurements in units of kHz.
Cursor Values	Displayed (Default) Hidden	Choose whether to display the values measured at the current cursor position and the difference between the values when both cursors are active.
Cursor Adjustment	Independent (Default) Linked	When both cursors are active, you can choose whether you want to move each cursor independently of the other or to link both cursors. When linked, both cursors move together as a unit, maintaining a fixed separation between them.
Set % Reference	System control	Sets a new reference range between the current positions of the Reference and Delta cursors, equal to the range 0 to 100%.
Reset % Reference	System control	Returns the measurement range to the default settings. Both cursors also return to their original default positions at top or right (100%) and bottom or left (0%) of the waveform display. Note: This control has no effect if Set % Reference has not been used.
Advanced Waveform Controls		
Channel 1 Gain	Slider control; 0 to 1.9 1.00 (Default)	Adjusts the gain setting for the Channel 1 waveform. The gain setting enables you to adjust the brightness of the trace displayed in Channel 1, changing its brightness independently of the components in the other channels. This functionality is useful when using the Overlay waveform mode, especially in combination with single-line analysis.
Channel 2 Gain	Slider control; 0 to 1.9 1.00 (Default)	Adjusts the gain setting for the Channel 2 waveform. The gain setting enables you to adjust the brightness of the trace displayed in Channel 2, changing its apparent brightness independently of the components in the other channels.
Channel 3 Gain	Slider control; 0 to 1.9 1.00 (Default)	Adjusts the gain setting for the Channel 3 waveform. The gain setting enables you to adjust the brightness of the trace displayed in Channel 3, changing its apparent brightness independently of the components in the other channels.
Channel 4 Gain	Slider control; 0 to 1.9 1.00 (Default)	Adjusts the gain setting for the Channel 4 waveform. The gain setting enables you to adjust the brightness of the trace displayed in Channel 4, changing its apparent brightness independently of the components in the other channels.

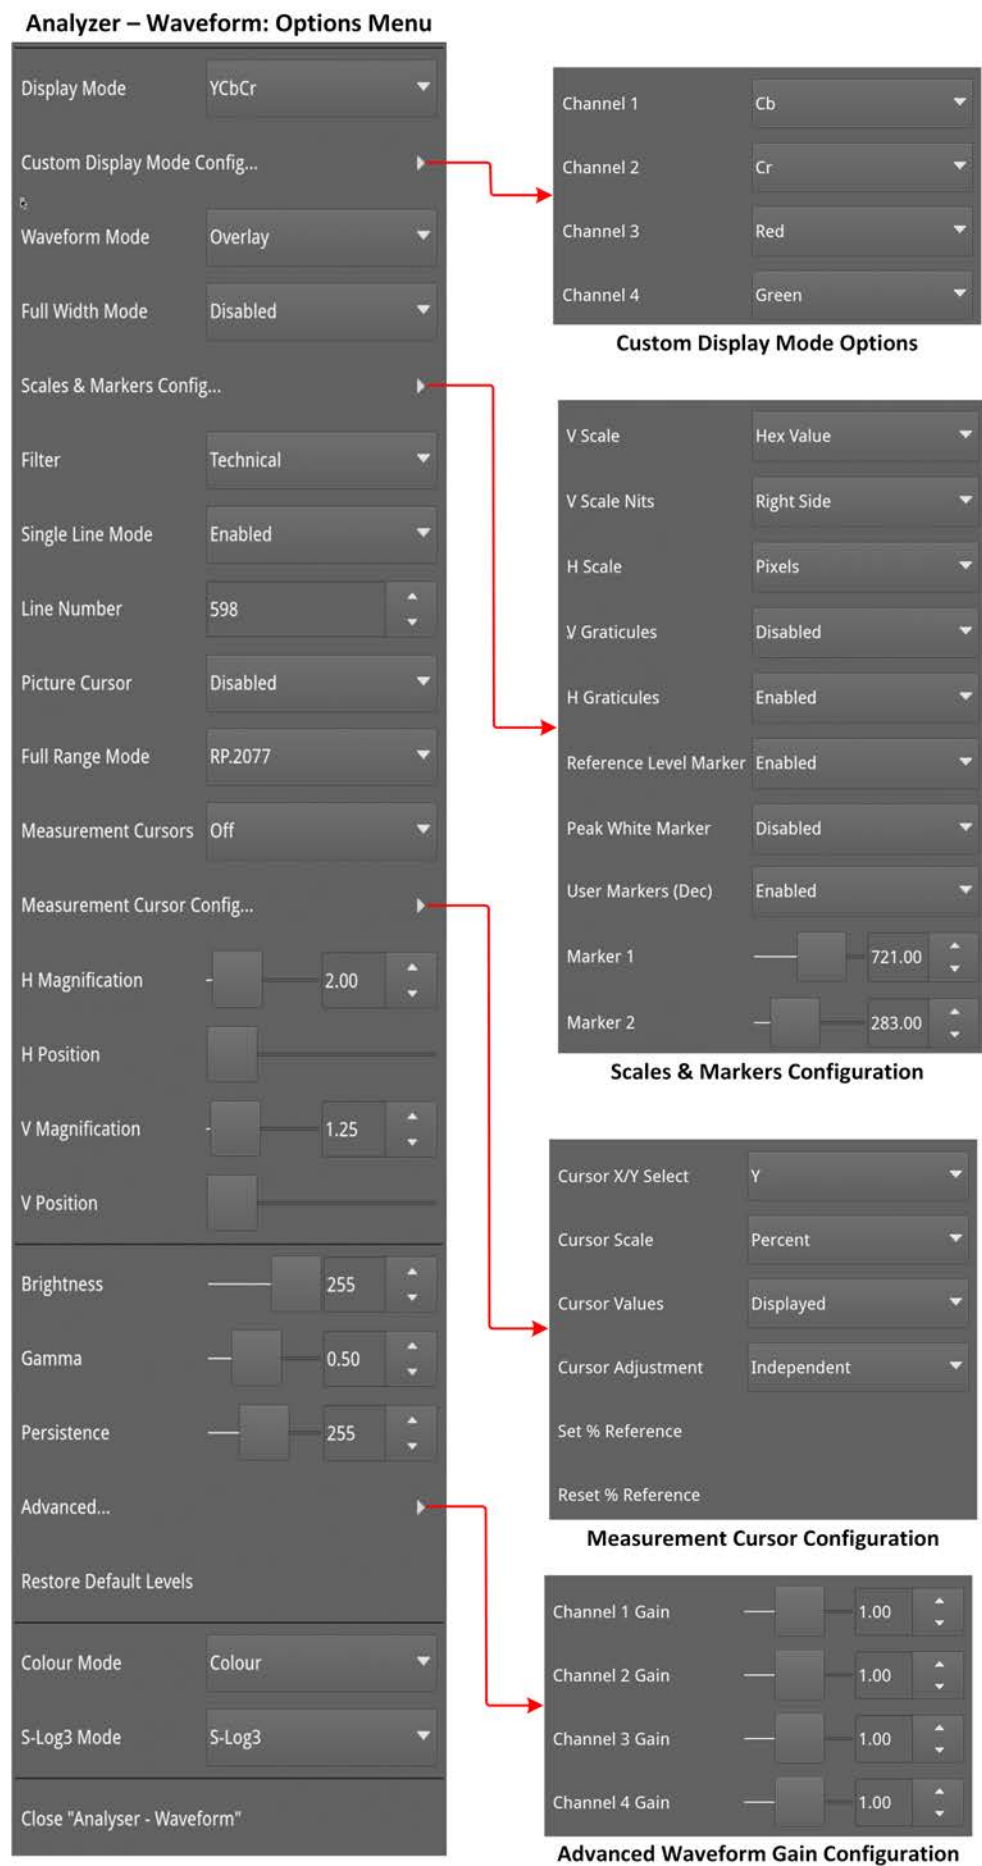


Figure 7-30: Analyzer - Waveform Options Menu and Submenus

[Figure 7-31](#) (below) shows the difference between the **Reference Level Markers** when analyzing HDR PQ 2020 and HDR HLG 2020 signals and the Reference Level Marker is enabled in the **Scales & Markers Config...** submenu.

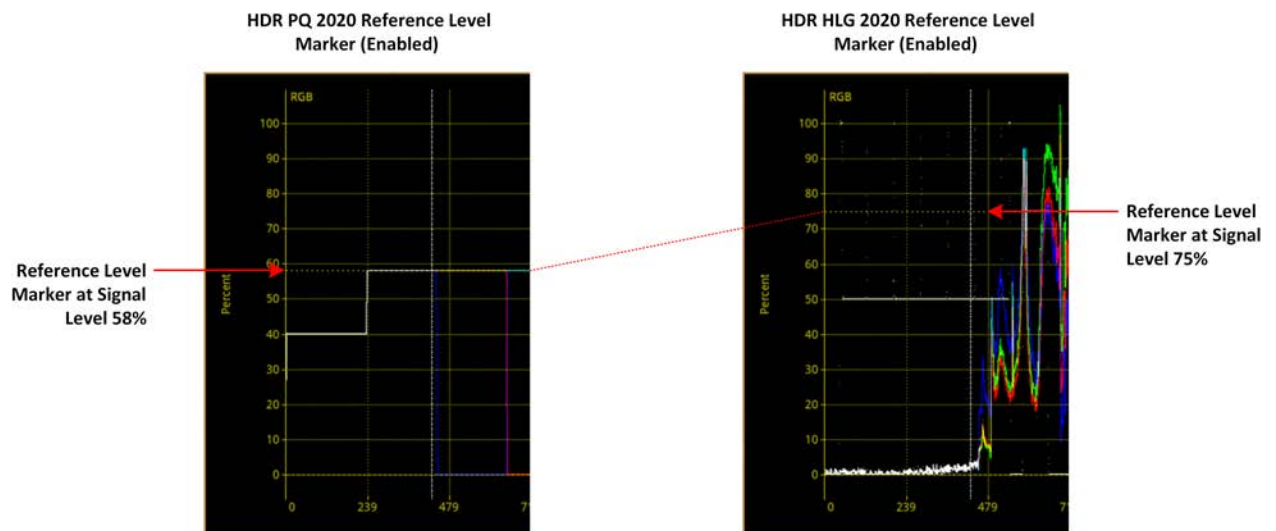


Figure 7-31: Analyzer - Waveform Options Menu - Reference Level Marker (HDR Only)



Overview

The Vectorscope is part of the video core toolset that provides a polar (X-Y) display of the Cb and Cr Color Difference representations of the image, where the hue of the color is the angular component of the polar display. The Y component of the YCbCr video input to the vectorscope is ignored. The vectorscope presents the amplitude of the color difference as the distance from the origin (black).

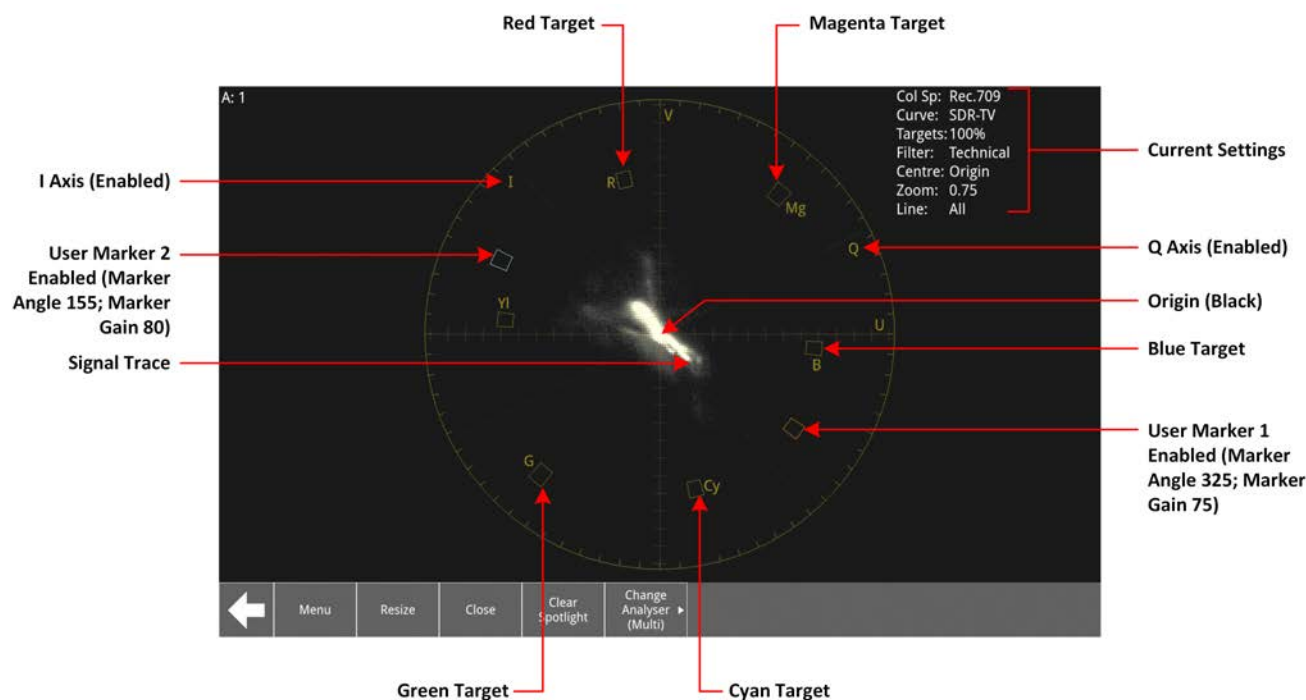


Figure 7-32: Analyzer - Vectorscope Instrument

Instrument Menu Options

The following table lists the configurable parameters in the Analyzer - Vectorscope instrument submenu:

Table 7-4 : Analyzer - Vectorscope Options

Item	Options	Description
Targets	Off (Default) 75% 100%	If selected, sets the display graticule scale to match either the 75% or 100% color bar positions. It also leads to the display of markers indicating the positions of pure R, G, B, C, Y and M. When set at 75%, the target represents 75% saturation, and the further from the center of the display, the more saturated that color. At 100%, the target represents 100% saturation.
User Markers (Dec)	Disabled (Default) Enabled	When enabled, places two markers in the vectorscope display. In addition, opens two new sliders for Marker Angle (adjustable in the range 0 and 359.99) and Marker Gain, (adjustable in the range 0 and 100.00).
Marker Selected	Marker 1 (Default)	When User Markers enabled, sets the focus for Marker

Item	Options	Description
	Marker 2	Angle and Marker Gain operations to either Marker 1 or Marker 2. By default, Marker 1 is orange and Marker 2 is cyan. Note: Marker 1 and Marker 2 are linked to the User Markers (Dec) in the Waveform instrument.
Marker Angle	Marker 1: 0.00 to 359.99 (Default: 0.00) Marker 2: 0.00 to 359.99 (Default: 90.00)	Adjusts the angle of the cursor from its default starting position around the center of the vectorscope.
Marker Gain	Marker 1: 0.00 to 100.00 (Default: 50.00) Marker 2: 0.00 to 100.00 (Default: 50.00)	Adjusts the Gain on the signal from 0 at the origin to 100 at the outer limit of the vectorscope.
I/Q Axes	Off (Default) I Only Q Only Both	When enabled, displays either the I axis only, the Q axis only, or both IQ axes together. The scale on the axes represents the vertical lines for each color.
Filter	Technical (Default) Production Low Pass Raw	Sets the type of filtering applied. When you select the Raw option, the dots displayed correspond to the pixel values recorded in the stream. There is no filtering applied to these pixels.
Center	Origin (Default) Red Green Blue Magenta Cyan Yellow Marker 1 Marker 2	Selects the origin for the vectorscope display; used as the zoom focus.
Single Line Mode	Disabled (Default) Enabled	When enabled, allows single line mode analysis of the active picture. When disabled, all points in the image are analyzed/represented in the graph.
Line Number	System Control 1 to Total number of active lines in the active standard.	When Single Line Mode is enabled, selects the line number in the active picture.
Zoom	System Control 0.5 to 4.00 (Default: 1.00)	Zooms-in to the selected Center; either the origin, a color target, or either of the user markers. Use the slider control to adjust the zoom.
Brightness	Slider control: 1 to 31 (Default: 8)	Adjusts the brightness of the vectorscope display.
Gamma	Slider control: 1 to 255 (Default: 127)	Adjusts the gamma component of the vectorscope display.
Persistence	Slider control: 1 to 255 (Default: 70)	Adjusts the persistence of the vectorscope display.

Targets	100% ▼		
User Markers	Enabled ▼		
Marker Selected	Marker 1 ▼		
Marker Angle	<input type="range"/>	92.31	▲ ▼
Marker Gain	<input type="range"/>	100.00	▲ ▼
I/Q Axes	Both ▼		
Filter	Raw ▼		
Centre	Origin ▼		
Single Line Mode	Enabled ▼		
Line Number	204		▲ ▼
Zoom	<input type="range"/>	0.50	▲ ▼
Brightness	<input type="range"/>	31	▲ ▼
Gamma	<input type="range"/>	252	▲ ▼
Persistence	<input type="range"/>	255	▲ ▼

Figure 7-33: Analyzer - Vectorscope Options Menu

Audio Signal Analysis Instruments

This chapter describes the Audio analytical Instruments and includes the following sections:

- [Analyzer - Audio Channel Status](#)
- [Analyzer - Audio Meters](#)

Analyzer - Audio Channel Status



Overview

The **Analyzer - Audio Channel Status** Instrument displays detailed information about the available audio channels.

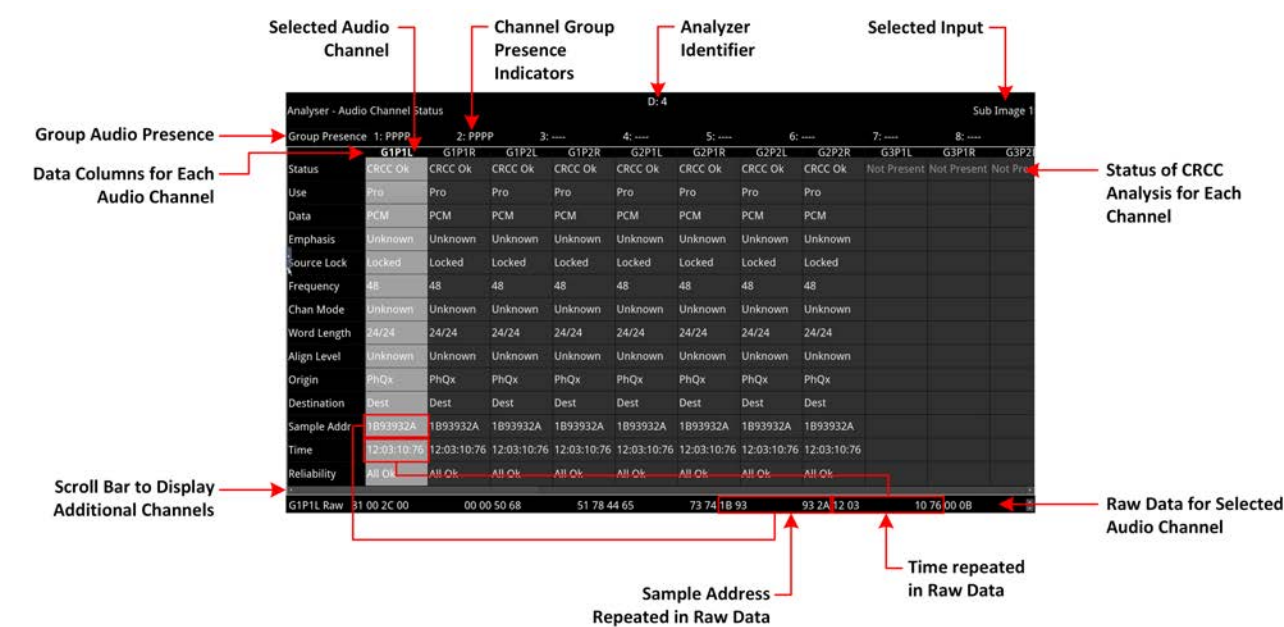


Figure 8-1: Analyzer - Audio Channel Status Instrument

The Group Presence is defined in the upper row of the **Analyzer - Audio Channel Status** display. For each channel, one of the following channel presence indicators is displayed:

- -: No audio
- P: PCM audio present
- D: Dolby Digital® packets present
- +: Dolby Digital Plus™ packets present
- E: Dolby E™ packets present
- 2: Dolby ED2™ packets present
- ?: Unspecified data present.

If you hover the mouse cursor over one of the presence indicators, the following tooltip is displayed:

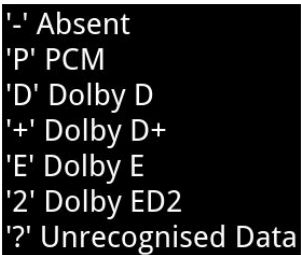


Figure 8-2: Audio Channel Group Presence Tooltip

In addition, the following information is displayed in the main data table for each audio channel:

- **Channel Status:** Result of the cyclical redundancy check checksum (CRCC), for example: CRCC Ok.
The status table uses the following color-coding to indicate CRCC errors:
 - If the channel status is in error, the text is displayed in a red font
 - If errors have occurred but are no longer present the text is displayed in a yellow font
 - If no errors are present, the text is displayed in a white font.
- **Use:** Intended purpose of the audio signal.
- **Data:** Digital sampling method employed, for example: PCM (pulse-code modulation).
- **Emphasis:** Type of signal pre-emphasis applied to the audio signal.
- **Source lock:** Indicates whether the source is locked to an external time sync, for example: Locked.
- **Frequency:** Audio sampling frequency in kHz, for example: 48.
- **Channel Mode:** Represents the relationship between each audio channel pair.
- **Word Length:** Represents the audio word length, for example: 24/24.
- **Align Level:** Alignment Level element in the audio channel status data.
- **Origin:** Four ASCII characters indicating the channel origin, for example: PhQx
- **Destination:** Four ASCII characters indicating channel destination
- **Sample Address:** A rolling counter that increments with each audio sample
- **Time:** Local time of the encoded audio
- **Reliability:** Contains information about the reliability of the channel status word, for example: All Ok.

Use the horizontal and vertical scroll bars to view the full table of channel columns and audio status parameters.

Raw Data Display

You can click on an audio channel column to select it and display the raw data for that channel in the bottom row of the window.

Each AES3 audio sample, includes the Sample Address and Time occupying eight bytes (14 to 21) with a reliability indication in byte 22 and the cyclical redundancy check checksum (CRCC) in byte 23. With each audio sample, the Sample Address and Time are different for each sample, so bytes 14 to 21 will change, as will the checksum in byte 23.



Overview

The **Analyzer - Audio Meters** instrument displays 16 audio meters together with peak level indicators and indication of audio pair correlation. In addition, the numeric values are displayed in dBFS below each meter.

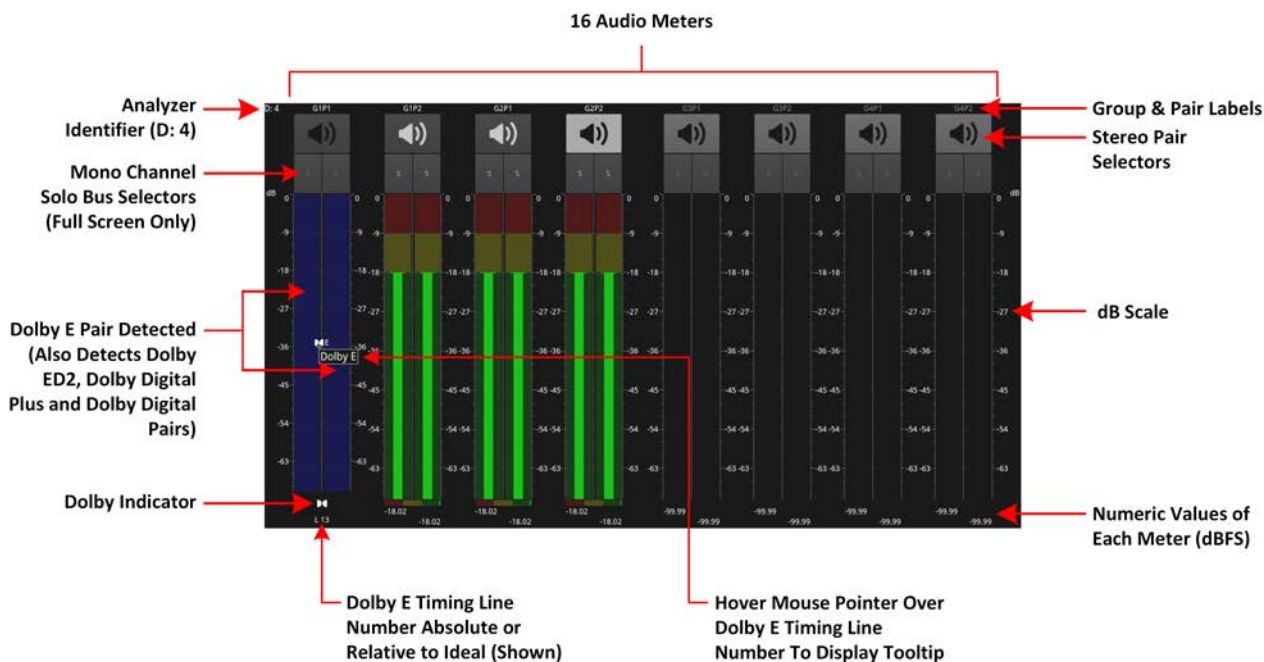



Figure 8-3: Analyzer - Audio Meters Instrument

Dolby E™, Dolby ED2™, Dolby Digital® and Dolby Digital Plus™ streams are automatically detected by the unit, with Dolby® stream presence indicated in blue. For an SDI input carrying embedded Dolby E audio, the Dolby E timing line number is also displayed below the meter, either as an absolute value or relative to the Ideal line number specified for that video standard.

The DisplayPort output carries a stereo pair of audio, as do the SDI Mon instrument output and headphone output.

To monitor a stereo pair, select the speaker icon  above the target audio meter. To select a channel, click the corresponding **solo** bus icon (available in **full-screen mode** only) located between the audio meters and the speaker icons.

Note: Before activating audio output, be sure to check the audio settings in the configuration, ensuring that the output is not muted, and the volume is set correctly.

In **unlinked layouts**, you can launch up to two Audio Meters windows for each available analyzer, providing 32 simultaneous channels of audio metering per analyzer. Each window can be assigned to monitor groups 1 to 4 (defined in SMPTE ST 299-1) or groups 5 to 8 (defined in SMPTE ST 299-2) in any of up to four potential sub-image ANC areas as defined in SMPTE ST 2082-10. You can scale the size of each audio window to occupy either 1/16, 1/4 or the full screen area.

In **linked layouts** you can launch only a single Audio Meters window for each analyzer. The window size is also restricted to 1/4 screen size for single linked layouts or 1/16 screen size for multi linked layouts.

Note: When the optional second screen is available, you can display another set of audio meters making it possible to monitor up to 32 audio channels for a single analyzer.

[Figure 8-4](#) provides a comparison of the available audio metering scale options and illustrates the relative scope and alignment levels. For each scale you can select an appropriate ballistic option.

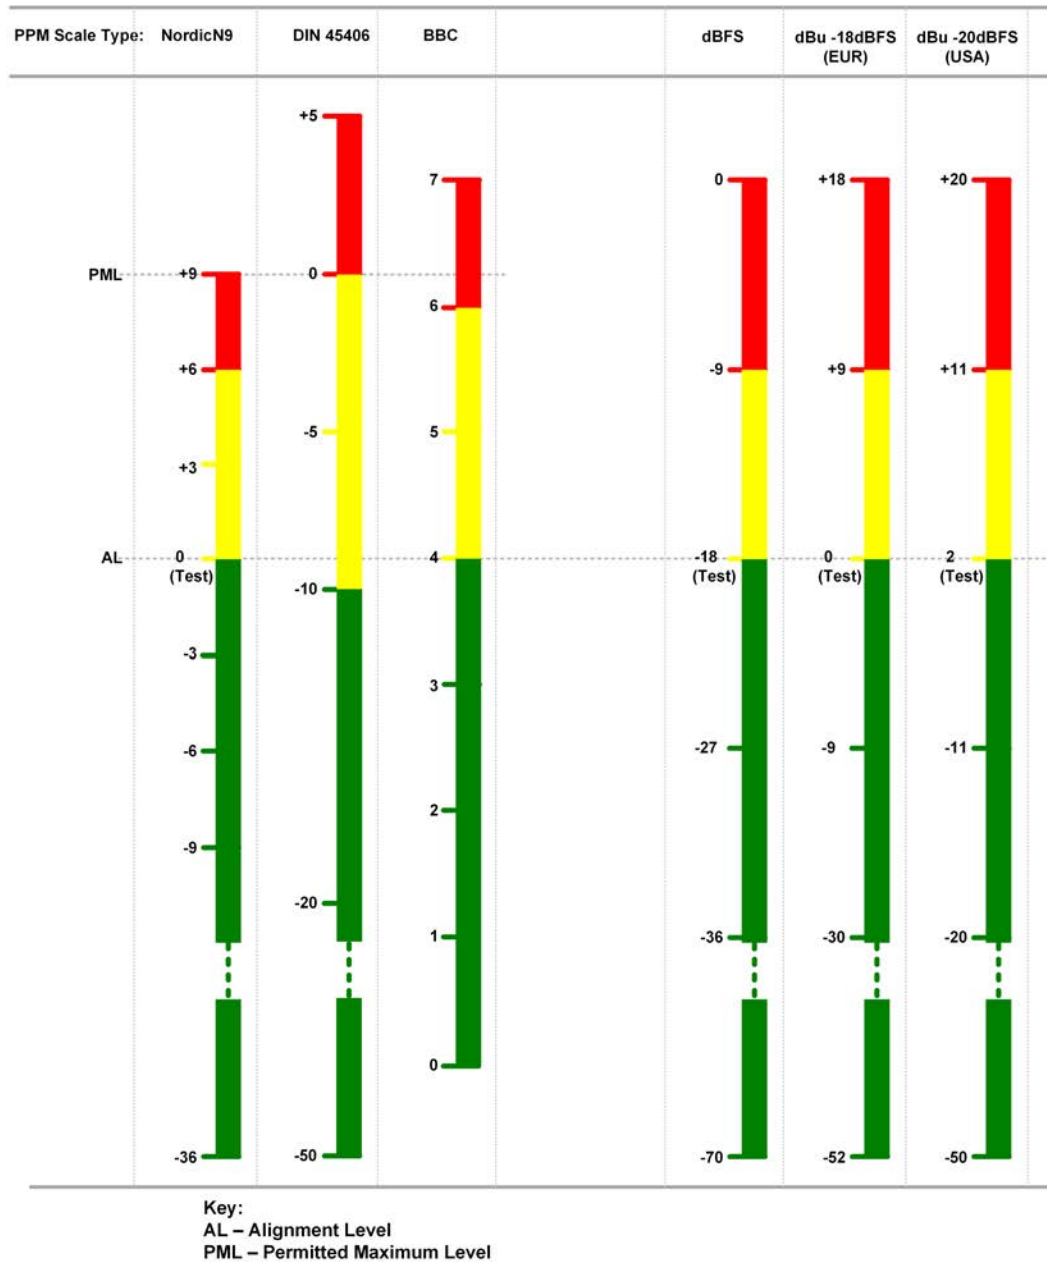


Figure 8-4: Comparison of Audio Metering Scales

Instrument Menu Options

The following configurable parameters are available to configure the **Analyzer - Audio Meters** Instrument:

Table 8-1 : Analyzer - Audio Meter Menu Options

Item	Options	Description
Input Select	Image/Sub Image 1 Group 1-4 Image/Sub Image 1 Group 5-8	Select the source for each pair of audio meters to monitor up to 32 audio channels simultaneously in up to two Audio Meter instrument windows.
Ballistics	PPM Type I PPM Type II Vu VuFr Fast	Set the required peak program meter (PPM) ballistic responsiveness for the audio meters. PPM Type I emulates the performance of IEC 60268-10 Type I PPM style audio meters typically used by German broadcasters. PPM Type II emulates the performance of IEC 60268-10 Type II PPM style audio meters typically used by UK broadcasters. Vu emulates the performance of IEC 60268-17 Type I PPM style audio meters typically used by US and Australian broadcasters. VuFr emulates the performance of ITU-R Rec BS.645 style audio meters typically used by French broadcasters. Fast provides instantaneous attack ballistics.
PPM Scale	dBFS dBu -18dBFS dBu -20dBFS BBC DIN45406 NordicN9	Set the desired scale for the audio meters according to your standard operating model. The displayed graticule and audio levels change accordingly to reflect the selected scale.
Hat hold time	0.00...10.00, infinite	Sets the minimum time that the signal gate is held open in ms.
Monitor Buttons	Enabled (Default) Disabled	Toggle the display of Monitor icons for the audio meters. Note: Not displayed at 1/16 screen size.
Solo Buttons	Enabled (Default) Disabled	Toggle the display of Solo icons for each channel of a pair. Note: Only available at full screen size.
Dolby E Line Number	Relative to Ideal (Default) Absolute	Select whether to display the Dolby E timing line number relative to the ideal for the selected standard, or as an absolute line number. The line number is shown in red if it is outside the valid range.

Data Analysis Instruments

This chapter describes the suite of data analysis Instruments and includes the following sections:

- [Analyzer - Dataview](#)
- [Analyzer - Ancillary Status](#)
- [Analyzer - Ancillary Inspector](#)



Overview

The **Analyzer - Dataview** instrument displays the raw data present in the SDI input signal.

You can observe the data in hexadecimal, decimal, or binary formats, and each data word has a sample and line coordinate. The instrument displays the entire video frame complete with active video, TRS words, and blanking information. Changing the window size changes the amount of data displayed.

Note: You can use a single instance of the Analyzer - Dataview instrument to analyze data only on the SDI source input assigned to **Analyzer A**. If you open a second instance of the Dataview instrument on the optional second screen, you will see the following warning message displayed: **Analyzer A Dataview in use**



Figure 9-1: Analyzer - Dataview Instrument

Data is presented with a color-coding for both text and background:

- Foreground text color indicates the video sample type, as follows:
 - Y - White
 - Cb - Blue
 - Cr - Red.
- Background color indicates the data type, as follows:
 - Timing reference signal (TRS) words - Blue
 - Blanking - Black
 - Active Picture - Green.

You can quickly navigate the dataview window using the **Line** and **Sample** (pixel) controls in the options menu or using the **Navigate...** keypad, shown below. Both controls are dynamically linked to a Picture Cursor, when enabled, in the Waveform and Picture instruments.

The transport line and sample slider controls enable you to navigate around the dataview grid. In addition, the corresponding active picture line and pixel values are displayed alongside the slider controls.

The Navigation keypad enables you to enter the desired coordinates, and provides buttons for quick navigation to key locations, including:

- First and last samples or lines
- End-of-active-video (EAV) timing reference signal (TRS) word
- Start-of-active-video (SAV) TRS word
- Active Picture: Left, Right, Top and Bottom furthest positions.

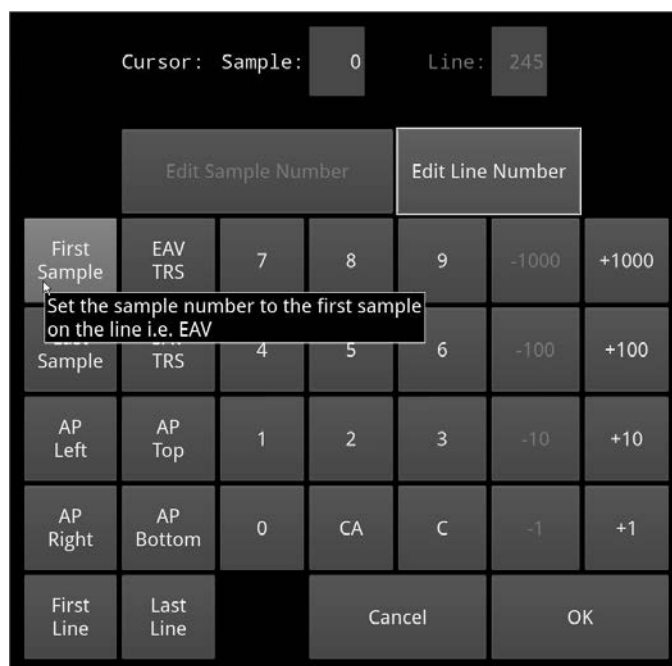


Figure 9-2: Dataview Navigation Keypad

Instrument Menu Options

The following table lists the configurable parameters in the Analyzer - Dataview instrument options menu:

Table 9-1 : Analyzer - Dataview Options

Item	Options	Description
Sub Image	Sub Image 1, 2, 3, or 4	Selects the sub image for analysis.
Line	System Control 1 to Total number of active lines in the active picture	Selects the line number in the active picture for analysis.
Sample	System Control 1 to Total number of Pixels in the active picture	Selects the sample of the current line. Allows selection of AP samples and samples in the ANC space.
Navigate...	System Control	Displays the Dataview navigation keypad.

Item	Options	Description
Base	Hex (default) Decimal Binary	Changes the base in which to display the data.

If you hover the mouse cursor over a cell in the grid, the unit displays a tooltip as shown in [Figure 9-3](#).

000	200	110	110	28A	36F	3AC	3AC
000	200	200	200	200	200	200	200
000	200	110	110	28A	36F	3AC	3AC
000	200	200	200	200	200	200	200
000	200	110	110	28A	36F	3AC	3AC
000	200	200	200	200	200	200	200
000	200	110	110	28A	36F	3AC	3AC
000	200	200	200	200	200	200	200
000	200	110	110	28A	36F	3AC	3AC
000	200	200	200	200	200	200	200

Figure 9-3: Analyzer - Dataview Instrument Showing Mouse Cursor Tooltip

The coordinates displayed in the Dataview tooltip define the sample and line number pair in the frame as **(sample number, line number)**. The tooltip also displays additional information for each cell over which you hold the mouse cursor, whether it is the Y-, Cb, Cr- or Alpha-component, etc. This defines the content of the data cell below the mouse cursor.

The highlighted cells (light-gray background) are the samples that contribute to the definition of a single pixel. You can then pinpoint that specific pixel using the cursor functions of the **Picture** instrument(s). Either tap or click a point in the Picture window or specify the coordinates of the pixel in the options menu of the Picture instrument. Alternatively, specify the **Line** number and **Sample** number using the controls in the Dataview options menu.

Figure 9-4: Analyzer - Dataview Options Menu

Analyzer - Ancillary Status



Overview

The **Analyzer - Ancillary Status** instrument provides a sophisticated, real-time display to analyze the ancillary data present in the source input. UHDTV has a new set of rules for carrying this data and a clear graphical representation is required to establish compliance.

Color-coded signal conditions for the displayed data provide further health status information as follows:

- White - Indicates ANC packets present and correct
- Red - Indicates ANC packets present but in error
- Yellow - indicates ANC packets present and correct but there has been a previous error.

In addition to the option of a combined view, tabs are provided for separate Grid or List views of the ancillary data.

A screenshot of the 'Ancillary Status - Grid' tab. The interface has two tabs: 'Grid' (selected) and 'List View'. The top right corner shows 'A: 1'. The main area is a grid of 32 items arranged in 4 rows and 8 columns. The items are:

S353 MPEG Recoding	S305 SDTI	S348 HD-SDTI	S427 Link Encryption
S352 Payload ID	S2016-3 AFD	S2016-4 PAN	S2010 ANSI/SCTE
S2031 DVB/SCTE	S2056 MPEG TS	S2068 3D Packing	S2064 Lip Sync
ITU-R BT.1685	OP47 Caption	OP47 VBI/WST	ARIB-TR-B29
RDD18 Metadata	RP214 KLV Metadata	RP223 UMID/ID	S2020 Audio
S2051 Two Frame	RDD8 WSS	RP215 Film Codes	S12M-2 V-TCode
EIA-708 Caption	EIA-608 Caption	RP207 Program	S334-1 Data
RP208 VBI Data	Mark Deleted	S299-2 3G Audio	S299-1 HD Audio
S272 SD Audio	S315 Camera Pos	RP165 EDH	S12-3 HFR TCode
S2103 Generic Time	S2108-1 HDR/WCG		

Figure 9-5: Analyzer - Ancillary Status (Grid Tab of Tab View)

The Grid tab provides a high-level overview of the packets present in the ancillary data.

A screenshot of the 'Ancillary Status - List View' tab. The interface has two tabs: 'Grid' and 'List View' (selected). The top right corner shows 'A: 1'. The main area is a table with columns: '< No Selection >', 'Presence', 'Checksum', 'Parity', and 'DBN'. The table contains the following data:

< No Selection >	Presence	Checksum	Parity	DBN
S12M-2 V-TCode (60h 60h)	Y	OK	OK	--
▼ S299-1 HD Audio				
Audio Group 1 (E7h)	C	OK	OK	OK
Audio Group 2 (E6h)	C	OK	OK	OK

Figure 9-6: Analyzer - Ancillary Status (List View Tab of Tab View)

In the **List View** tab, you can expand the headings, to allow a granular drill-down of discovered ancillary packets – providing information on presence, checksum, parity, and data block number (DBN). You can select packets in this window, using the **Inspect...** control, for analysis by the **Analyzer – Ancillary Inspector**.

You can also choose to combine the Grid and List Views in a single window by setting the **View** option to **Combined** in the options menu.

In a multi layout, you can launch up to four instances of the Analyzer - ANC Status instrument assigned to your analyzers as required.

Instrument Menu Options

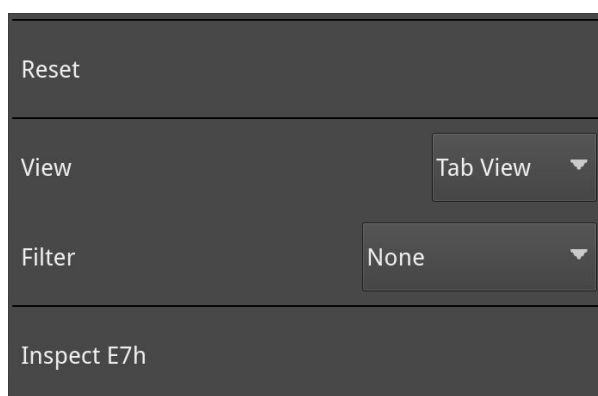


Figure 9-7: Analyzer - Ancillary Status Menu Options

From the **Analyzer - Ancillary Status** instrument submenu, accessible in all views, you can reset the ancillary status analysis, inspect selected packets, filter displayed packets, and set configuration options as follows:

Table 9-2 : Analyzer - Ancillary Status Menu Options

Item	Options	Description
Reset	System Control	Select to reset ancillary status analysis and reset Filter to none (accessible in all views).
View	Tab View Combined	The combined view provides both a high-level overview grid at the top and an expandable list view below, all in a single window.
Filter	None Ancillary Packet Type	Filter the packets listed in the List View tab or set by right-clicking on a packet type in the Grid tab. See the following table for a list of available ancillary data identifiers.
Inspect...	Selected packets in Ancillary Status List View.	Note: If a packet type is not selected in the List view, the Inspect... option will be grayed-out. Enables you to select a packet from the list and then launch the Analyzer - Ancillary Inspector instrument for more detailed analysis of the content of the selected packet(s), see Table 9-3 for a list of ancillary data IDs. For more information on ANC inspection, see the Analyzer - Ancillary Inspector . Select Inspect... to send the inspection request over to

Item	Options	Description
		<p>the Analyzer - Ancillary Inspector Instrument. If the Analyzer - Ancillary Inspector is not currently open, the request opens the instrument. The inspection request is loaded into the Identifier field of the Inspector instrument and, depending on the trigger setting, reacts as follows:</p> <p>None - the request is loaded, but not acted upon</p> <p>Single Shot - the ANC Inspector searches for the packet type and displays the result once a matching packet is detected. (The trigger is then set back to None.)</p> <p>Continuous - the ANC Inspector continuously searches for the selected packet type and refreshes the displayed results each time it detects a matching packet type.</p>

Table 9-3 : List of Ancillary Status Grid Identifiers

Ancillary Status Grid Identifier	Description
S353 MPEG Recoding	MPEG-2 Recoding Information
S305 SDTI	SDTI transport in active frame space
S348 HD SDTI	HD-SDTI Transport in active frame space
S427 Link Encryption	Link encryption for 1.5 Gb/s Serial Digital Interface
S352 Payload ID	Payload identification, HANC space
S4S2016-3 AFD	AFD and Bar data
S2016-4 PAN	Pan-scan data
S2010 ANSI/SCTE	ANSI/SCTE 104 messages
S2031 DVB/SCTE	DVB/SCTE VBI data
S2056 MPEG TS	MPEG TS packets in VANC
S2068 3D Packing	Stereoscopic 3D frame compatible packing and signaling
S2064 Lip Sync	Lip sync data as specified by ST 2064-1 or ST 2064-2
ITU-RBT.1685	Structure of inter-station control data conveyed by ancillary data packets
OP47 Caption	OP47/RDD8 Subtitling distribution packet (SDP)
OP47 VBI/WST	OP47/RDD8 Transport of VBI and/or WST data in a VANC Multipacket
ARIB-TR-B29	Metadata to monitor errors of audio and video signals on a broadcasting chain
RDD18 Metadata	Acquisition metadata sets for video camera parameters
RP214 KLV Metadata	KLV encoded metadata transport
RP223 UMID/ID	Packing UMID and Program Identification Label data into SMPTE 291M Ancillary Data Packets
S2020 Audio	Compressed audio metadata
S2051 Two Frame	Two frame marker in HANC
RDD8 WSS	Wide-screen signaling data
RP215 Film Codes	Film codes in VANC space

Ancillary Status Grid Identifier	Description
S12M-2 V-TCode	Ancillary time code
EIA-708 Caption	S334-1 EIA 708B Data mapping into VANC space
EIA-608 Caption	S334-1 EIA 608 Data mapping into VANC space
RP207 Program	Program description in VANC space
S334-1 Data	Data broadcast (DTV) in VANC space
RP208 VBI Data	VBI data in VANC space
Mark Deleted	S291 - Packet marked for deletion
S299-2 3G Audio	Audio data in HANC space (3G)
S299-1 HD Audio	Audio data in HANC space (HDTV)
S272 SD Audio	Audio data in HANC space (SDTV)
S315 Camera Pos	Camera position (HANC or VANC space)
RP165 EDH	Error detection and handling (HANC space)
S12-3 HFR TCode	Time code for high frame rate signals
S2103 Generic Time	Generic time label
S2108-1 HDR/WCG	Extended HDR/WCG

For tooltips on each of the Status Grid Identifiers, hover the mouse cursor over the identifier.

Analyzer - Ancillary Inspector



Overview

The **Ancillary (ANC) Inspector** monitors the analyzed signal and displays the contents of selected Ancillary packets in the received data. You can use this instrument in combination with the [Analyzer - Ancillary Status](#) instrument for more detailed analysis of ancillary data.

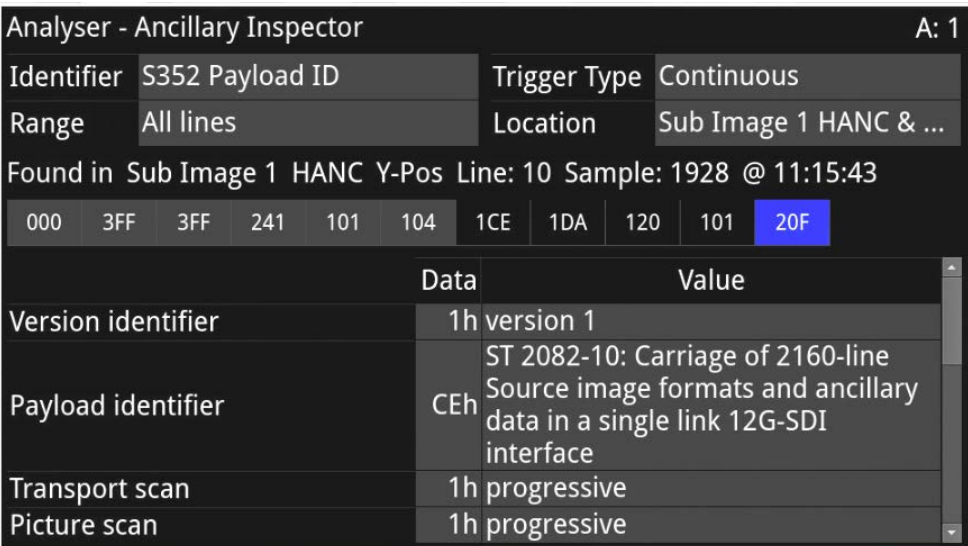


Figure 9-8: Analyzer - ANC Inspector Instrument

Note: The LPX500 provides decapsulation of a packet's data only for the ST 352 Payload ID. For other data packets only the raw data are displayed.

The window displays both the location of the found packet and the time at which it was found.

Note: If the time appears frozen, it means that the signal is no longer recognized by the LPX500. The display remains stuck on the last valid extracted information.

The lower part of the window displays the packet in hexadecimal form including individual header words (gray background), data words (black background), and checksum (blue background). Hover the mouse cursor over each header word to display a description of that word in a tooltip.

In a multi layout, you can launch up to four instances of the Analyzer - ANC Inspector instrument, assigned to your analyzers as required.

Instrument Menu Options

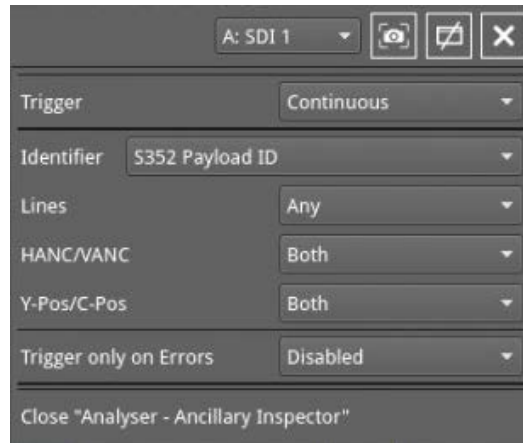


Figure 9-9: Analyzer - Ancillary Inspector Options Menu

The following menu options are available for configuring the **Analyzer - Ancillary Inspector** Instrument:

Table 9-4 : Analyzer - Ancillary Inspector Menu Options

Item	Options	Description
Trigger	None (Default) Single Shot Continuous	<p>Set a trigger so that when ancillary data exactly matching the search parameter(s) are detected, the ANC Inspector triggers and displays the inspection result in the lower part of the window.</p> <p>After detecting a matching packet, when the Trigger is set to Single Shot, that single packet is inspected, its content displayed and the trigger state reverts to None. The details of the detected error are displayed for inspection. To reset the display, set the Trigger Type back to Single Shot.</p> <p>If the Trigger is set to Continuous, the inspection of all packets matching the search criteria continues uninterrupted and the display is refreshed in real-time. The details of the last detected error are displayed for inspection. To reset the display, set the Trigger Type back to Continuous.</p>
Identifier	None (Default) Ancillary Packet Type	<p>Set the Identifier of the ancillary packet type you want to find. For a list of ancillary data identifiers, see Table 9-5. Note: The Custom identifier enables you to specify a packet type not listed in the standard.</p>
Lines	Any (Default) Inside Range Outside Range	Additional ANC inspection parameter specifying where to look in the ANC space for the data desired.
HANC/VANC	Both (Default) HANC VANC	Additional ANC inspection parameter specifying where to look in the ANC space for the data desired.
Y-Pos/C-Pos	Both (Default) Y-Pos C-Pos	Additional ANC inspection parameter specifying where to look in the ANC space for the data desired.

Item	Options	Description
Trigger only on Errors	Enabled Disabled (Default)	When enabled, opens additional dropdowns to enable any of the following error types.
Checksum Errors	Enabled Disabled (Default)	When enabled, triggers on checksum errors.
DBN Errors	Enabled Disabled (Default)	When enabled, triggers on ancillary data block number (DBN) errors.
Parity Errors	Enabled Disabled (Default)	When enabled, triggers on parity errors in the ANC data.
ANC Gap Errors	Enabled Disabled (Default)	When enabled, triggers on gap errors in the ANC data.

The recognized identifiers or packet types are as follows:

Table 9-5 : List of Available Ancillary Data Identifiers

Any	Custom	S353 MPEG Recoding VANC Space	S353 MPEG Recoding HANC Space	S305 SDTI
S348 HD-SDTI	S427 Link Encryption Message 1	S427 Link Encryption Message 2	S427 Link Encryption Metadata	S352 Payload ID
S2016-3 AFD	S2016-4 PAN	S2010 ANSI/SCTE	S2031 DVB/SCTE	S2056 MPEG TS
S2068 3D Packing	S2064 Lip Sync	S2108-1 HDR/WCG	ITU-R BT.1685	OP47 Caption
OP47 VBI/WST	ARIB-TR-B29	RDD18 Metadata	RP214 KLV Metadata VANC Space	RP214 KLV Metadata HANC Space
RP223 UMID/ID	S2020No Pair Associated	S2020 Audio Channel Pair 1/2	S2020 Audio Channel Pair 3/4	S2020 Audio Channel Pair 5/6
S2020 Audio Channel Pair 7/8	S2020 Audio Channel Pair 9/10	S2020 Audio Channel Pair 11/12	S2020 Audio Channel Pair 13/14	S2020 Audio Channel Pair 15/16
S2051 Two Frame	RDD8 WSS	S12M-2 V-TCODE	S2103 Generic Time	EIA-708 Caption
EIA-608 Caption	S12-3 HFR TCODE	RP207 Program	S334-1 Data	RP208 VBI Data
Mark Deleted	S299-2 3G Audio Control Group 8	S299-2 3G Audio Control Group 7	S299-2 3G Audio Control Group 6	S299-2 3G Audio Control Group 5
S299-2 3G Audio Audio Group 8	S299-2 3G Audio Audio Group 7	S299-2 3G Audio Audio Group 6	S299-2 3G Audio Audio Group 5	S299-1 HD Audio Control Group 4
S299-1 HD Audio Control Group 3	S299-1 HD Audio Control Group 2	S299-1 HD Audio Control Group 1	S299-1 HD Audio Audio Group 4	S299-1 HD Audio Audio Group 3
S299-1 HD Audio Audio Group 2	S299-1 HD Audio Audio Group 1	S272 SD Audio Control Group 4	S272 SD Audio Control Group 3	S272 SD Audio Control Group 2
S272 SD Audio Control Group 1	S315 Camera Pos	RP165 EDH	S272 SD Audio Group 4 Ext	S272 SD Audio Audio Group 4
S272 SD Audio Group 3 Ext	S272 SD Audio Audio Group 3	S272 SD Audio Group 2 Ext	S272 SD Audio Audio Group 2	S272 SD Audio Group 1 Ext
S272 SD Audio Audio Group 1				

When setting any parameters in ANC Inspector, AND logic applies; so note that *all* active search parameters must be met before ANC Inspector can successfully locate the desired packets.

When searching for data packets it is recommended to keep the search domain as wide as possible to establish that ANC packets can actually be located. Only when the ANC Inspector displays streaming data, should you introduce more specific search parameters.

The ANC Inspector can also be used to report packets containing errors with **Trigger only on Errors** set to **Enabled** and **Identifier** set to **Any**. Where an error is present in a packet, individual data word text will become red in the display indicating the exact position of an error within a packet.

12G Physical Layer Analysis

This chapter describes the instruments available with the 12G-SDI Physical Layer Analysis Toolset option and includes the following sections:

- [Eye - SDI In A](#)
- [Jitter - SDI In A](#)

Eye - SDI In 1

(Physical Layer Analysis)



Requires Model:	LPX500M-ISE
-----------------	-------------

Overview

The optional instrument **Eye - SDI in 1**, available in the **Physical Layer Analysis** toolset, enables you to analyze physical layer compliance measurements from 270 Mbps to 12 Gbps for SDI source input connected to **SDI In 1**. An analog front-end provides a bandwidth of more than 30 GHz (5th harmonic of the 6 GHz fundamental for 12G-SDI.) The GUI uses LeaderPhabrix RealTime Eye (RTE™) to generate a reliable, AC coupled, instantaneous physical layer display with automatic measurements to SMPTE standards.

You can receive accurate measurements within seconds of connecting an SDI input. The unit enables you to measure both rise and fall overshoot at the top and bottom of the waveform. In addition, the unit displays amplitude, rise and fall overshoot delta and DC offset - all compulsory measurements when testing against SMPTE standards. The unit highlights any measurements exceeding the specification in red (for example, an eye amplitude greater than 10 %).

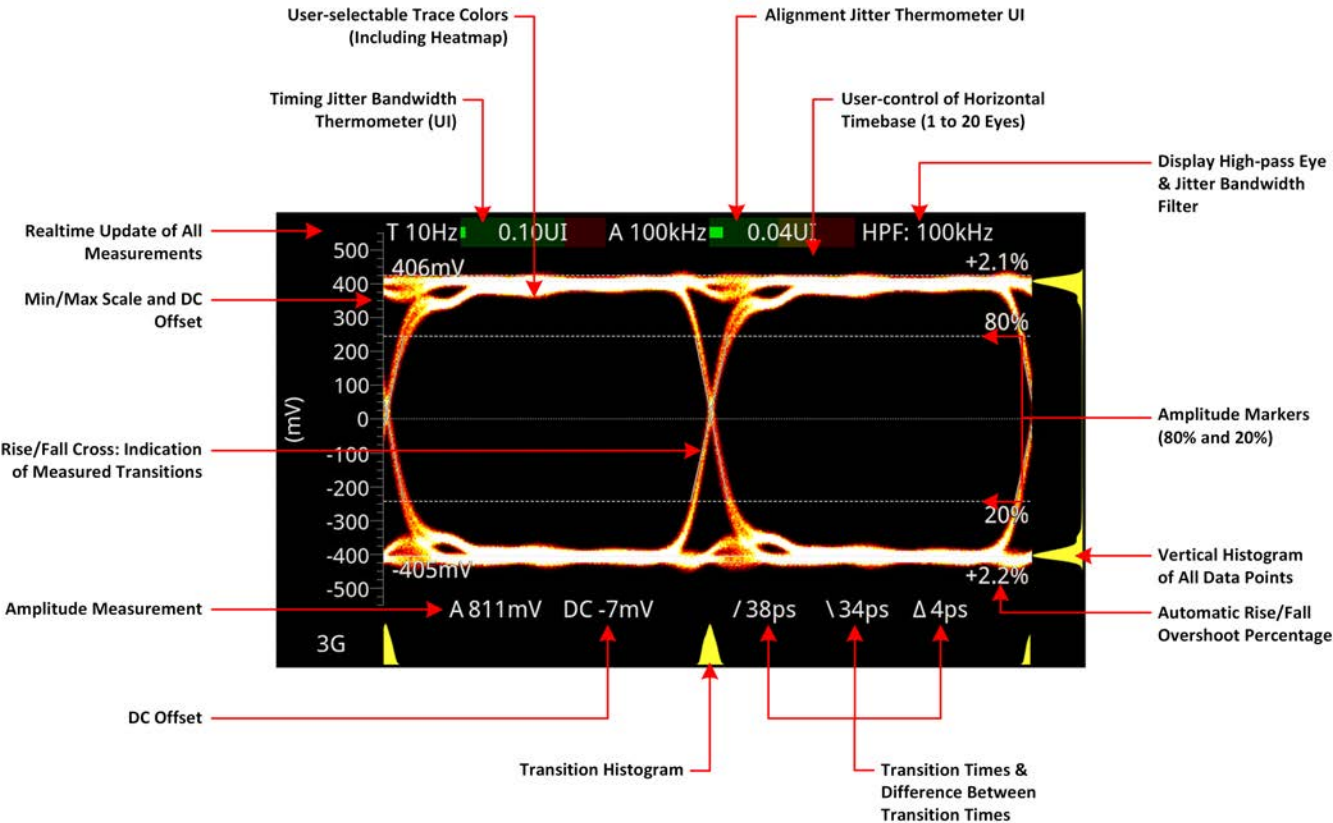


Figure 10-1: Standard SDI Eye Pattern Display (3G) with 100 kHz Jitter Filter

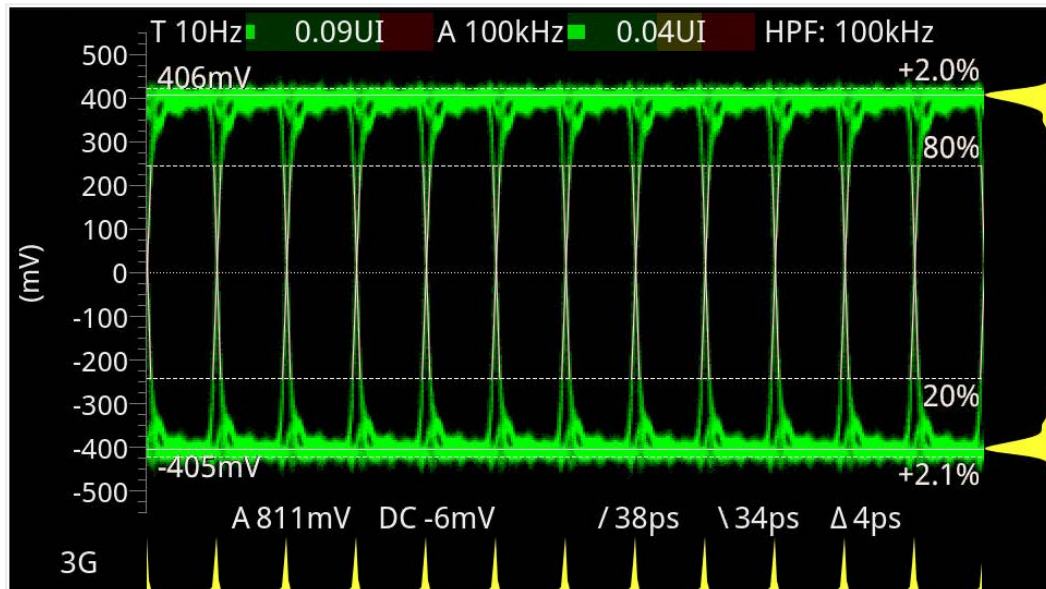


Figure 10-2: 3G-SDI Eye Pattern Set to Display 12 Eyes (Using Green Display Color)

Note: A black nut fitted to the **SDI In 1** BNC identifies the connector with access to the eye and jitter circuitry for physical layer analysis.

The **Eye - SDI In 1** instrument display also provides:

- Timing jitter thermometer color-coded to indicate whether the measured jitter is within the specification of the standard
- Alignment jitter thermometer color-coded according to the analyzed SDI standard
- Positive and negative Eye amplitude values
- On screen indication of 20 % and 80 % levels (dashed lines) for rise and fall time measurements
- Horizontal time histogram of eye crossing point (0 mV threshold)
- Vertical amplitude histogram indicating energy distribution across all samples
- Eye coupled to AC with display of DC offset measurement.

Instrument Menu Options

The following table lists the configurable parameters in the options menu of the Eye - SDI In 1 instrument.

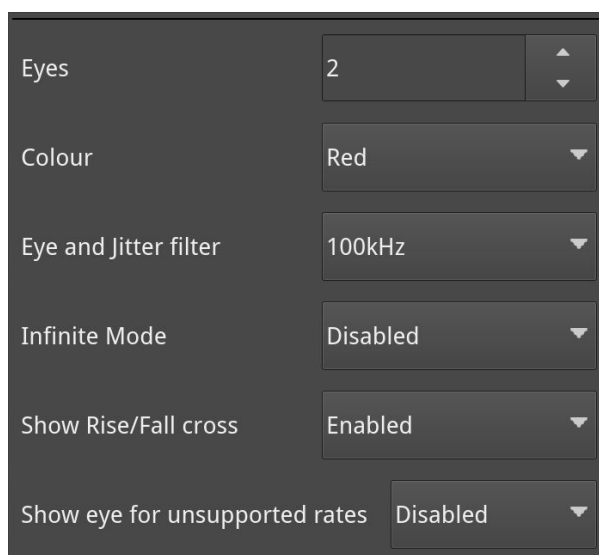


Figure 10-3: Eye - SDI In 1 Menu Options

Table 10-1 : Menu Options for the Eye - SDI In 1 Instrument

Item	Options	Description
Standard Physical Layer Analysis Tools		
Eyes	1 to 20 (Default = 2)	Sets the number of eyes displayed in the instrument window.
Color	Green Heat Red (Default) Ferrara Green-red Blacklight	Sets the color scheme for the eye display.
Eye and Jitter Filter	10 Hz 100 Hz 1 kHz 10 kHz 100 kHz (Default)	Sets the frequency of the high-pass jitter filter. Note: This setting controls the filter applied both to the Eye - SDI In 1 instrument and the Jitter - SDI 1 instrument.
Infinite Mode	Disabled (Default) Enabled	When disabled, each Eye data point is displayed only for a fixed period of time. When enabled, infinite mode ensures that no data points are removed from the eye display, so you will probably observe the eye shape thickening and becoming less distinct. This can be useful when attempting to identify anomalies in the signal which appear sporadically over time and might be missed in the standard mode.
Show Rise/Fall Cross	Disabled Enabled (Default)	Toggle the display of the rise/fall crossing point, which gives a visual indication of the rise and fall time measurements.
Show eye for unsupported rates	Disabled (Default) Enabled	Toggle the display of eyes for rates currently unsupported by the unit. Note: This setting is transient, enabling support of officially unsupported rates. The setting reverts to default following a reboot.

A table showing the SMPTE tolerances for each standard is provided in the section [SMPTE UHDTV: SDI Physical Layer Tolerances](#).

Jitter - SDI In 1

(Physical Layer Analysis)



Requires Model:

LPX500M-ISE

Overview

The **Jitter** instrument is available on the BNC connector labeled **SDI In 1** on the rear panel, and fitted with a black nut.

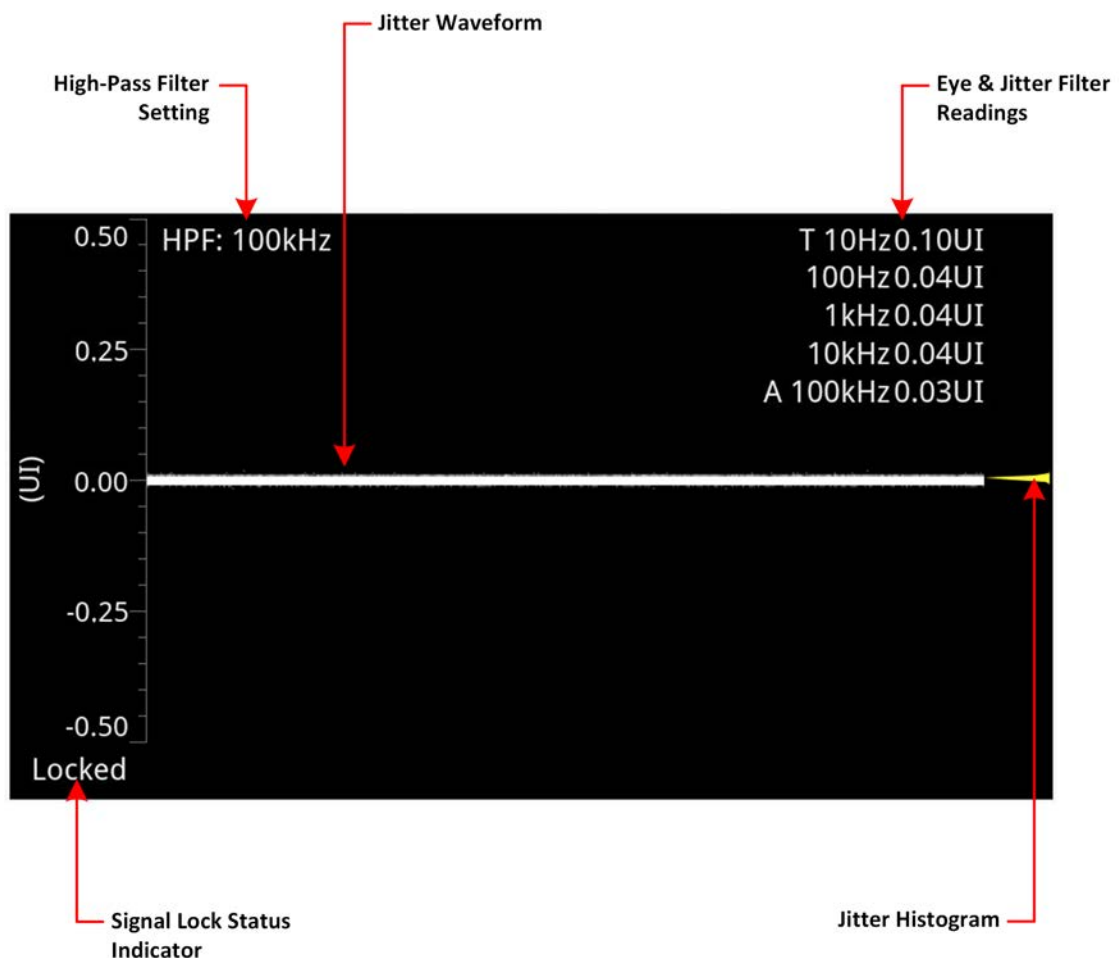


Figure 10-4: Jitter SDI In 1 Instrument

The **Jitter SDI In 1** instrument displays automated measurements to SMPTE standards. A Jitter histogram, displayed at the right of the window in yellow, provides additional information about the distribution of points in the jitter waveform.

Readings for each of the filters are displayed in the top-right corner of the instrument window. Any values displayed in red indicate a reading outside the standard specification for the signal analyzed.

A signal lock status indicator (**Locked / Unlocked**) in the bottom-left corner of the window indicates whether the signal is:

- **Unlocked (grayed-out):** No signal available
- **Unlocked (red font):** The firmware fails to lock to the signal
- **Locked (white font):** Eye pattern is locked, stable and not jittery.

Instrument Menu Options

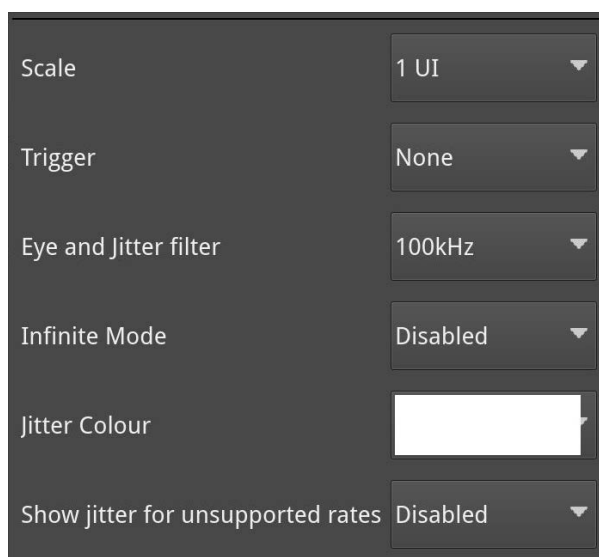


Figure 10-5: Jitter - SDI In 1 Instrument Menu Options

The following table lists the configurable parameters in the Jitter - SDI In 1 instrument options menu:

Table 10-2 : Jitter - SDI In 1 Menu Options

Item	Options	Description
Scale	1 UI (Default) to 128 UI	Adjust the scale of the Y-axis from 1 UI to 128 UI
Trigger	None (Default) Single Line Two Lines Single Field Frame	Select a trigger for jitter measurement. Trigger modes are useful to correlate jitter content to line and frame-rate frequencies.
Eye and Jitter Filter	10 Hz 100 Hz 1 kHz 10 kHz 100 kHz (Default)	This setting controls the high-pass filter applied to both the Jitter - SDI In 1 instrument and the Eye - SDI In 1 instrument. If you hover over the HPF field in the top-left of the screen, a tooltip displays the frequency response of the current high-pass filter.
Infinite Mode	Enabled Disabled (Default)	When disabled, jitter data points are displayed only for a fixed period of time and then removed from the display. When enabled, infinite mode ensures that no data points are removed from the display.
Jitter Color	White (Default) Select from the color map.	Color selection is by way of an HSV tool providing two cursors. The left-hand color rectangle allows you to select the hue (horizontal) and saturation (vertical). The right-hand vertical bar selects color intensity.
Show Jitter for Unsupported Rates	Enabled Disabled (Default)	Toggle the display of jitter for rates currently unsupported by the unit. Note: This setting is transient, enabling support of officially unsupported rates. The setting reverts to default following a reboot.

HDR Analysis Instruments

Note: This option requires the Advanced High Dynamic Range (HDR) License: **LPX500-HDR**.

This chapter describes the instruments available with the High Dynamic Range (HDR) Toolset option and includes the following sections:

- [Advanced HDR Toolset](#)
- [Analyzer - CIE Chart](#)
- [HDR Heat-map \(False Color Overlay Tools\)](#)

Advanced HDR Toolset

Requires Option(s):	LPX500-HDR
---------------------	------------

Overview

The comprehensive advanced HDR toolset includes a signal generator for HDR test patterns, CIE Chart analyzer, luma false color highlighting (or heat map), a waveform monitor and vectorscope. The HDR toolset supports all the main live production formats for both SDR and HDR.

For Standard Dynamic Range (SDR), the toolset supports:

- BT.709
- BT.2020

For High Dynamic Range (HDR), the toolset supports:

- BT.2100 HLG
- PQ
- Sony S-Log3
- Sony SR Live

The Analyzer - Waveform instrument provides a Nits (Cd/m^2) graticule along with BT.2048 diffuse white markers. The flexible user-controlled HDR heatmap highlights signals beyond SDR with seven simultaneous programmable color overlay bands with presets for HDR and SDR ranges, plus a user-definable preset. The CIE 1931 x,y display provides overlays for BT.709, BT.2020 and ST.2086 gamut (P3) to enhance the visualization and analysis of your HDR/WCG content.

An extensive set of test patterns includes BT.2111 HDR color bars for HLG, PQ and SR Live as well as a full set of SDR 709 patterns mapped to each of the four HDR formats using *display light* for line checks, comparative monitor set-up and evaluation of HDR to SDR converters.

HDR Test Patterns

In addition to the standard SDR test patterns which are converted to HDR, the Advanced HDR toolset provides an additional two native HDR test patterns. These test patterns are available when you select one of the following HDR WCG (Wide Color Gamut) options from the **Gamut** and **OTF** lists in the **Video Generator Config...** dialog of the **Generator** Instrument:

- 2020 HLG
- 2020 PQ
- 2020 S-Log3
- 2020 S-Log3 SR Live

The available test patterns for a selected video standard are displayed in the **Test Pattern** dialog accessed from the **Video Generator Config...** dialog of the **Generator** instrument. The native HDR test patterns are as follows:

- ITU-R BT.2111-0 HDR Color Bars
- ITU-R BT.814-4 PLUGE – 4 variants

In addition, all other test patterns are converted to HDR when generating an HDR standard/signal, see the section [Generator Test Patterns](#) for a detailed list. Both S-Log3 and SR Live [S-Log3(HDR Live)] test pattern variants are available.

Transfer Curve and Colorimetry Overrides

HDR content may still contain the SMPTE payload ID for SDR and Rec.709 color space (as standard).

When analyzing HDR and WCG content, therefore, you may want to use the **Analyzer - Video Standard** instrument to apply a manual override configured as follows:

- Transfer Curve Override, select: OTF: SDR, HLG, PQ, or S-Log3
- Colorimetry Override, select: Gamut: 709 or 2020

Analyzer - CIE Chart



Requires Option(s):	LPX500-HDR
---------------------	------------

Overview

The CIE 1931 x,y chart provides a display of signal chromaticity - complete with Rec. 601 525/625, Rec. 709, Rec. 2020, ST 2086 gamut overlays and the Illuminant D65 white point reference.

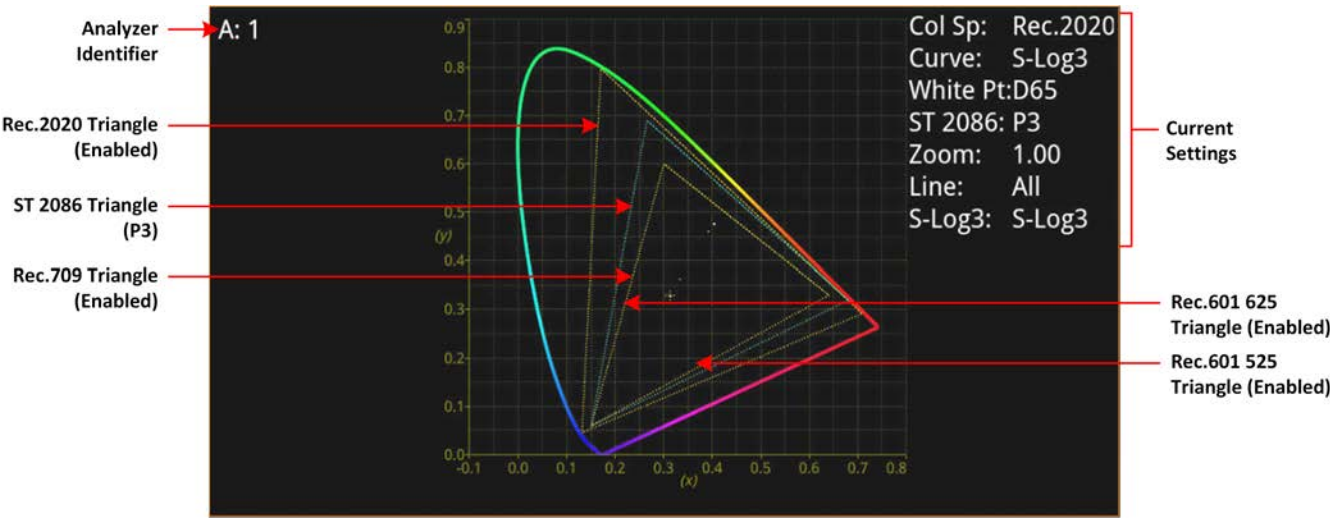


Figure 11-1: Analyzer - CIE Chart Instrument

Note: The legend for S-Log3 is displayed only when analyzing S-Log3 HDR video and reads **S-Log3**, even when set to SR-Live.

Instrument Menu Options

The following table lists the configurable parameters in the Analyzer - CIE Chart instrument submenu:

Rec.601 525 Triangle	Enabled
Rec.601 625 Triangle	Enabled
Rec.709 Triangle	Enabled
Rec.2020 Triangle	Enabled
ST 2086 Triangle	P3
D65 White Point	Enabled
Single Line Mode	Disabled
Zoom	<div><div></div><div>1.0000</div><div>▲ ▼</div></div>
Brightness	<div><div></div><div>8</div><div>▲ ▼</div></div>
Gamma	<div><div></div><div>127</div><div>▲ ▼</div></div>
Persistence	<div><div></div><div>70</div><div>▲ ▼</div></div>
S-Log3 Mode	S-Log3

Figure 11-2: Analyzer - CIE Chart Options Menu

Table 11-1 : Analyzer - CIE Chart Options

Item	Options	Description
Rec.601 525 Triangle	Enabled Disabled (Default)	When enabled, displays the triangle for the Rec. 601 color primaries (NTSC 525 line encoding).
Rec.601 625 Triangle	Enabled Disabled (Default)	When enabled, displays the triangle for the Rec. 601 color primaries (PAL 625 line encoding).
Rec.709 Triangle	Enabled (Default) Disabled	When enabled, displays the triangle for the Rec. 709 color primaries.
Rec.2020 Triangle	Enabled (Default) Disabled	When enabled, displays the triangle for the Rec. 2020 color primaries.
ST 2086 Triangle	P3 (Default) Disabled	When enabled, displays the location of the SMPTE ST 2086 Mastering Display Primaries.
D65 White Point	Enabled (Default) Disabled	When enabled, displays cross-hairs for the D65 white point in the CIE Chart.
Single Line Mode	Enabled Disabled (Default)	When enabled, allows single line mode analysis of the active picture. When disabled, all video lines in the active picture are overlaid on top of each other.
Line Number	System Control 1 to Total number of active lines in the video signal.	Selects the line number in the active picture for analysis.
Zoom	Slider control 1.00 (Default) to 4.00	Zooms in/out of the chart for detailed inspection. Use the Zoom slider in combination with the x Position and y Position sliders to pan the chart in the horizontal and vertical directions, respectively.
x Position	Slider control	Pans horizontally across the zoomed-in chart. Use in combination with the Zoom slider to locate a point of interest in the chart.
y Position	Slider control	Pans vertically across the zoomed-in chart. Use in combination with the Zoom slider to locate a point of interest in the chart
Brightness	Slider control 1 to 31 8 (Default)	Adjusts the brightness of the instrument trace.
Gamma	Slider control 1 to 255 127 (Default)	Adjusts the gamma component of the instrument trace.
Persistence	Slider control 1 to 255 70 (Default)	Adjusts the persistence of the instrument trace.
S-Log3 Mode (HDR Only)	S-Log3 (Default) SR Live	Switches the HDR format between S-Log3 and SR Live, if required.

HDR Heat-map (False Color Overlay)

Requires Option(s):	LPX500-HDR
---------------------	------------

A false color overlay can be applied to the image displayed in the **Picture** instrument to highlight luminance ranges in the image that are of particular interest.

The active picture can also be displayed in monochrome using grayscale shades. If enabled at the same time as false color highlighting, all image elements outside of the enabled false color overlay luminance range(s) are displayed in monochrome, leaving the false color highlight elements to stand out more.

Different types of false color overlay may be applied to highlight different types of pixels in the active picture, and the custom mode is provided to enable you to create a bespoke overlay.

The range(s) and colors of a selected false color overlay can be modified by adjusting the seven overlay bands. Up to seven distinct ranges can be simultaneously enabled in a single overlay. If adjusted, the new or modified overlay is designated as the Custom overlay type.



Figure 11-3: Configuring the False Color Overlay (PQ HDR Definition)

When False Color Overlay Scale (decimal level) is enabled, a scale is displayed on the right of the Picture window, overlaid on the active picture (see the following figure). The scale is expressed in Nits or decimal levels.

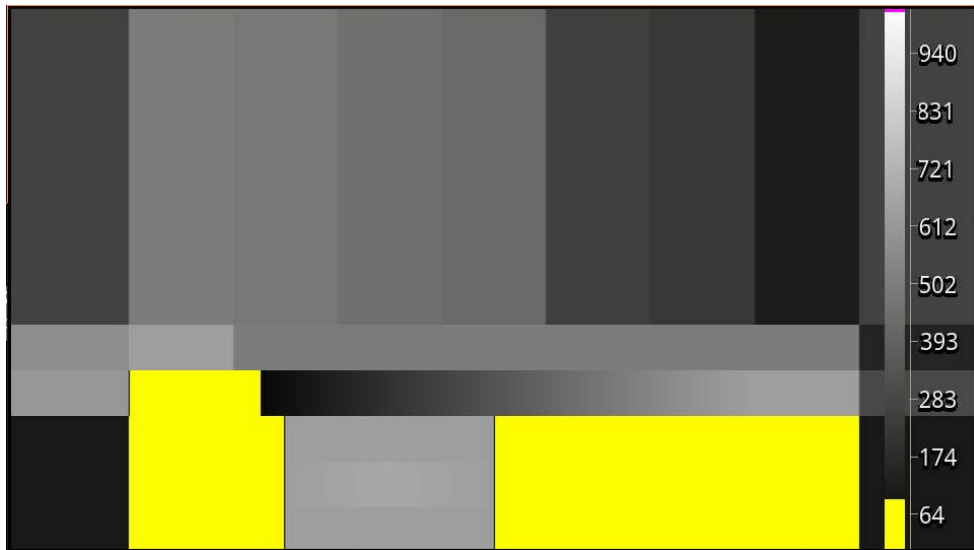


Figure 11-4: False Color Overlay Scale Applied (Decimal Luminance Scale)

HDR Options in Analyzer - Picture Instrument Menu

Greyscale mode	Enabled ▼
False Colour Highlighting	PQ HDR ▼
False Colour Overlay Scale	Enabled ▼
Luminance Measurement	Decimal Level ▼
False colour ranges	

Figure 11-5: HDR Options in Analyzer - Picture Options Menu

The following table lists the options for the Advanced HDR Toolset available in the **Analyzer - Picture** instrument option menu:

Table 11-2 : HDR Menu Options for the Analyzer - Picture Instrument

Item	Options	Description
Grayscale Mode	Disabled (Default) Enabled	When enabled, displays the active picture using a grayscale.
False Color Highlighting	Disabled (Default) PQ HDR SDR All Brands SDR Shadow SDR Skin Tones SDR Highlights Out of Range S-Log3 Out of Range Custom	Select the type of false color overlay required.
False Color Overlay Scale	Disabled (Default) Enabled	When active, displays a scale, showing both numeric and graphic representation of the range(s) for the selected overlay, at the right-hand side of the window.
Luminance Measurement	Decimal Level (Default) PQ Nits	Selects the measurement units used in the false color overlay scale and in the configuration of the false color ranges.
False Color Ranges	Disabled (Default), PQ HDR, SDR All Bands, SDR Shadow, SDR Skin Tones, SDR Highlights, Out of Range, S-Log3 Out of Range, Custom	Opens the false color highlighting dialog. Adjust any of the seven overlay bands to modify the range(s) of colors highlighted by the overlay when applied to the active picture. You can enable up to seven distinct ranges simultaneously in a single overlay. If adjusted, the modified overlay is set as the Custom overlay type.

Technical Specifications

This Appendix defines the technical specifications of your unit and includes the following sections:

- [AC Power \(Internal PSU\)](#)
- [DC Power](#)
- [SDI Analyzer Inputs](#)
- [SDI Analyzer Outputs](#)
- [External Locking Reference](#)
- [DisplayPort Instrument Output](#)
- [SDI Instrument Output](#)
- [USB 2.0 Type A Connectors](#)
- [USB 3.1 Type C Connectors](#)
- [USB 3.1 Type C Connector on Extended Monitor](#)
- [Networking](#)
- [Rear Panel 15 Pin D-Type Connector](#)
- [Physical Form Factor](#)

Technical Specifications

AC Power (Internal PSU)

Connector	IEC, Male
Operating Voltage	100 - 240 VAC \pm 10%
Frequency	47 - 63 Hz
Current	1.2 A (maximum)
Power Consumption	77 W (typical); 110 W (maximum).

DC Power

Connector	4-pin XLR, Male
Voltage	12 - 16 V DC Input Range Over-voltage protection: +20% (19.2 V) Under-voltage protection: -15% (10.2 V) Reverse-voltage protection: -20 V
Current	12 A (maximum)
Power	85 W (typical), 120 W (maximum).
Connector Pinouts	Connector View from Rear of Unit (male):

NOTE: Pins 1 and 2 are connected internally to Chassis Ground via XLR Shield Pin



- **Pin 1:** 0 V (Ground)
- **Pin 2:** 0 V (Ground)
- **Pin 3:** 12 V (Power)
- **Pin 4:** 12 V (Power)

SDI Analyzer Inputs

Label	SDI IN: 1, 2, 3, 4
Connector	4 x 12G BNC
Input Return Loss	-15 dB (5 MHz to 1.485 GHz), -10 dB (1.485 GHz to 3 GHz), -7 dB (3 GHz to 6 GHz), -4 dB (6 GHz to 12 GHz)
Purpose	SDI inputs supporting SD, HD, 3G, 6G and 12G-SDI standards

SDI Analyzer Outputs

Label	SDI OUT: 1, 2, 3, 4
Connector	4 x 12G BNC

Output Return Loss	-15 dB (5 MHz to 1.485 GHz), -10 dB (1.485 GHz to 3 GHz), -7 dB (3 GHz to 6 GHz), -4 dB (6 GHz to 12 GHz)
Purpose	SDI Outputs supporting SD (looped out), HD, 3G, 6G and 12G-SDI standards

SFP28 Cages

Not supported in this release.

QSFP28 Cages

Not supported in this release.

External Locking Reference

Label	REF IO
Input Signal	Tri-level or Bi-Level (black burst) syncs 23.98, 24, 50, 59.94, 60 Hz
Connector	BNC
Input Impedance	> 10 kohm, software selectable internal 75 ohm termination
Input Return Loss	> 40 dB to 6 MHz (typical)
Maximum Input voltage	± 2 V AC coupled
Specification	Tri-level syncs (SMPTE 274M and SMPTE 296M) 600 mV pk-pk PAL Black Burst (ITU 624-4/SMPTE 318) 1 V pk-pk Composite NTSC (SMPTE 170M) 1 V pk-pk

DisplayPort Instrument Output

Label	MONITOR
Connector	DisplayPort socket
Video Format	1080P47.95 / 1080P48 / 1080P50 / 1080P59.94 / 1080P60, RGB 4:4:4, 8 bit depth Select output frequency in Display Settings.
Audio Format	First stereo pair PCM audio output, 48 kHz, 24 bit
Purpose	Output of user interface to external DisplayPort monitor

SDI Instrument Output

Label	SDI MON
Connector	BNC
Output Impedance	75 ohm
Output Return Loss	-15 dB (5 MHz to 1.485 GHz), -10 dB (1.485 GHz to 3 GHz)
Output Level	800 mV pk-pk ± 10 %
Video Format	1080P50 / 1080P59.94 / 1080P60, YCbCr 4:2:2, 10 bit
Audio Format	First stereo pair PCM audio output, 48 kHz, 20 bit
Purpose	3 Gbps SDI copy of user interface

USB 3.x Type A Connectors

USB Version	USB 3.2 (front panel) and USB 3.1 (rear panel)
USB Connector	Type-A socket
Number of USB 3.2 Type A con-	Two, front-mounted

nectors

Number of USB 3.1 Type A connectors Two, rear-mounted

Purpose High Speed file transfer to USB storage devices. Keyboard and mouse connection.

USB 3.1 Type C Connectors

Label EXT MON

USB Version USB 3.1

USB Connector Type-C connector

Quantity Two on rear panel

EXT MON port: Used to connect optional extended monitor.

< - > port: Internal use only.

Purpose Data and power link to the optional extended monitor.

USB 3.1 Type C Connector on Optional Extended Monitor

USB Version USB 3.1

USB Connector Type-C connector

Quantity One on rear panel of optional extended monitor.

Video Input port: Used to connect optional extended monitor to main unit.

Purpose Data and power link to the optional extended monitor.

Networking

Ethernet IEEE 802.3 10 / 100 / 1000 BASE-T

Connector RJ-45

Purpose SFTP access for software upgrade and upload/download of data files
RESTful API for remote loading of presets
Web server for file access
noVNC for Web browser remote operation
VNC server for remote operation
NTP for automatic clock control.

Rear Panel 15 Pin D-Type Connector

Label	REMOTE
Connector	15-way high-density D-type socket
Purpose	8 x GP I/O, 4 x AES I/O, stereo analog audio out and power 12 x inputs, 1 x output (alarm), 2 x Ground Binary mode uses pins 2 to 7 for remote loading of up to 60 presets Bit mode uses pins 2 to 9 for remote control loading of up to eight presets.
Format	Open drain with 10 kohm pull-up to +3.3 V (can also receive +5 V)
Pinout	

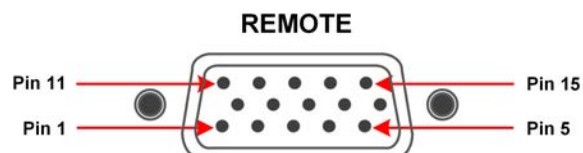


Table A-1 : D15 Remote Control Connector Pinouts

Pin Number	Pin Name	Description
1	OPEN	Open - do not connect
2	/P1	Load preset 1 to 60 (Binary mode) or load preset 1 (Bit mode)
3	/P2	Load preset 1 to 60 (Binary mode) or load preset 2 (Bit mode)
4	/P3	Load preset 1 to 60 (Binary mode) or load preset 3 (Bit mode)
5	/P4	Load preset 1 to 60 (Binary mode) or load preset 4 (Bit mode)
6	/P5	Load preset 1 to 60 (Binary mode) or load preset 5 (Bit mode)
7	/P6	Load preset 1 to 60 (Binary mode) or load preset 6 (Bit mode)
8	/P7	Load preset 7 (Bit mode only)
9	/P8	Loads preset 8 (Bit mode only)
10	/ACH	Not currently used
11	/BCH	Not currently used
12	/CCH	Not currently used
13	/DCH	Not currently used
14	ALARM	Not currently used
15	GND	Ground

Physical Form Factor (LPX500 Main Unit)

Chassis Dimensions (Excluding Display Bezel)	210 (width) x 127.3 (height) x 150 (depth) mm
Chassis Dimensions (Including Display Bezel)	220 (width) x 133 (height) x 153 (depth) mm
Dimensions with Desktop Kit	210 (W) x 195 (H) x 150 (D) mm (Handle and folded feet) 210 (W) x 235 (H) x 150 (D) mm (Handle and extended feet)
Weight	3.7 kg

Physical Form Factor (Optional Extended Monitor)

Chassis Dimensions (Excluding Display Bezel)	210 (width) x 127.3 (height) x 47 (depth) mm
Chassis Dimensions (Including Display Bezel)	220 (width) x 133 (height) x 75 (depth) mm
Dimensions with Desktop Kit	210 (W) x 195 (H) x 150 (D) mm (Handle and folded feet) 210 (W) x 235 (H) x 150 (D) mm (Handle and extended feet)
Weight	1.4 kg

SMPTE SDTV, HDTV and UHDTV

LeaderPhabrix is committed to developing the toolsets available on the unit, including upgrades to existing instruments and the introduction of new instruments. Please do not hesitate to contact LeaderPhabrix at any time to discuss your requirements for the product or current product timelines.

SDI Physical Layer Tolerances

The unit will automatically measure the SMPTE SDTV, HDTV and UHDTV tolerances listed in the following table:

Table B-1 : SMPTE SDTV, HDTV and UHDTV Tolerances

Data Rate	0.270 Gbps	1.485 Gbps	2.97 Gbps	5.94 Gbps	11.88 Gbps
Standard	SMPTE ST259	SMPTE ST292-1	SMPTE ST424	SMPTE ST2081-1, 10	SMPTE ST2082-1, 10
Coding	Scrambled NRZI	Scrambled NRZI	Scrambled NRZI	Scrambled NRZI	Scrambled NRZI
Amplitude	800 mV \pm 10 %	800 mV \pm 10 %	800 mV \pm 10 %	800 mV \pm 10 %	800 mV \pm 10 %
DC Offset	0.0 V \pm 0.5 V	0.0 V \pm 0.5 V	0.0 V \pm 0.5 V	0.0 V \pm 0.5 V	0.0 V \pm 0.5 V
Rise/Fall Time	< 1500 ps	< 270 ps	< 135 ps	< 80 ps	< 45 ps
Rise/Fall Time Difference	< 500 ps	< 100 ps	< 50 ps	< 35 ps	< 18 ps
Rise/Fall Overshoot	< 10 % of Amplitude	< 10 % of Amplitude	< 10 % of Amplitude	< 10 % of Amplitude	< 10 % of Amplitude
Timing Jitter	< 0.2 UI (10 Hz to 27 MHz)	< 1 UI (10 Hz to 148.5 MHz)	< 2 UI (10 Hz to 297 MHz)	< 4 UI (10 Hz to 594 MHz)	< 8 UI (10 Hz to 1188 MHz)
Alignment Jitter	< 0.2 UI (100 kHz to 27 MHz)	< 0.2 UI (100 kHz to 148.5 MHz)	< 0.3 UI (100 kHz to 297 MHz)	< 0.3 UI (100 kHz to 594 MHz)	< 0.3 UI (100 kHz to 1188 MHz)
75 ohm Coaxial Cable Length (Belden 1694A)	400 m	200 m	200 m	100 m	70 m

The complexity of both analyzing and generating signals for SDTV, HDTV and UHDTV is shown in the above table. SMPTE standards require that the unit's instruments measure critical values within the tolerances set by SMPTE and summarized in the above table.

Supported Video Standards

Please contact [LeaderPhabrix](#) if you require support for any standards not listed here. The current software version supports the following standards:

HD/2K Supported Formats

The following SDI formats are supported:

Table C-1 : Supported SD/HD/2K Video Standards (SDI Input)

SMPTE Stnds. Link (Content)	Interface	Resolution	Sampling Structure	Pixel Depth	Frame / Field Rate	SDI-HDR	SDI-SDR
ST 259 (ST 125)	SD (525i)	720 x 485	4:2:2 (YCbCr)	10	59.94i	-	A
ST 259 (ST 125)	SD (625i)	720 x 576	4:2:2 (YCbCr)	10	50i	-	A
ST 292 (ST 296)	HD	1280 x 720	4:2:2 (YCbCr)	10	60p, 59.94p, 50p, 30p, 29.97p, 25p	○●	●
ST 292 (ST 274)	HD	1920 x 1080	4:2:2 (YCbCr)	10	60i, 59.94i, 50i, 30p, 29.97p, 25p, 24p, 23.98p	○●	●
ST 292 (RP 211)	HD	1920 x 1080	4:2:2 (YCbCr)	10	30PsF, 29.97PsF, 25PsF, 24PsF, 23.98PsF	○●	●
ST 292 (ST 2048-2)	HD	2048 x 1080	4:2:2 (YCbCr)	10	30PsF, 29.97PsF, 25PsF, 24PsF, 23.98PsF, 30p, 29.97p, 25p, 24p, 23.98p	○●	●
ST 372 (ST 274)	Dual Link HD	1920 x 1080	4:2:2 (YCbCr)	10	60p, 59.94p, 50p	○●	●
ST 372 (ST 274)	Dual Link HD	1920 x 1080	4:4:4 (YCbCr/RGB) 4:4:4:4 (YCbCrA/RGBA)	10	60i, 59.94i, 50i, 30PsF, 29.97PsF, 25PsF, 24PsF, 23.98PsF, 30p, 29.97p, 25p, 24p, 23.98p	○●	●
ST 372 (ST 274)	Dual Link HD	1920 x 1080	4:4:4 (YCbCr/RGB)	12	60i, 59.94i, 50i, 30p, 29.97p, 25p, 24p, 23.98p	○●	●
ST 372 (ST 274)	Dual Link HD	1920 x 1080	4:2:2 (YCbCr)	12	60i, 59.94i, 50i, 30PsF, 29.97PsF, 25PsF, 24PsF, 23.98PsF, 30p, 29.97p, 25p, 24p, 23.98p	○●	●
ST 372 (ST 274)	Dual Link HD	2048 x 1080	4:2:2 (YCbCr)	10	60p, 59.94p, 50p, 48p, 47.95p	○●	●
ST 372 (ST 274)	Dual Link HD	2048 x 1080	4:4:4 (YCbCr/RGB) 4:4:4:4 (YCbCrA/RGBA)	10	30PsF, 29.97PsF, 25PsF, 24PsF, 23.98PsF, 30p, 29.97p, 25p, 24p, 23.98p	○●	●
ST 372 (ST 274)	Dual Link HD	2048 x 1080	4:4:4 (YCbCr/RGB)	12	30PsF, 29.97PsF, 25PsF, 24PsF, 23.98PsF, 30p, 29.97p, 25p, 24p, 23.98p	○●	●
ST 372 (ST 274)	Dual Link HD	2048 x 1080	4:2:2 (YCbCr) 4:2:2:4 (YCbCrA)	12	30PsF, 29.97PsF, 25PsF, 24PsF, 23.98PsF, 30p, 29.97p, 25p, 24p, 23.98p	○●	●
ST 425-1 (ST 274)	3G Level A (1)	1920 x 1080	4:2:2 (YCbCr)	10	60p, 59.94p, 50p	○●	●
ST 425-1 (ST 2048-2)	3G Level A (1)	2048 x 1080	4:2:2 (YCbCr)	10	60p, 59.94p, 50p, 48p, 47.95p	○●	●
ST 425-1 (ST 296)	3G Level A (2)	1280 x 720	4:4:4 (YCbCr/RGB) 4:4:4:4 (YCbCrA/RGBA)	10	60p, 59.94p, 50p, 30p, 29.97p	○●	●
ST 425-1 (ST 274)	3G Level A (2)	1920 x 1080	4:4:4 (YCbCr/RGB) 4:4:4:4 (YCbCrA/RGBA)	10	60i, 59.94i, 50i, 30PsF, 29.97PsF, 25PsF, 24PsF, 23.98PsF, 30p, 29.97p, 25p, 24p, 23.98p	○●	●

SMPTE Stnds. Link (Content)	Interface	Resolution	Sampling Structure	Pixel Depth	Frame / Field Rate	SDI- HDR	SDI- SDR
ST 425-1 (ST 2048-2)	3G Level A (2)	2048 x 1080	4:4:4 (YCbCr/RGB) 4:4:4:4 (YCbCrA/RGBA)	10	30PsF, 29.97PsF, 25PsF, 24PsF, 23.98PsF 30p, 29.97p, 25p, 24p, 23.98p	○●	●
ST 425-1 (ST 274)	3G Level A (3)	1920 x 1080	4:4:4 (YCbCr/RGB)	12	60i, 59.94i, 50i 30p, 29.97p, 25p, 24p, 23.98p	○●	●
ST 425-1 (ST 2048-2)	3G Level A (3)	2048 x 1080	4:4:4 (YCbCr/RGB)	12	30PsF, 29.97PsF, 25PsF, 24PsF, 23.98PsF 30p, 29.97p, 25p, 24p, 23.98p	○●	●
ST 425-1 (ST 274)	3G Level A (4)	1920 x 1080	4:2:2 (YCbCr)	12	60i, 59.94i, 50i 30PsF, 29.97PsF, 25PsF, 24PsF, 23.98PsF 30p, 29.97p, 25p, 24p, 23.98p	○●	●
ST 425-1 (ST 2048-2)	3G Level A (4)	2048 x 1080	4:2:2 (YCbCr) 4:2:2:4 (YCbCrA)	12	30PsF, 29.97PsF, 25PsF, 24PsF, 23.98PsF 30p, 29.97p, 25p, 24p, 23.98p	○●	●
ST 425-1 (ST 274)	3G Level B-DL (I)	1920 x 1080	4:2:2 (YCbCr)	10	60p, 59.94p, 50p	○●	●
ST 425-1 (ST 2048-2)	3G Level B-DL (I)	2048 x 1080	4:2:2 (YCbCr)	10	60p, 59.94p, 50p, 48p, 47.95p	○●	●
ST 425-1 (ST 274)	3G Level B-DL (II)	1920 x 1080	4:4:4 (YCbCr/RGB) 4:4:4:4 (YCbCrA/RGBA)	10	60i, 59.94i, 50i 30PsF, 29.97PsF, 25PsF, 24PsF, 23.98PsF 30p, 29.97p, 25p, 24p, 23.98p	○●	●
ST 425-1 (ST 2048-2)	3G Level B-DL (II)	2048 x 1080	4:4:4 (YCbCr/RGB) 4:4:4:4 (YCbCrA/RGBA)	10	30PsF, 29.97PsF, 25PsF, 24PsF, 23.98PsF 30p, 29.97p, 25p, 24p, 23.98p	○●	●
ST 425-1 (ST 274)	3G Level B-DL (III)	1920 x 1080	4:4:4 (YCbCr/RGB)	12	60i, 59.94i, 50i 30p, 29.97p, 25p, 24p, 23.98p	○●	●
ST 425-1 (ST 2048-2)	3G Level B-DL (III)	2048 x 1080	4:4:4 (YCbCr/RGB)	12	30PsF, 29.97PsF, 25PsF, 24PsF, 23.98PsF 30p, 29.97p, 25p, 24p, 23.98p	○●	●
ST 425-1 (ST 274)	3G Level B-DL (IV)	1920 x 1080	4:2:2 (YCbCr)	12	60i, 59.94i, 50i 30PsF, 29.97PsF, 25PsF, 24PsF, 23.98PsF 30p, 29.97p, 25p, 24p, 23.98p	○●	●
ST 425-1 (ST 2048-2)	3G Level B-DL (IV)	2048 x 1080	4:2:2 (YCbCr) 4:2:2:4 (YCbCrA)	12	30PsF, 29.97PsF, 25PsF, 24PsF, 23.98PsF 30p, 29.97p, 25p, 24p, 23.98p	○●	●

Key to table:

- - Generator with Option **LPX500-GEN** and Analyzer
- - Optional
- A** - Analyzer Only
- Not supported

4K/UHD Supported Formats

Table C-2 : Supported 4K/UHD SDI Video Standards

SMPTE Stnds. Link (Content)	Interface	Resolution	Sampling Structure	Pixel Depth	Frame / Field Rate	SDI- HDR	SDI- SDR
ST 425-3 Annex B.1 (ST 2036-1)	Quad-link HD-SQ	3840 x 2160	4:2:2 (YCbCr)	10	30p, 29.97p, 25p, 24p, 23.98p	○●	○
ST 425-3 Annex B.1 (ST 2048-1)	Quad-link HD-SQ	4096 x 2160	4:2:2 (YCbCr)	10	30p, 29.97p, 25p, 24p, 23.98p	○●	○
ST 425-3 Annex B.2 (ST 2036-1)	Dual 3G-B-DS	3840 x 2160	4:2:2 (YCbCr)	10	30p, 29.97p, 25p, 24p, 23.98p	○●	○
ST 425-3 Annex B.2 (ST 2048-1)	Dual 3G-B-DS	4096 x 2160	4:2:2 (YCbCr)	10	30p, 29.97p, 25p, 24p, 23.98p	○●	○
ST 2081-10 M1 (ST 2036-1)	6G-2SI	3840 x 2160	4:2:2 (YCbCr)	10	30p, 29.97p, 25p, 24p, 23.98p	○●	○
ST 2081-10 M1 (ST 2048-1)	6G-2SI	4096 x 2160	4:2:2 (YCbCr)	10	30p, 29.97p, 25p, 24p, 23.98p	○●	○
ST 425-5 (ST 2036-1)	Quad-link 3G-A (1) 2SI	3840 x 2160	4:2:2 (YCbCr)	10	60p, 59.94p, 50p	○●	○
ST 425-5 (ST 2048-1)	Quad-link 3G-A (1) 2SI	4096 x 2160	4:2:2 (YCbCr)	10	60p, 59.94p, 50p, 48p, 47.95p	○●	○
ST 425-5 (ST 2036-1)	Quad-link 3G-A (2) 2SI	3840 x 2160	4:4:4 (YCbCr/RGB)	10	30p, 29.97p, 25p, 24p, 23.98p	○●	○
ST 425-5 (ST 2048-1)	Quad-link 3G-A (2) 2SI	4096 x 2160	4:4:4 (YCbCr/RGB) 4:4:4:4 (YCbCrA/RGBA)	10	30p, 29.97p, 25p, 24p, 23.98p	○●	○
ST 425-5 (ST 2036-1)	Quad-link 3G-A (3) 2SI	3840 x 2160	4:4:4 (YCbCr/RGB)	12	30p, 29.97p, 25p, 24p, 23.98p	○●	○
ST 425-5 (ST 2048-1)	Quad-link 3G-A (3) 2SI	4096 x 2160	4:4:4 (YCbCr/RGB)	12	30p, 29.97p, 25p, 24p, 23.98p	○●	○
ST 425-5 (ST 2036-1)	Quad-link 3G-A (4) 2SI	3840 x 2160	4:2:2 (YCbCr)	12	30p, 29.97p, 25p, 24p, 23.98p	○●	○
ST 425-5 (ST 2048-1)	Quad-link 3G-A (4) 2SI	4096 x 2160	4:2:2 (YCbCr) 4:2:2:4 (YCbCrA)	12	30p, 29.97p, 25p, 24p, 23.98p	○●	○
ST 425-5 Annex B (ST 2036-1)	Quad-link 3G-A, B (1) SQ	3840 x 2160	4:2:2 (YCbCr)	10	60p, 59.94p, 50p	○●	○
ST 425-5 Annex B (ST 2048-1)	Quad-link 3G-A, B (1) SQ	4096 x 2160	4:2:2 (YCbCr)	10	60p, 59.94p, 50p, 48p, 47.95p	○●	○
ST 425-5 Annex B (ST 2036-1)	Quad-link 3G-A, B (2) SQ	3840 x 2160	4:4:4 (YCbCr/RGB)	10	30p, 29.97p, 25p, 24p, 23.98p	○●	○
ST 425-5 Annex B (ST 2048-1)	Quad-link 3G-A, B (2) SQ	4096 x 2160	4:4:4 (YCbCr/RGB) 4:4:4:4 (YCbCrA/RGBA)	10	30p, 29.97p, 25p, 24p, 23.98p	○●	○
ST 425-5 Annex B (ST 2036-1)	Quad-link 3G-A, B (3) SQ	3840 x 2160	4:4:4 (YCbCr/RGB)	12	30p, 29.97p, 25p, 24p, 23.98p	○●	○
ST 425-5 Annex B (ST 2048-1)	Quad-link 3G-A, B (3) SQ	4096 x 2160	4:4:4 (YCbCr/RGB)	12	30p, 29.97p, 25p, 24p, 23.98p	○●	○
ST 425-5 Annex B (ST 2036-1)	Quad-link 3G-A (4) SQ	3840 x 2160	4:2:2 (YCbCr)	12	30p, 29.97p, 25p, 24p, 23.98p	○●	○
ST 425-5 Annex B (ST 2048-1)	Quad-link 3G-A (4) SQ	4096 x 2160	4:2:2 (YCbCr) 4:2:2:4 (YCbCrA)	12	30p, 29.97p, 25p, 24p, 23.98p	○●	○
ST 2081-11 M1, ST 425-5 (ST 2036-1)	Dual-link 6G-2SI (I)	3840 x 2160	4:2:2 (YCbCr)	10	60p, 59.94p, 50p	○●	○
ST 2081-11 M1, ST 425-5 (ST 2048-1)	Dual-link 6G-2SI (I)	4096 x 2160	4:2:2 (YCbCr)	10	60p, 59.94p, 50p, 48p, 47.95p	○●	○
ST 2081-11 M1, ST 425-5 (ST 2036-1)	Dual-link 6G-2SI (II)	3840 x 2160	4:4:4 (YCbCr/RGB)	10	30p, 29.97p, 25p, 24p, 23.98p	○●	○

SMPTE Stnds. Link (Content)	Interface	Resolution	Sampling Structure	Pixel Depth	Frame / Field Rate	SDI- HDR	SDI- SDR
ST 2081-11 M1, ST 425-5 (ST 2048-1)	Dual-link 6G-2SI (II)	4096 x 2160	4:4:4 (YCbCr/RGB) 4:4:4:4 (YCbCrA/RGBA)	10	30p, 29.97p, 25p, 24p, 23.98p	○ ●	○
ST 2081-11 M1 ST 425-5 (ST 2036-1)	Dual-link 6G-2SI (III)	3840 x 2160	4:4:4 (YCbCr/RGB)	12	30p, 29.97p, 25p, 24p, 23.98p	○ ●	○
ST 2081-11 M1, ST 425-5 (ST 2048-1)	Dual-link 6G-2SI (III)	4096 x 2160	4:4:4 (YCbCr/RGB)	12	30p, 29.97p, 25p, 24p, 23.98p	○ ●	○
ST 2081-11 M1, ST 425-5 (ST 2036-1)	Dual-link 6G-2SI (IV)	3840 x 2160	4:2:2 (YCbCr)	12	30p, 29.97p, 25p, 24p, 23.98p	○ ●	○
ST 2081-11 M1 ST 425-5 (ST 2048-1)	Dual-link 6G-2SI (IV)	4096 x 2160	4:2:2 (YCbCr) 4:2:2:4 (YCbCrA)	12	30p, 29.97p, 25p, 24p, 23.98p	○ ●	○
ST 2082-10 M1, ST 425-5 (ST 2036-1)	12G-2SI (I)	3840 x 2160	4:2:2 (YCbCr)	10	60p, 59.94p, 50p	○ ●	○
ST 2082-10 M1, ST 425-5 (ST 2048-1)	12G-2SI (I)	4096 x 2160	4:2:2 (YCbCr)	10	60p, 59.94p, 50p, 48p, 47.95p	○ ●	○
ST 2082-10 M1 ST 425-5 (ST 2036-1)	12G-2SI (II)	3840 x 2160	4:4:4 (YCbCr/RGB)	10	30p, 29.97p, 25p, 24p, 23.98p	○ ●	○
ST 2082-10 M1 ST 425-5 (ST 2048-1)	12G-2SI (II)	4096 x 2160	4:4:4 (YCbCr/RGB) 4:4:4:4 (YCbCrA/RGBA)	10	30p, 29.97p, 25p, 24p, 23.98p	○ ●	○
ST 2082-10 M1 ST 425-5 (ST 2036-1)	12G-2SI (III)	3840 x 2160	4:4:4 (YCbCr/RGB)	12	30p, 29.97p, 25p, 24p, 23.98p	○ ●	○
ST 2082-10 M1 ST 425-5 (ST 2048-1)	12G-2SI (III)	4096 x 2160	4:4:4 (YCbCr/RGB)	12	30p, 29.97p, 25p, 24p, 23.98p	○ ●	○
ST 2082-10 M1 ST 425-5 (ST 2036-1)	12G-2SI (IV)	3840 x 2160	4:2:2 (YCbCr) 4:2:2:4 (YCbCrA)	12	30p, 29.97p, 25p, 24p, 23.98p	○ ●	○
ST 2082-10 M1 ST 425-5 (ST 2048-1)	12G-2SI (IV)	4096 x 2160	4:2:2 (YCbCr) 4:2:2:4 (YCbCrA)	12	30p, 29.97p, 25p, 24p, 23.98p	○ ●	○

Key to table:

- - Generator with Option **LPX500-GEN** and Analyzer
- - Optional



www.leaderphabrix.com



LeaderPhabrix products are continuously being updated
Please visit <https://leaderphabrix.com/> for the latest product information